

MSA FRONT & REAR AXLE SET

 
210573
universal




PARTS							
Cross joint	2pcs	C HUB carrier A	1pcs	M2×6 RH screw	2pcs	M3×20 set screw	2pcs
Bevel gear 15T	2pcs	C HUB carrier B	1pcs	M2×16 RH screw	6pcs	King pin screw	4pcs
Bevel gear 36T	2pcs	Knuckle A	1pcs	M3×6 RH screw	8pcs	Lock nut M3	13pcs
Bevel gear shaft	2pcs	Knuckle B	1pcs	M3×8 RH screw	8pcs	Lock nut M4	4pcs
Solid axle	1pcs	Axle lockout A	1pcs	M3×10 RH screw	5pcs	E-clip 4.0	2pcs
Wheel axle	2pcs	Axle lockout B	1pcs	M3×14 RH screw	1pcs	G-clip 10.0	2pcs
CVD axle	2pcs	Hex. wheel hubs	4pcs	M3×16 RH screw	5pcs	2×9.8 Shaft	11pcs
Servo horn	1set	Servo mount	2pcs	M3×18 RH screw	12pcs	3×6×0.5 Spacer	4pcs
Servo holder	1pcs	Servo spacer	2pcs	M3×20 RH screw	1pcs	3×8×0.5 Spacer	1pcs
Axle cover A	2pcs	Adjuster	4pcs	M3×30 RH screw	2pcs	5×7×0.3 Spacer	2pcs
Axle cover B	2pcs	Bevel gear case	2pcs	M3×8 FH screw	4pcs	5×10×4 Ball bearing	10pcs
Link mount	2pcs	Heavy duty locker	2pcs	M3×2.6 set screw	3pcs	8×12×3.5 Ball bearing	2pcs
5.8 Ball connector	12pcs	Shaft bush	2pcs	M3×3 set screw	2pcs	10×15×4 Ball bearing	4pcs

FRONT AXLE 前車軸



STEP 1 Servo link assembly 伺服拉桿組裝

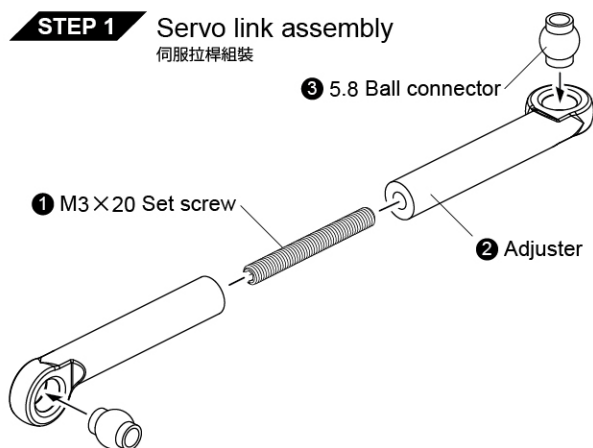

 
STEP 2 Steering link assembly 轉向拉桿組裝

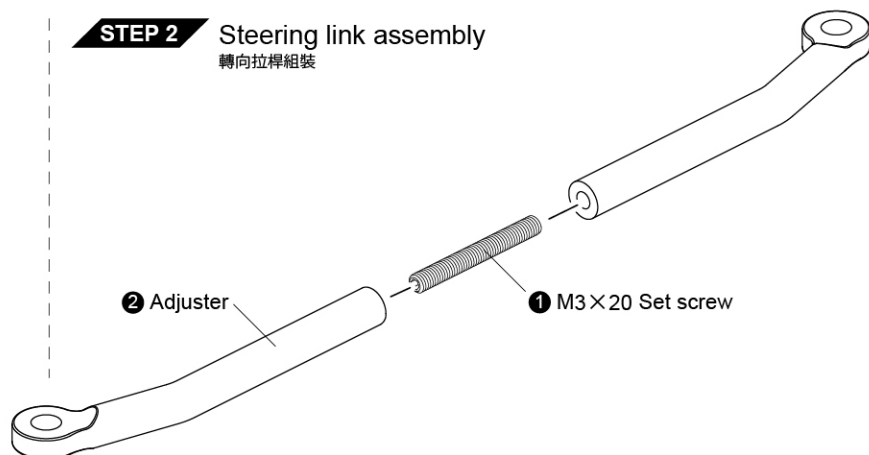


! ASSEMBLY TIPS 組裝小技巧

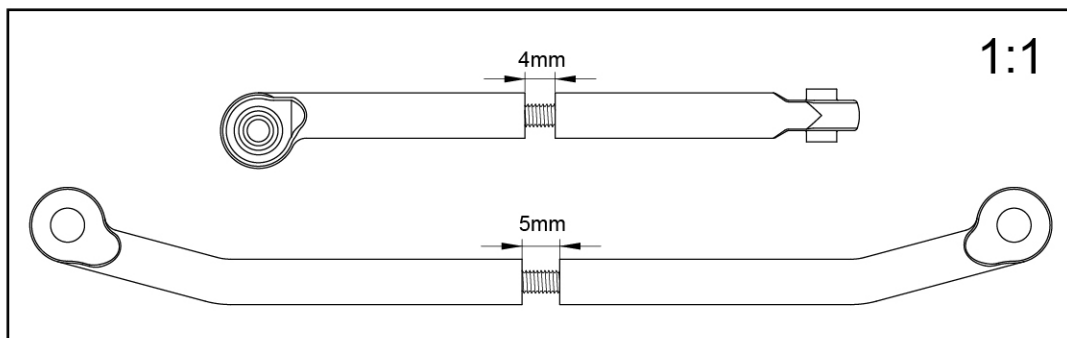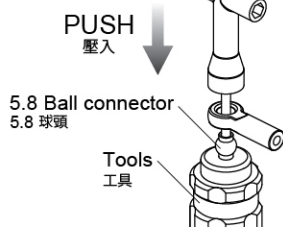  

 STEP 3 Bevel gear assembly 小傘齒組裝

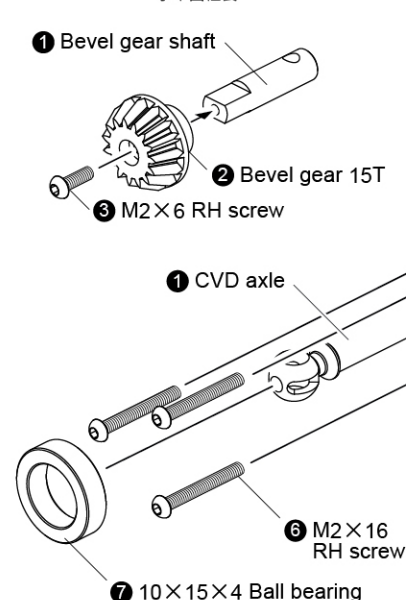


 STEP 4 Bevel gear assembly 大傘齒組裝

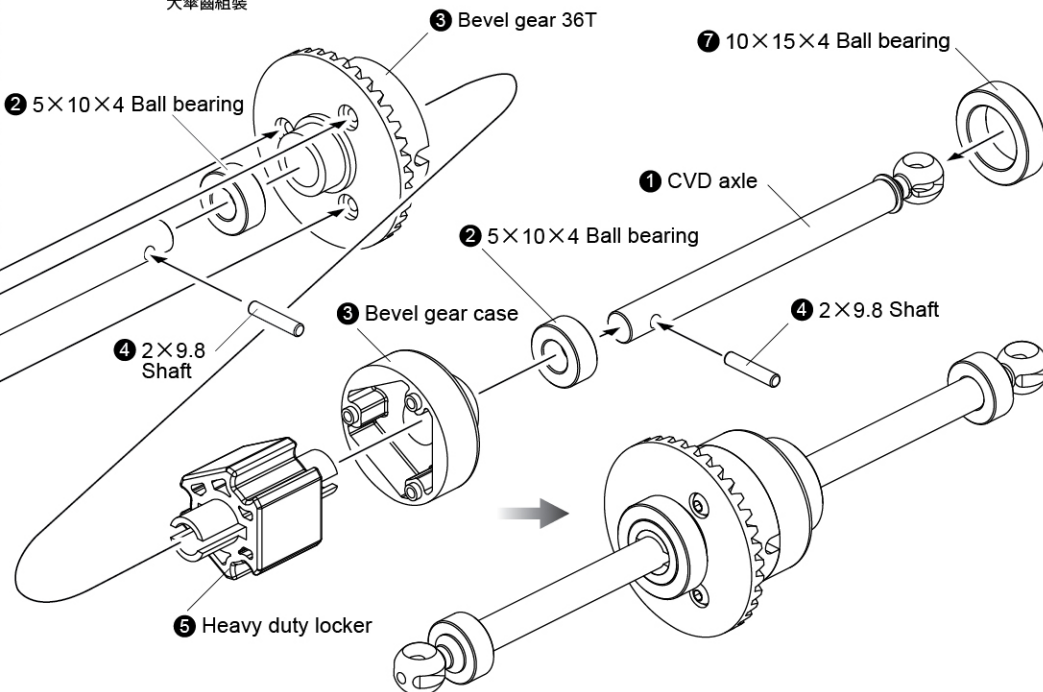


STEP 5**Attaching bevel gear**

 
安裝傘齒

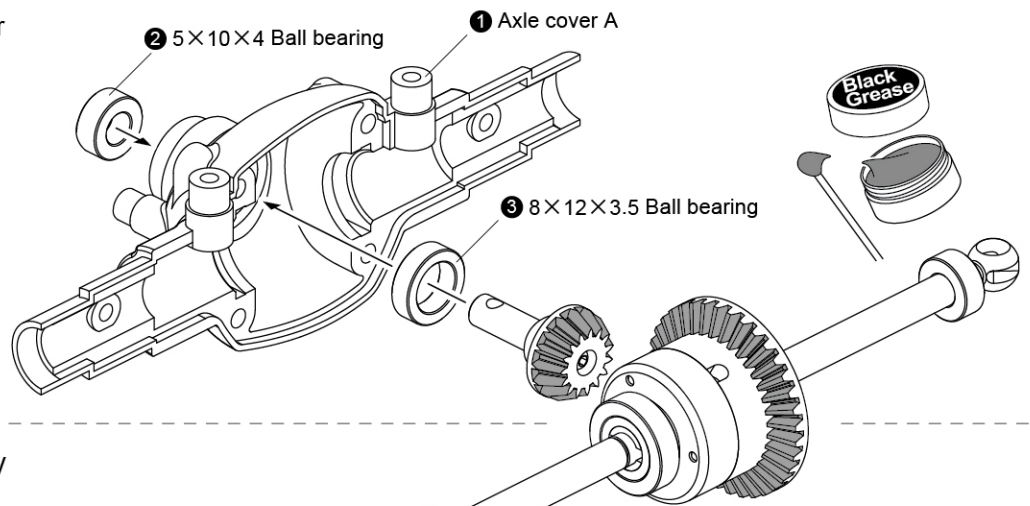**STEP 6****Axle cover assembly**

 車軸殼組裝

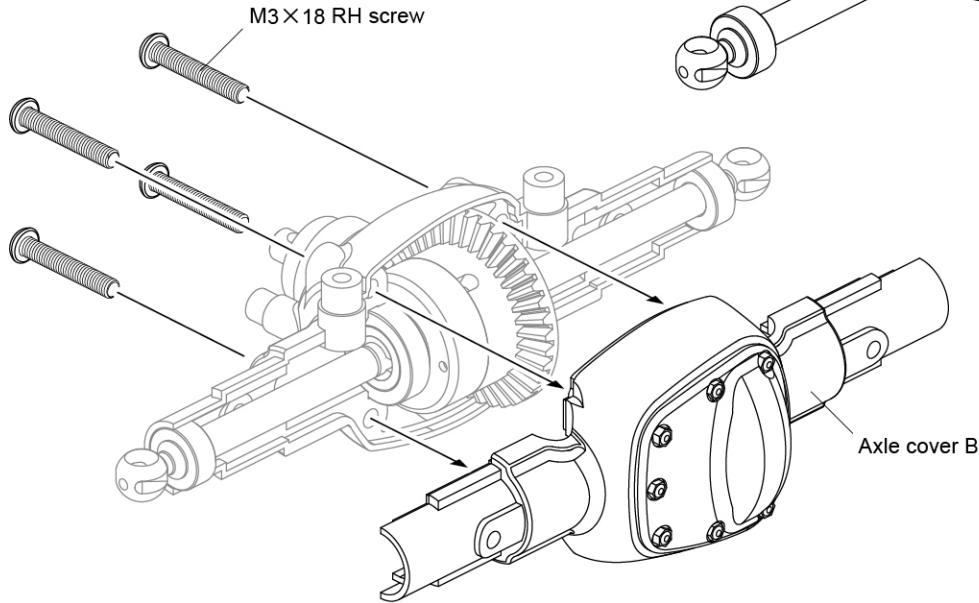**STEP 7****C HUB carrier assembly**

 
C座組裝

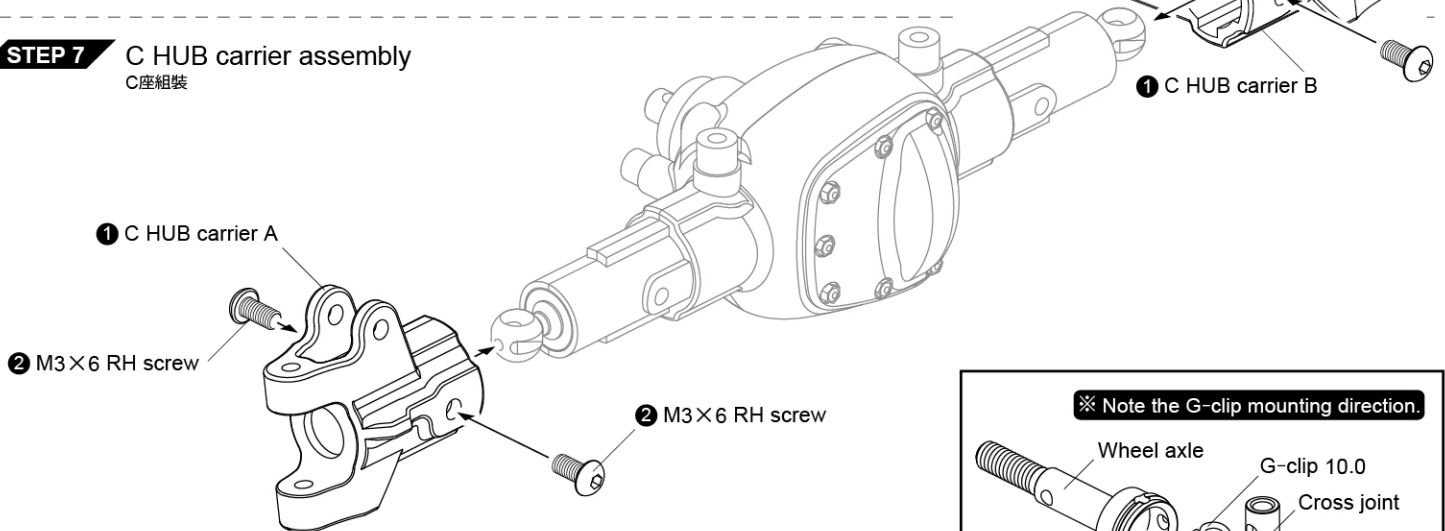**STEP 8****Wheel axle assembly**


萬向接杆組裝



 Note the G-clip mounting direction.

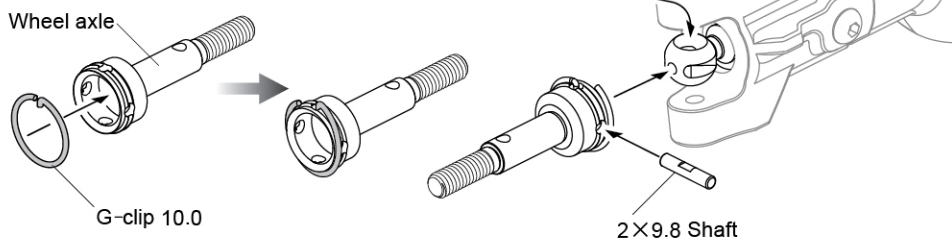

※ Note the G-clip mounting direction.


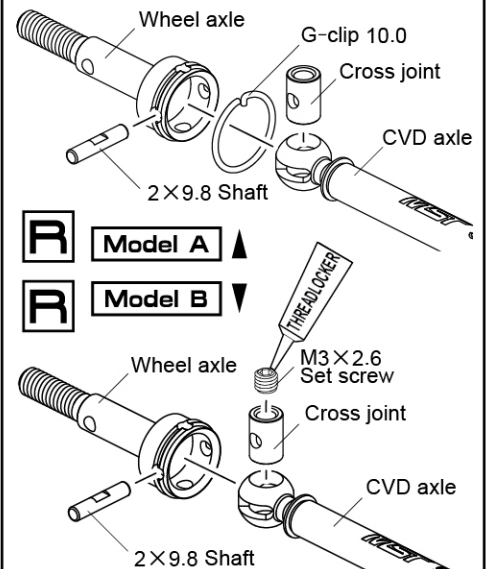 


STEP 9 Wheel axle assembly


萬向接杯組裝



  ※ Note the G-clip mounting direction.

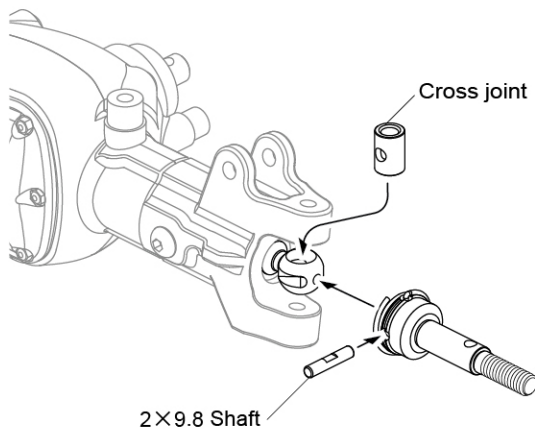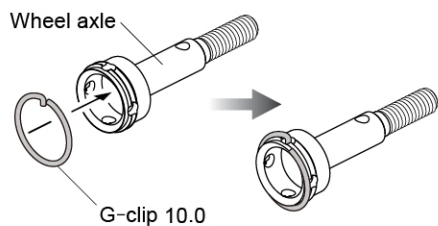


※ Note the G-clip mounting direction.

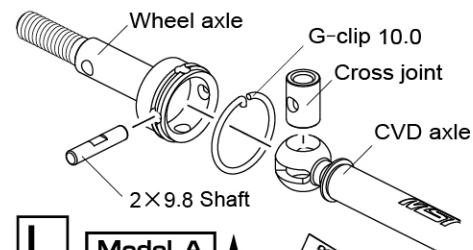 

Model A ▲




 Model B ▼

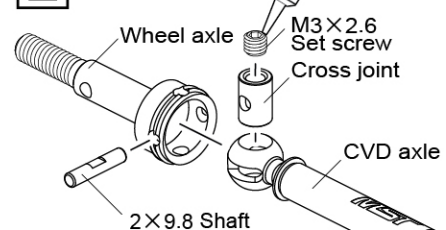


STEP 10 Knuckle assembly

 轉向座組裝

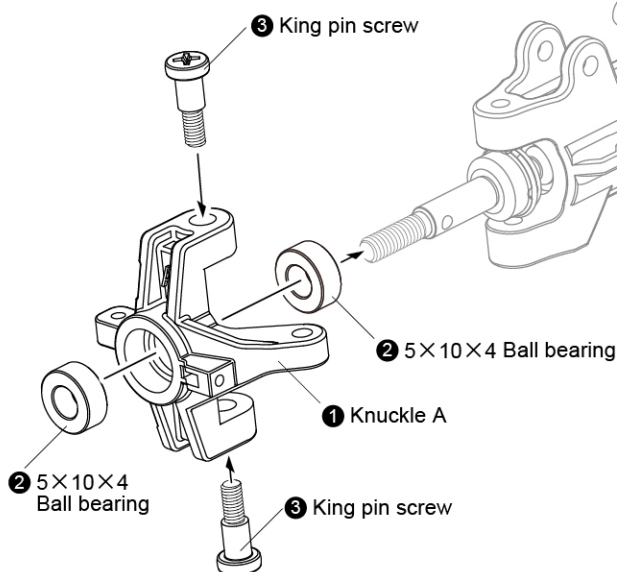


R

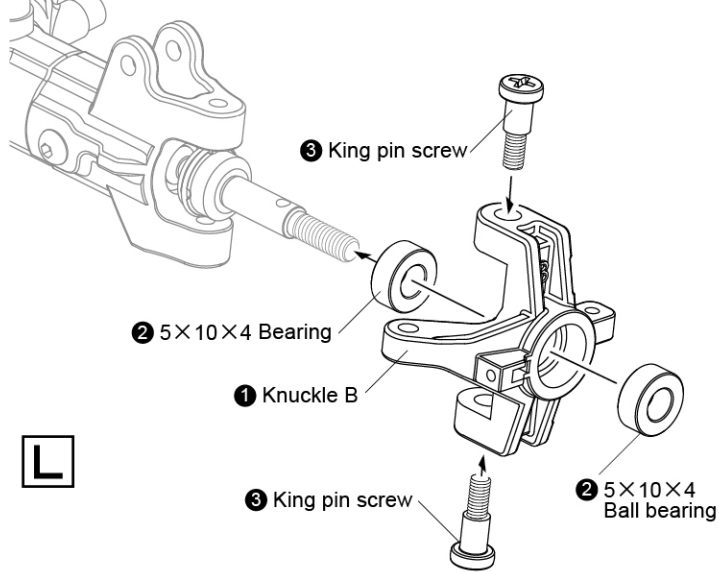 

L


STEP 11 Servo plate & Link mount assembly

 伺服機底板 & 上拉桿座組裝

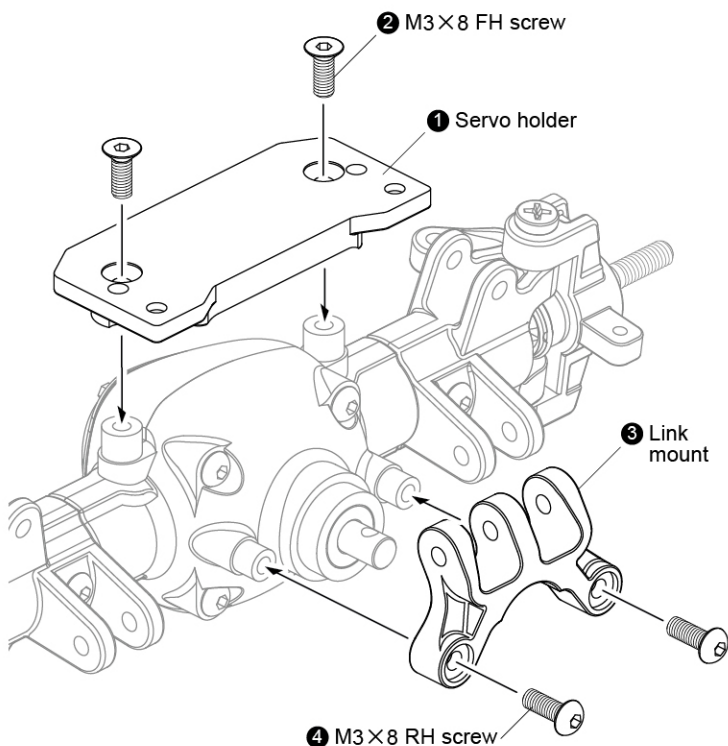


STEP 12 Servo mount assembly

 伺服機座組裝

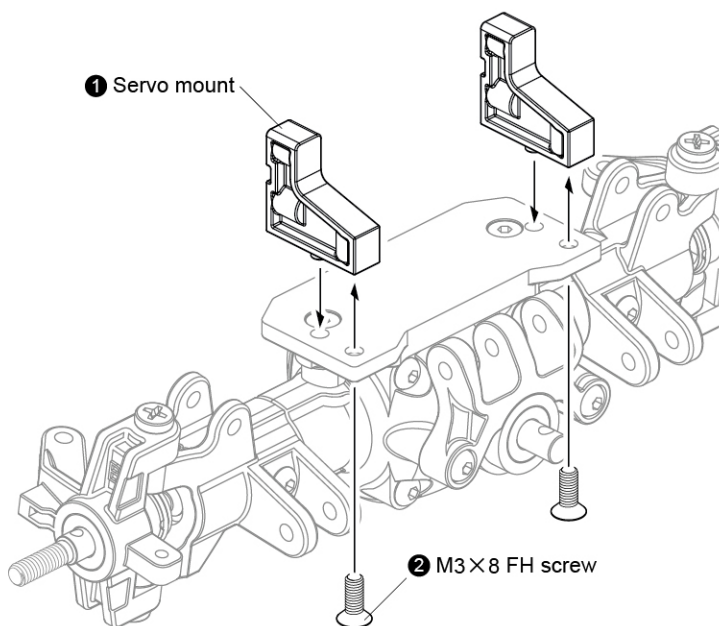


STEP 13**Servo link assembly**

 
伺服拉桿組裝

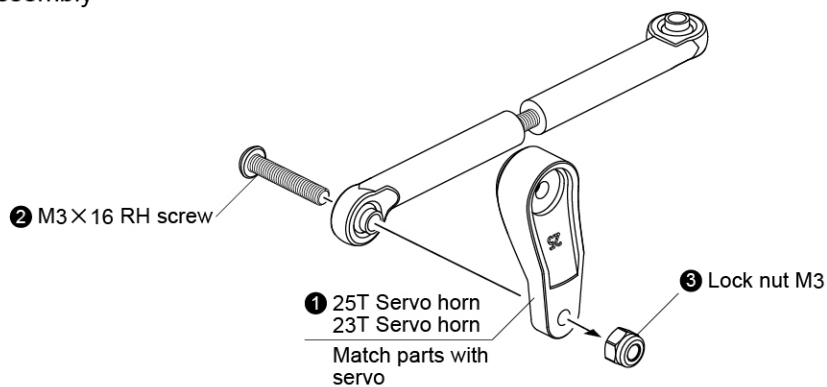**STEP 14****Steering servo assembly**

 轉向伺服機組裝

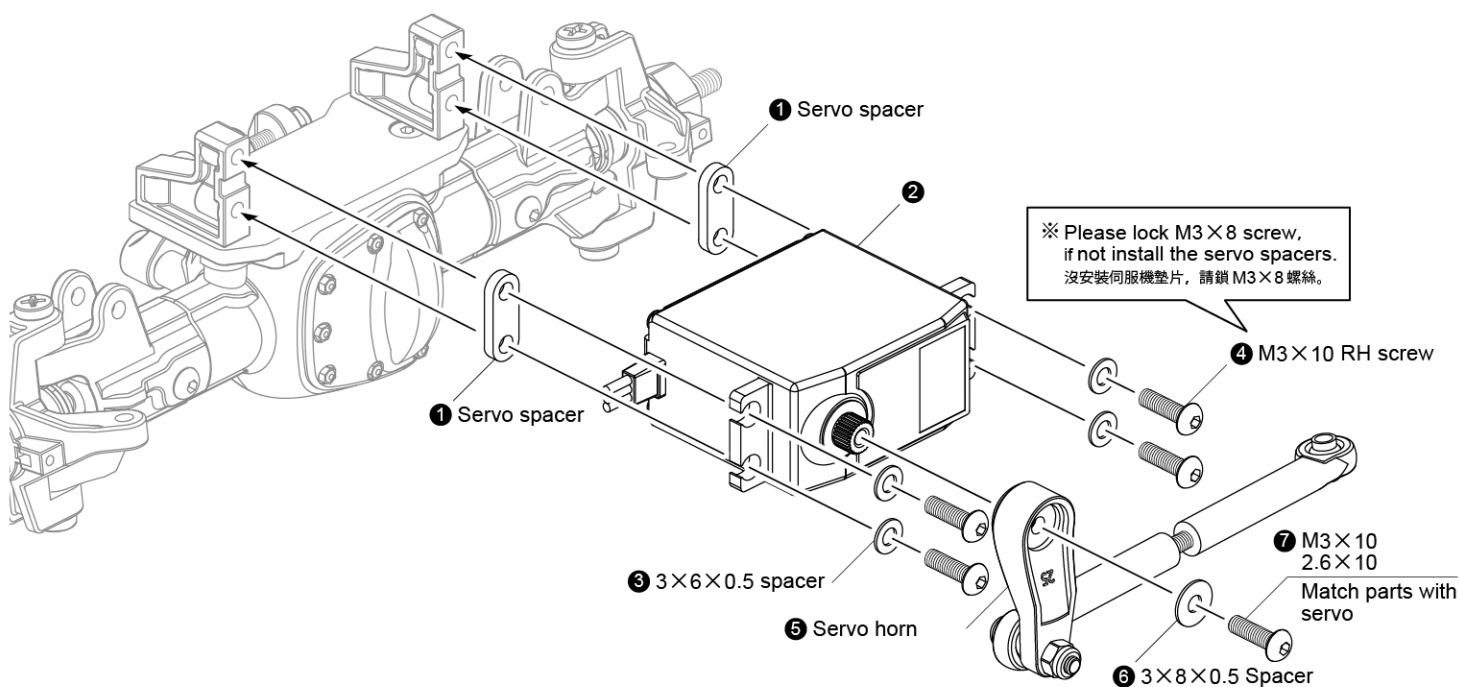
**STEP 15****Attaching steering Link**

 安裝轉向拉桿

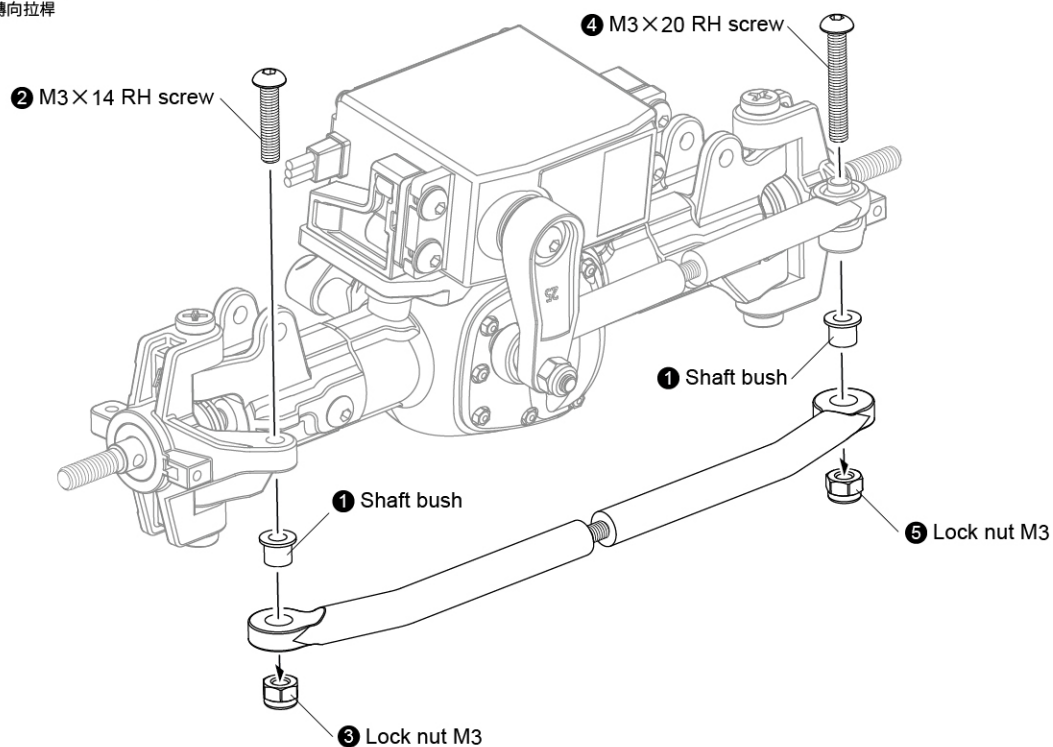


REAR AXLE 後車軸

 
STEP 1 Bevel gear assembly
小傘齒組裝

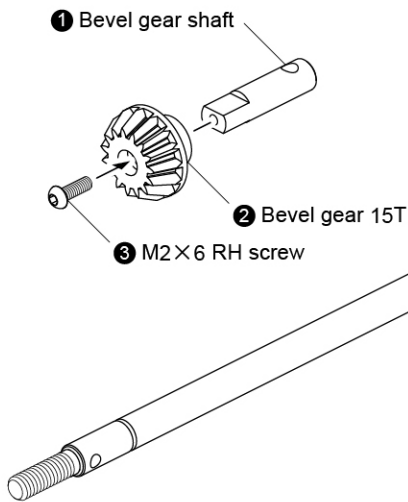

 
STEP 2 Solid axle assembly
輪軸組裝

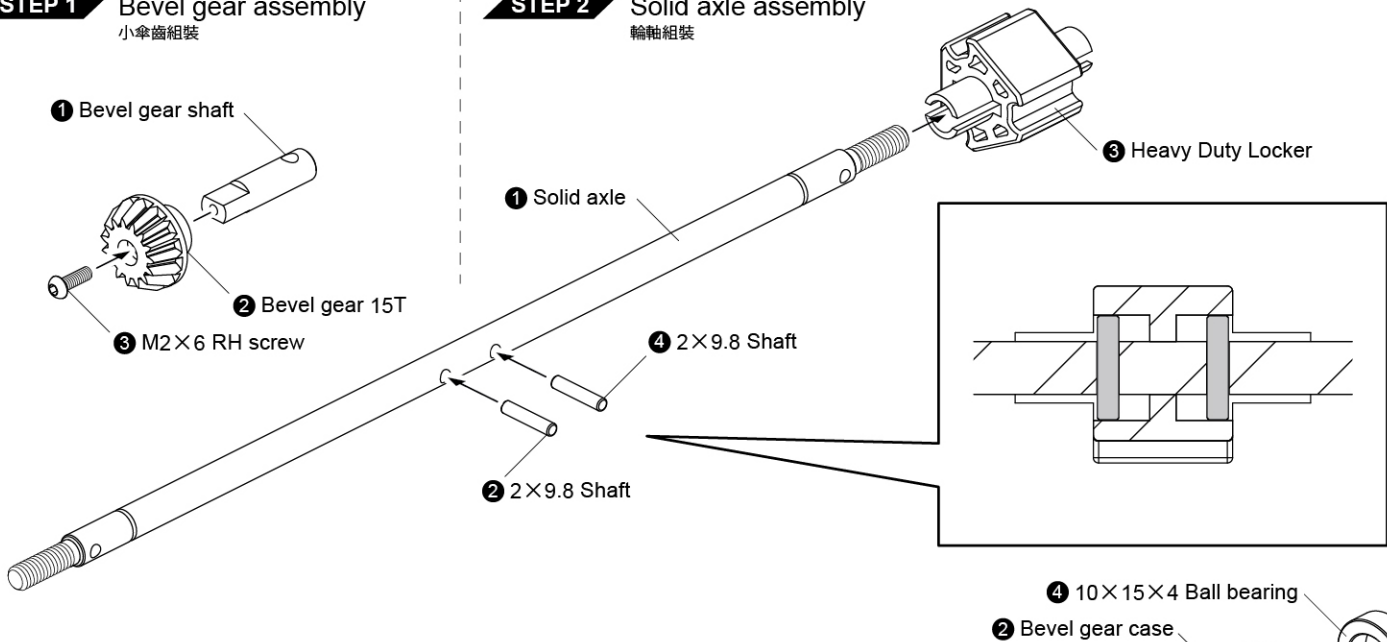

 
STEP 3 Bevel gear assembly
大傘齒組裝

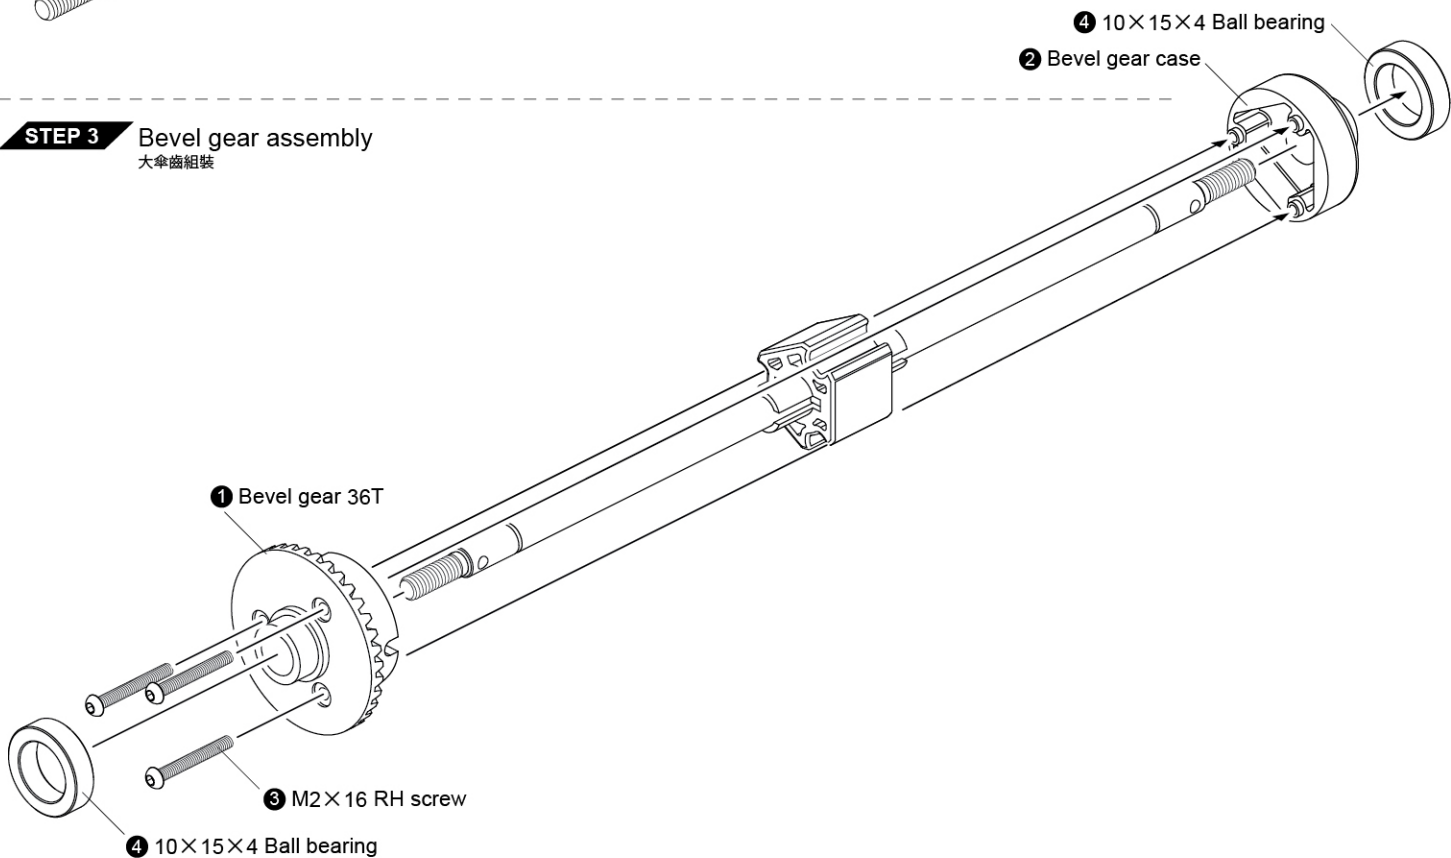

 
STEP 4 Attaching bevel gear
安裝傘齒

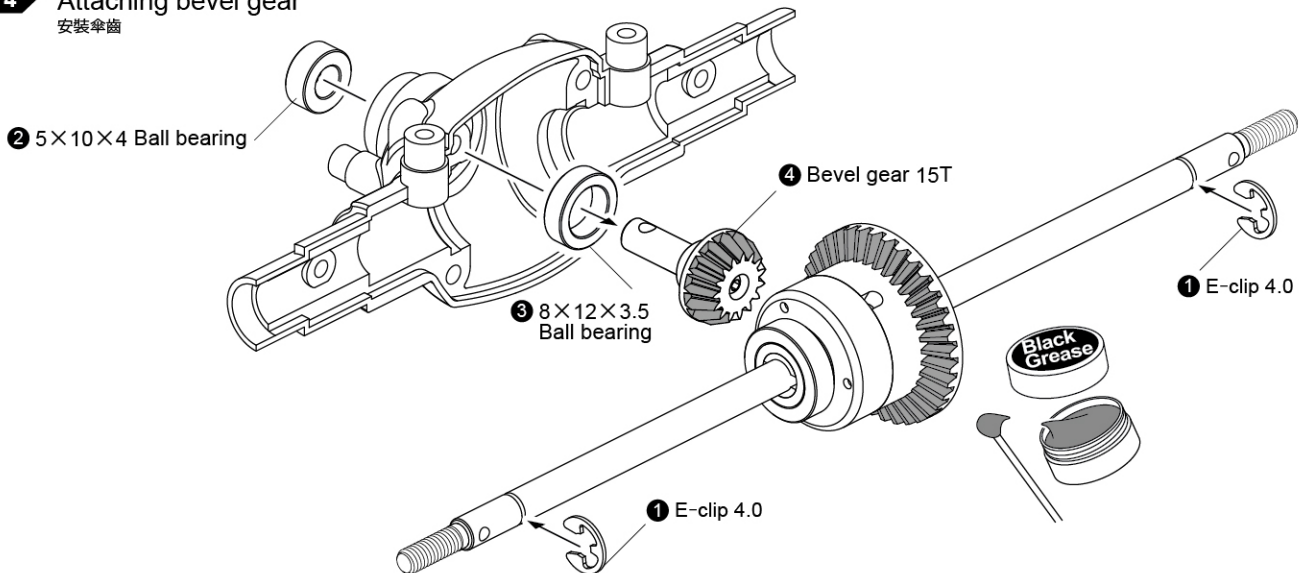

 STEP 5 Axle cover assembly
車軸殼組裝

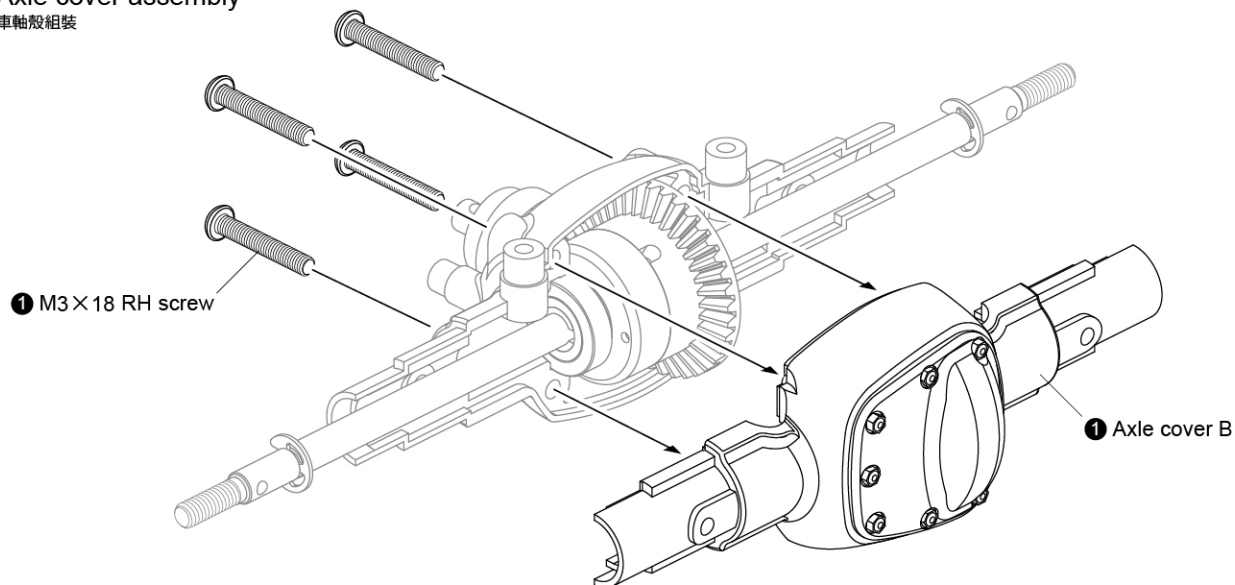

 STEP 6 Axle lockout assembly
車軸固定套組裝

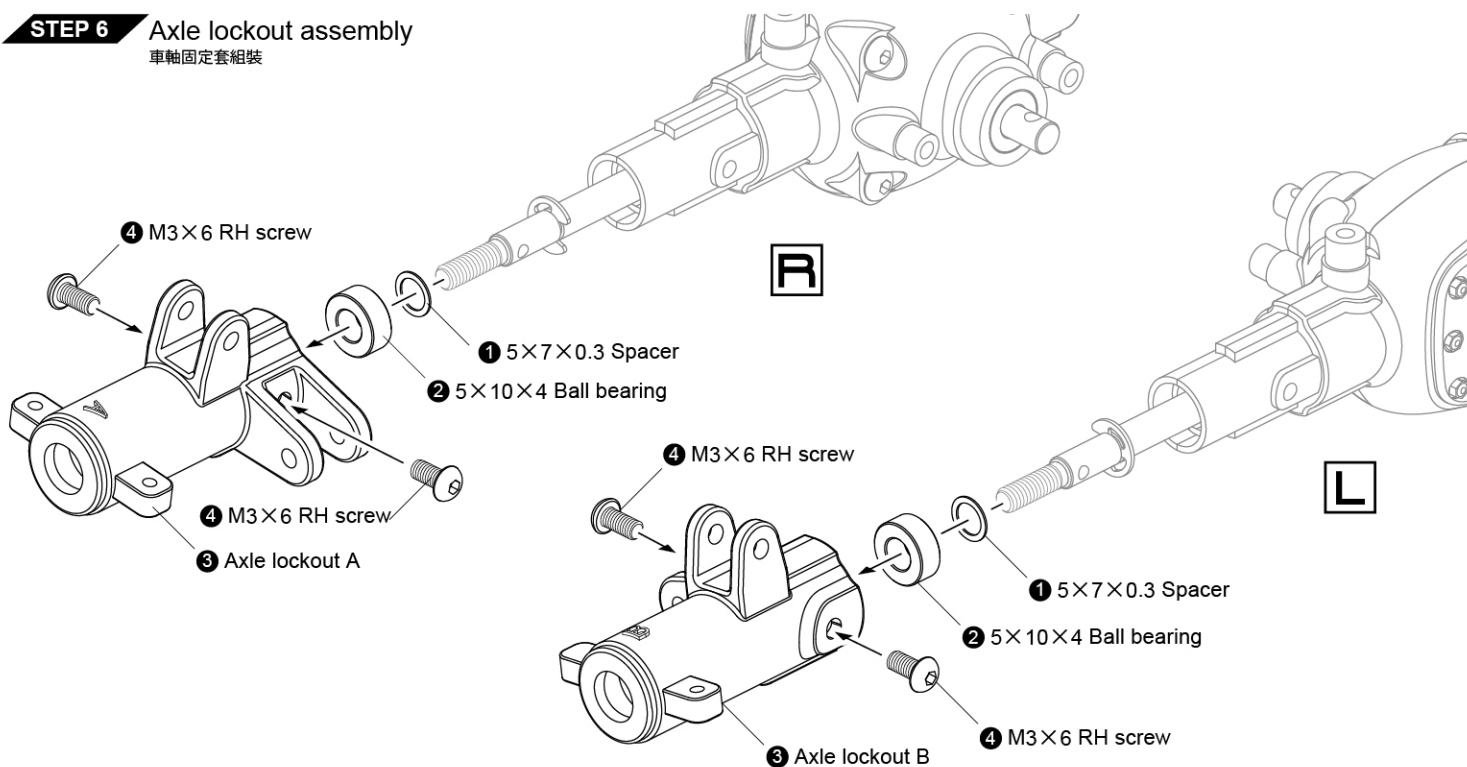

STEP 7 Link mount assembly
上拉桿座組裝

