MST

max speed technology

ASSEMBLY KIT



RMX 2.0 KIT

1/10 SCALE RC RWD HIGH PERFORMANCE DRIFT CAR

INSTRUCTION MANUAL

ON ROAD USE ONLY

SPECIFICATION: 1:10 Drift Car
WHEELBASE: 257mm
HEX TO HEX WIDTH : F177mm / R170mm
DRIVE MODE: RWD
CASTER: Adjustable 6/ 8/ 10/ 12 degrees

FULL BALL BEARING
HYDRAULIC DAMPER SET

www.rc-mst.com


※SPECIFICATION ARE SUBJECT TO CHANGE WITHOUT NOTICE


RMX 2.0 KIT


1/10 SCALE RC RWD HIGH PERFORMANCE DRIFT CAR

EXPLODED VIEW

MST max speed technology

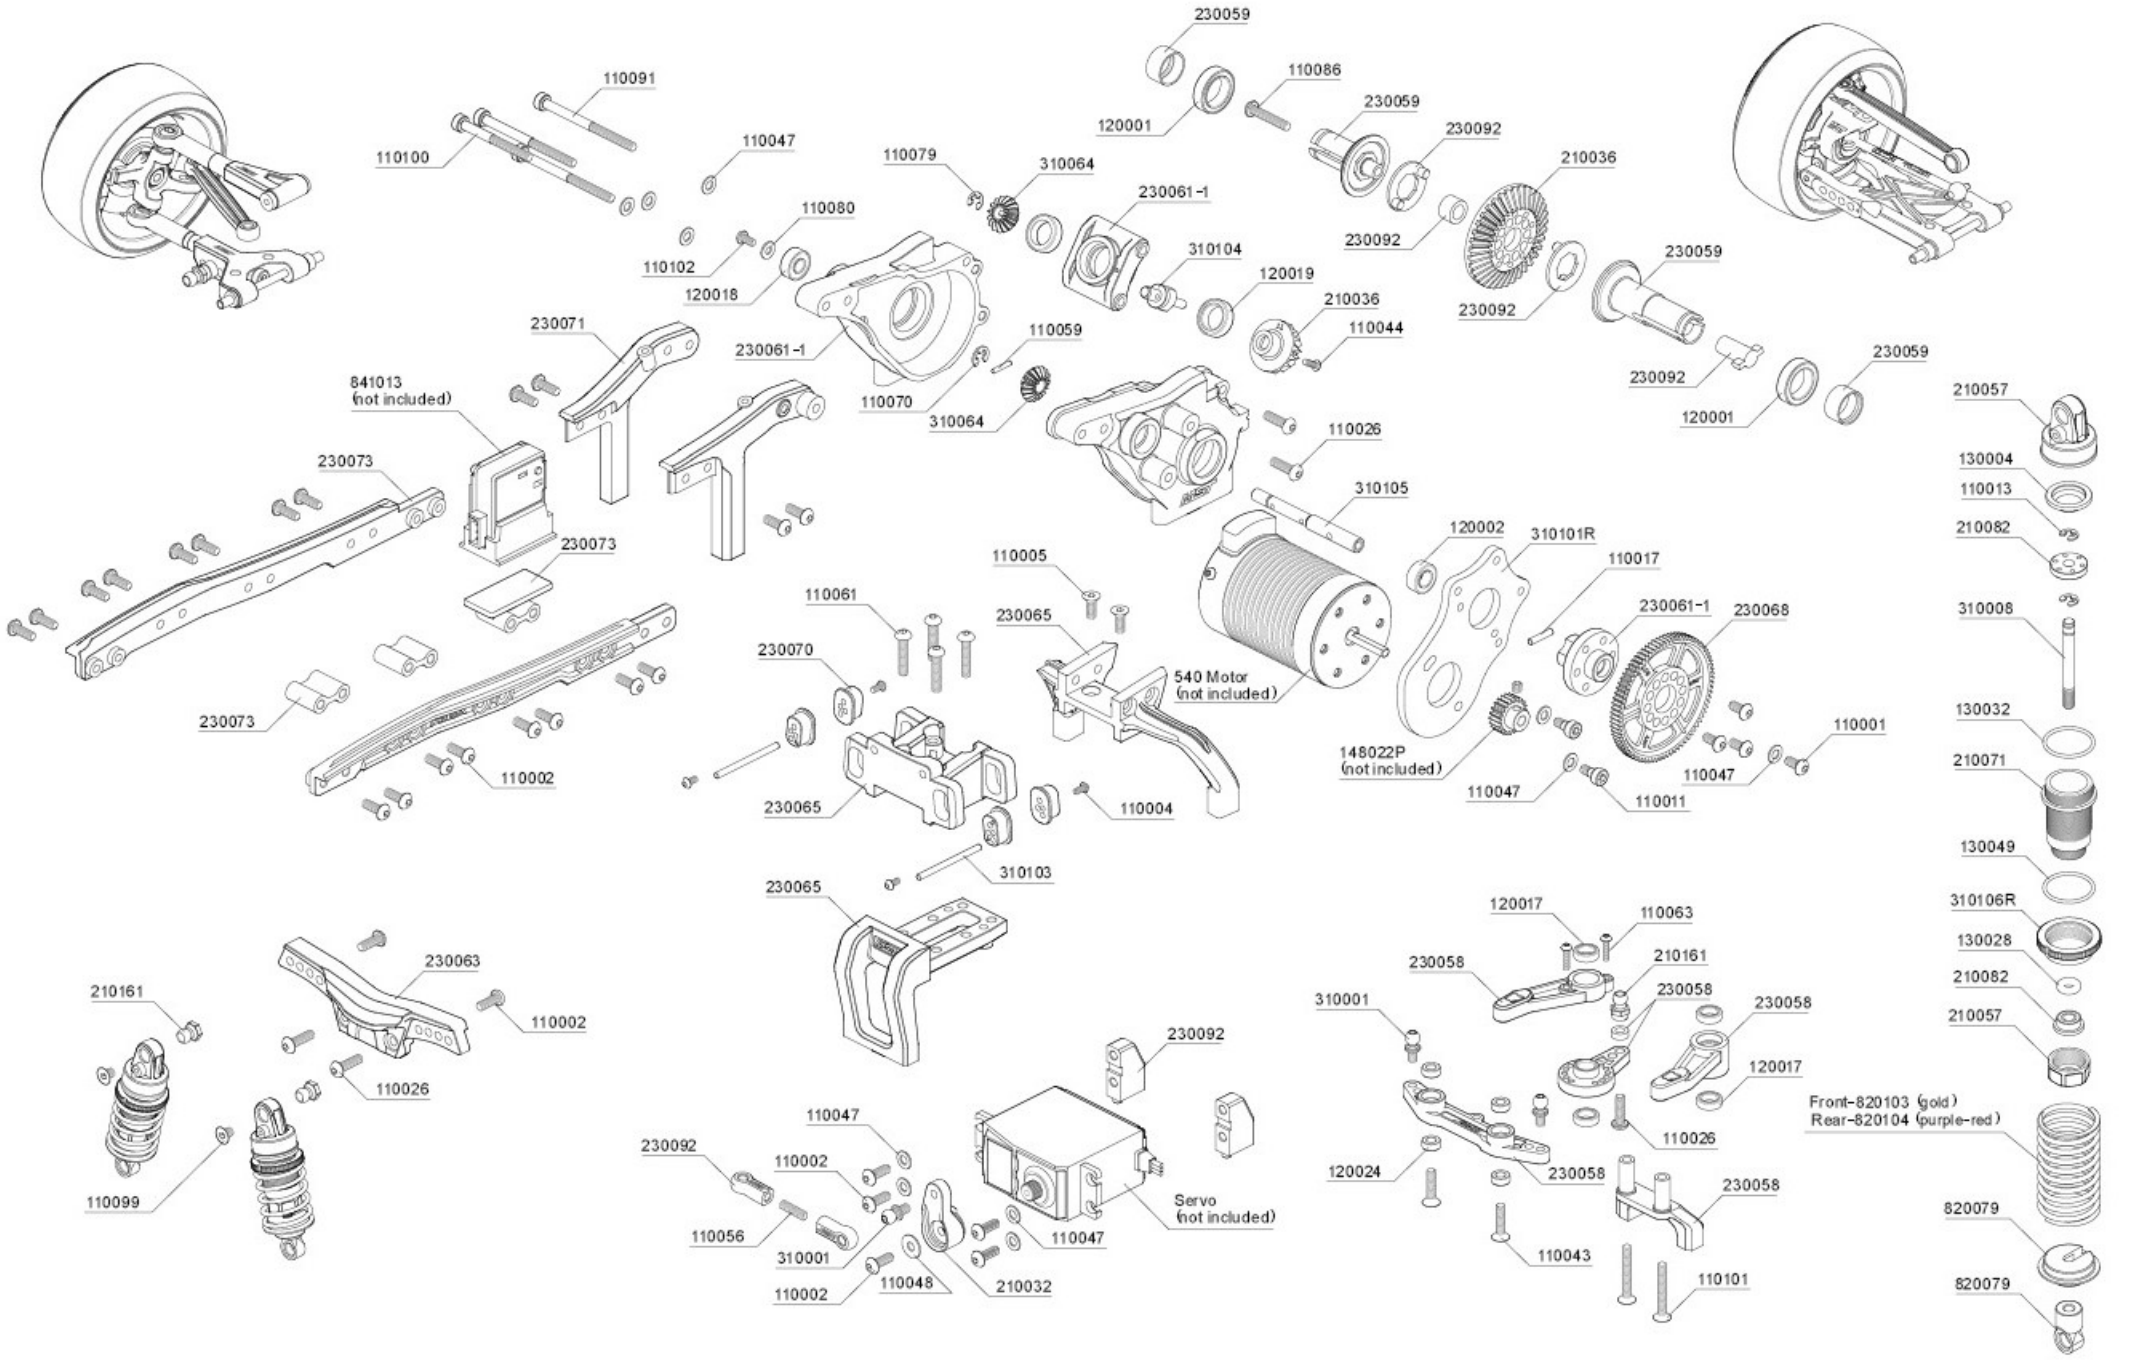


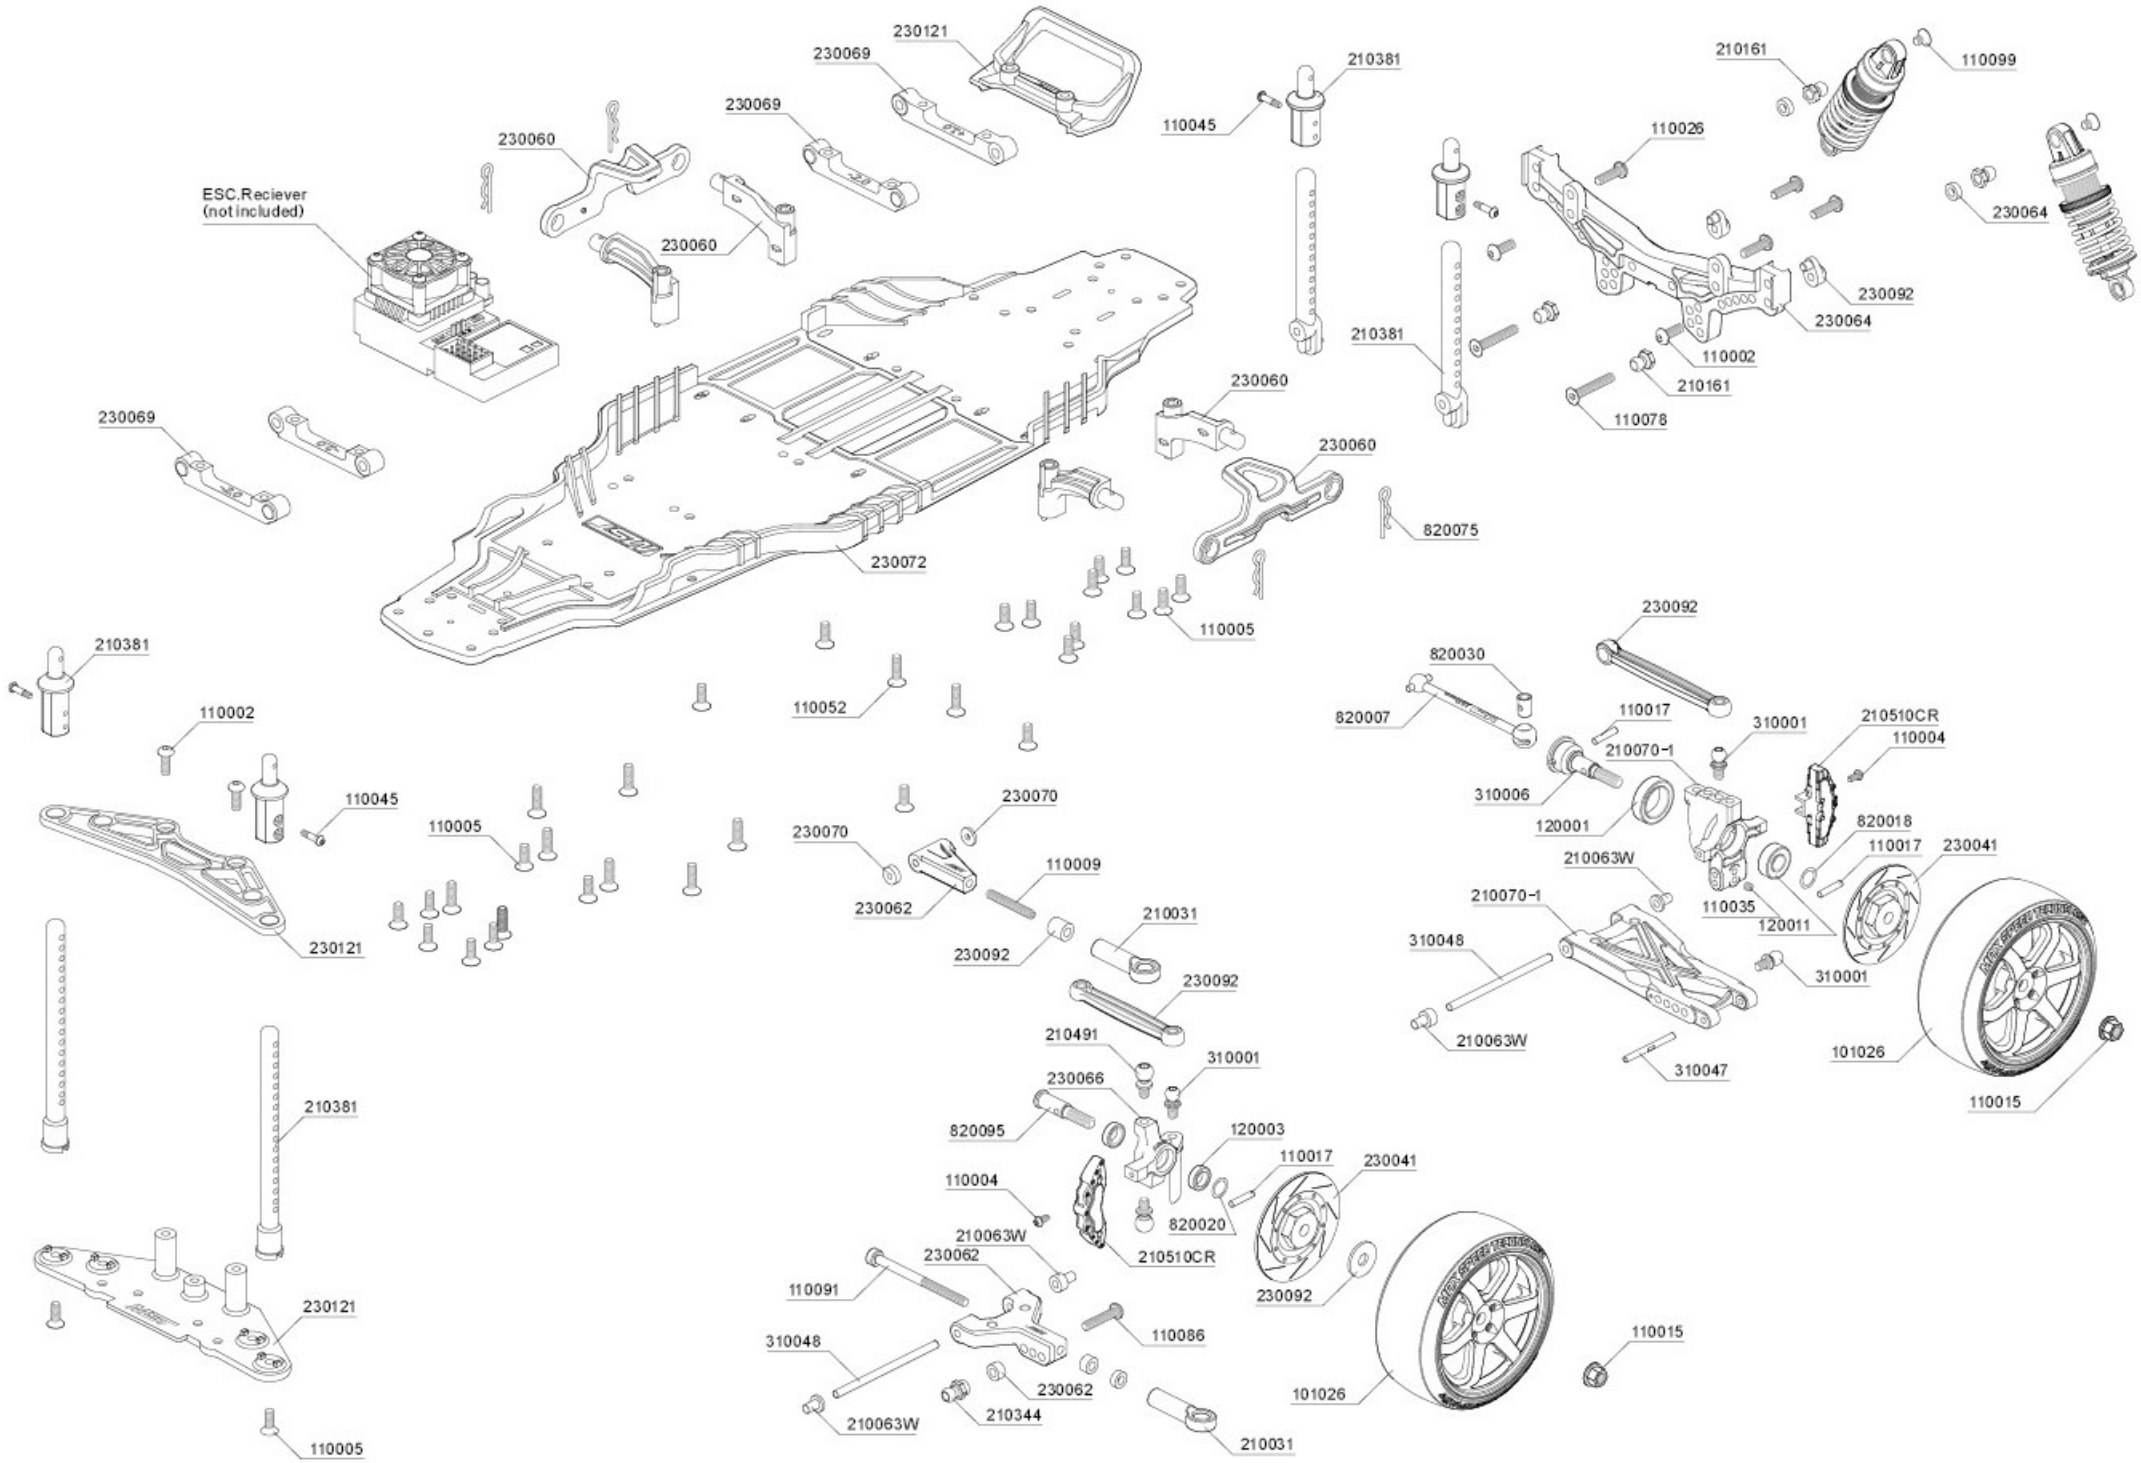
ESC.Reciever
(not included)
230121
230069
230069
230060
230060
210381
110045
210161
110099
110026
230064
230092
230064
110002
210161
110078
210381
230060
230060
820075
230069
230072
110005
110052
210381
110002
110045
110005
230121
230070
230070
230062
110009
230092
210031
230092
210491
310001
230066
820095
120003
110017
230041
110004
820020
210063W
210510CR
230092
110091
230062
110086
310048
230062
210063W
210344
210031
101026
110015
230092
820030
820007
110017
310001
210510CR
210070-1
110004
310006
120001
820018
110017
230041
210063W
110035
120011
210070-1
310048
310001
210063W
310047
101026
110015
210381
230121
110005



0.05 L wrench
0.05 L 板手

1.27 Hex

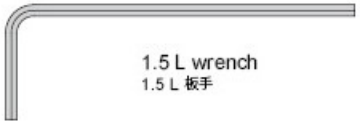


1.5 L wrench
1.5 L 板手

1.5 Hex



2.0 L wrench
2.0 L 板手

2.0 Hex

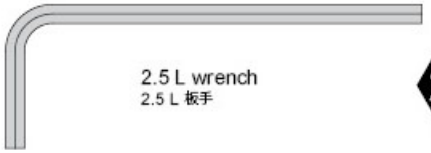


2.5 L wrench
2.5 L 板手

2.5 Hex



5.5×4.0 wrench
5.5×4.0 板手




5.5 & 7.0 alum. wrench
5.5 & 7.0 套筒板手


NECESSARY TOOLS FOR ASSEMBLY 工具需求
(NOT INCLUDED IN KIT) [另購]




Hobby knife
美工刀




Screwdriver
螺絲起子

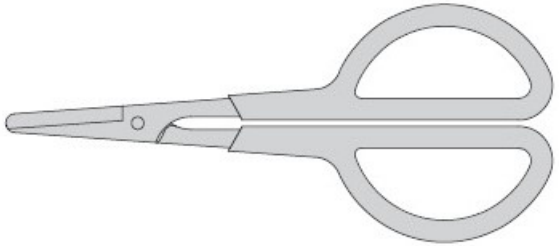

Scissors
剪刀

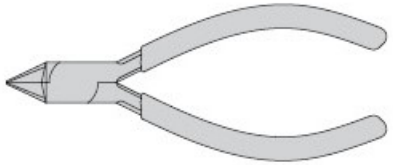

Side cutter
斜口鉗

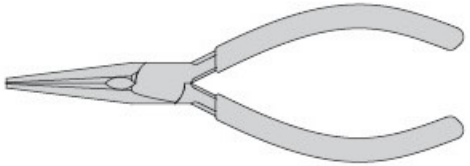

Needle nose pliers
尖嘴鉗



210272
Turnbucle wrench
拉桿板手


Please follow the assembling figures and instructions closely for your [RMX 2.0 KIT] best performance !
請依照說明書圖示步驟安裝以發揮 [RMX 2.0 KIT] 最好效能 !

CONFIGURATION DIAGRAM
配置圖


Please choose the confiquration according to individual demands.
可依個人需求選擇配置方式


MST
max speed technology

TYPE A Centered low gravity mode (Original setting)
低重心模式 (原廠設定)

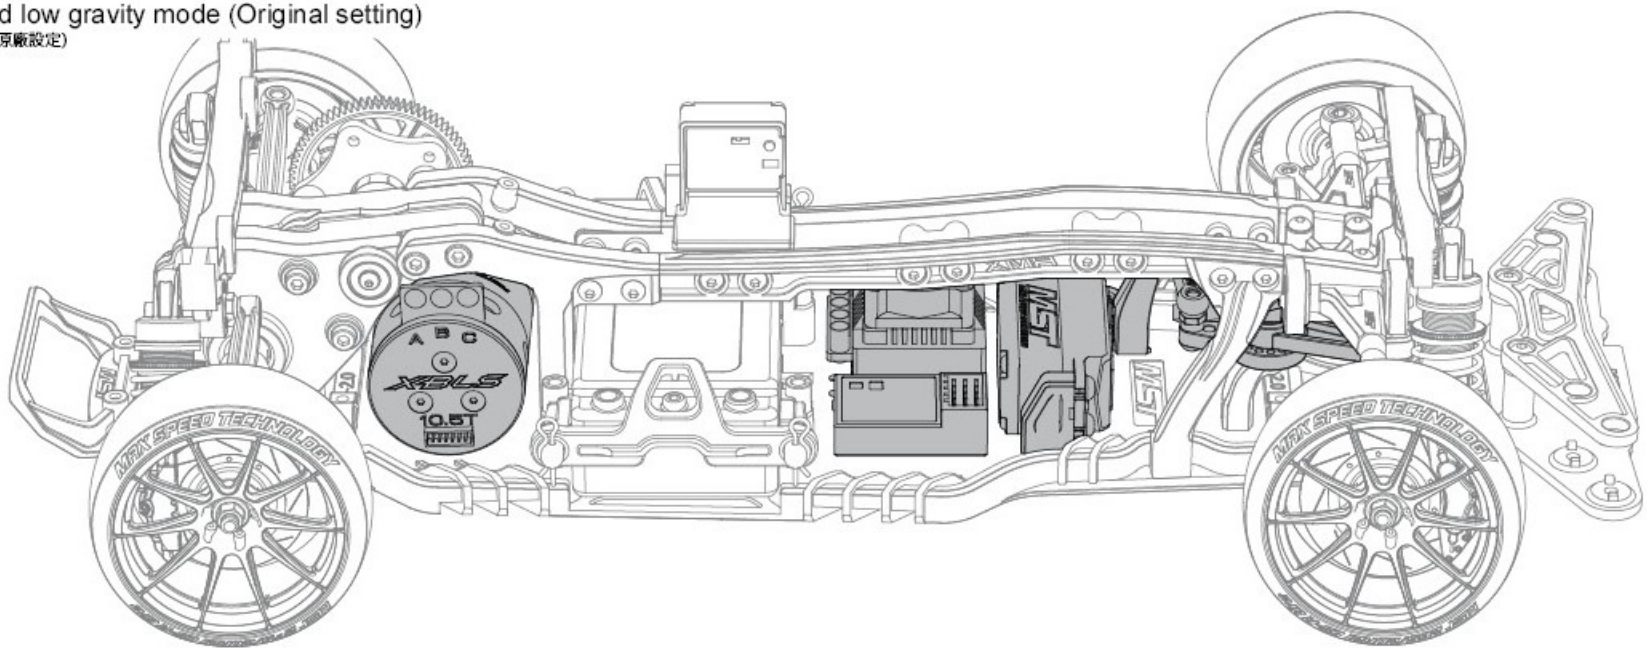

TYPE B Centered upper motor mode
高重心模式

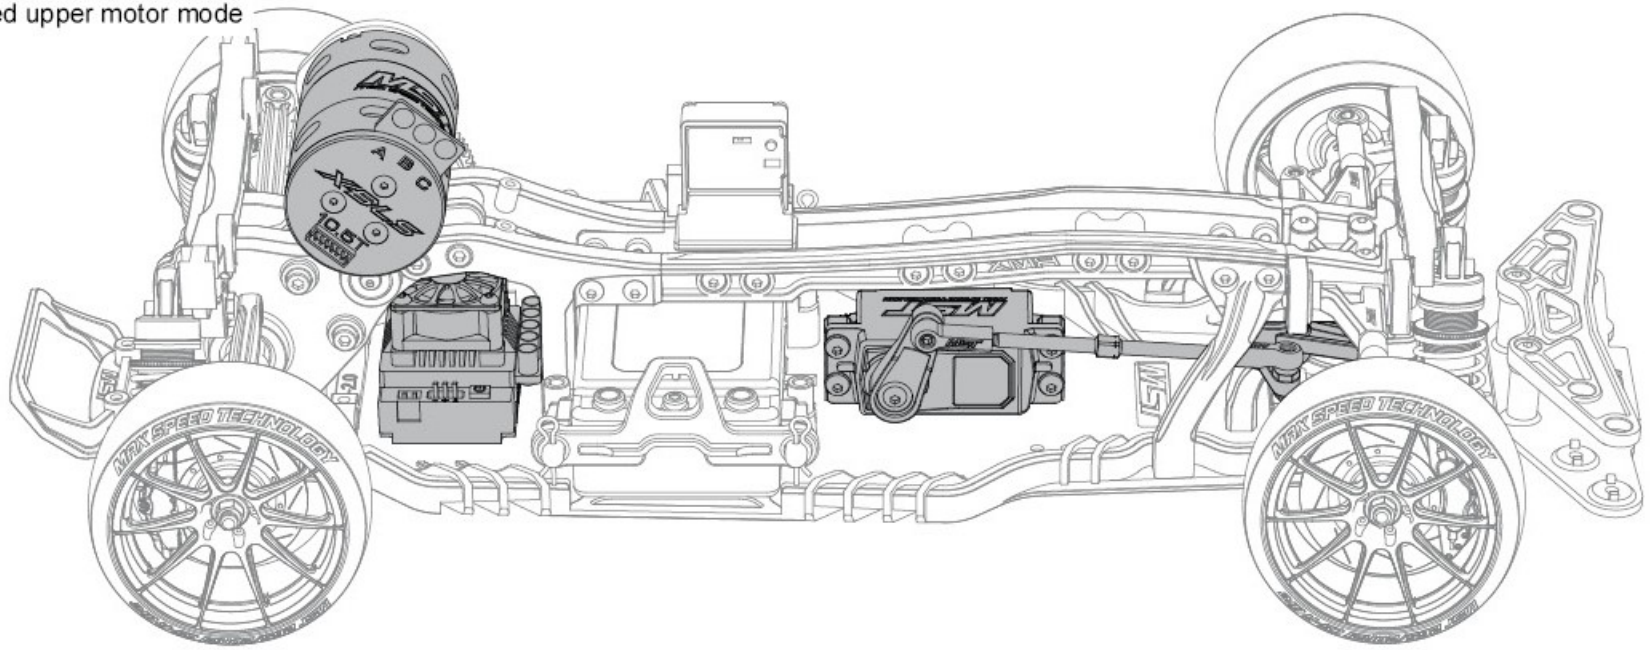


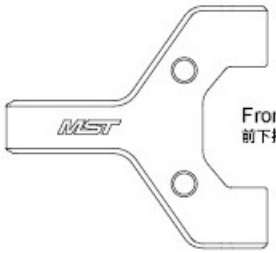

Front lower arm ×2
前下擺臂



Suspension mount (-2.0) ×2
下擺臂座 (-2.0)



5.8×26 Adjuster ×2
拉桿頭



2.5×3 Shaft bush ×2
軸心轉接套



2.5×1 Shaft bush ×2
軸心轉接套



3×5.5×3 Spacer ×4
墊片



3×5.5×2 Spacer ×2
墊片



2.5×46 Arm shaft ×2
擺臂插銷



M3×40 screw ×2
有頭螺絲(半牙)



M3×16 screw ×2
圓頭螺絲




M3×8 screw ×4
沉頭螺絲




4.8 Ball connector L ×2
外六角球頭 (長)


STEP 1 Front lower arm assembly
前下擺臂組裝

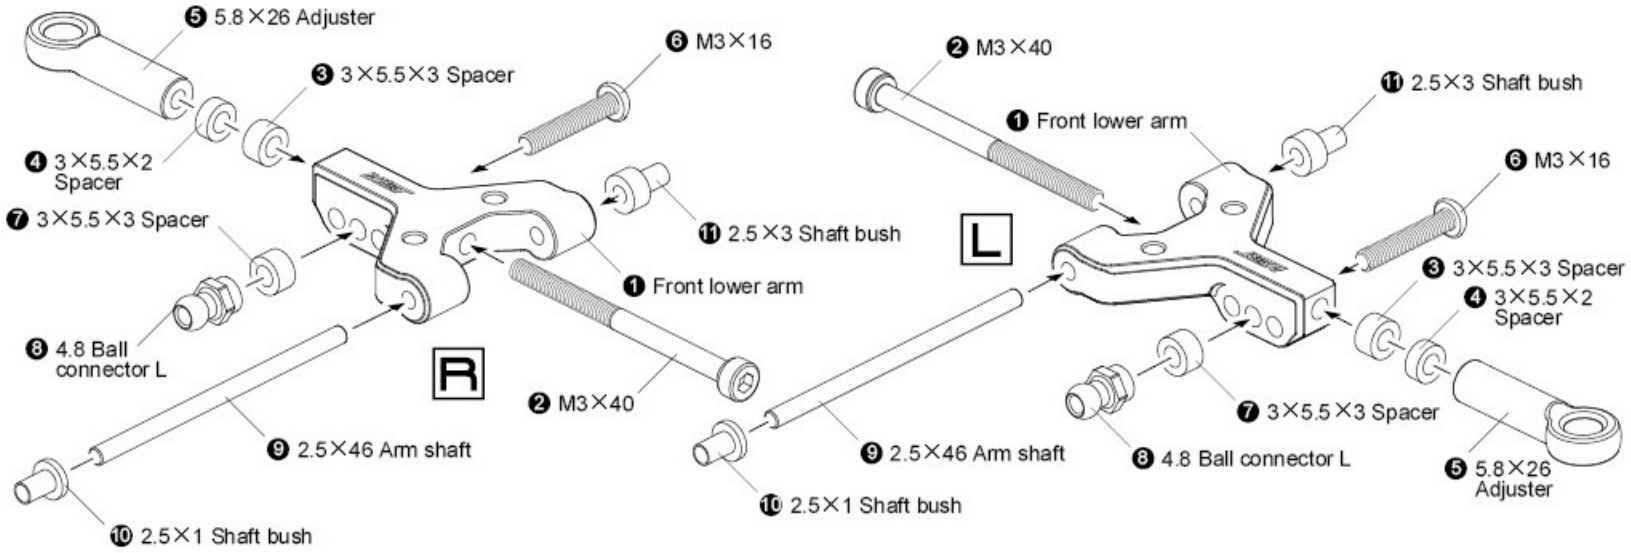

STEP 2 Attaching front lower arm
安裝前下擺臂

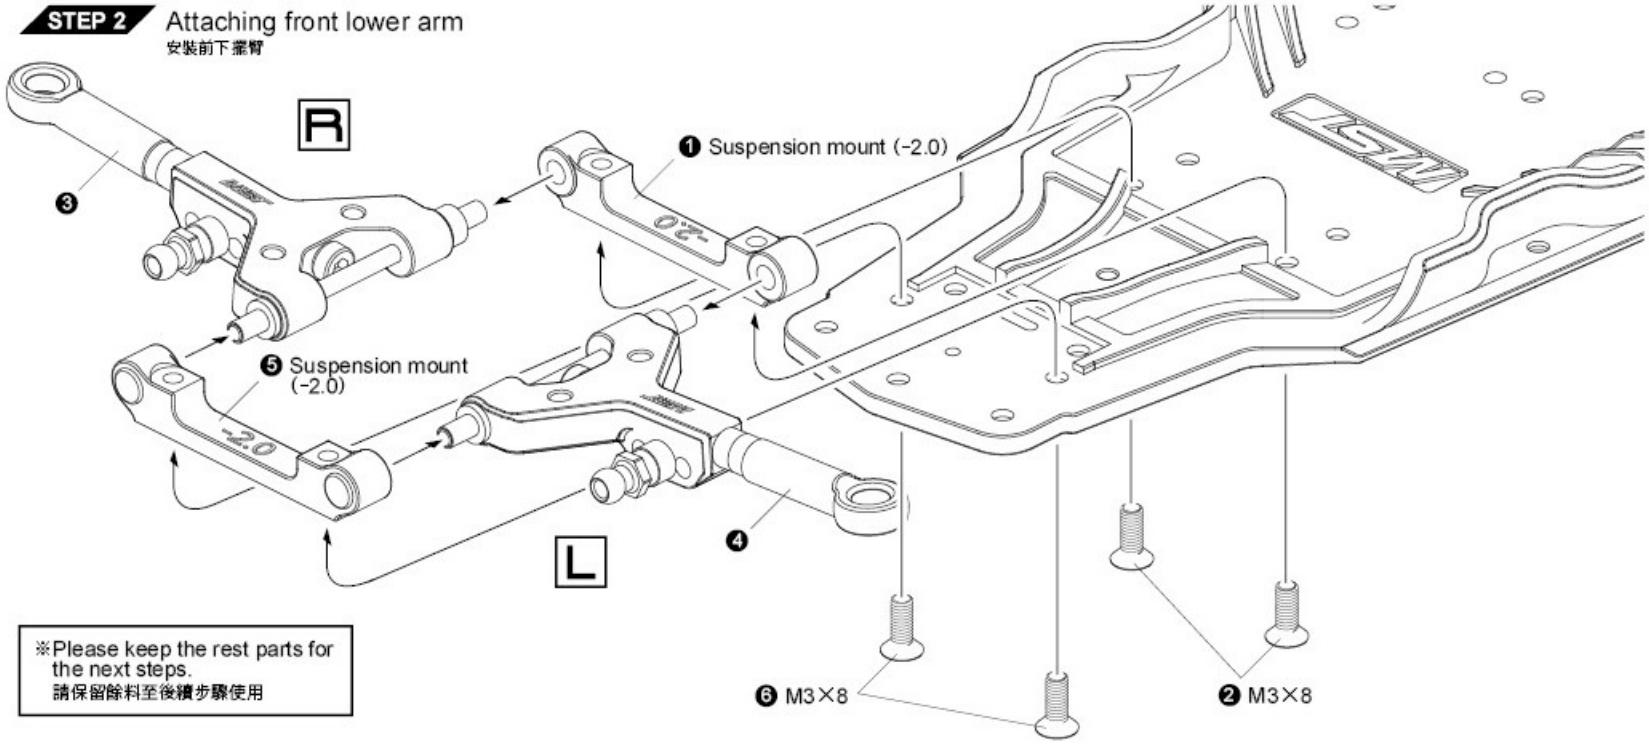

※Please keep the rest parts for the next steps.
請保留餘料至後續步驟使用

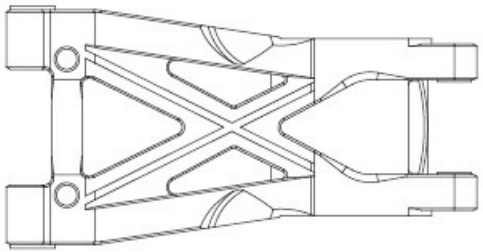

Rear lower arm ×2
後下擺臂



Suspension mount (-2.0) ×1
下擺臂座 (-2.0)



Suspension mount (+1.0) ×1
下擺臂座 (+1.0)



2.5×46 Arm shaft ×2
擺臂插銷



2.5×3 Shaft bush ×2
軸心轉接套



2.5×1 Shaft bush ×2
軸心轉接套




M3×8 screw ×4
沉頭螺絲




4.8×4.5 Ball connector ×2
球頭螺絲


STEP 1 Rear lower arm assembly
後下擺臂組裝

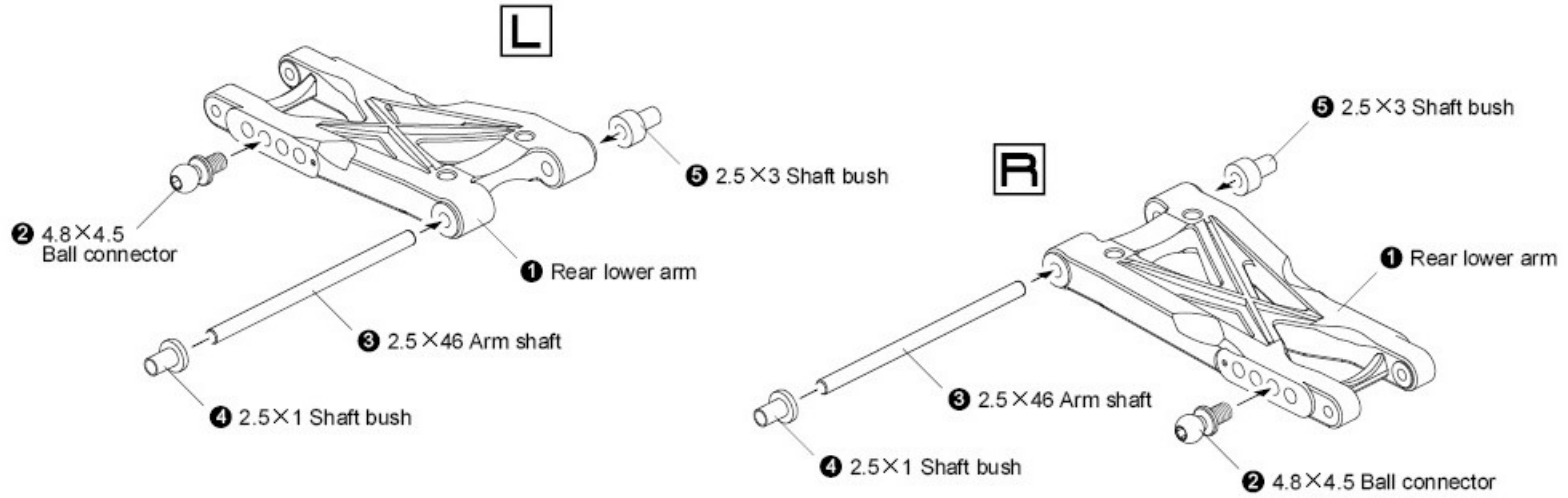


STEP 2 Attaching rear lower arm
安裝後下擺臂

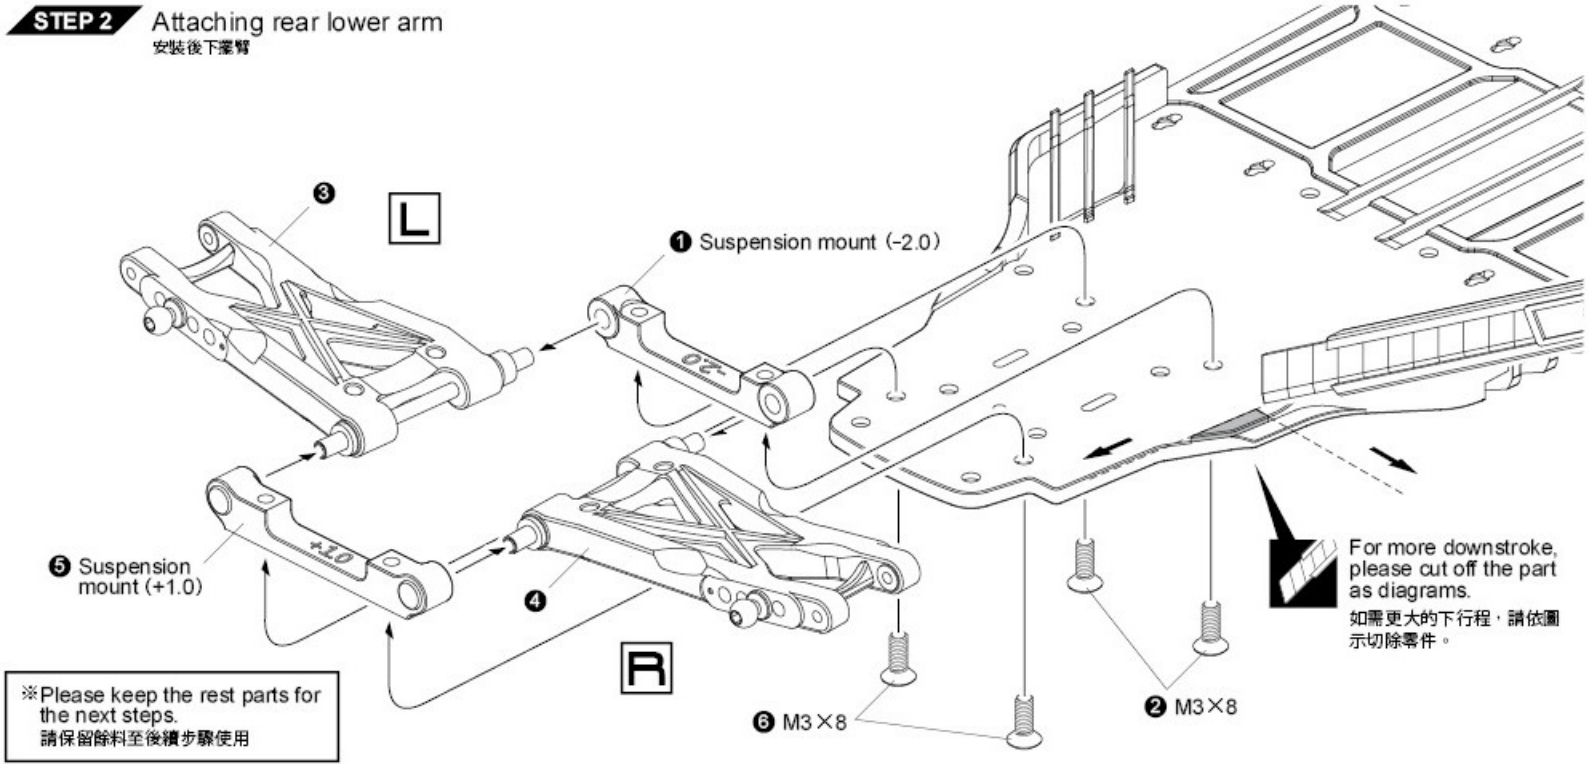


※Please keep the rest parts for the next steps.
請保留餘料至後續步驟使用

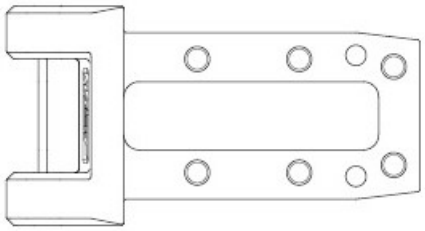


Front head mount A ×1
前擋座A

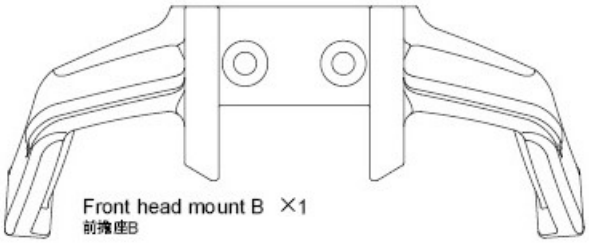


Front head mount B ×1
前擋座B

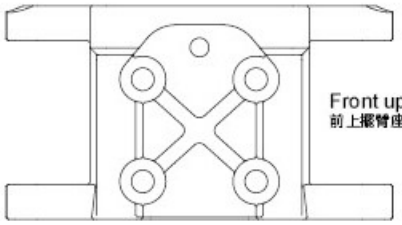

Front upper arm mount ×1
前上擺臂座

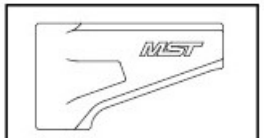

Front upper arm ×2
前上擺臂
Bag 1



5.8×26 Adjuster ×2
拉桿頭



Arm shaft bush A ×2
擺臂襯套 A



Arm shaft bush B ×2
擺臂襯套 B

M2×4 screw ×4
圓頭螺絲



M3×8 screw ×2
沉頭螺絲



M3×14 screw ×4
圓頭螺絲



M3×20 screw ×2
止付螺絲



2×28 shaft ×2
插銷



2×6×1 Spacer ×2
墊片




2×6×2 Spacer ×2
墊片




3×6×7 Spacer ×2
墊片


STEP 1 Front upper arm assembly
前上擺臂組裝

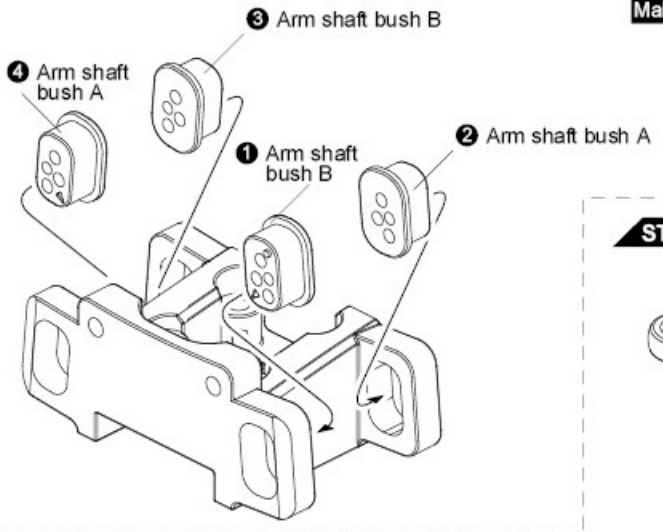

X2 Make 2

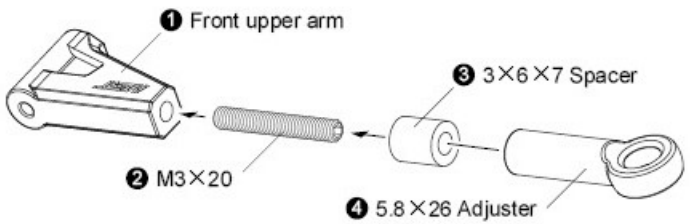



STEP 2

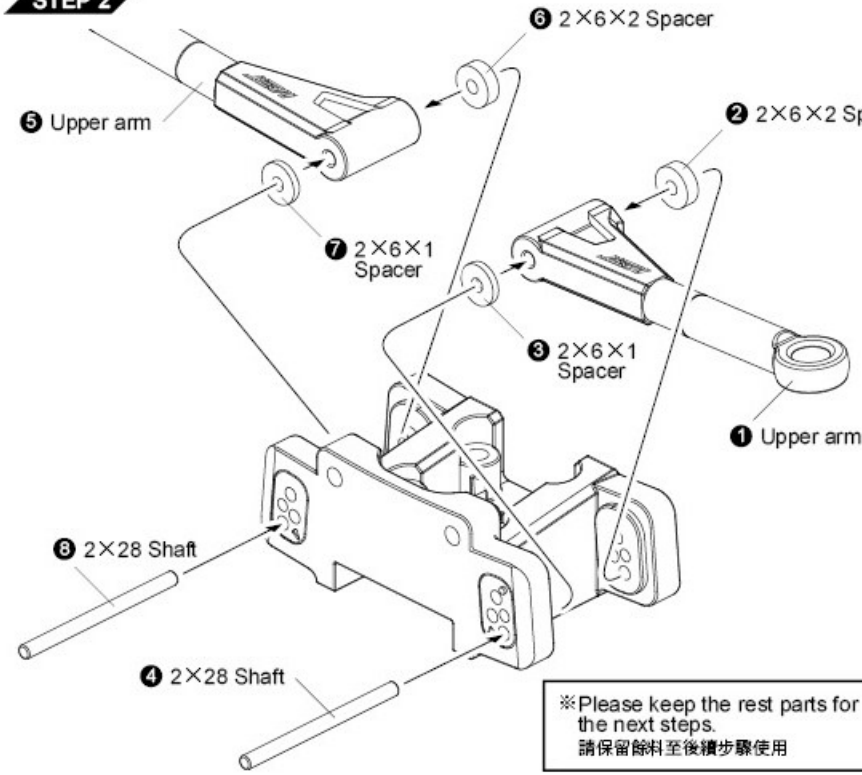



※Please keep the rest parts for the next steps.
請保留餘料至後續步驟使用

STEP 3

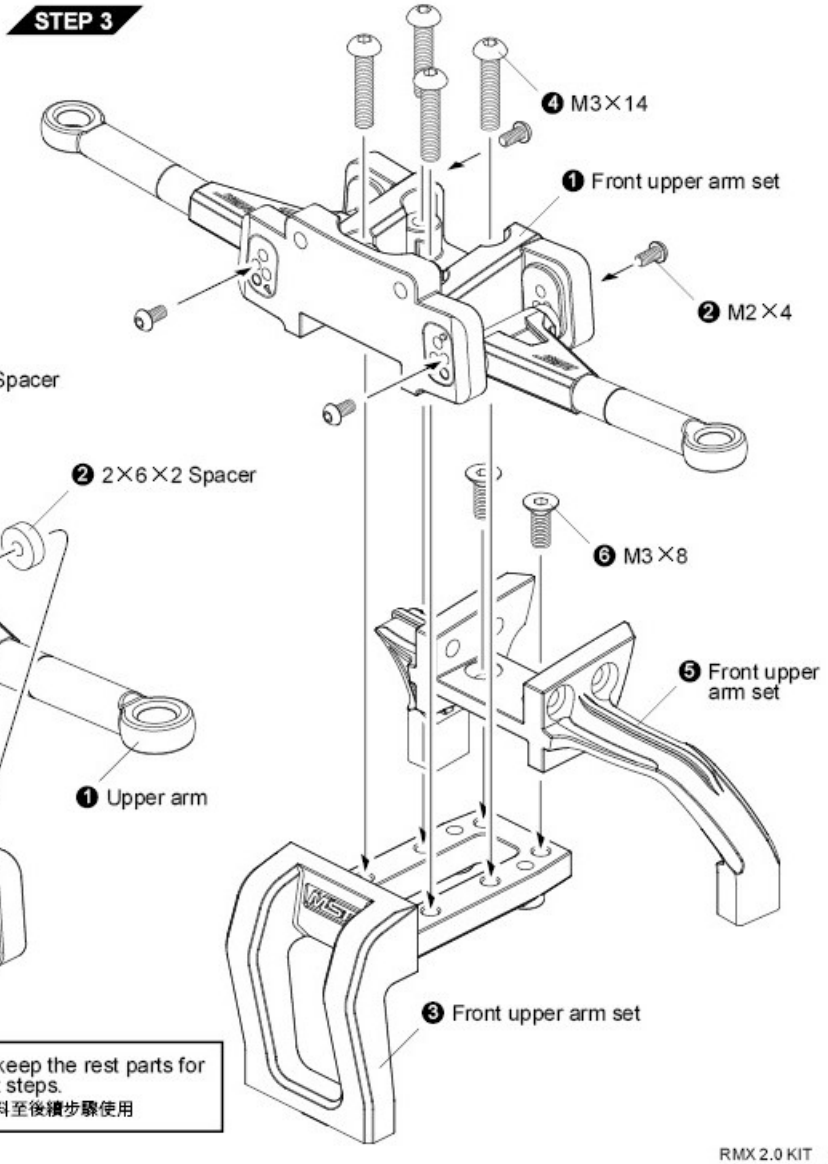



Steering arm A ×1
轉向搖臂 A

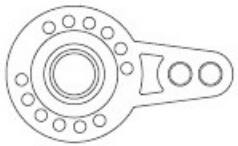
Steering arm B ×1
轉向搖臂 B


Steering arm C ×1
轉向搖臂 C


Steering joint plate ×1
轉向連接板


Steering arm post ×1
轉向搖臂支柱


M3×20 screw ×2
沉頭螺絲


M3×12 screw ×2
沉頭螺絲


M3×10 screw ×1
圓頭螺絲


M2×8 screw ×2
圓頭螺絲


4.8×4.5 Ball connector ×2
球頭螺絲



4.8 Ball connector ×1
外六角球頭


5×8×2.5 Bearing ×4
軸承


3×6×2.5 Bearing ×4
軸承



3×5.5×2 Spacer ×1
墊片

STEP 1 Steering arm assembly
轉向搖臂組裝

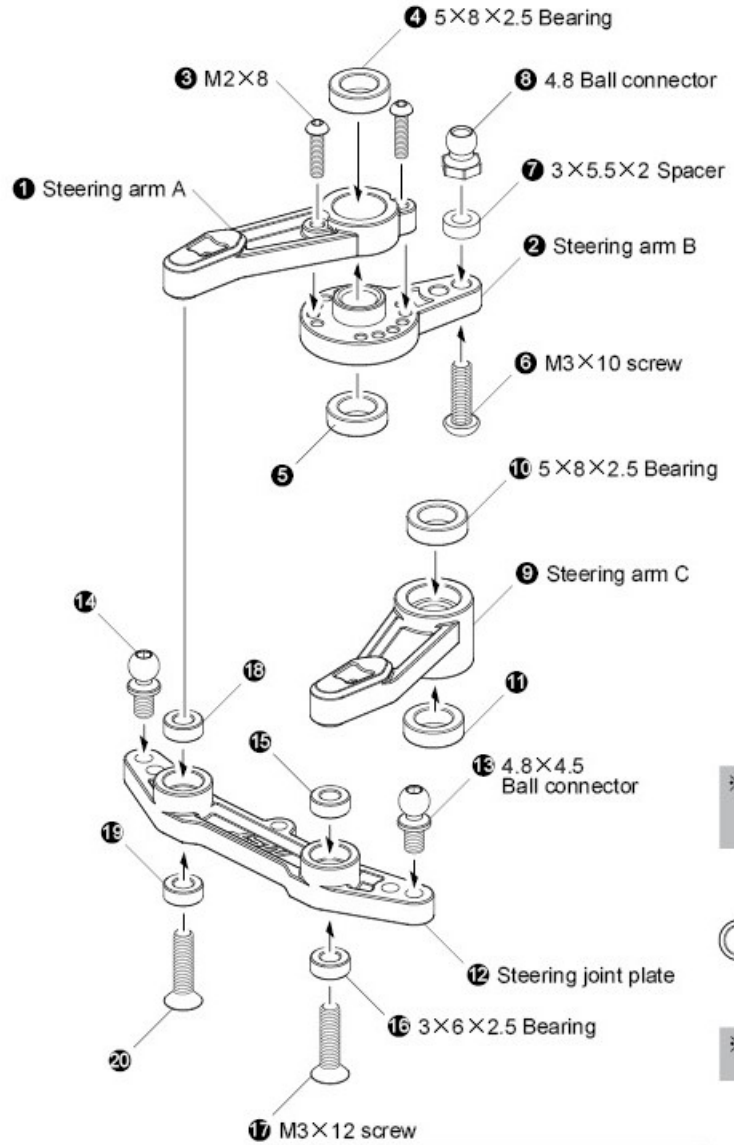


⚠ Tighten M3×12 screw first, and then loose it till the steering joint plate turning freely.
先稍微旋緊M3×12螺絲再放鬆至轉向連接板可自由轉動無阻力。


STEP 2 Attaching steering arm
安裝轉向搖臂組

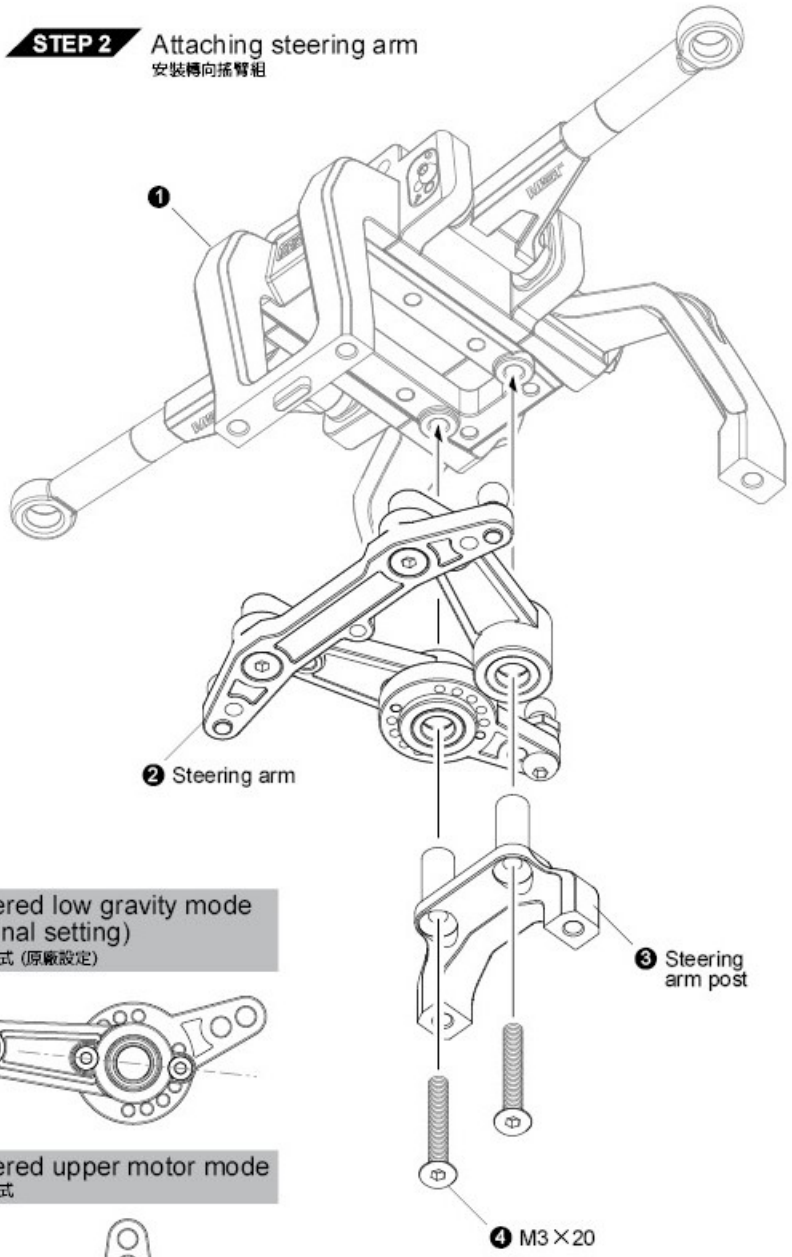


※Centered low gravity mode (Original setting)
低重心模式 (原廠設定)

※Centered upper motor mode
高重心模式

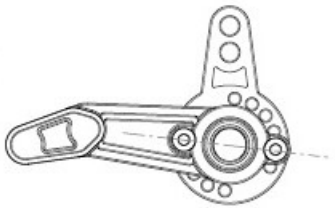



Servo horn 25T ×1
25T 伺服片




Servo horn 23T ×1
23T 伺服片



4.8 Steering adjuster ×2
轉向拉桿
Bag 2



4.8 Adjuster S ×2
拉桿頭
Bag 2



Servo mount ×2
伺服機座
Bag 2



M3×12 screw ×1
止付螺絲



M3×10 screw ×1
圓頭螺絲



M3×8 screw ×5
圓頭螺絲



2.6×10 Screw ×1
自攻圓頭螺絲



M3×10 screw ×8
沉頭螺絲



4.8×4.5 Ball connector ×1
球頭螺絲




3×8×0.5 Spacer ×1
墊片




3×6×0.5 Spacer ×4
墊片


STEP 1 Steering servo assembly
轉向伺服機組裝

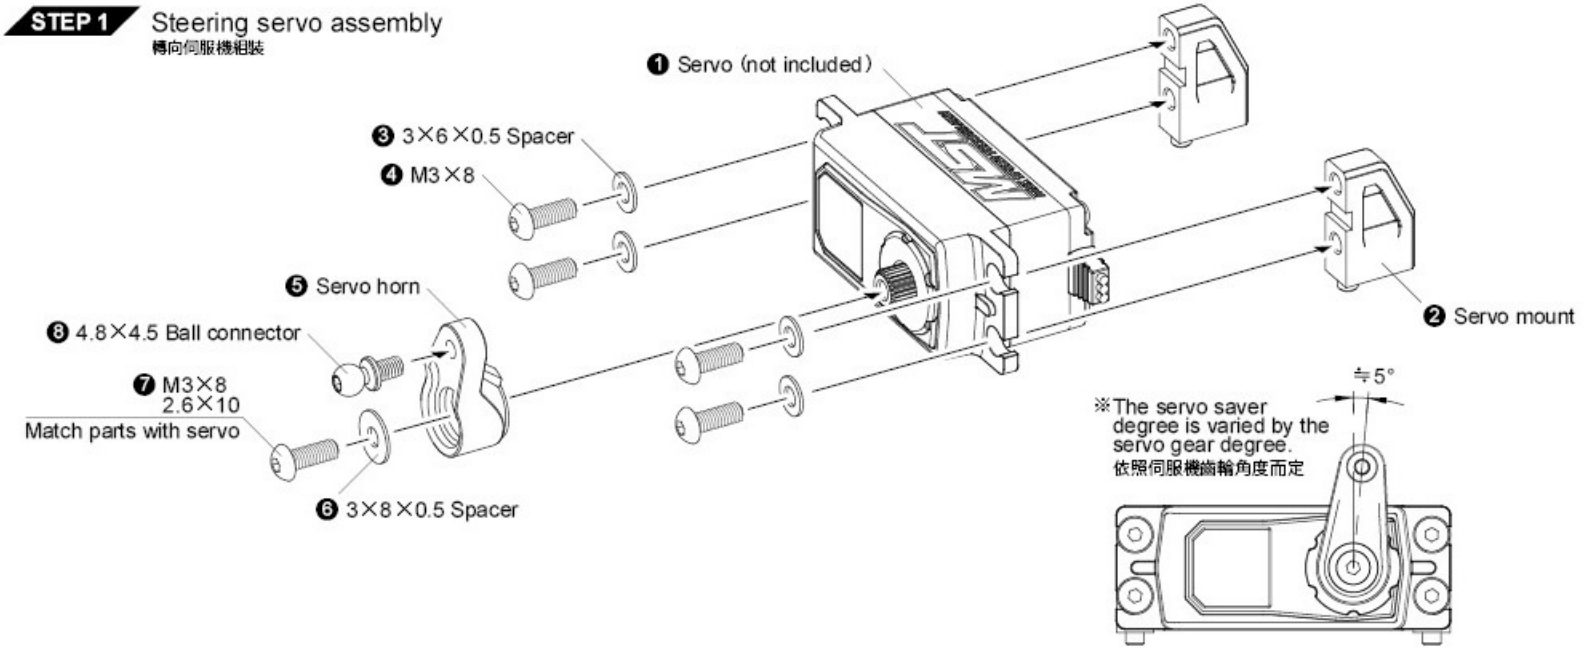

STEP 2 Servo saver turnbuckle assembly
伺服拉桿組裝


※Centered low gravity mode(Original setting)
低重心模式 (原廠設定)

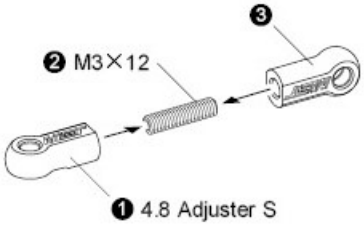




※Please adjust the length by the servo spec. and the steering neutral.
依伺服機與轉向中立點調整長度

※Centered upper motor mode
高重心模式

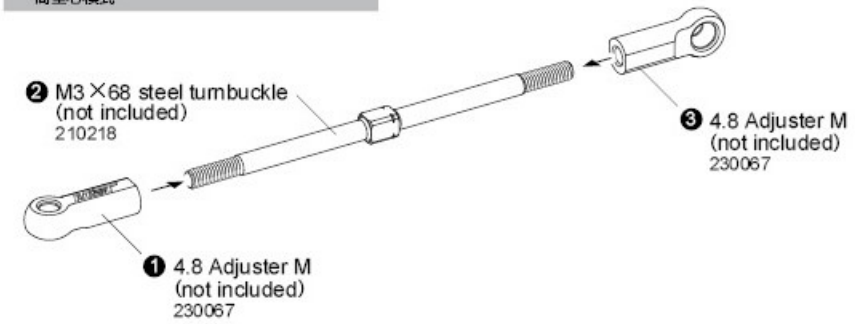





※Please adjust the length by the servo spec. and the steering neutral.
依伺服機與轉向中立點調整長度


STEP 1 Attaching front steering-suspension
安裝前擺組

※Centered low gravity mode
(Original setting)
低重心模式（原廠設定）

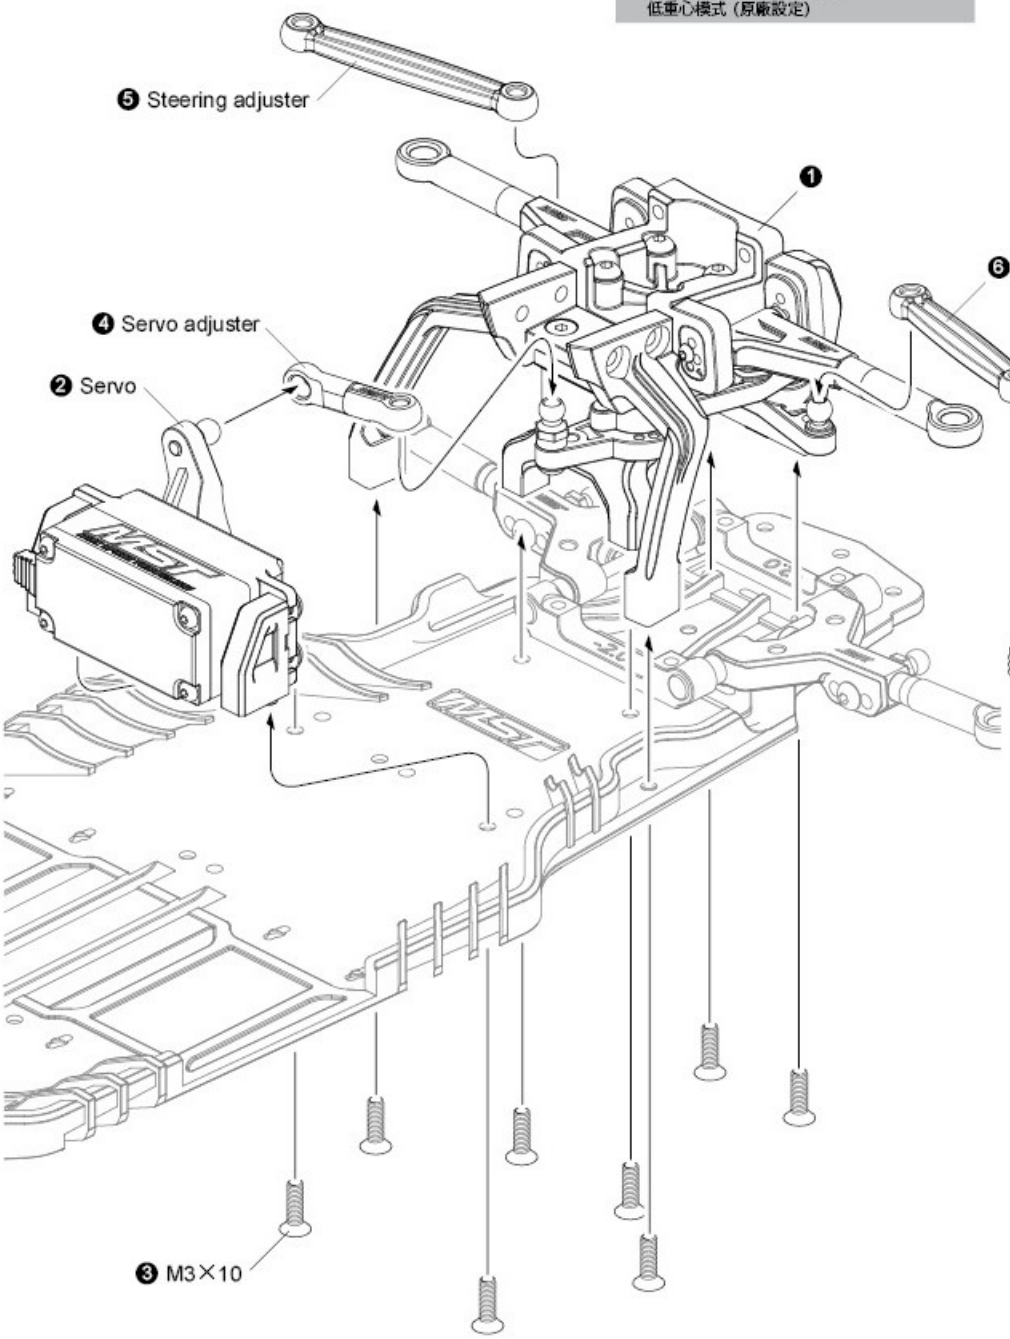


※Centered upper motor mode
高重心模式

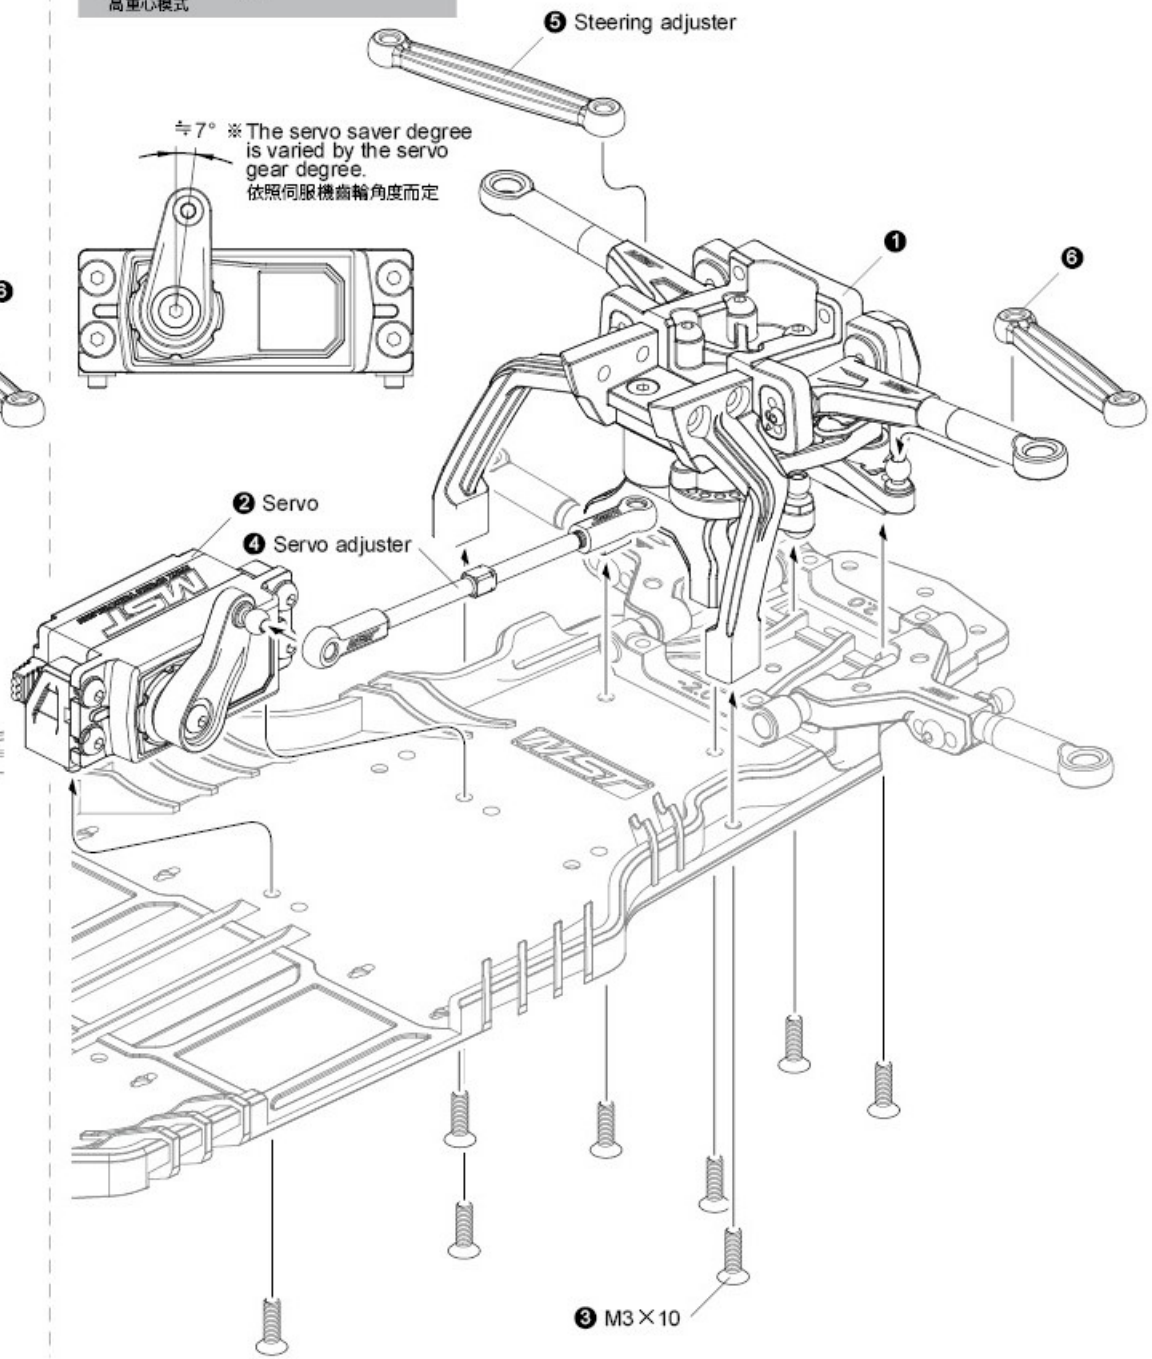

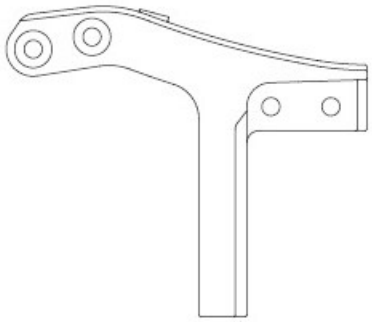


Gear box connector A ×1
連結架 A

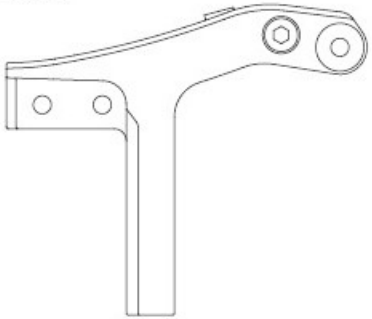

Gear box connector B ×1
連結架 B




Strengthen post ×2
補強柱




Gyro mount ×1
陀螺儀座



M3×8 screw ×16
圓頭螺絲

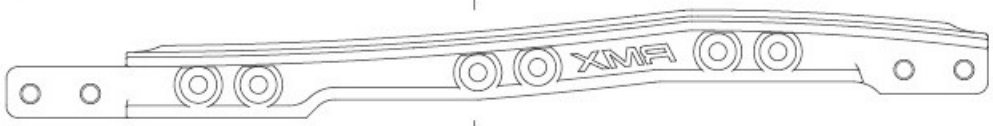



Upper deck A ×1
二樓板 A

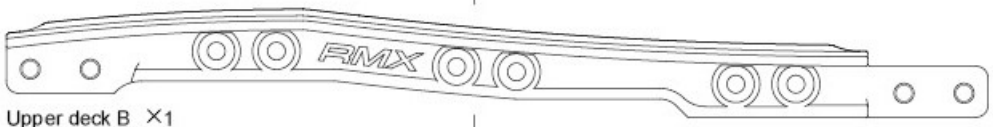


Upper deck B ×1
二樓板 B

STEP 1 Attaching upper deck
安裝二樓板

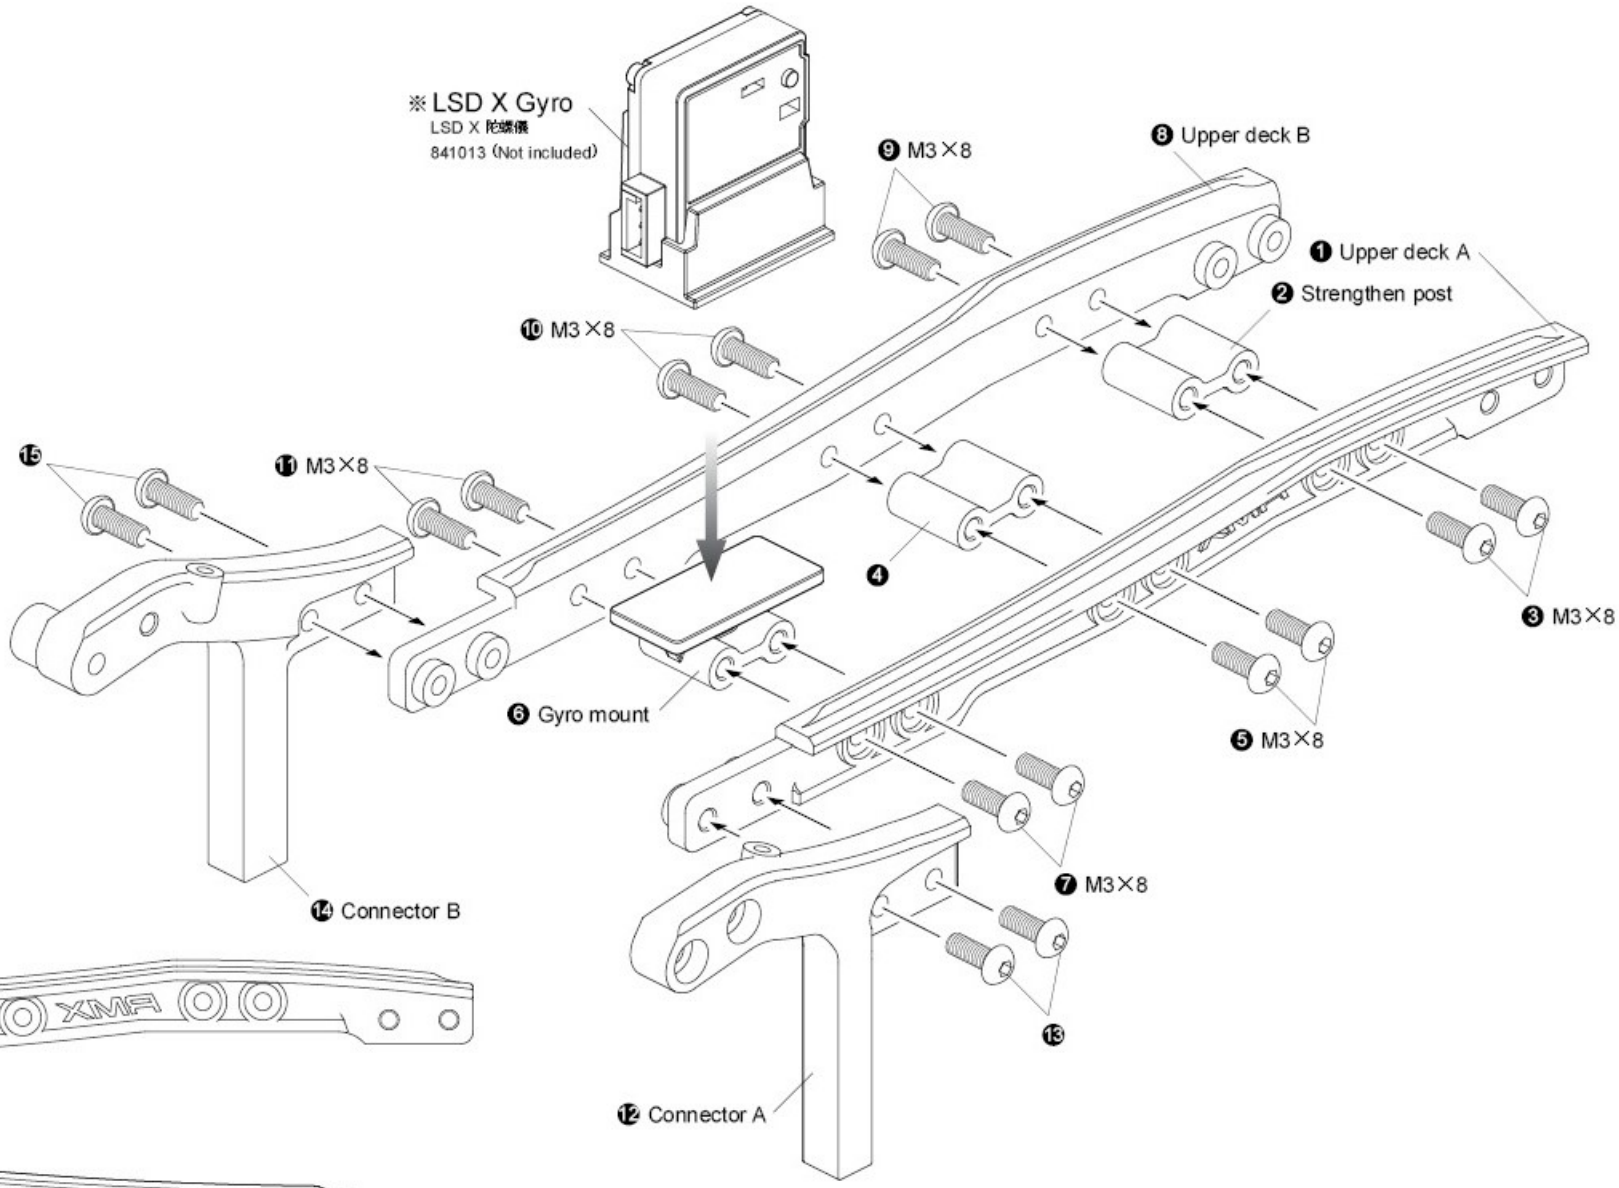


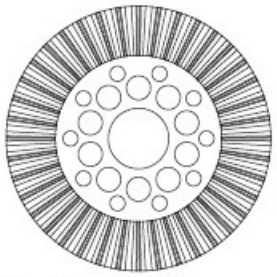

Bevel Gear 42T ×1
傘齒 42T

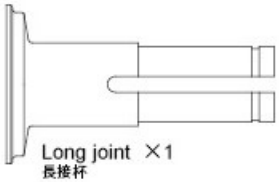

Long joint ×1
長接杆

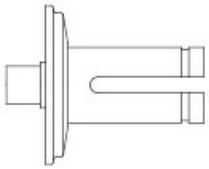



M3×16 screw ×1
圓頭螺絲

Short joint ×1
長接杆




10×15 Ball bearing ×2
培林




Joint ring ×2
接杆環



5×8×5 Spacer ×1
墊片
Bag 2

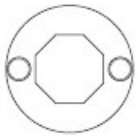



Diff. plate ×2
滾差墊板
Bag 2



Spool. nut ×1
直軸螺帽
Bag 2

STEP 1 Rear spool. set assembly
後直軸組裝

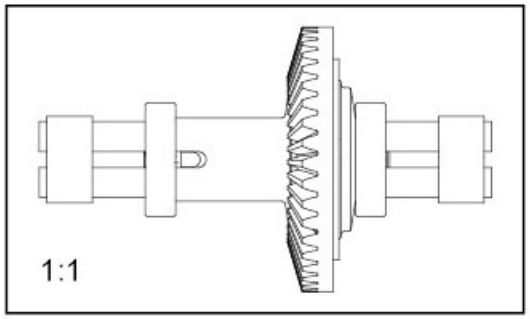

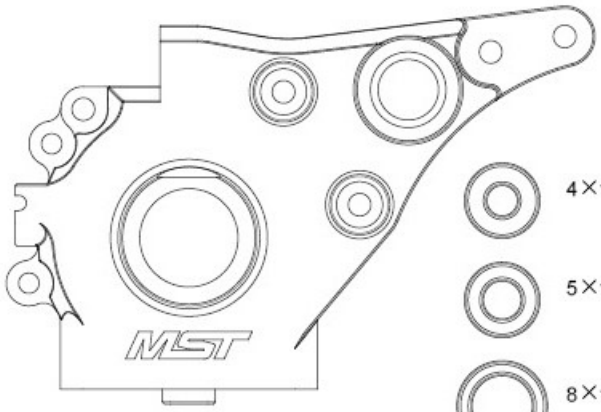


Rear gear box A ×1
後齒箱 A

4×10 Ball bearing ×1
培林

5×10 Ball bearing ×1
培林

8×12 Ball bearing ×2
培林

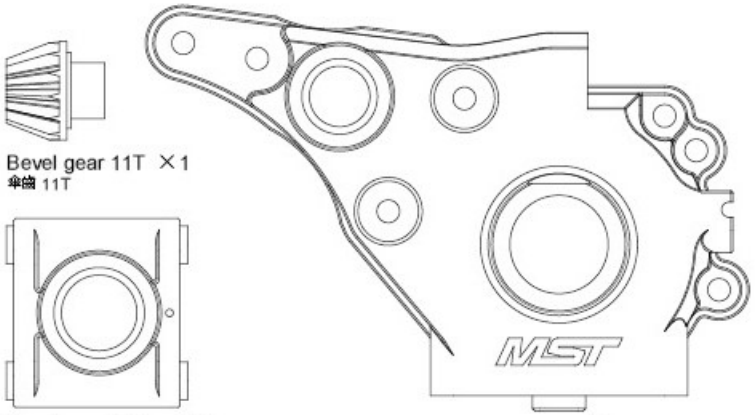

Bevel gear 11T ×1
傘齒 11T

Bevel gear holder ×1
傘齒座

Rear gear box B ×1
後齒箱 B

1.5×7.8 Shaft ×2
插銷

M2.5×5 screw ×1
圓頭螺絲

M3×10 screw ×2
圓頭螺絲

Bevel gear shaft ×1
傘齒軸

M3×30 screw ×1
有頭螺絲(半牙)

Main shaft ×1
主齒軸

2.6×5.8×0.6 Spacer ×1
墊片


3×6×0.5 Spacer ×1
墊片

Bevel gear 16T ×2
傘齒 16T


E-clip 2.5 ×1
E形扣

E-clip 3.0 ×1
E形扣

STEP 1 Main shaft assembly
主齒軸組裝

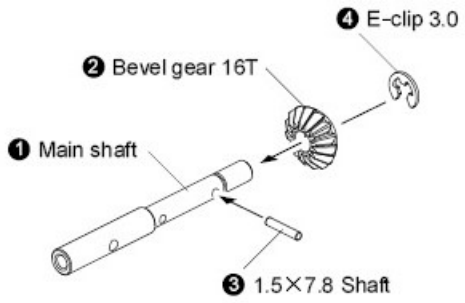



STEP 2 Bevel gear shaft assembly
傘齒軸組裝

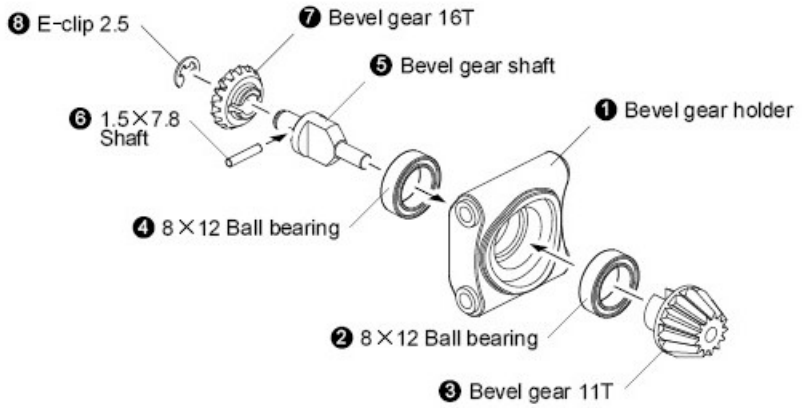


STEP 3 Rear gear box assembly
後齒軸組裝

❹ 2.6×5.8×0.6 Spacer (silver)
※ The spacers are removable when the gear gap is too small.
此墊片為調整主齒軸傘齒間隙用，如傳動偏緊可移除。
⚠ Please note the spacer color and specifications.
請注意墊片顏色與尺寸。

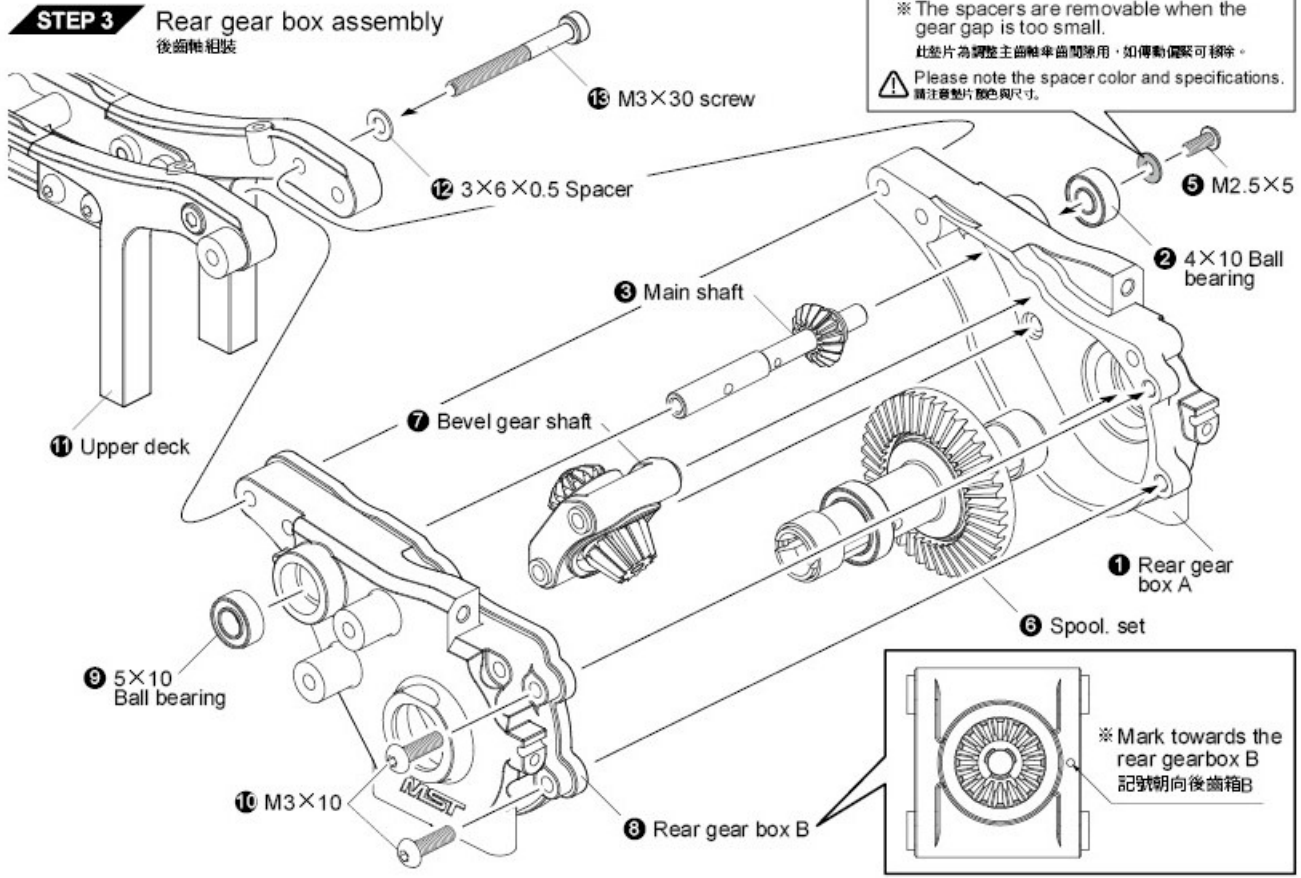

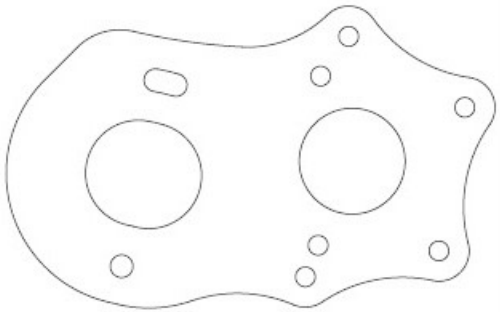

Alum. motor mount ×1
鋁合金馬達座

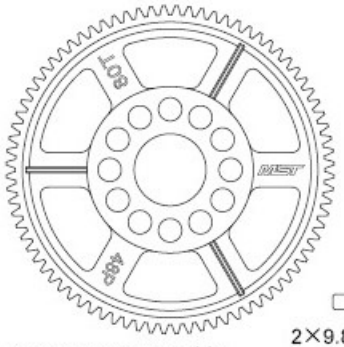


Spur gear 48P 80T ×1
大直齒



2×9.8 Shaft ×1
插銷



3×6×0.5 Spacer ×6
墊片

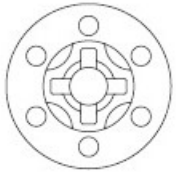

Spur gear holder ×1
大齒盤座



M3×6 screw ×2
有頭螺絲(半牙)



M3×40 screw ×3
有頭螺絲(半牙)



M3×10 screw ×2
沉頭螺絲



M3×8 screw ×4
沉頭螺絲




M3×8 screw ×4
圓頭螺絲



M3×6 screw ×4
圓頭螺絲


STEP 1 Attaching spur gear
安裝大齒盤

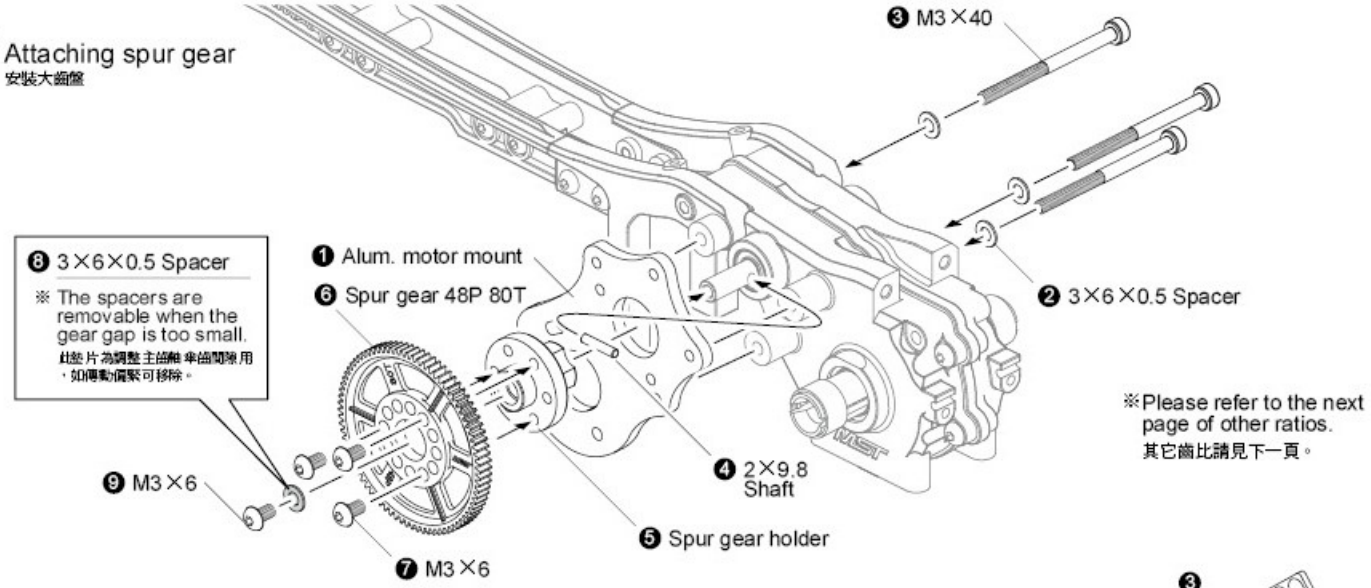


※Please refer to the next page of other ratios.
其它齒比請見下一頁。


STEP 2 Attaching motor
安裝馬達

※Centered low gravity mode (Original setting)
低重心模式（原廠設定）

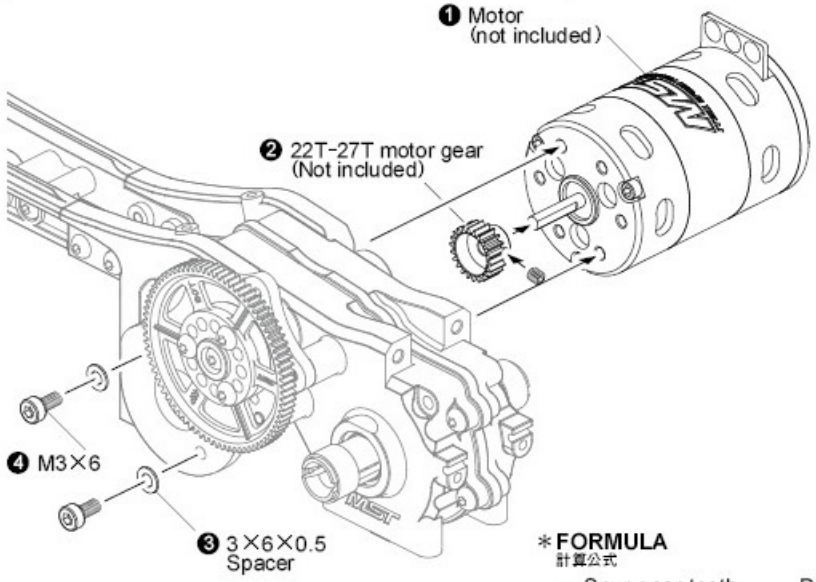

※Centered upper motor mode
高重心模式

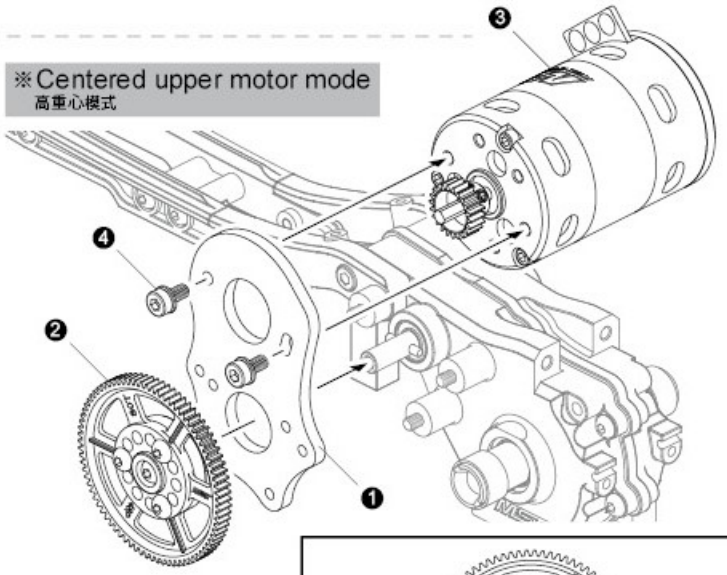

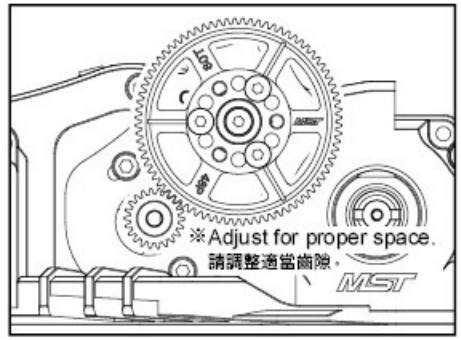


※**FORMULA**
計算公式

$$\left(\frac{\text{Spur gear teeth 大直齒}}{\text{Pinion gear teeth 馬達齒}} \times \frac{\text{Diff. ring gear 大傘齒}}{\text{Diff. pinion gear 小傘齒}}\right) = \text{Gear ratio 終傳比}$$


STEP 3 Attaching rear gear box
安裝後齒箱

※ Centered low gravity mode (Original setting)
低重心模式（原廠設定）

※ Cenatered upper motor mode
高重心模式

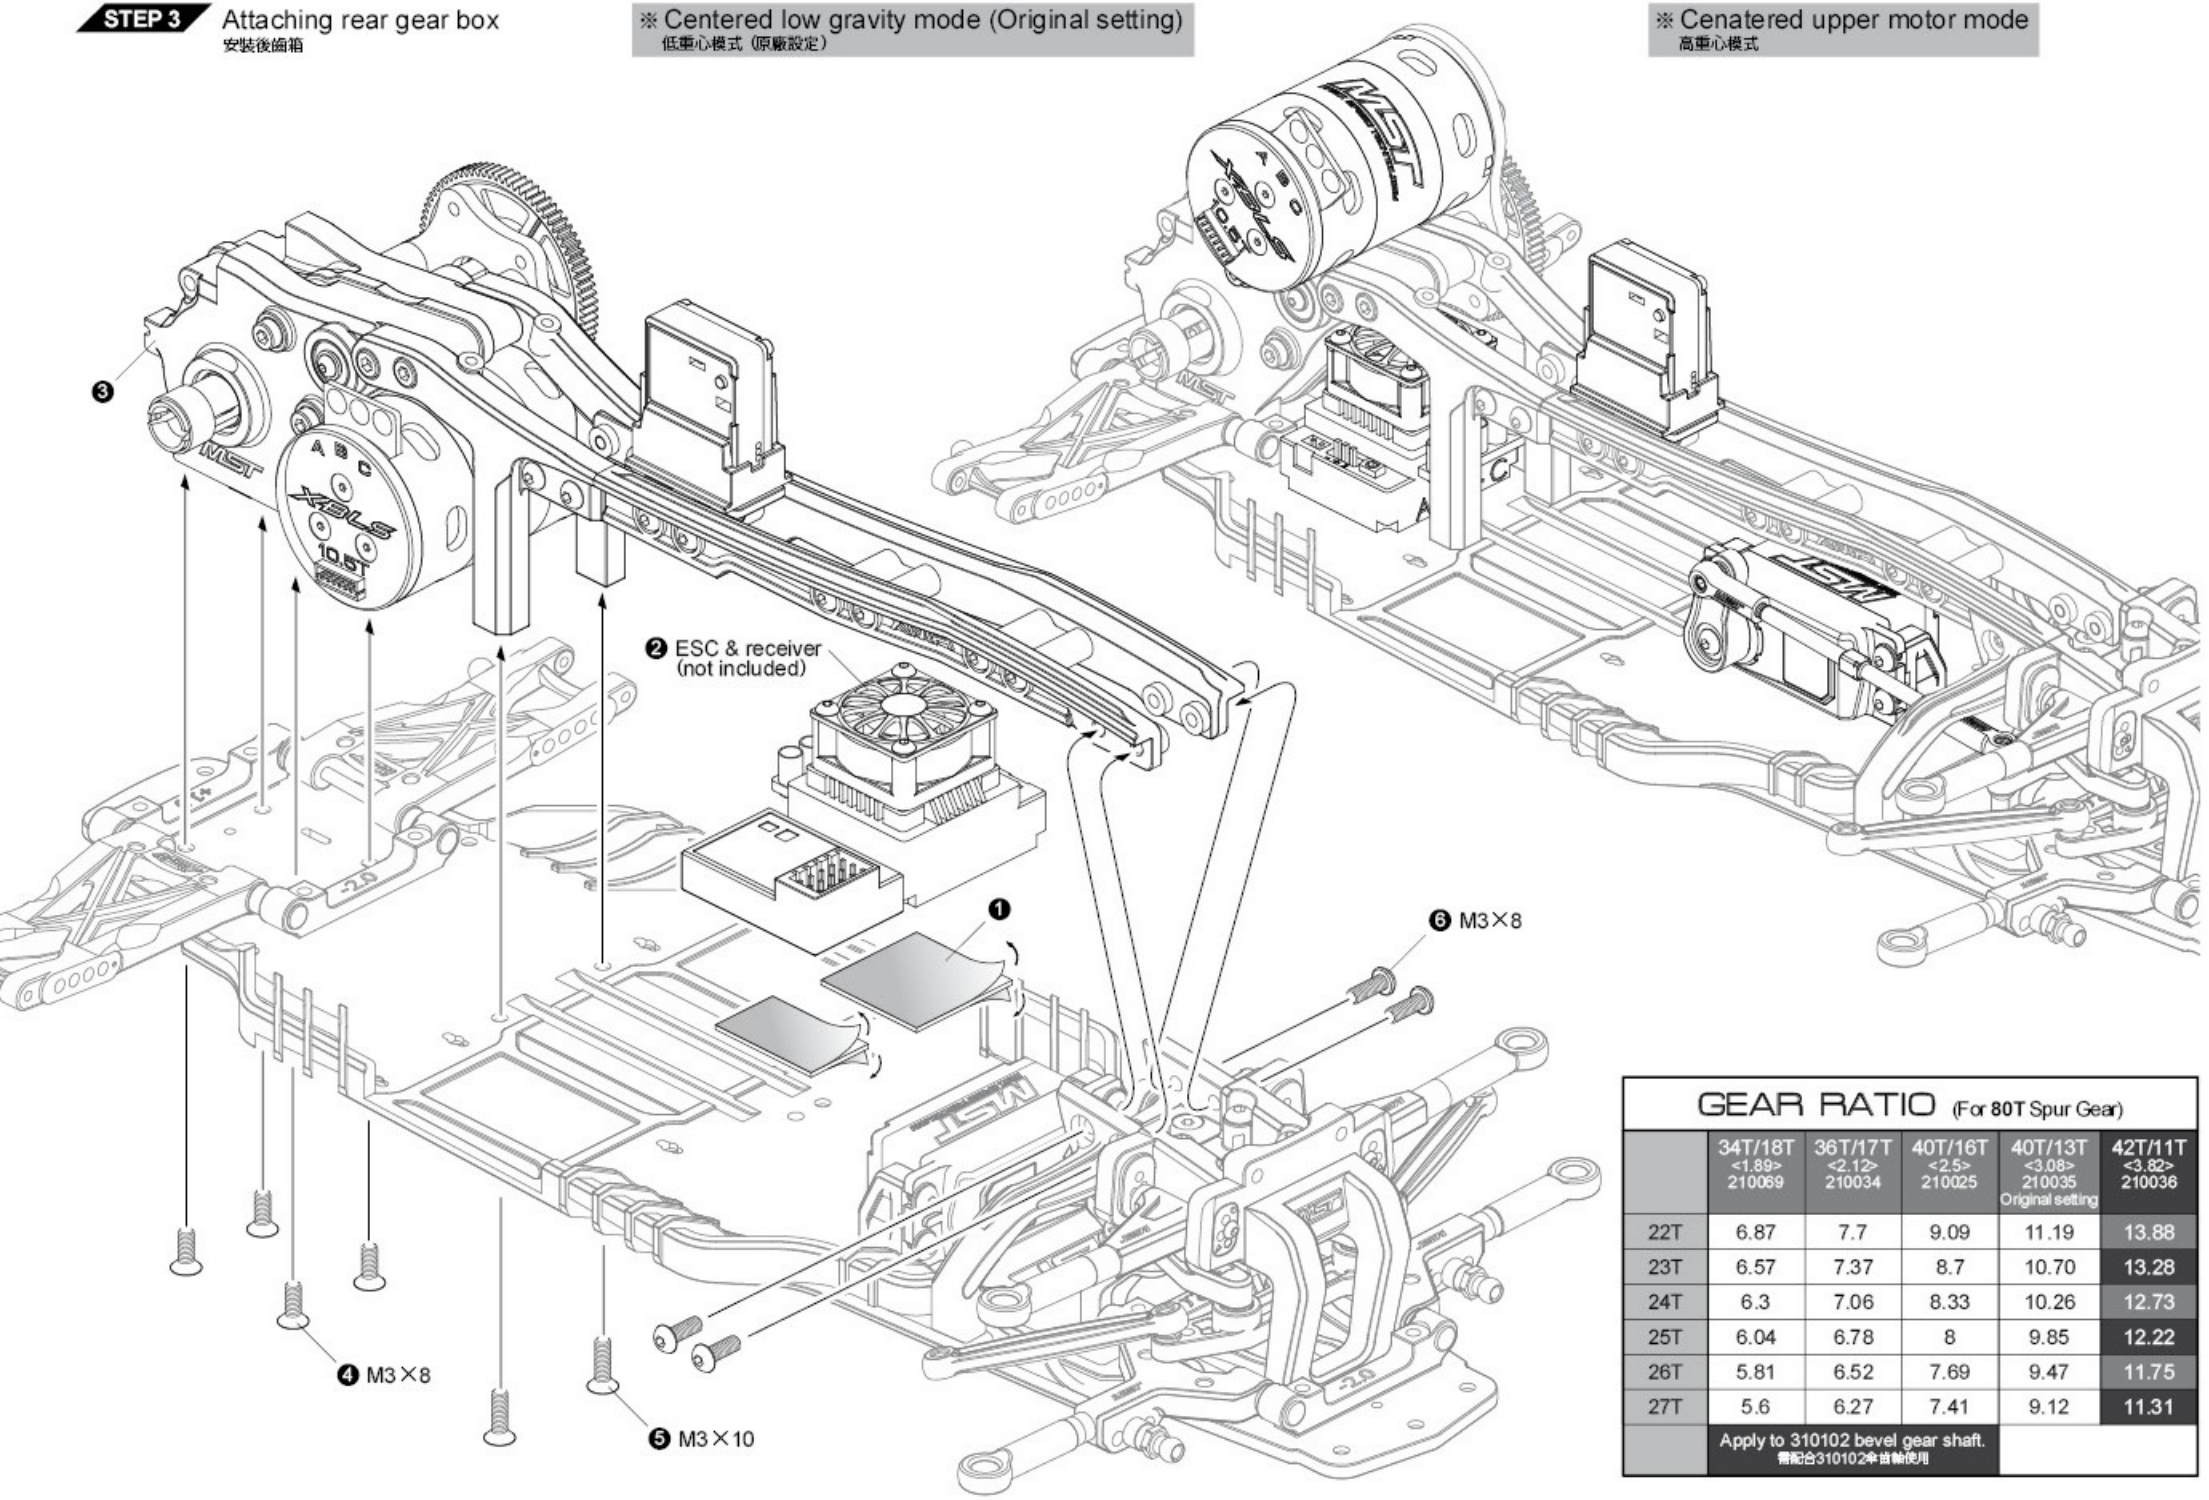

GEAR RATIO (For 80T Spur Gear)					
	34T/18T <1.89> 210069	36T/17T <2.12> 210034	40T/16T <2.5> 210025	40T/13T <3.08> 210035 Original setting	42T/11T <3.82> 210036
22T	6.87	7.7	9.09	11.19	13.88
23T	6.57	7.37	8.7	10.70	13.28
24T	6.3	7.06	8.33	10.26	12.73
25T	6.04	6.78	8	9.85	12.22
26T	5.81	6.52	7.69	9.47	11.75
27T	5.6	6.27	7.41	9.12	11.31
	Apply to 310102 bevel gear shaft. 需配合310102伞齿轴使用				

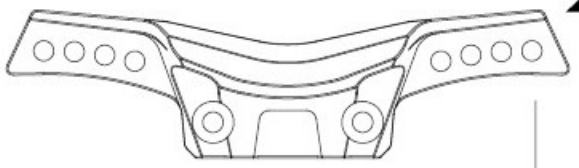

Front dmaper stay ×1
前避震架



Rear dmaper stay ×1
後避震架



M3×8 screw ×4
圓頭螺絲



M3×10 screw ×4
圓頭螺絲



M3×18 screw ×2
沉頭螺絲



4.8 Ball connector ×6
外六角球頭



3×5.5×2 Spacer ×2
墊片




Nut ×2
螺絲固定座
Bag 2




Rear upper turnbuckle ×2
後上拉桿
Bag 2

STEP 1 Attaching front damper stay
安裝前避震架

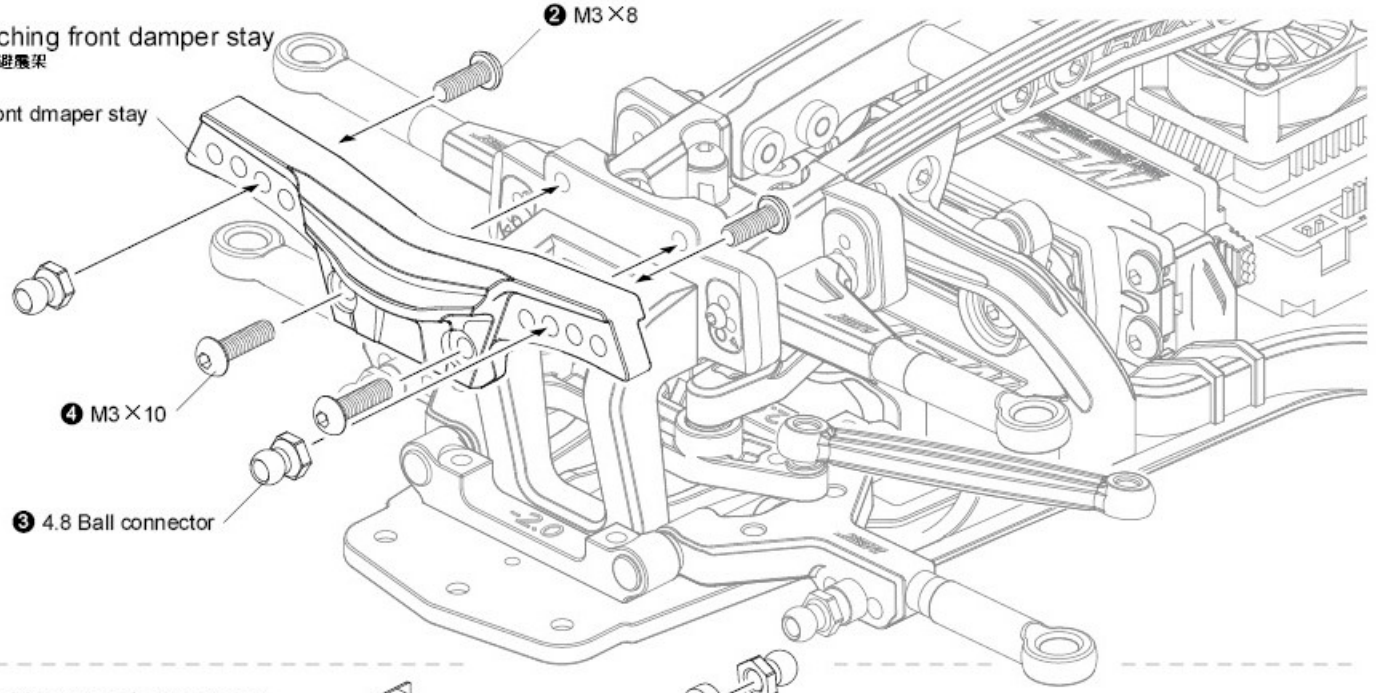


STEP 2 Attaching rear damper stay
安裝後避震架

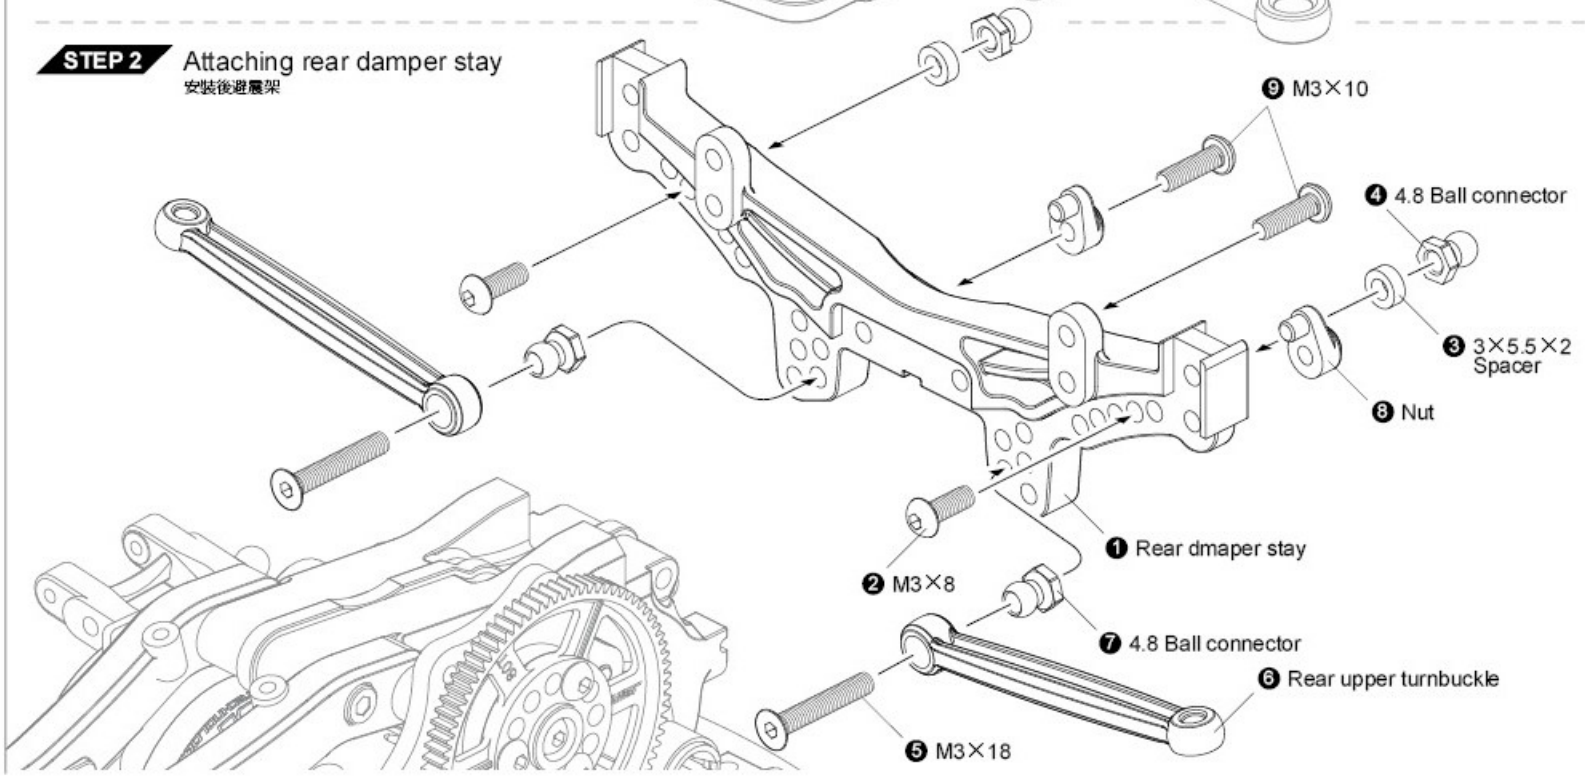




Front upright R ×1
前輪座 R

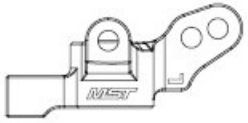

Front upright L ×1
前輪座 L



Brake calipers ×2
剎車卡鉗

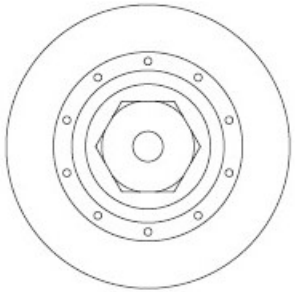

Wheel hubs (large)
(brake disc shaped) ×2
六角輪座(大)(剎車碟型)



2WD Axle ×2
二驅輪軸



5.8×4 Ball connector L ×4
球頭螺絲(長)



4.8×4.5 Ball connector ×2
球頭螺絲



M2×4 screw ×2
圓頭螺絲



2×9.8 Shaft ×2
插銷




5×8 Ball bearing ×4
培林




5×7×0.3 Spacer ×2
墊片

STEP 1 Front axle assembly
前輪座組裝

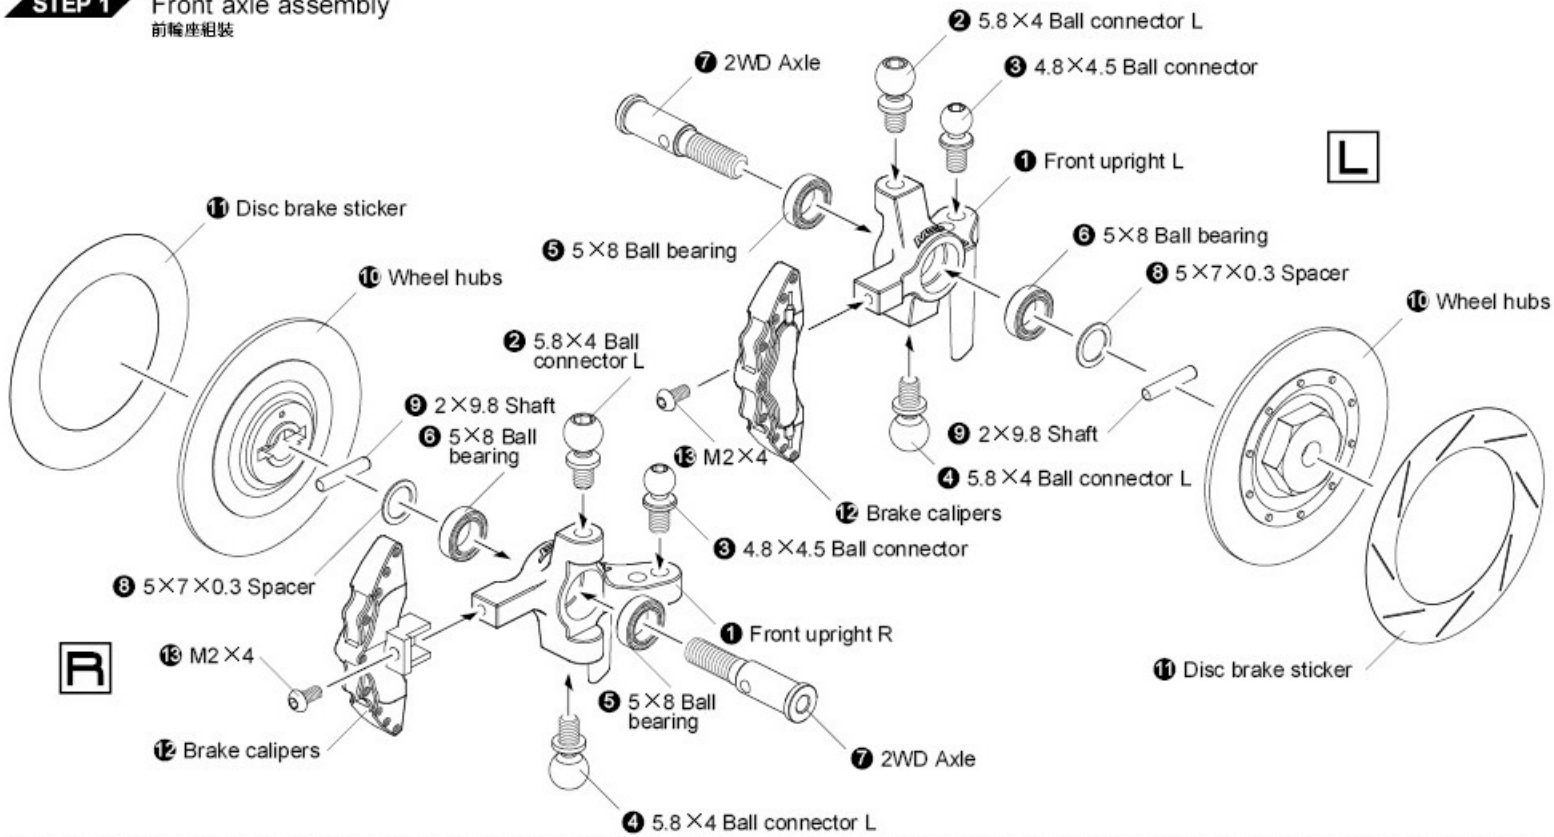

STEP 2 Attaching front axle
安裝前輪座

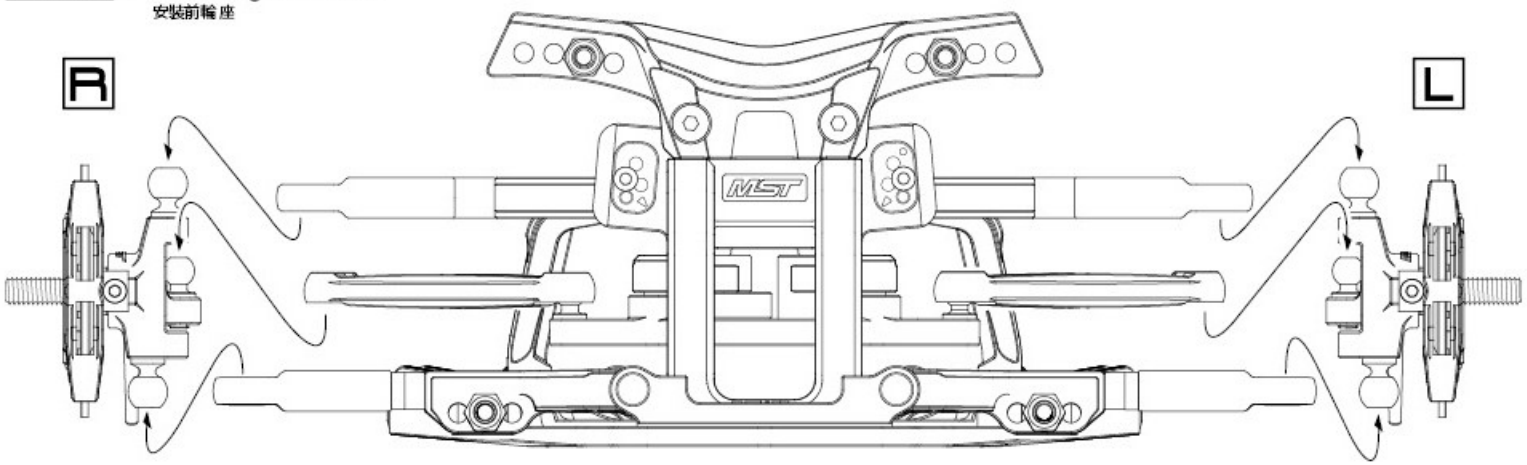




Rear upright ×2
後輪座



Brake calipers ×2
剎車卡鉗



Cross joint ×2
連接軸

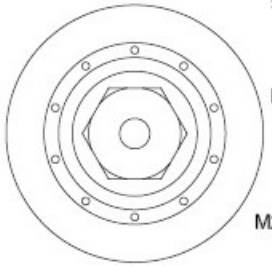



M2×4 screw ×2
圓頭螺絲



M2.5×2.5 screw ×2
止付螺絲

Wheel hubs (small)(brake disc shaped) ×2
六角輪座(小)(剎車碟型)



5×11 Ball bearing ×2
培林



10×15 Ball bearing ×2
培林



5×7×0.1 Spacer ×2
墊片




2×22 Shaft ×2
插銷




2×9.8 Shaft ×4
插銷



4.8×4.5 Ball connector ×2
球頭螺絲





Wheel axle ×2
萬向接杆




Steel CVD universal shaft 48 ×2
鋼製CVD傳動軸 48


STEP 1 Rear axle assembly
後輪座組裝

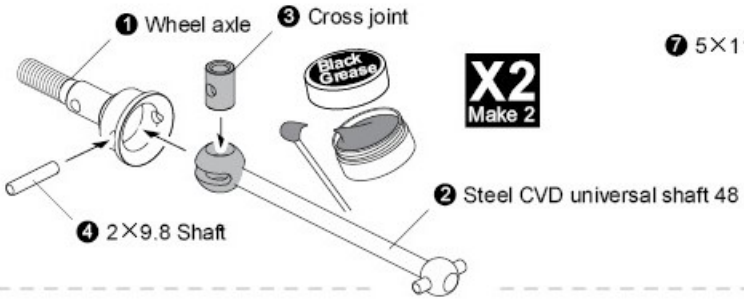


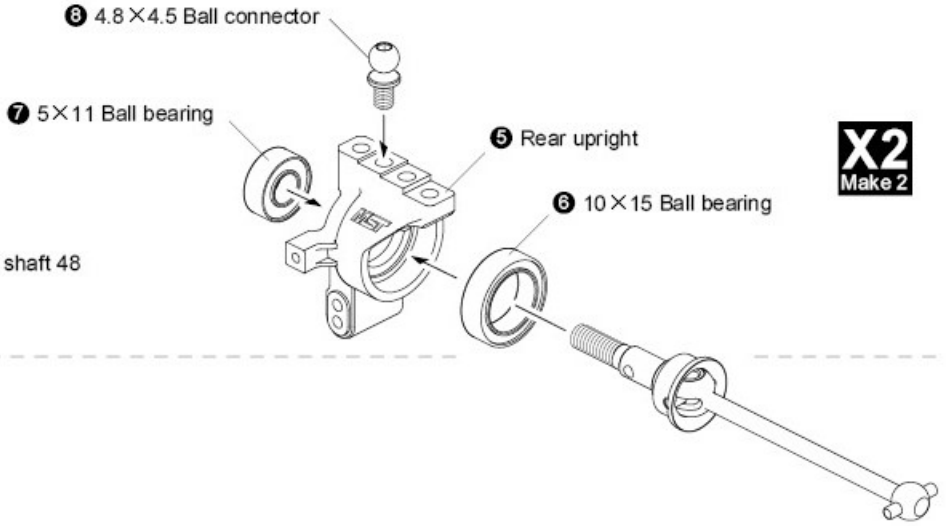



STEP 2 Attaching rear axle
安裝後輪座

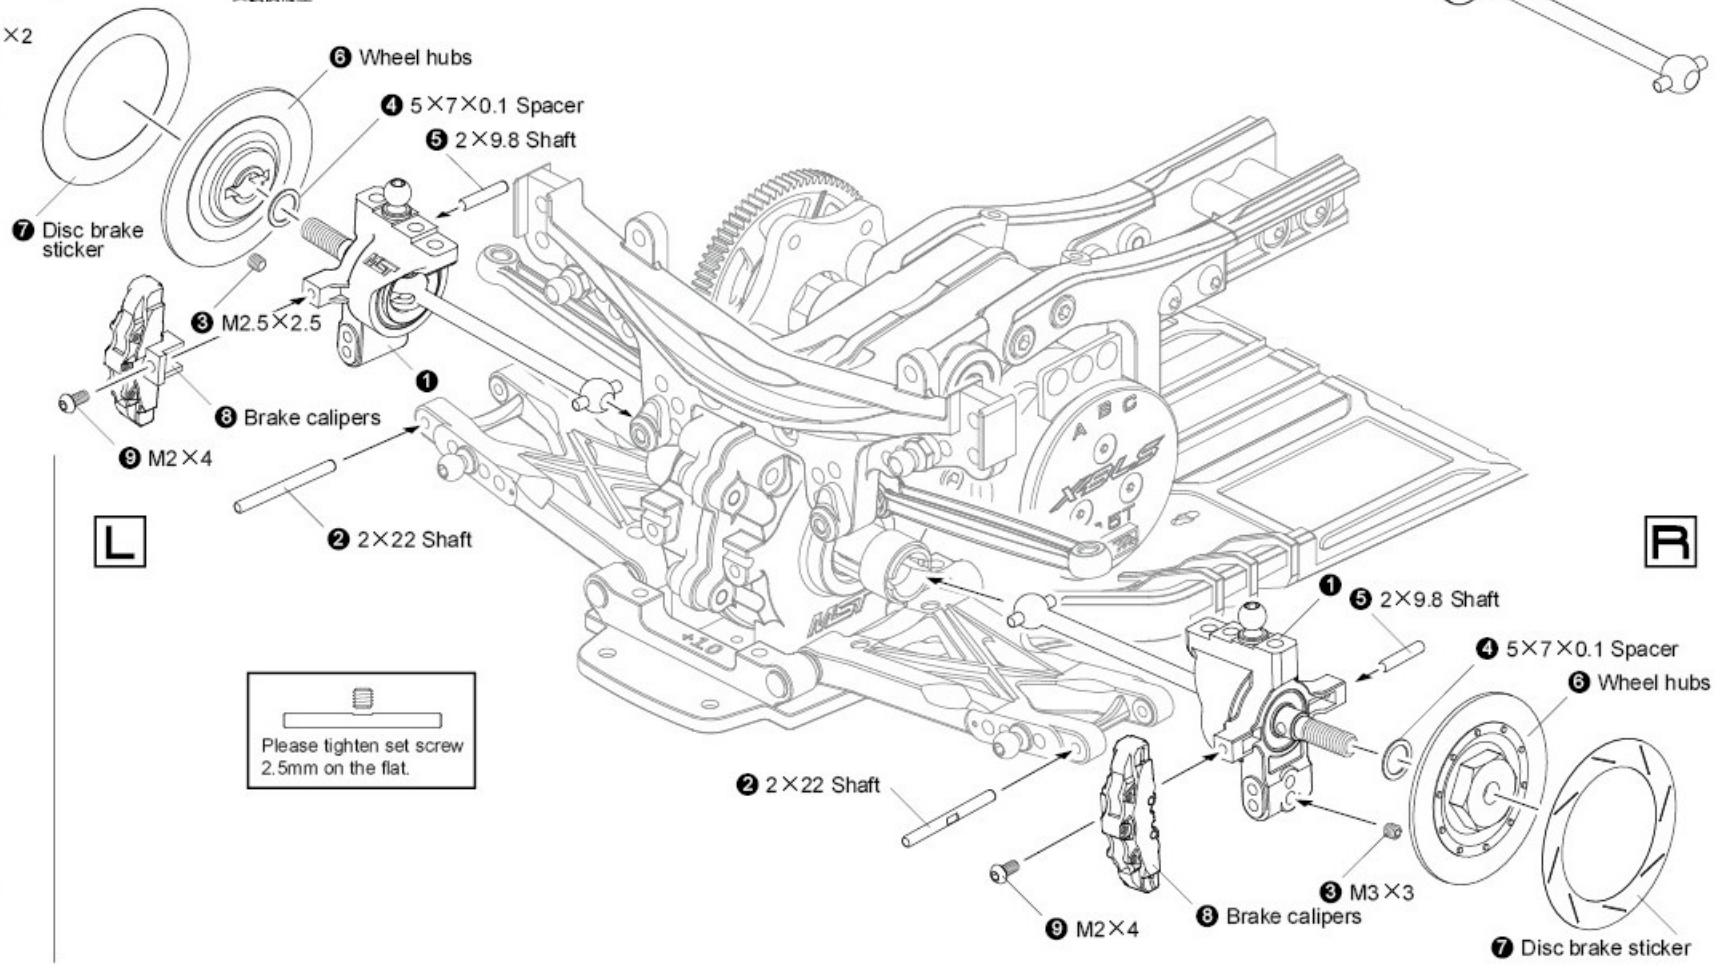


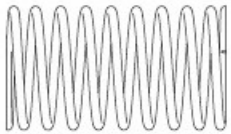

Hard coil spring 31mm ×2 (gold)
硬避震彈簧 31mm (金)

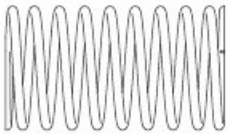

Soft coil spring 31mm ×2 (purple-red)
軟避震彈簧 31mm (紫紅)

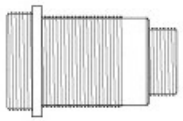
Damper cylinder ×4
避震筒身

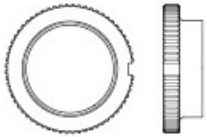

Spring retainer (red) ×4
避震器調整環 (紅)


Piston rod ×4
避震軸心



Piston ×4
避震活塞

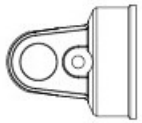
Cylinder cap ×4
避震器上蓋


Damper adjuster ×4
避震器拉桿


Rod guide cap ×4
避震器下蓋


10.8×0.9 O-ring ×4
O環

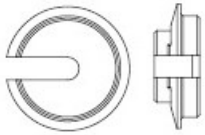
Damper retainer ×4
避震器彈簧座


12×1 O-ring ×4
O環


Oil seal ×4
避震器氣室



Damper O-ring P3 ×4
避震器O環



E-clip ×8
E形扣


Rod guide ×4
避震器下蓋墊片



M3×4 screw ×4
沉頭螺絲

STEP 1 Damper assembly
避震器組裝

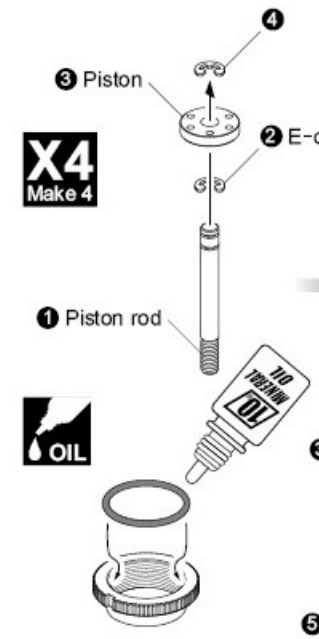


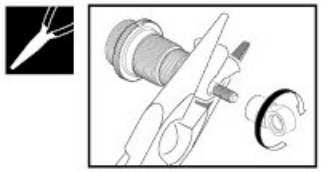




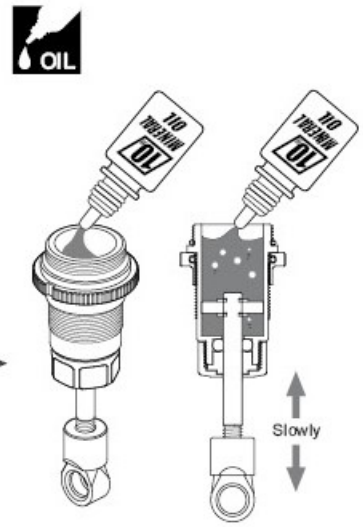


Pull down piston and pour oil into cylinder.
Remove air bubbles by slowly moving piston up and down.
拉下活塞並填入避震油，緩慢上下移動活塞將氣泡移除。

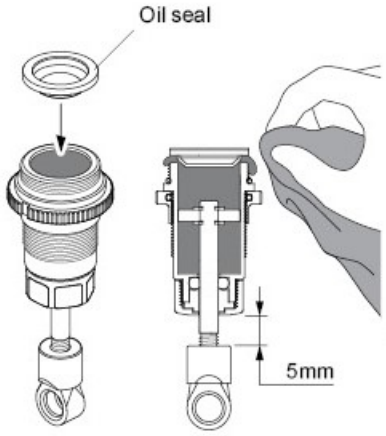


Pull down piston rod 5mm, attach cylinder cap and absorb oil overflow with tissue paper.
將軸心下拉5mm後，蓋上避震器上蓋並以面紙拭去溢出的矽油。

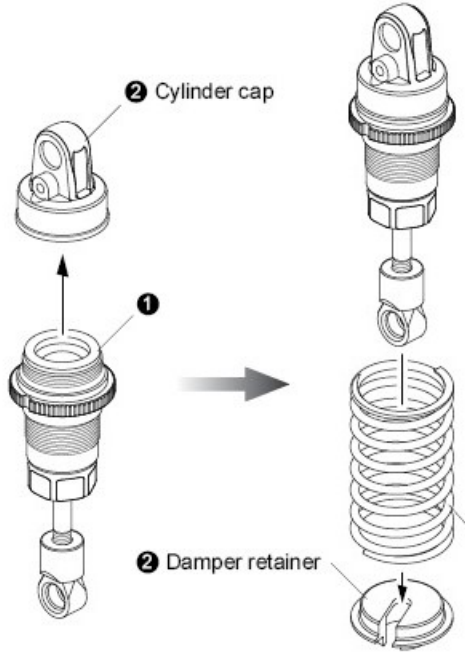


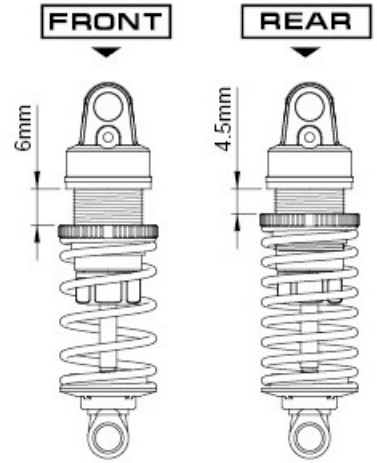


STEP 2 Attaching front damper
安裝前避震器

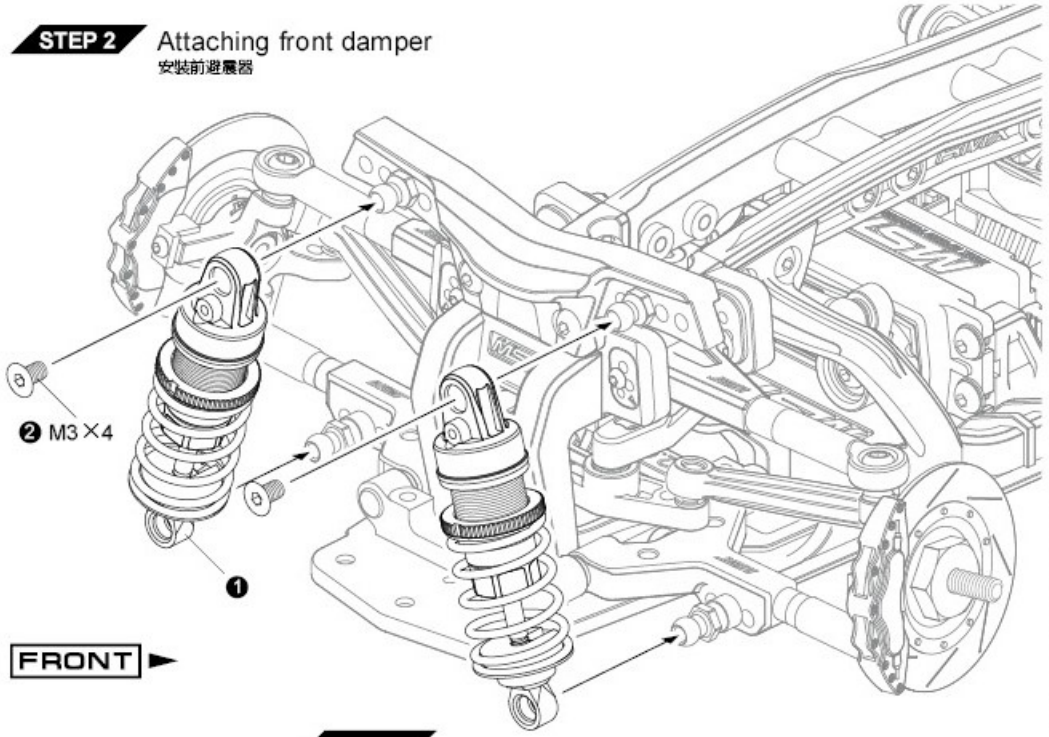


STEP 3 Attaching rear damper
安裝後避震器

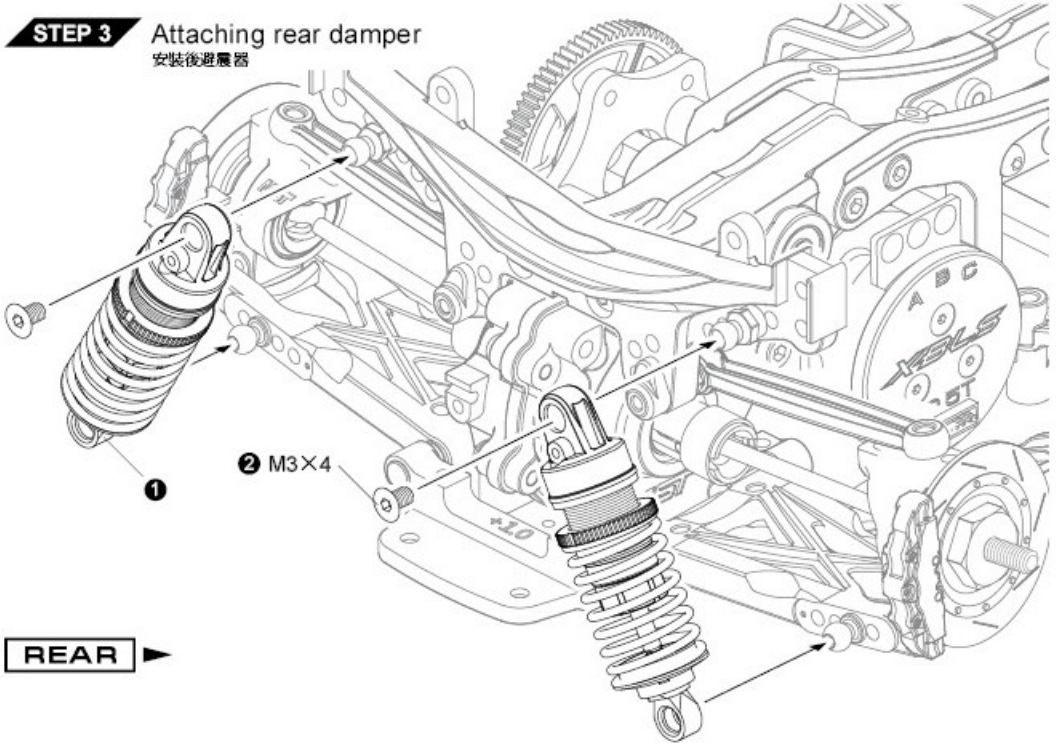

PARTS BAG 9 BATTERY MOUNT
電池座

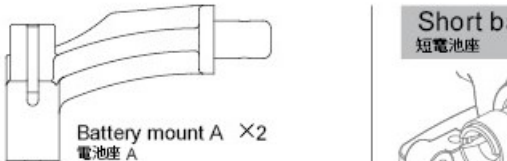
Battery mount A ×2
電池座 A

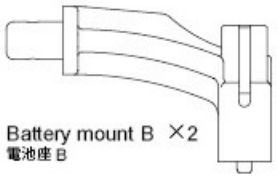

Battery mount B ×2
電池座 B



Battery mount C ×2
電池座 C


M3×8 screw ×4
沉頭螺絲



R-clip 5.0 ×4
R銷 5.0


Short battery mount
短電池座

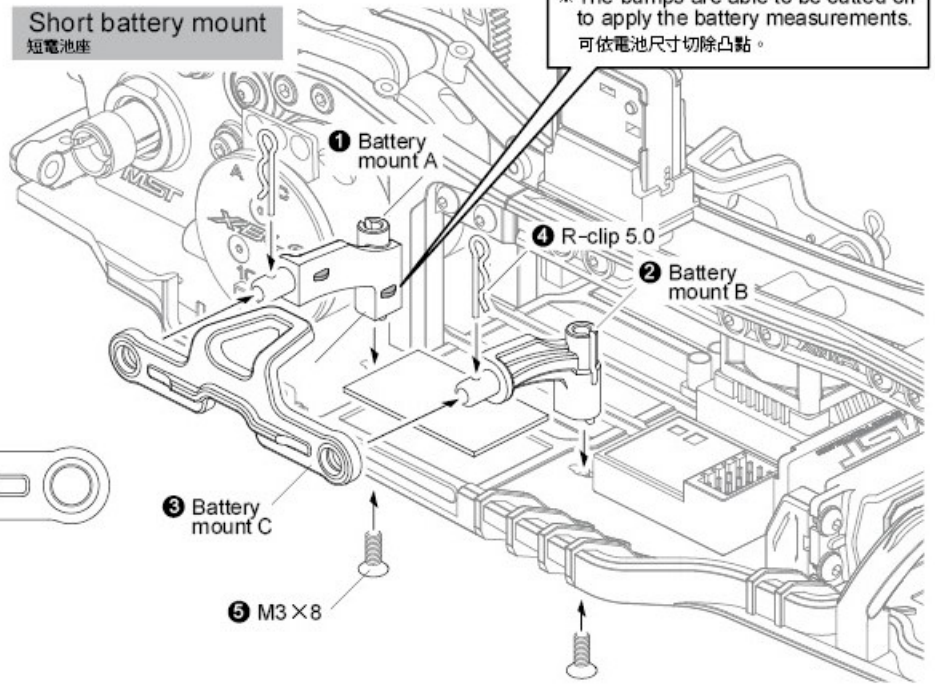

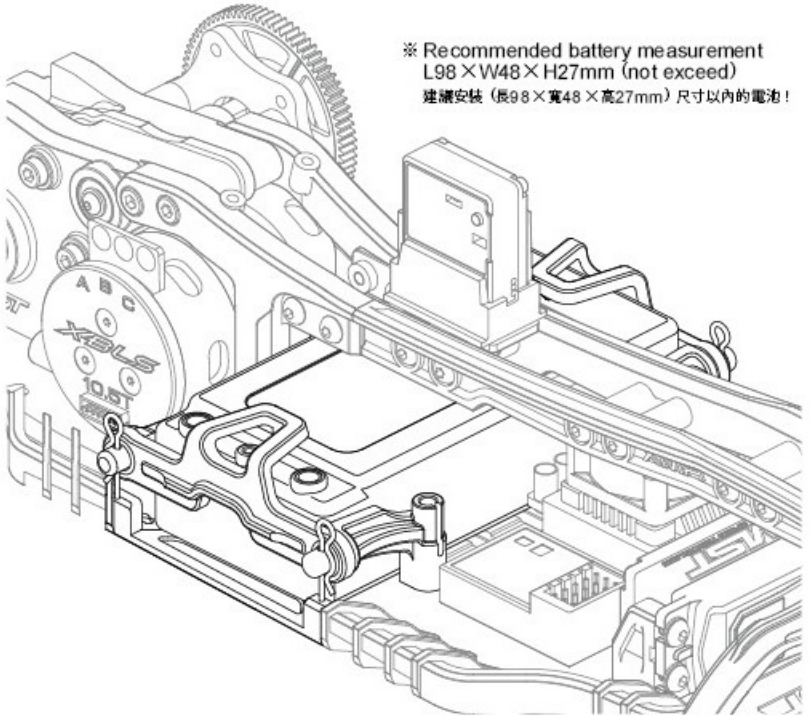

Long battery mount
長電池座

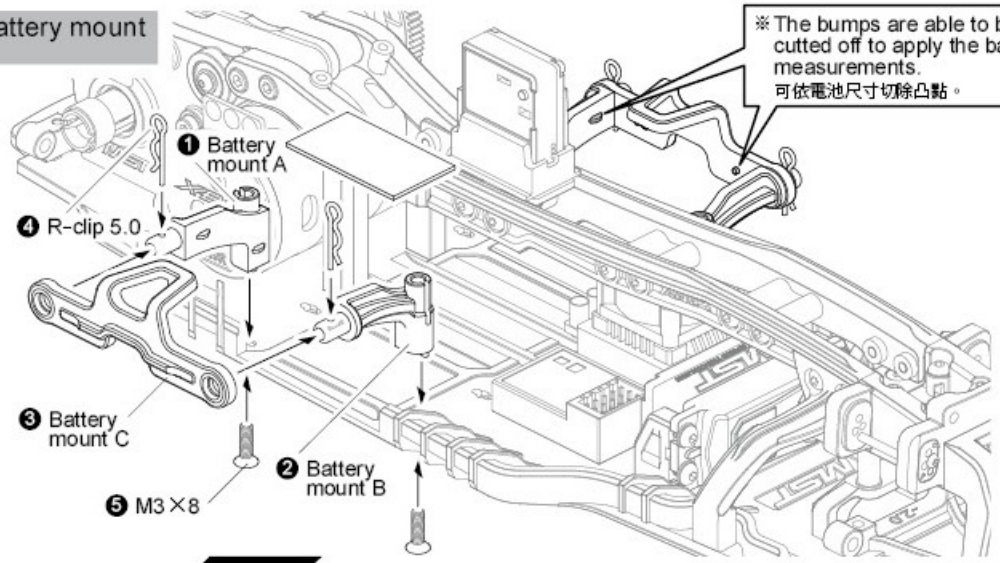


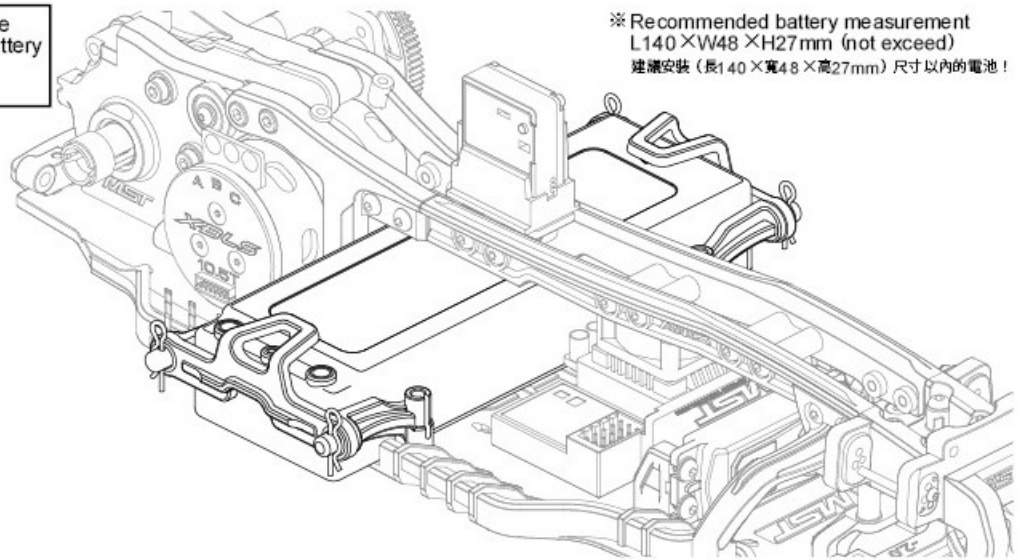

PARTS BAG 9 ◄ WHEELS
輪胎



Flange nut M4 ×4
凸緣螺帽M4




Wheel hub spacer 1.0 ×2
輪座墊片 1.0
Bag 2



Wheel ×4
輪胎

※NOT including.
Please refer to MST website for the wheel & tire types.
胎框組須另購，詳情請見官網。
[www.rc-mst.com]


STEP 1 Attaching wheels
安裝輪胎

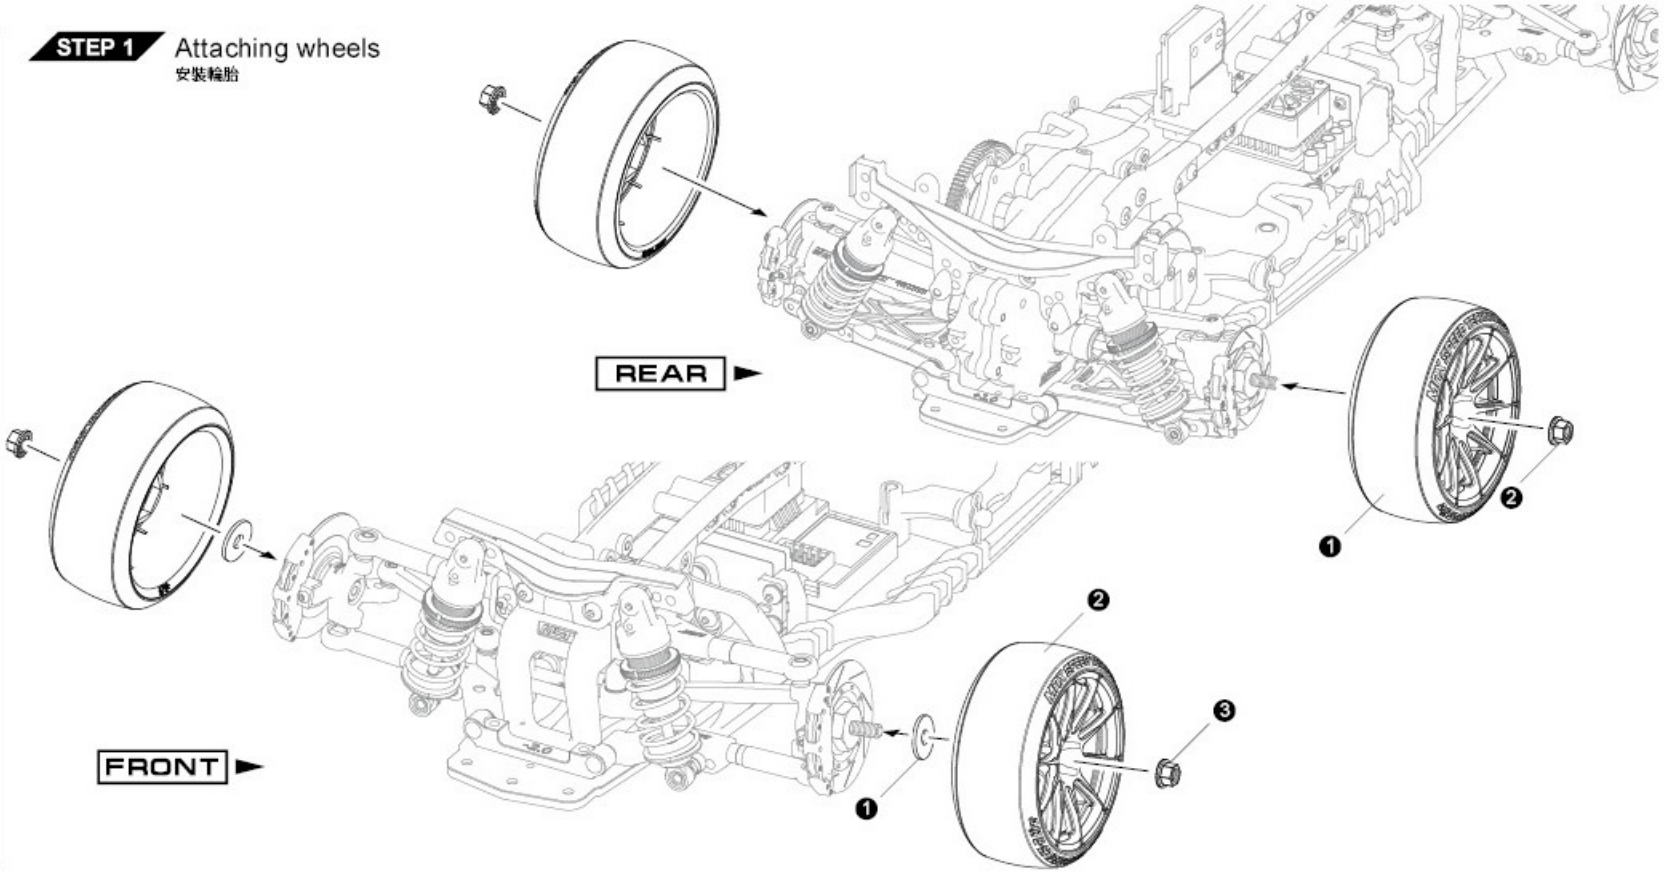



Bumper support ×1
防撞板上蓋


Bumper mount ×1
防撞板下座


Rear bumper ×1
後防護板


Body mount cover M ×2
支柱套 M


Body mount cover L ×2
支柱套 L


Rear body mount ×2
後車殼支柱


Front body mount ×2
前車殼支柱



M3×10 screw ×2
圓頭螺絲


M3×8 screw ×2
圓頭螺絲


M3×8 screw ×7
沉頭螺絲


M2×8 screw ×4
圓頭螺絲

STEP 1 Attaching body mounts
安裝車殼固定座

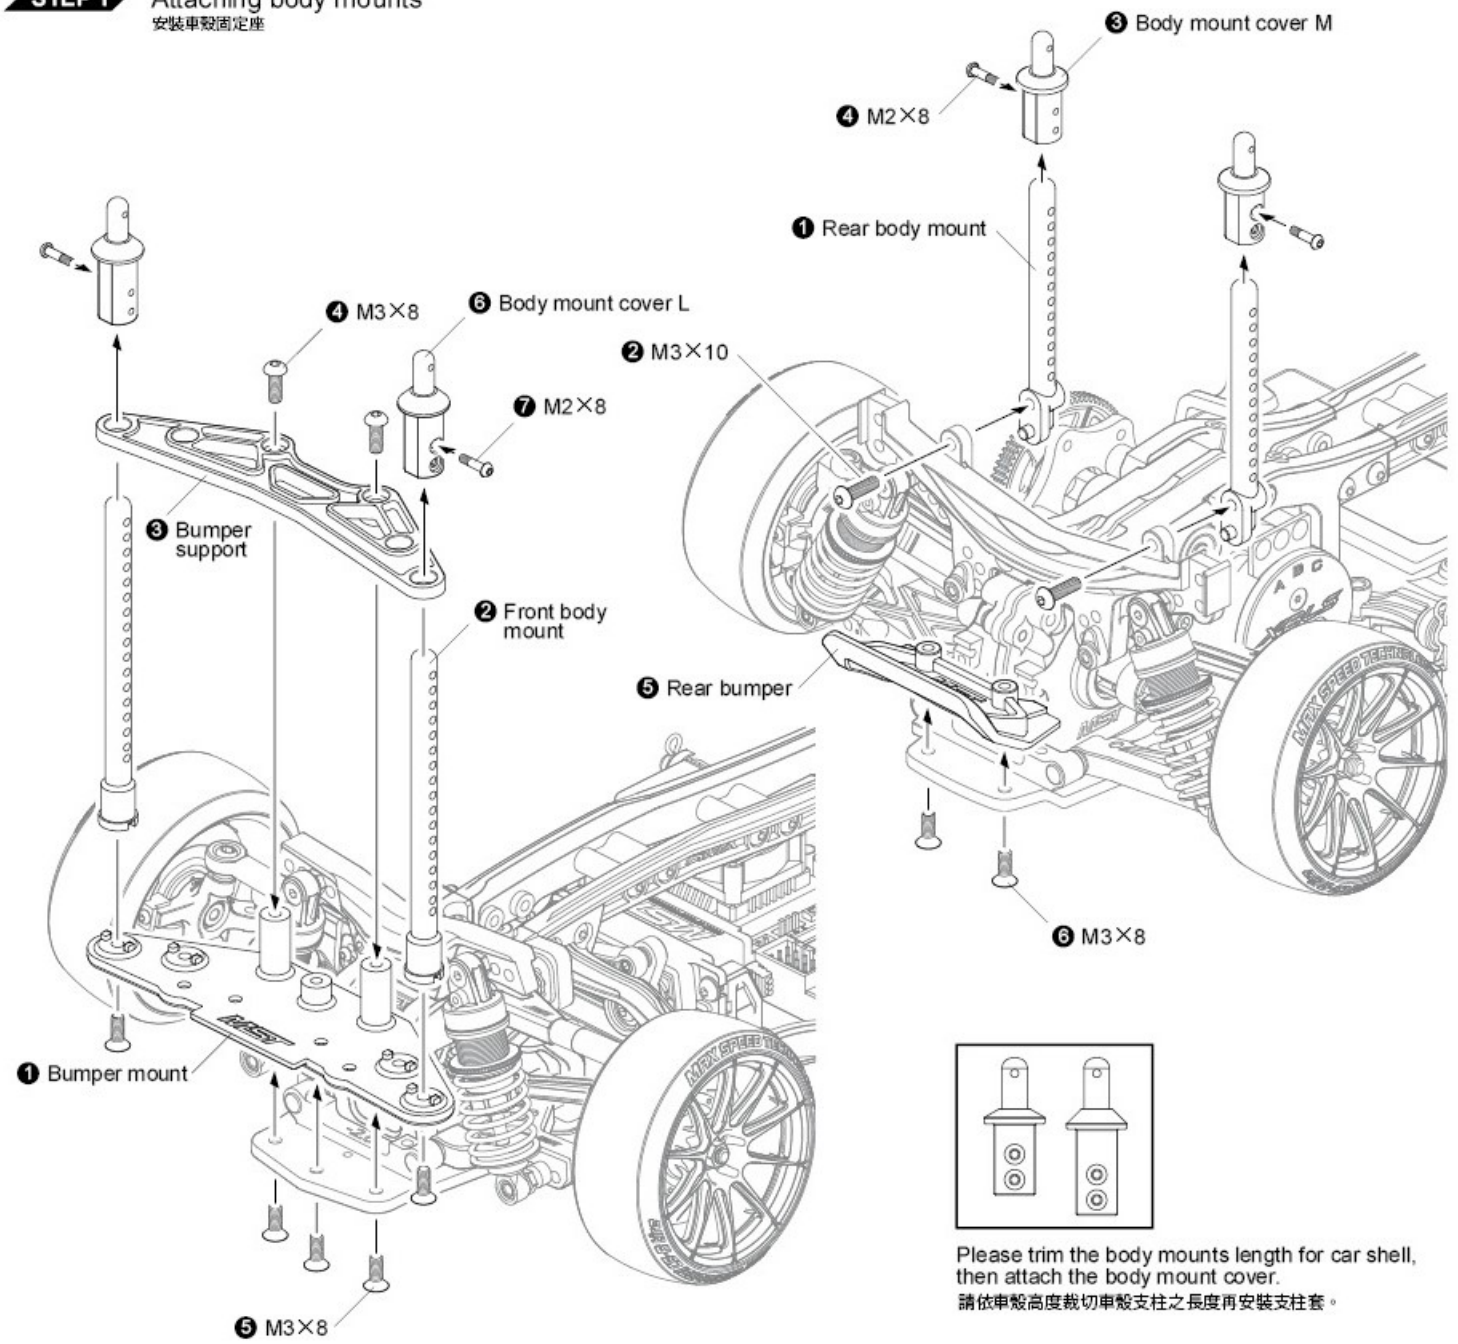

Please trim the body mounts length for car shell, then attach the body mount cover.
請依車殼高度裁切車殼支柱之長度再安裝支柱套。

PARTS



M2×4 Screw ×8
圓頭螺絲
110004



M2×6 Screw ×1
圓頭螺絲
110044



M2×8 Screw ×2
圓頭螺絲
110063



M2×8 Screw ×4
圓頭螺絲(半牙)
110045



M2.5×5 Screw ×1
圓頭螺絲
110102



M3×6 Screw ×4
圓頭螺絲
110001



M3×8 Screw ×30
圓頭螺絲
110002



M3×10 Screw ×10
圓頭螺絲
110026



M3×14 Screw ×4
圓頭螺絲
110061



M3×16 Screw ×3
圓頭螺絲
110086



M3×4 screw ×4
沉頭螺絲
110099



M3×8 Screw ×25
沉頭螺絲
110005



M3×10 Screw ×10
沉頭螺絲
110052



M3×12 Screw ×2
沉頭螺絲
110043



M3×18 Screw ×2
沉頭螺絲
110078



M3×20 Screw ×2
沉頭螺絲
110101



2.6×5.8×0.6 Spacer ×1
墊片
110080



3×6×0.5 Spacer ×11
墊片
110047



3×8×0.5 Spacer ×1
墊片
110048



5×7×0.1 Spacer ×2
墊片
820018



5×7×0.3 Spacer ×2
墊片
820020



3×6×2.5 Bearing ×4
軸承
120024



5×8 Bearing ×4
軸承
120017



4×10 Ball bearing ×1
培林
120018



5×8 Ball bearing ×4
培林
120003



5×10 Ball bearing ×1
培林
120002



5×11 Ball bearing ×2
培林
120011



8×12 Ball bearing ×2
培林
120019



10×15 Ball bearing ×4
培林
120001



M3×3 Screw ×3
止付螺絲
110035



M3×12 Screw ×1
止付螺絲
110056



M3×20 Screw ×2
止付螺絲
110009



4.8 Ball connector ×7
外六角球頭
210161



4.8 Ball connector L ×2
外六角球頭（長）
210344



4.8×4.5 Ball connector ×9
球頭螺絲
310001




5.8×4 Ball connector（L）×4
球頭螺絲(長)
210491




M3×6 Screw ×2
有頭螺絲(半牙)
110011



M3×30 Screw ×1
有頭螺絲(半牙)
110100



M3×40 Screw ×5
有頭螺絲(半牙)
110091



2WD Axle ×2
二驅輪軸
820095

Wheel axle ×2
萬向接杯
310006

E-clip 2.5 ×1
E形扣
110079

E-clip 3.0 ×1
E形扣
110070

Cross joint ×2
連接軸
820030

1.5×7.8 Shaft ×2
插銷
110059

2×9.8 Shaft ×7
插銷
110017

2×22 Shaft ×2
插銷
310047

2×28 Shaft ×2
插銷
310103

2.5×46 Arm shaft ×4
擺臂插銷
310048

2.6×10 Screw ×1
自攻圓頭螺絲
110025

Bevel gear shaft ×1
傘齒軸
310104

R-clip 5.0 ×4
R銷5.0
820075

Main shaft ×1
主齒軸
310105

Steel CVD universal shaft 48 ×2
鋼製CVD傳動軸 48
820007

Hard coil spring 31mm ×2
(gold)
硬避震彈簧 31mm（金）
820103

Soft coil spring 31mm ×2
(purple-red)
軟避震彈簧 31mm（紫紅）
820104

Damper cylinder ×4
避震筒身
210071

Piston rod ×4
避震軸心
310008

Piston ×4
避震活塞
210082

Cylinder cap ×4
避震器上蓋
210057

Damper adjuster ×4
避震器拉桿
820079

Rod guide cap ×4
避震器下蓋
210057

10.8×0.9 O-ring ×4
O環
130032

Damper retainer ×4
避震器彈簧座
820079

12×1 O-ring ×4
O環
130049

Oil seal ×4
避震器氣室
130004


Spring retainer (red) ×4
避震器調整環（紅）
310106R

E-clip ×8
E形扣
110013

Rod guide ×4
避震器下蓋墊片
210082

Damper O-ring P3 ×4
避震器O環
130028


PARTS

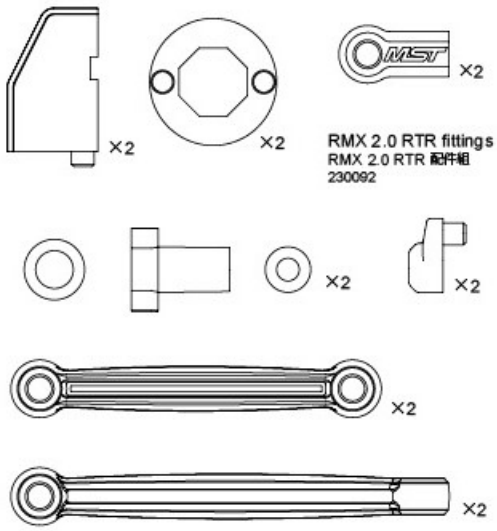


RMX 2.0 RTR fittings
RMX 2.0 RTR 配件組
230092




5.8×26 Reinforced adjuster set
強化拉桿頭組
210031

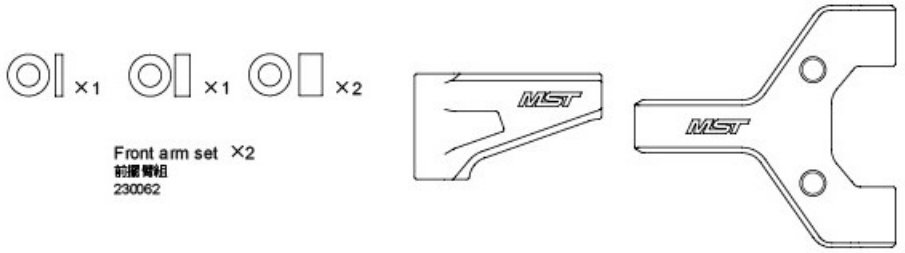


Front arm set ×2
前擺臂組
230062

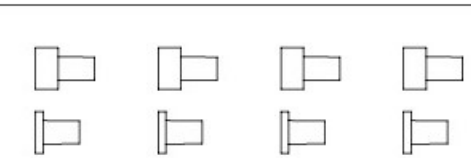

Shaft bush & spacer set (white)
襯套墊片組 (白)
210063(W)

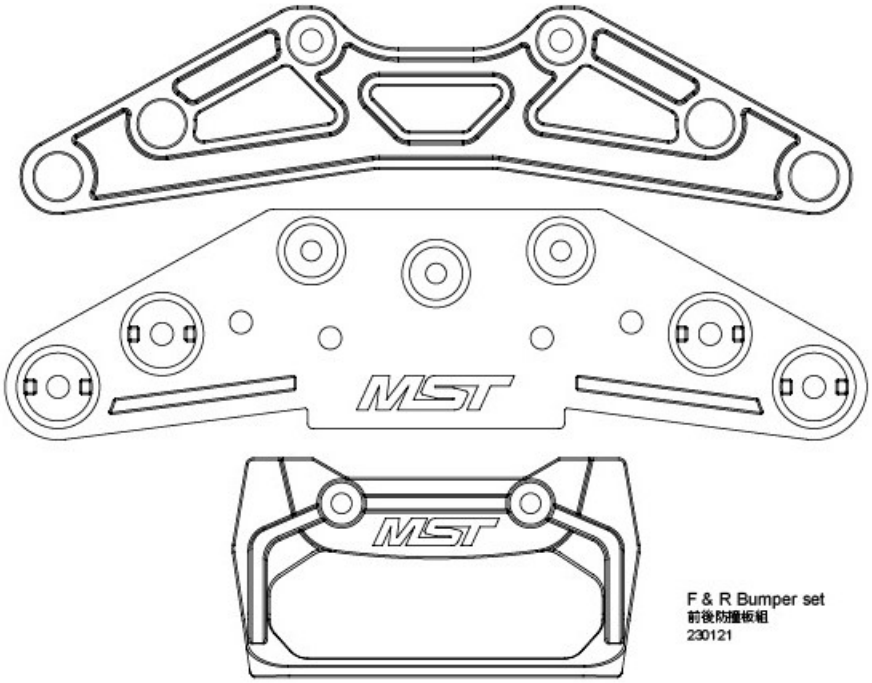


F & R Bumper set
前後防撞板組
230121

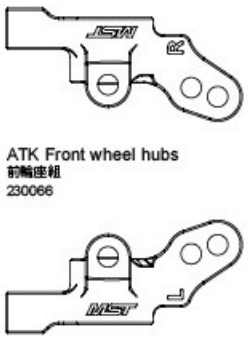


ATK Front wheel hubs
前輪座組
230066




Bevel gear 16T ×2
傘齒 16T
310064

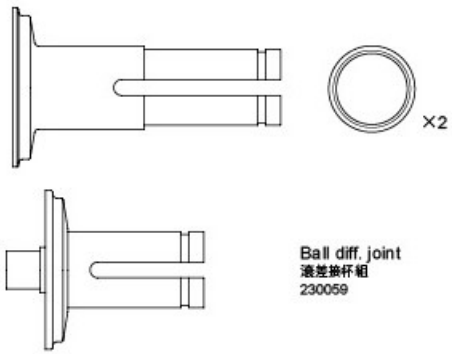


Ball diff. joint
滾珠接杆組
230059

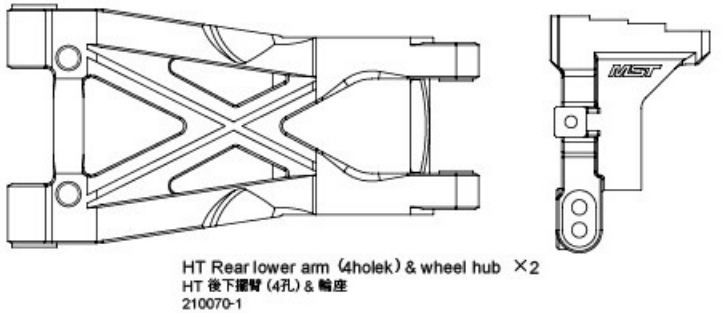


HT Rear lower arm (4holek) & wheel hub ×2
HT 後下擺臂 (4孔) & 輪座
210070-1

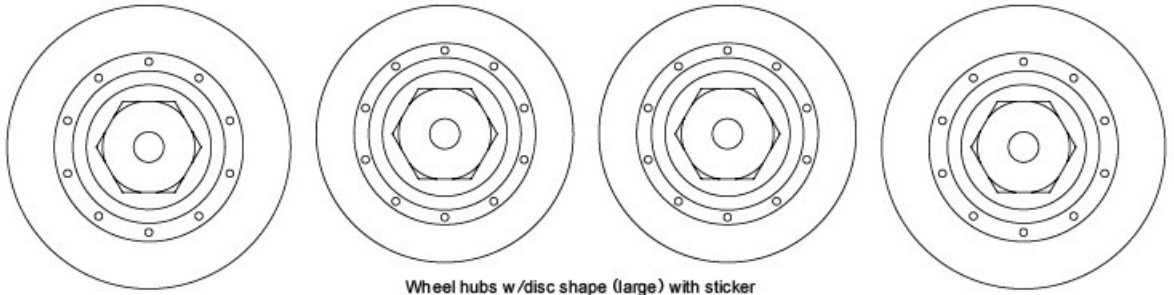


Wheel hubs w/disc shape (large) with sticker
碟型六角輪座組 (加大型) 附貼紙
230041

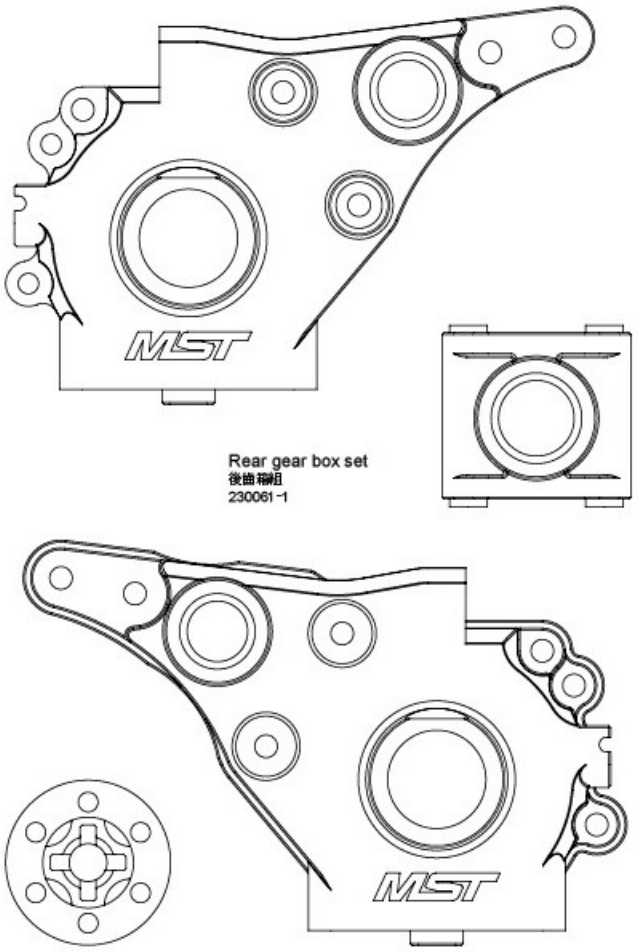

Rear gear box set
後齒箱組
230061-1

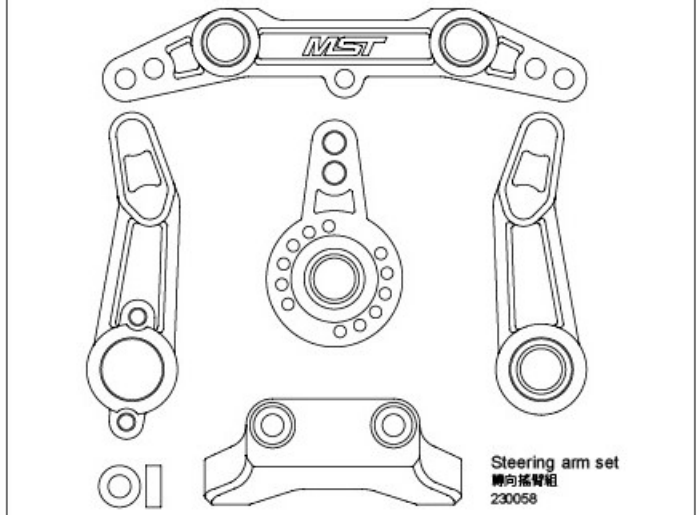



Steering arm set
轉向搖臂組
230058

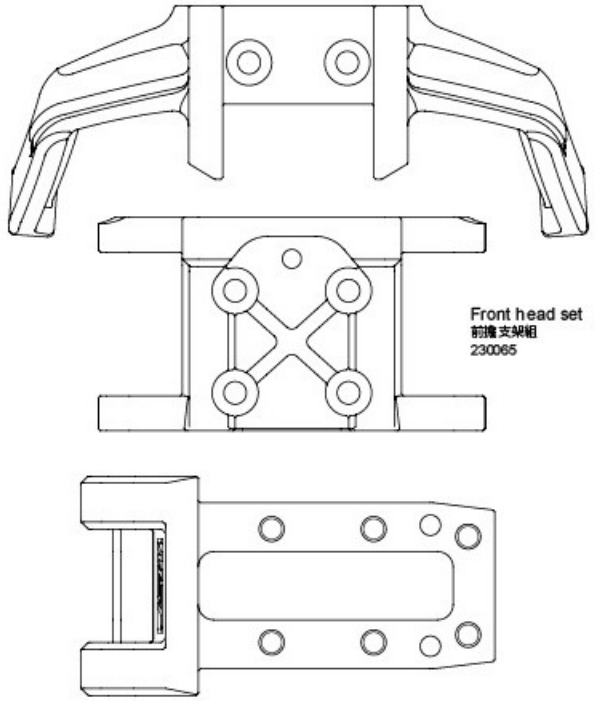


Front head set
前擋支架組
230065

Spur gear 48P 80T
大直齒
230068

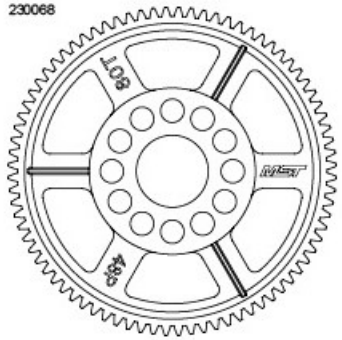


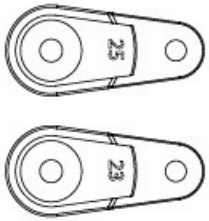


Servo horn set (23T/25T)
伺服機舵片組 (23T/25T)
210032

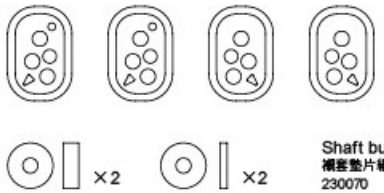


Shaft bush & spacer set
襯套墊片組
230070

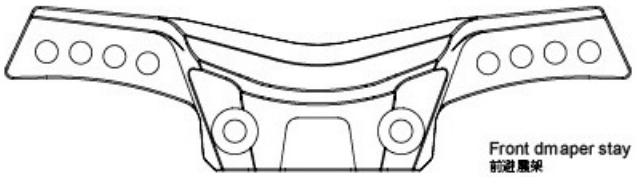


Front dmaper stay
前避震架
230063

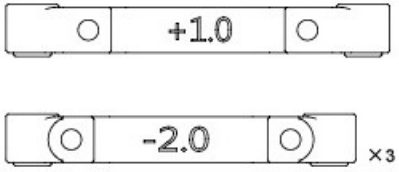


Suspension mount set (+1.0 / -2.0)
下擺臂座組 (+1.0 / -2.0)
230069

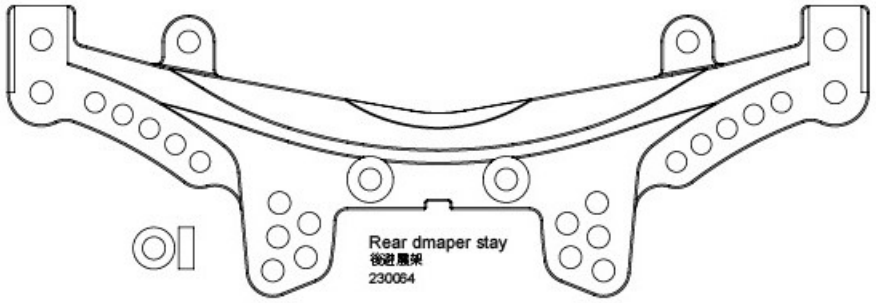


Rear dmaper stay
後避震架
230064

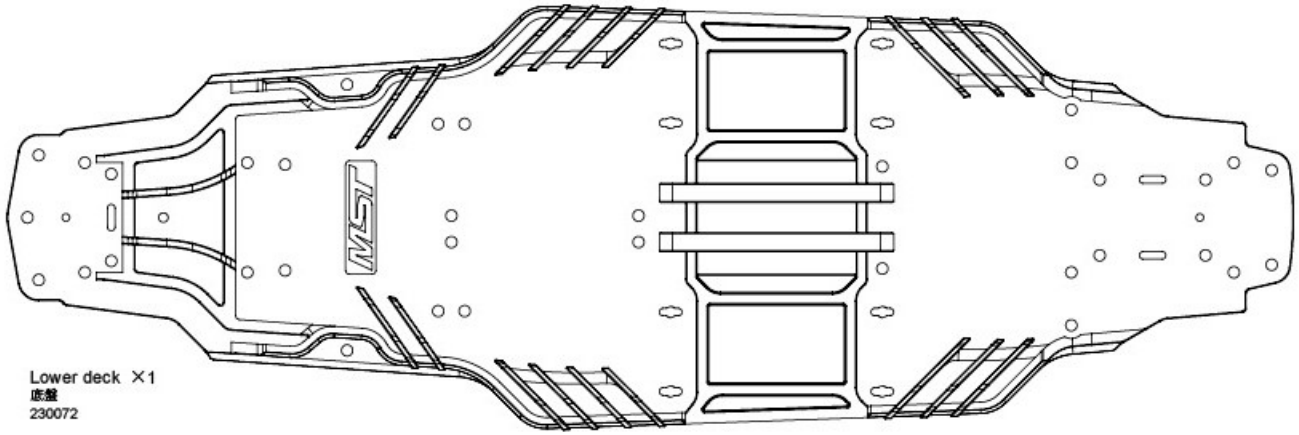


Lower deck ×1
底盤
230072

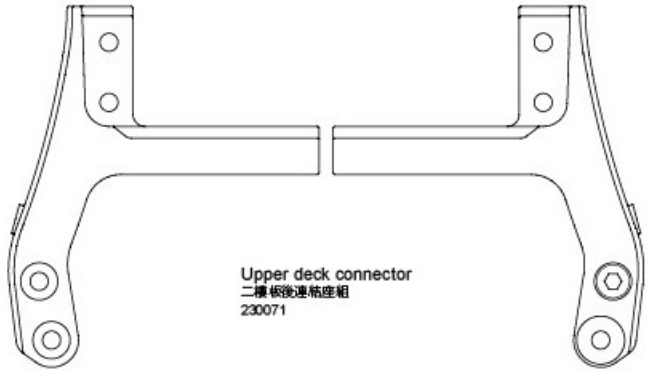


Upper deck connector
二樓板後連結座組
230071

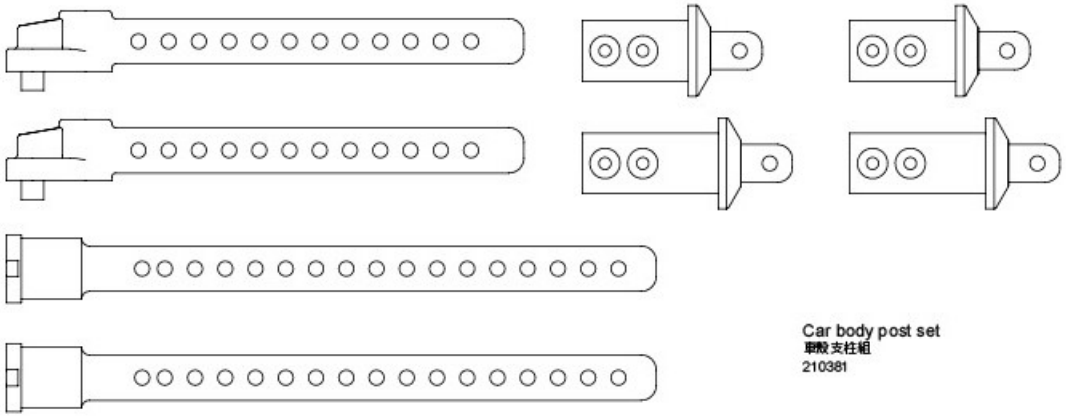


Car body post set
車殼支柱組
210381

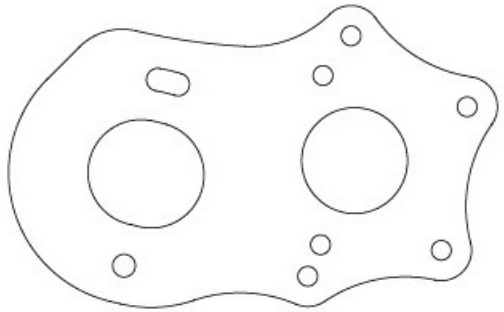


Alum. motor mount (red)
鋁合金馬達座 (紅)
310101R

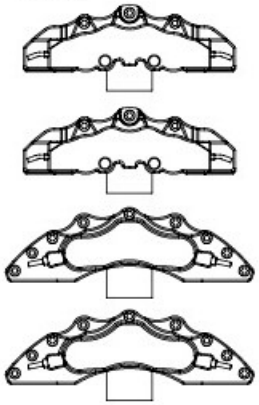


Enlarged brake calipers (red)
加大剎車卡鉗 (紅)
210510CR

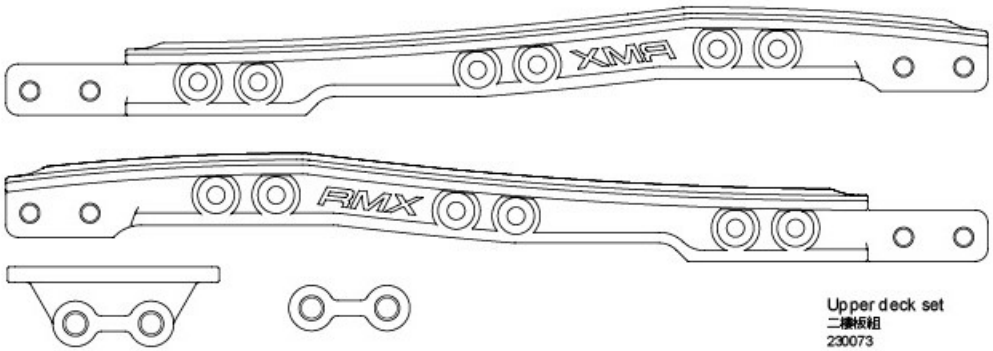

Upper deck set
二樓板組
230073

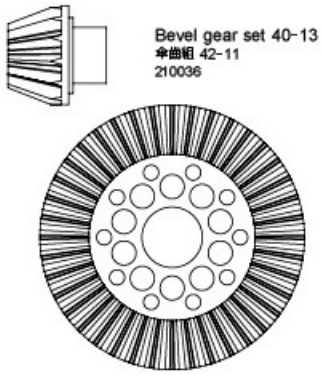

Bevel gear set 40-13
傘齒組 42-11
210036

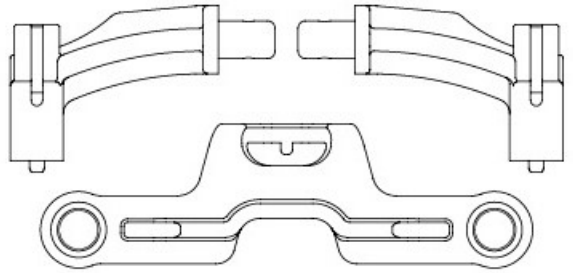

Battery holder set
電池座組
230060

PARTS CODE

110001	Round head screw M3×6 (10)
110002	Round head screw M3×8 (10)
110004	Round head screw M2×4 (6)
110005	Countersunk screw M3×8 (10)
110009	Set screw M3×20 (6)
110011	Cap screw M3×6 (6)
110013	E-clip 2.0 (10)
110015	Flange nut M4 (4)
110017	Shaft 2×9.8 (10)
110025	Tapping round head screw 2.6×10 (6)
110032	Set screw M3×10 (6)
110035	Set screw M3×3 (6)
110043	Countersunk screw M3×12 (10)
110044	Round head screw M2×6 (6)
110045	Round head screw M2×8 (partial thread) (6)
110047	Spacer 3×6×0.5 (8)
110048	Spacer 3×8×0.5 (8)
110052	Countersunk screw M3×10 (10)
110056	Set screw M3×12 (6)
110059	Shaft 1.5×7.8 (8)
110061	Round head screw M3×14 (6)
110063	Round head screw M2×8 (6)
110067	Set screw M2.5×2.5 (6)
110070	E-clip 3.0 (10)
110078	Countersunk screw M3×18 (6)
110079	E-clip 2.5 (10)
110080	Spacer 2.6×5.8×0.6 (8)
110086	Round head screw M3×16 (6)
110091	Cap screw M3×40 (6)
110099	Countersunk screw M3×4 (10)
110100	Cap screw M3×30 (6)
110101	Countersunk screw M3×20 (6)
110102	Round head screw M2.5×5 (6)
110107	Round head screw M2.5×18 (6)
120001	Ball bearing 10×15 (4)
120002	Ball bearing 5×10 (4)
120003	Ball bearing 5×8 (4)
120011	Ball bearing 5×11 (4)
120017	Bearing 5×8 (4)
120018	Ball bearing 4×10×4 (2)
120019	Ball bearing 8×12 (2)
120024	Bearing 3×6×2.5 (4)
130004	Oil seal (4)
130005	Bumper (A)
130006	Double sided tape(5)
130028	Damper O-ring P3 (blue) (10)
130032	Damper cap O-ring (10)
130034	Sponge 20×80×1 (4)
130035	L Wrench set (1.5 & 2.0 & 2.5)
130049	O-ring 12×1 (4)
210031	Reinforced adjuster set 5.8×26
210032	Servo horn set (23T/25T)
210036	Bevel gear set 42-11
210057	Damper cap set
210063W	Shaft bush & spacer set (white)
210070-1	HT Rear lower arm (4 holes) & wheel hub
210071	Damper cylinder (2)
210082	Piston spacer set
210161	Ball connector nut 4.8 (4)
210344	Ball connector nut L 4.8 (4)
210381	Car body post set
210491	Ball connector L 5.8×4 (4)
210510CR	Enlarged brake calipers (red) (4)
230041	Wheel hubs w/disc shape (large)
230058	Steering arm set
230059	Ball diff. joint
230060	Battery mount
230061-1	Rear gear box set
230062	Front arm set
230063	Front damper stay
230064	Rear damper stay
230065	Front head set
230066	ATK Front wheel hubs
230068	Spur gear 48P-80T
230069	Suspension mount set (+1.0/-2.0)
230070	Shaft bush & spacer set
230071	Upper deck connector
230072	RMX Lower deck
230073	RMX Upper deck set
230092	RMX 2.0 RTR fittings
230121	F & R Bumper set
310001	Ball connector 4.8×4.5 (5)
310006	Wheel axle (2)
310008	Piston rod (4)
310047	Arm shaft 2.0×22 (2)
310048	Arm shaft 2.5×46 (4)
310064	Bevel gear 16T (2)
310101R	RMX Alum. motor mount (red)
310103	Arm shaft 2×28 (2)
310104	RMX quick-release bevel gear arbor
310105	RMX Main shaft
310106R	Spring retainer (red) (2)
820007	Steel CVD great angle universal shaft 48 (2)
820018	Spacer 5×7×0.1 (8)
820020	Spacer 5×7×0.3 (8)
820030	Cross joint (2)
820075BK	R-clip 5.0 (black) (10)
820079	Damper plastic maintenance set (2)
820095	AKM 2WD axle (2)
820103	31mm Hard coil spring set (8)
820104	31mm Soft coil spring set (8)

部品編號

110001	六角半圓頭螺絲 M3×6 (10)
110002	六角半圓頭螺絲 M3×8 (10)
110004	六角半圓頭螺絲 M2×4 (6)
110005	六角沉頭螺絲 M3×8 (10)
110009	六角止付螺絲 M3×20 (6)
110011	六角有頭螺絲 M3×6 (半牙) (6)
110013	E扣 2.0 (10)
110015	凸緣螺帽 M4 (4)
110017	插銷 2×9.8 (10)
110025	自攻六角半圓頭螺絲 2.6×10 (6)
110032	六角止付螺絲 M3×10 (6)
110035	六角止付螺絲 M3×3 (6)
110043	六角沉頭螺絲 M3×12 (10)
110044	六角半圓頭螺絲 M2×6 (6)
110045	六角半圓頭螺絲 M2×8 (半牙) (6)
110047	墊片 3×6×0.5 (8)
110048	墊片 3×8×0.5 (8)
110052	六角沉頭螺絲 M3×10 (10)
110056	六角止付螺絲 M3X12 (6)
110059	插銷 1.5×7.8 (8)
110061	六角半圓頭螺絲 M3×14 (6)
110063	六角半圓頭螺絲 M2×8 (6)
110067	六角止付螺絲 M2.5×2.5 (6)
110070	E扣 3.0 (10)
110078	六角沉頭螺絲 M3×18 (6)
110079	E扣 2.5 (10)
110080	墊片 2.6×5.8×0.6 (8)
110086	六角半圓頭螺絲 M3×16 (6)
110091	六角有頭螺絲 M3×40 (半牙) (6)
110099	六角沉頭螺絲 M3×4 (10)
110100	六角有頭螺絲 M3×30 (半牙) (6)
110101	六角沉頭螺絲 M3×20 (6)
110102	六角半圓頭螺絲 M2.5×5 (6)
110107	六角半圓頭螺絲 M2.5×18 (6)
120001	培林 10×15 (4)
120002	培林 5×10 (4)
120003	培林 5×8 (4)
120011	培林 5×11 (4)
120017	軸承 5×8 (4)
120018	培林 4×10×4 (2)
120019	培林 8×12 (2)
120024	軸承 3×6×2.5 (4)
130004	避震氣室 (4)
130005	防撞泡棉 (A)
130006	泡棉雙面膠 (5)
130028	阻尼器O環 P3 (藍) (10)
130032	避震上蓋O環 (10)
130034	吸震泡棉 20×80×1 (4)
130035	L 板手組 (1.5 & 2.0 & 2.5)
130049	O環 12×1 (4)
210031	強化拉桿頭組 5.8×26
210032	伺服機舵片組 (23T/25T)
210036	傘齒組 42-11
210057	避震器上下蓋組
210063W	襯套墊片組 (白)
210070-1	HT後下擺臂 (4孔) & 輪座
210071	避震器筒身 (2)
210082	避震器活塞墊片組
210161	球頭螺帽 4.8 (4)
210344	球頭螺帽L 4.8 (4)
210381	車殼支柱組
210491	球頭螺絲 L 5.8×4 (4)
210510CR	加大煞車卡鉗 (紅) (4)
230041	碟型六角輪座組 (加大型)
230058	轉向搖臂組
230059	滾差接杯組
230060	電池座組
230061-1	後齒箱組
230062	前擺臂組
230063	前避震架
230064	後避震架
230065	前擋支架組
230066	ATK前輪座組
230068	大齒盤 48P-80T
230069	下擺臂座組 (+1.0/-2.0)
230070	襯套墊片組
230071	二樓板後連結座組
230072	RMX 底盤
230073	RMX 二樓板組
230092	RMX 2.0 RTR 配件組
230121	前後防撞板組
310001	內六角公球頭 4.8×4.5 (5)
310006	萬向接杯 (2)
310008	避震軸心 (4)
310047	擺臂插銷 2.0×22 (2)
310048	擺臂插銷 2.5×46 (4)
310064	傘齒16T (2)
310101R	RMX 鋁合金馬達座 (紅)
310103	擺臂插銷 2×28 (2)
310104	RMX 快拆齒軸
310105	RMX 主齒軸
310106R	避震調整環 (紅) (2)
820007	鍛製大角度CVD傳動軸 48 (2)
820018	墊片 5×7×0.1 (8)
820020	墊片 5×7×0.3 (8)
820030	連接軸 (2)
820075BK	R銷 5.0 (黑) (10)
820079	避震膠件包 (2)
820095	AKM 二驅輪軸 (2)
820103	31mm 硬避震彈簧組 (8)
820104	31mm 軟避震彈簧組 (8)