
MST
max SPEED TECHNOLOGY

RMX-M RTR

1/10 M SCALE RC RWD HIGH PERFORMANCE DRIFT CAR

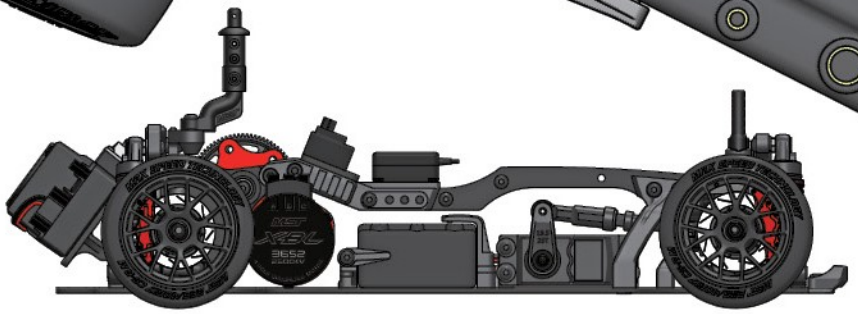

EXPLODED MANUAL

ON ROAD USE ONLY

SPECIFICATION:	1:10 Drift Car
WHEELBASE:	225 / 233 / 239 / 245
WIDTH :	164mm / 172mm
CASTER:	Adjustable 6/ 8/ 10/ 12 degrees
CAMBER :	Adjustable 0 to -12 degrees
DRIVE MODE:	RWD

FULL BALL BEARING
TRANSMISSION SYSTEM
HYDRAULIC DAMPER SET

mst station TEST @

www.rc-mst.com


※SPECIFICATION ARE SUBJECT TO CHANGE WITHOUT NOTICE


RMX-M RTR

1/10 M SCALE RC RWD HIGH PERFORMANCE DRIFT CAR

EXPLODED VIEW

MST max speed technology

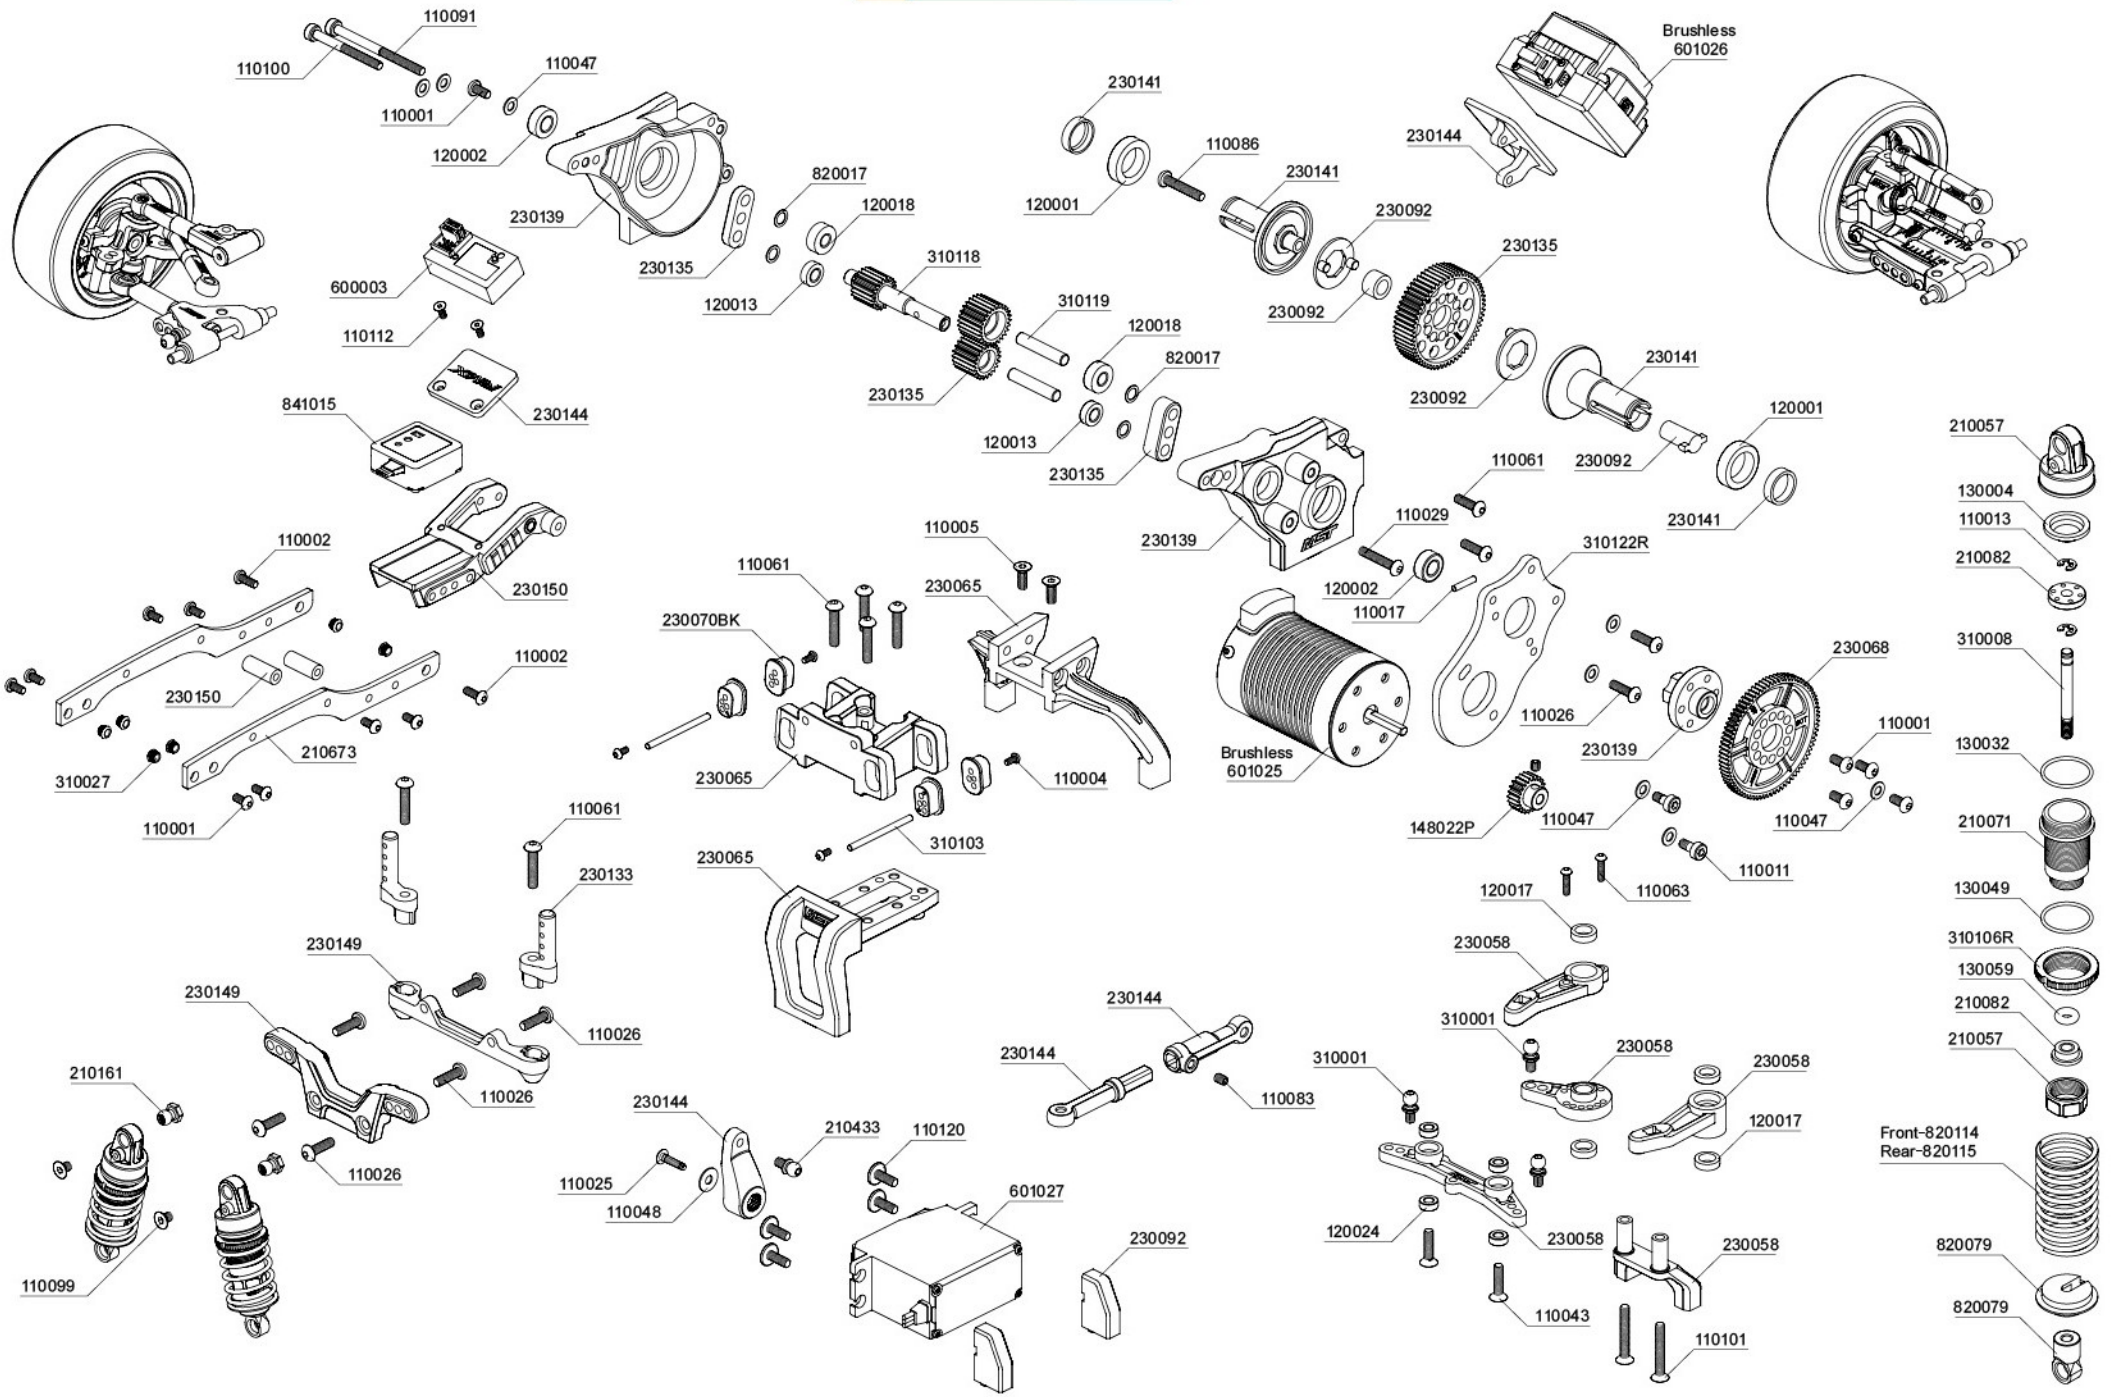

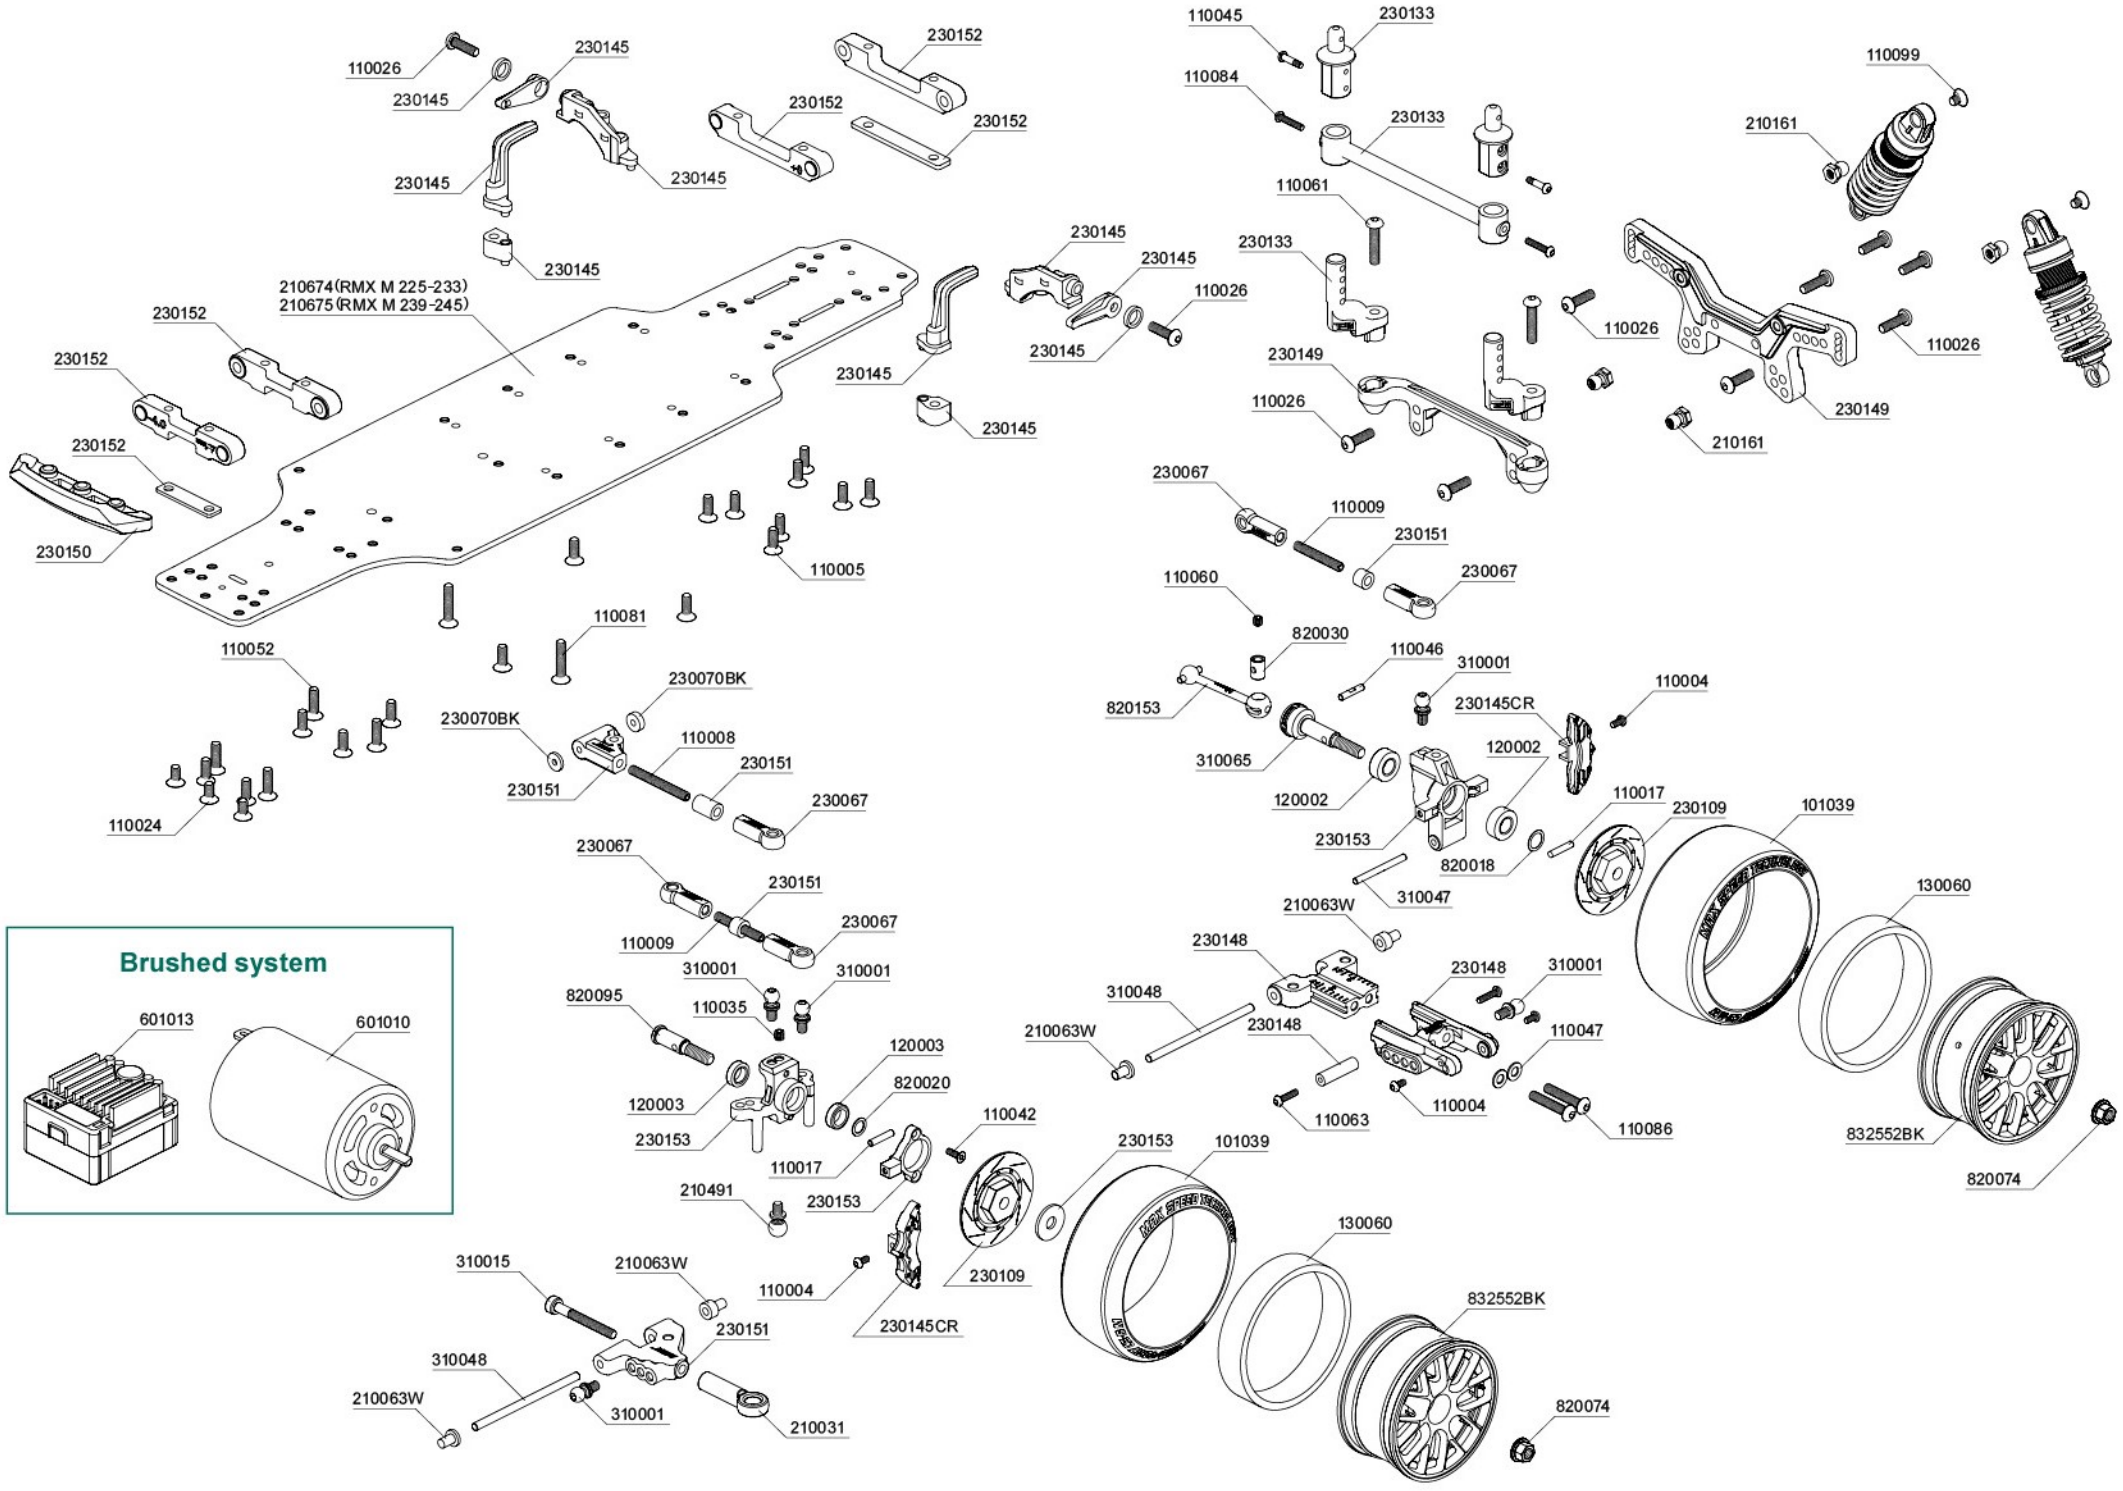
110026
230145
230145
230145
230145
230145
230152
230152
230152
210674(RMX M 225-233)
210675(RMX M 239-245)
230152
230152
230152
230150
230145
230145
110005
110081
110052
110024
230070BK
230070BK
110008
230151
230151
230067
230067
230151
230067
110009
310001
310001
820095
110035
120003
120003
230153
820020
110017
110042
210491
230153
230109
110004
230145CR
310015
210063W
230151
310048
210063W
310001
210031
110045
230133
110084
230133
110061
230145
230145
110026
230145
230133
110026
230149
110026
110026
230149
210161
110099
210161
230067
110009
230151
230067
110060
820030
110046
310001
820153
230145CR
110004
310065
120002
120002
230153
120002
110017
230109
101039
820018
310047
210063W
130060
230148
230148
310001
310048
210063W
230148
110047
110063
110004
110086
832552BK
820074
230153
101039
130060
832552BK
820074
Brushed system
601013
601010

RMX-M RTR

1/10 M SCALE RC RWD HIGH PERFORMANCE DRIFT CAR

Appreciate for your choice of **RMX M** ! You will be impressed with its performance and beauty.
Please prepare additional parts as car battery, transmitter battery, and charger.
Please follow the process for assemble and setting of parts package.
If you have doubt or need assistance, please contact the purchased shop or hobby shop for help, many thanks!
首先感謝你購入 **RMX M** 這項產品，您將擁有一部兼具性能與美型的甩尾車。
在首次操作前，有以下幾項須要另行購置的物件；車用電池、遙控器用電池、充電器。
備妥上述物件後，請進行零件包安裝與設定。
如需其他協助，請向原購買店家，或遙控模型店詢問！謝謝！

PLEASE FOLLOW BELOW OPERATIONS BEFORE ASSEMBLING THE PARTS PACKAGE.

請於安裝零件包之前,執行以下操作

PLEASE FOLLOW THE STEPS WHEN STARTING UP.

開機請遵循以下步驟



1. Install transmitter batteries.
2. Loosen receiver antenna.
3. Connector ESC and battery.
4. Turn on the remote controller.
5. Turn on the ESC.
6. Hold the car 3 seconds to wait for the MGX GYRO indicator light to flash from red to green to complete the gyro boot process.

1. 安裝遙控器電池
2. 鬆開接收機天線
3. 聯結車用電池與電子變速器
4. 打開遙控器開關
5. 打開ESC開關
6. 靜置3秒等待MGX GYRO指示燈從紅燈快閃轉為綠燈，即完成陀螺儀開機程序

※ Please play this product in opening safe area.
請於空曠或安全無虞的場所，使用本項產品。

※ The default setting had been completed.
出廠時，基本設定已設定完成。

※ RMX M RTR electronics (Transceiver set/ESC/Gyro) are set by factory and can be directly used after attaching battery. Please refer to instructions for adjusting.
RMX M RTR 之電子設備（遙控器組/電子變速器/陀螺儀）已經過原廠設定，玩家可於安裝電池後立即使用；如需依個人習慣調整時，再翻閱說明書。


Gyro sensitivity adjustment way
陀螺儀感度調整方向

※ Reduce resistance of LIMIT GAIN if the front-wheel wobbly easily on the high grabbing force field.
場地抓地力好導致前輪容易搖擺抖動，可在LIMIT GAIN逆時針微調降低感度。


※ Fine-tuning clockwise LIMIT GAIN sensitivity to improve car spinning on the poor grabbing force site.
場地抓地力差容易過甩SPIN，可在LIMIT GAIN順時針微調提升感度。



※ Please refer to transmitter & receiver performance instructions.
遙控器&接收機功能說明請參閱詳細說明書。

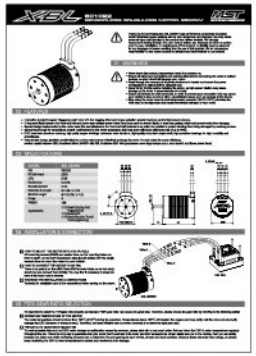


※ Please refer to ESC performance instructions.
電子變速器功能說明請參閱詳細說明書。

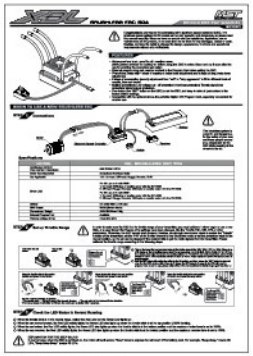



※ Please refer to MGX GYRO performance instructions.
陀螺儀功能說明請參閱詳細說明書。

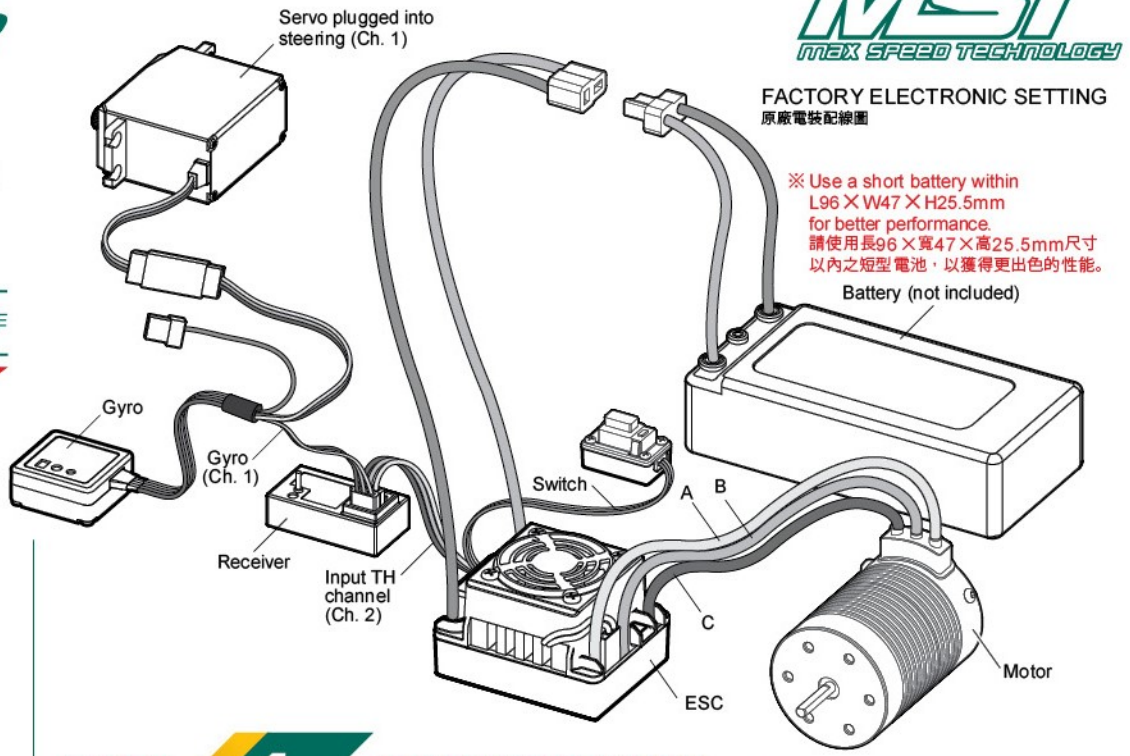


FACTORY ELECTRONIC SETTING
原廠電裝配線圖

※ Use a short battery within L96 X W47 X H25.5mm for better performance.
請使用長96 X 寬47 X 高25.5mm尺寸以內之短型電池，以獲得更出色的性能。

STEP 1 PASTING SPONGE


貼上吸震泡棉

※ Please cut along the dashed line.
請沿虛線剪開。

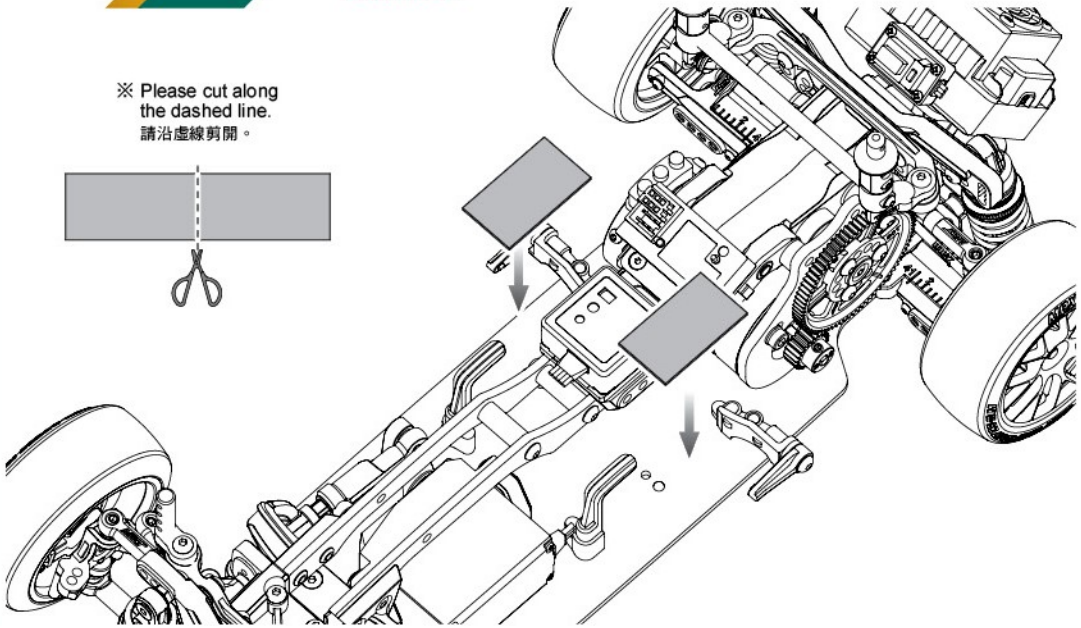

BRUSHED POWER ELECTRONIC SETTING

有刷版原廠電裝配線圖

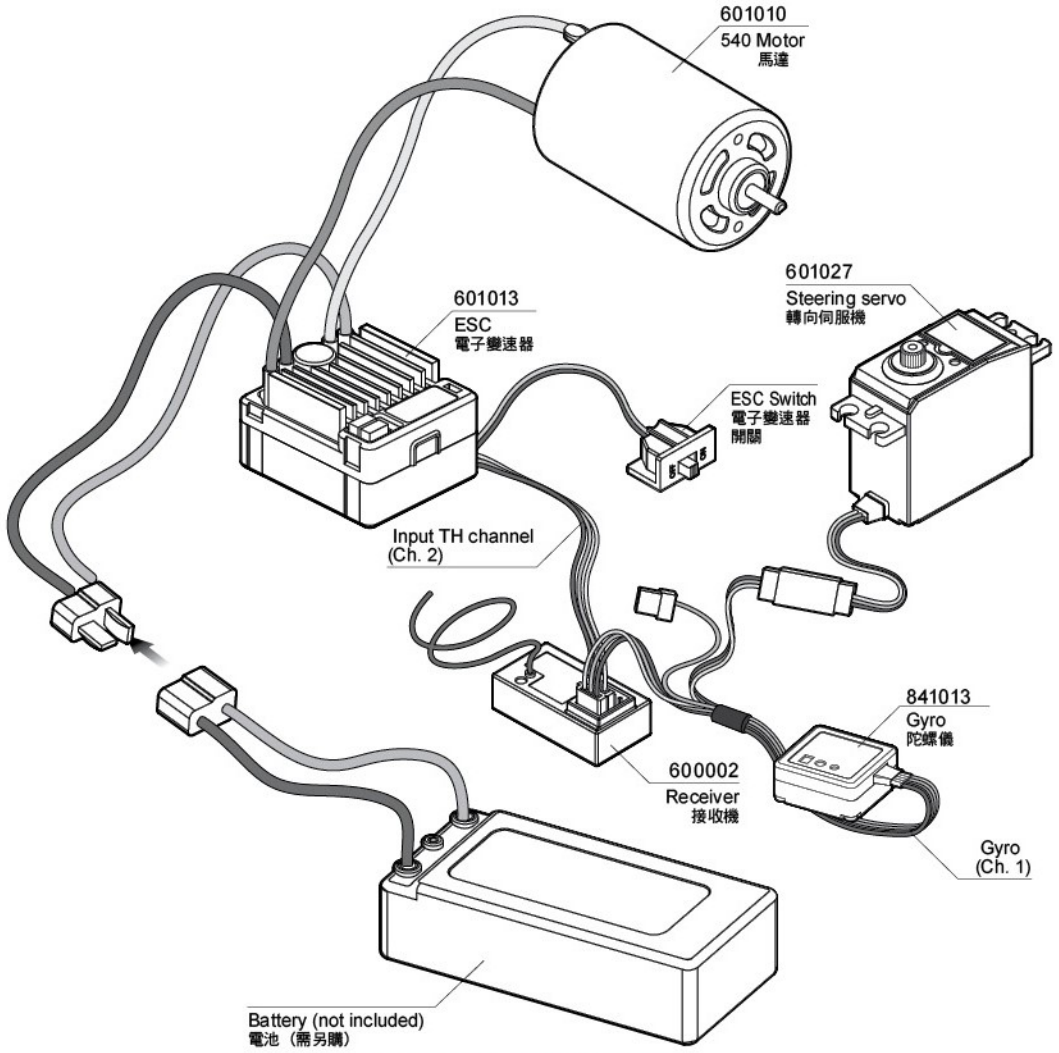

※ Use a short battery within L96 ✕W47 ✕H25.5mm for better performance.
請使用長96 ✕寬47 ✕高25.5mm尺寸以內之短型電池，以獲得更出色的性能。

PLEASE FOLLOW BELOW OPERATIONS BEFORE ASSEMBLING THE PARTS PACKAGE.

請於安裝零件包之前,執行以下操作

PLEASE FOLLOW THE STEPS WHEN STARTING UP.

開機請遵循以下步驟

1. Install transmitter batteries.
2. Loosen receiver antenna.
3. Connector ESC and battery.
4. Turn on the remote controller.
5. Turn on the ESC.
6. Hold the car 3 seconds to wait for the MGX GYRO indicator light to flash from red to green to complete the gyro boot process.

1. 安裝遙控器電池
2. 鬆開接收機天線
3. 聯結車用電池與電子變速器
4. 打開遙控器開關
5. 打開ESC開關
6. 靜置3秒等待MGX GYRO指示燈從紅燈快閃轉為綠燈，即完成陀螺儀開機程序

※ Please play this product in opening safe area.
請於空曠或安全無虞的場所，使用本項產品。

※ The default setting had been completed.
出廠時，基本設定已設定完成。

※ RMX M RTR electronics (Transceiver set/ESC/Gyro) are set by factory and can be directly used after attaching battery. Please refer to instructions for adjusting.
RMX M RTR 之電子設備（遙控器組/電子變速器/陀螺儀）已經過原廠設定，玩家可於安裝電池後立即使用；如需依個人習慣調整時，再翻閱說明書。

Gyro sensitivity adjustment way
陀螺儀感度調整方向

※ Reduce resistance of LIMIT GAIN if the front-wheel wobbly easily on the high grabbing force field.
場地抓地力好導致前輪容易搖擺抖動，可在LIMIT GAIN逆時針微調降低感度。

※ Fine-tuning clockwise LIMIT GAIN sensitivity to improve car spinning on the poor grabbing force site.
場地抓地力差容易過甩SPIN，可在LIMIT GAIN順時針微調提升感度。



※ Please refer to transmitter & receiver performance instructions.
遙控器&接收機功能說明請參閱詳細說明書。




※ Please refer to instruction of ESC performance.
遙控器&接收機功能說明請參閱詳細說明書。




※ Please refer to MGX GYRO performance instructions.
陀螺儀功能說明請參閱詳細說明書。

STEP 2 ATTACHING BATTERY
安裝電池

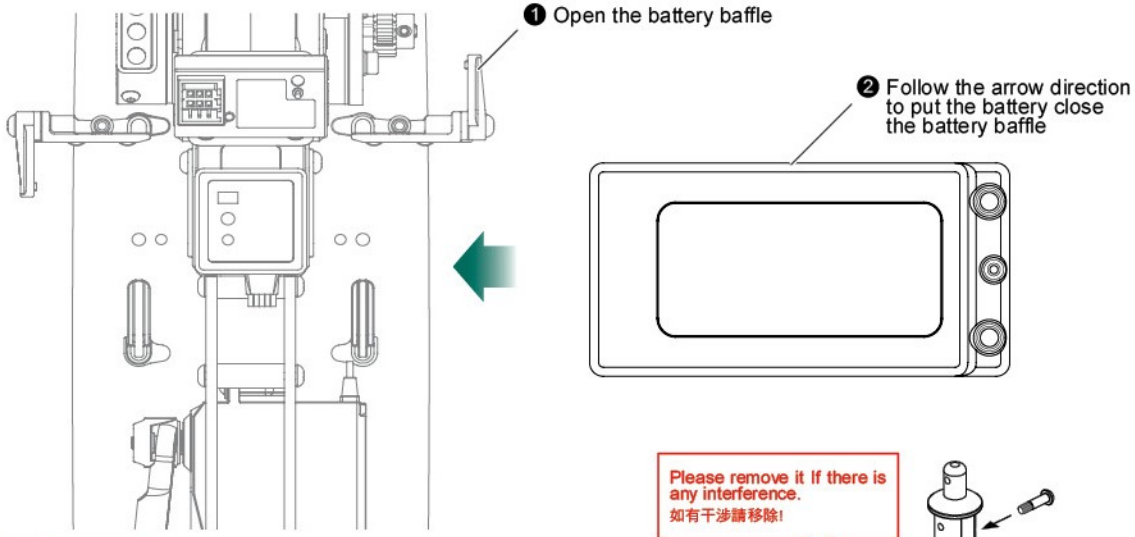


※ The assembly and conservation method may be different by specification of battery.
電池的安裝方式會因為廠牌規格而有些微差異，電池的使用方式與保存方式，也會因電池的種類而有所不同。


※ Use a short battery within L96×W47×H25.5mm for better performance.
請使用 長96×寬47×高25.5mm尺寸以內之短型電池，以獲得更出色的性能。

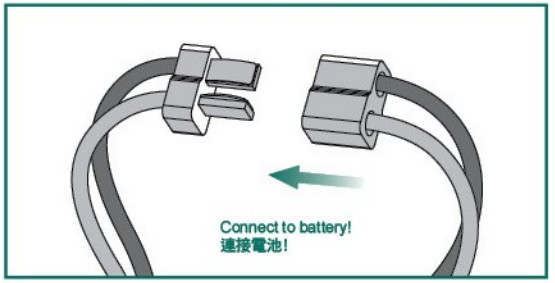

※ Please play in safe place after all setting finish.
Before playing, please switch on transmitter then on the car.
Please switch off reversely.
安裝設定完成後，請於安全場所使用本產品!
使用前請先開啟遙控器電源後再開啟車體電源!
使用後請反向操作關閉!

STEP 3 ATTACHING BODY MOUNT
車殼浮動架安裝

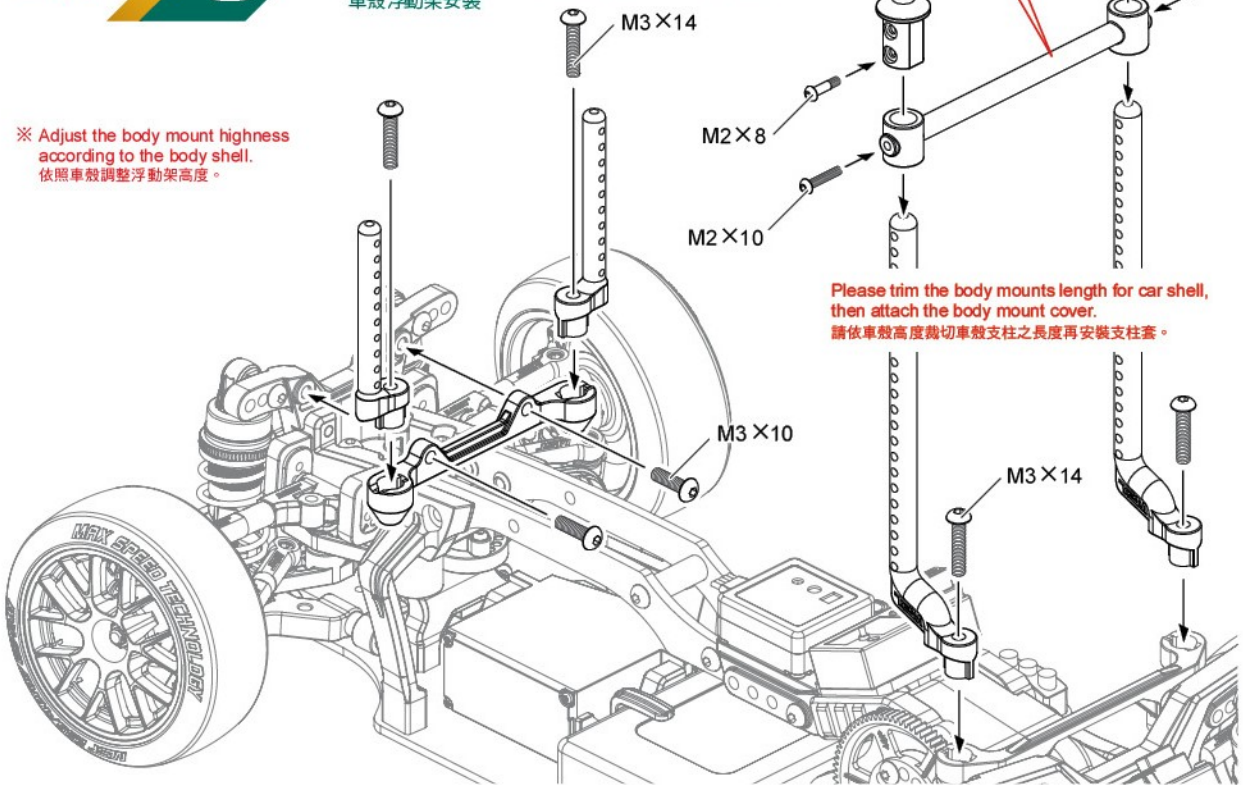

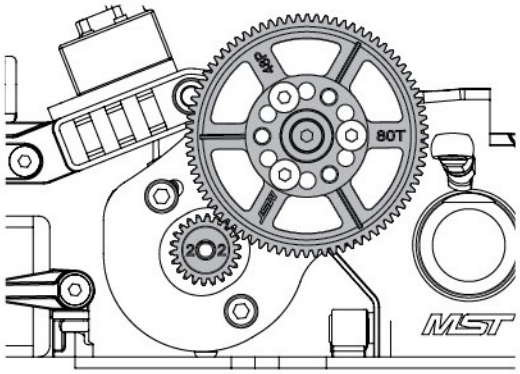

GEAR RATIO
(For **80T** Spur Gear)

Pinion gear teeth	60T/20T <3.00>
22T	10.91
23T	10.43
24T	10
25T	9.6
26T	9.23
27T	8.89


※Adjust for proper space.
請調整適當齒隙。

＊**FORMULA** 計算公式


$$\left(\frac{\text{Spur gear teeth 80T 大直齒}}{\text{Pinion gear teeth 馬達齒}} \times \frac{\text{Differential gear 60T 差速齒}}{\text{Main shaft gear 20T 主軸齒}}\right) = \text{Gear ratio 終傳比}$$

210674 RMX M 225 - 233

225 Wheelbase

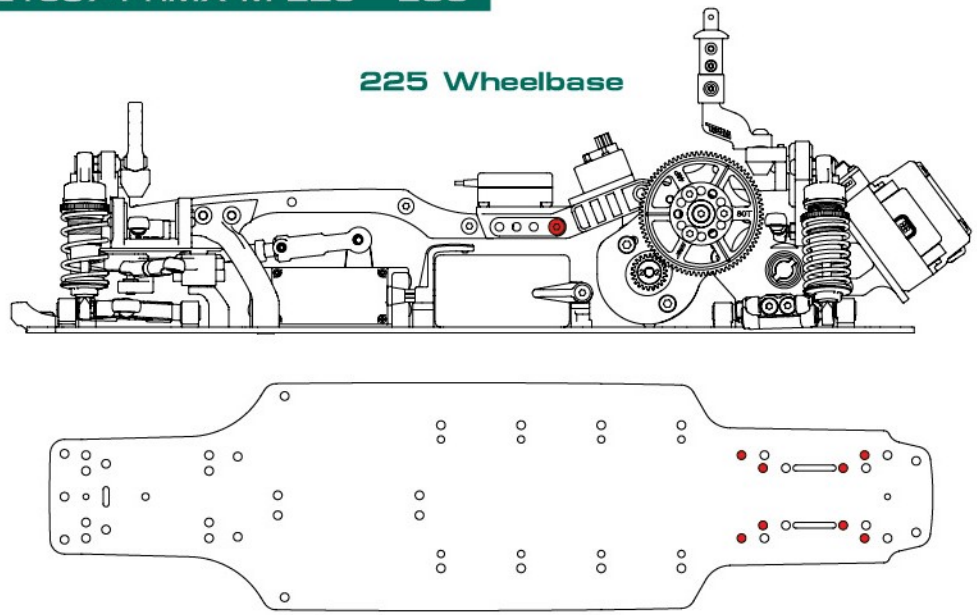


233 Wheelbase

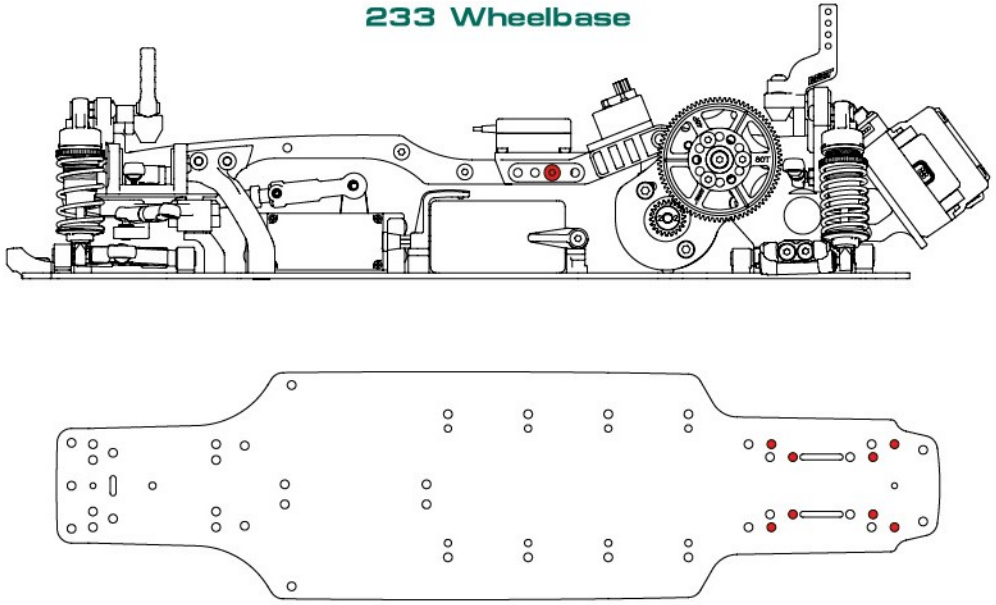


210675 RMX M 239 - 245

239 Wheelbase

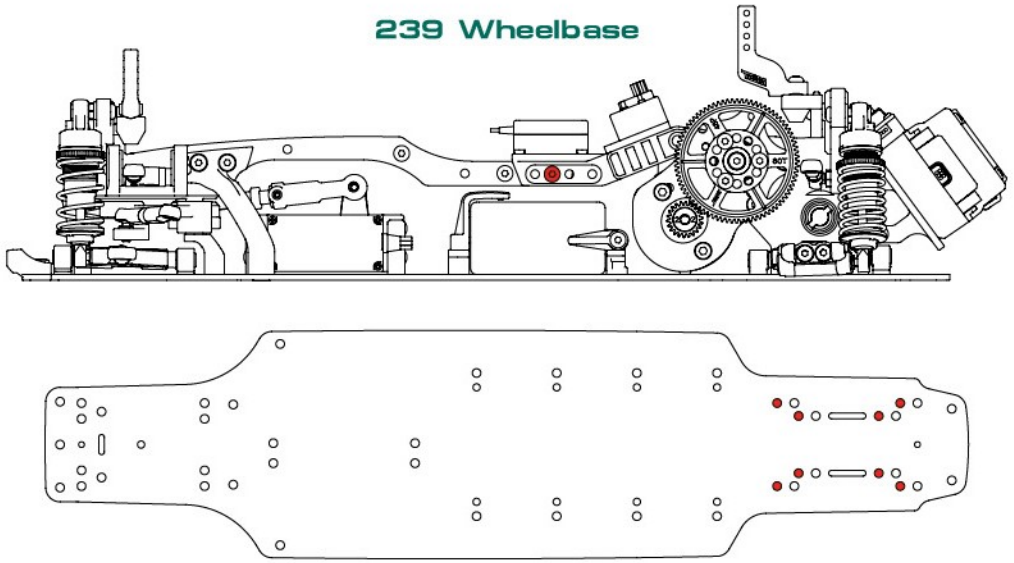

245 Wheelbase

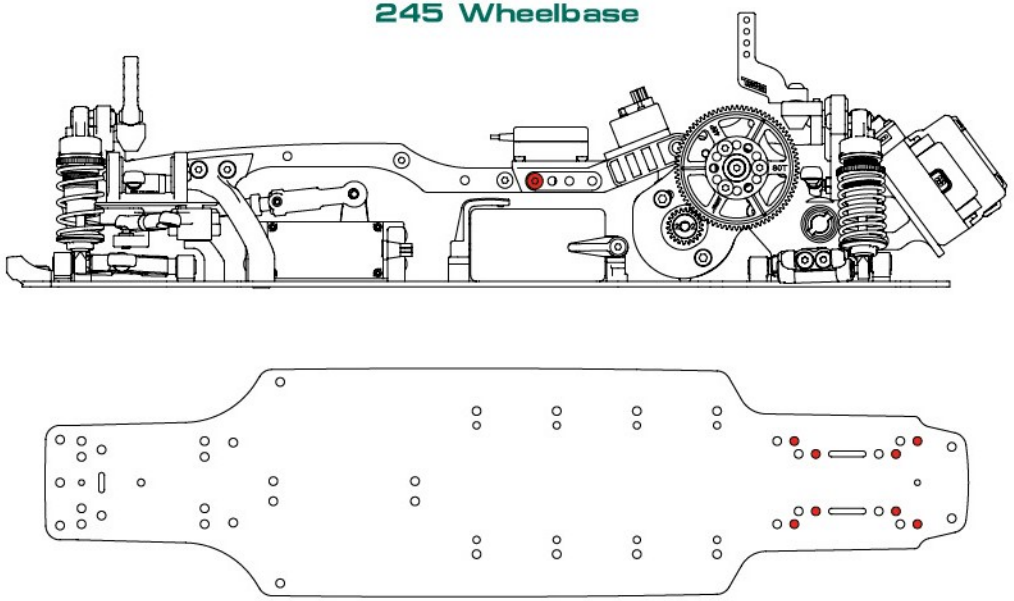

PARTS



M2×4 Screw ×12
圓頭螺絲
110004



M2×8 Screw ×6
圓頭螺絲
110063



M2×8 Screw ×2
圓頭螺絲(半牙)
110045



M2×10 Screw ×2
圓頭螺絲
110084



M3×6 Screw ×9
圓頭螺絲
110001



M3×8 Screw ×6
圓頭螺絲
110002



M3×10 Screw ×18
圓頭螺絲
110026



M3×12 Screw ×1
圓頭螺絲
110029



M3×14 Screw ×10
圓頭螺絲
110061



M3×16 Screw ×5
圓頭螺絲
110086



2.6×10 Screw ×1
自攻圓頭螺絲
110025



M2×6 Screw ×2
沉頭螺絲
110042



M2.5×6 Screw ×2
沉頭螺絲
110112



M3×4 Screw ×4
沉頭螺絲
110099



M3×6 Screw ×3
沉頭螺絲
110024



M3×8 Screw ×18
沉頭螺絲
110005



3×6×0.5 Spacer ×12
墊片
110047



3×8×0.5 Spacer ×1
墊片
110048



4×6×0.3 Spacer ×4
墊片
820017



5×7×0.1 Spacer ×2
墊片
820018



5×7×0.3 Spacer ×2
墊片
820020



3×6×2.5 Bearing ×4
軸承
120024



4×8×3 Ball bearing ×2
培林
120013



5×8 Ball bearing ×8
培林
120003



4×10 Ball bearing ×2
培林
120018



5×10 Ball bearing ×6
培林
120002



10×15 Ball bearing ×2
培林
120001



M3×10 Screw ×6
沉頭螺絲
110052



M3×12 Screw ×2
沉頭螺絲
110043



M3×14 Screw ×2
沉頭螺絲
110081



M3×20 Screw ×2
沉頭螺絲
110101



4.8 Ball connector ×6
外六角球頭
210161



4.8×4.5 S Ball connector ×1
內六角公球頭
210433



4.8×4.5 Ball connector ×13
球頭螺絲
310001



5.8×4 Ball connector L ×2
球頭螺絲(長)
210491



M3×6 Screw ×2
有頭螺絲(半牙)
110011



M3×8 Screw ×4
帶墊片螺絲
110120



Wheel nut m4 ×4
凸緣螺帽
820074



Cross joint ×2
連接軸
820030



M3×25 Screw ×2
有頭螺絲
310015

M3×30 Screw ×1
有頭螺絲(半牙)
110100

M3×40 Screw ×1
有頭螺絲(半牙)
110091

2WD Axle ×2
二驅輪軸
820095

Steel CVD universal shaft 29 ×2
鋼製CVD傳動軸 29
820153

M3×2.6 Screw ×2
止付螺絲
110060

M3×3 Screw ×3
止付螺絲
110035

M3×4 Screw ×1
止付螺絲
110083

M3×20 Screw ×4
止付螺絲
110009

M3×25 Screw ×2
止付螺絲
110008

2×9.8 Shaft ×5
插銷
110017

2×9.8 (削槽) Shaft ×2
插銷
110046

2×22 Shaft ×2
插銷
310047

2×28 Shaft ×2
插銷
310103

2.5×46 Arm shaft ×4
擺臂插銷
310048

R-clip 5.0 ×6
R銷 5.0
820075

4×21 Steel center shaft ×2
鋼製心軸
310119

Alum. Main shaft 20T ×1
鋁合金主齒軸 20T
310118

Wheel axle ×2
萬向接杯
310065

Reinforced adjuster set 5.8×26 ×2
5.8×26 拉桿頭
210031

29mm Coil spring set ×8
29mm 避震彈簧組 ×8
820114

29mm Soft coil spring set ×8
29mm 軟避震彈簧組 ×8
820115

Damper cylinder ×4
避震筒身
210071

Piston rod ×4
避震軸心
310008

Piston ×4
避震活塞
210235

Cylinder cap ×4
避震器上蓋
210057

Damper adjuster ×4
避震器拉桿
820079

Rod guide cap ×4
避震器下蓋
210057

10.8×0.9 O-ring ×4
O環
130032

Damper retainer ×4
避震器彈簧座
820079

12×1 O-ring ×4
O環
130049

Oil seal ×4
避震器氣室
130004

Spring retainer (red) ×4
避震器調整環 (紅)
310106R


E-clip ×10
E形扣
110013

Rod guide ×4
避震器下蓋墊片
210235


Damper O-ring P3 ×4
避震器O環
130059

M3×4 screw ×4
沉頭螺絲
110099

PARTS

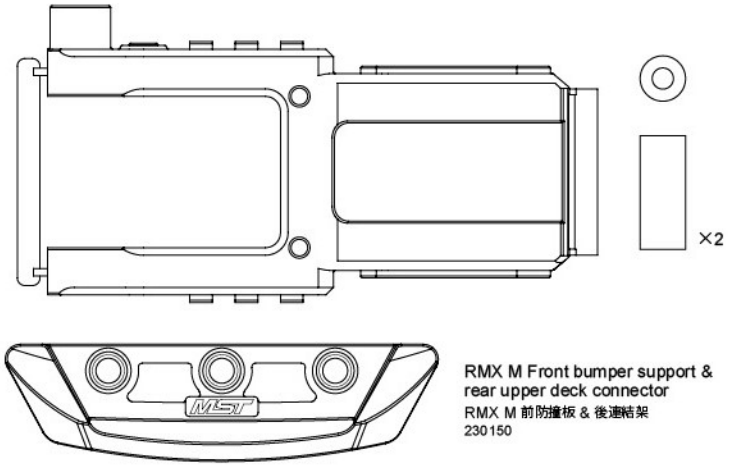


RMX M Front bumper support & rear upper deck connector
RMX M 前防撞板 & 後連結架
230150

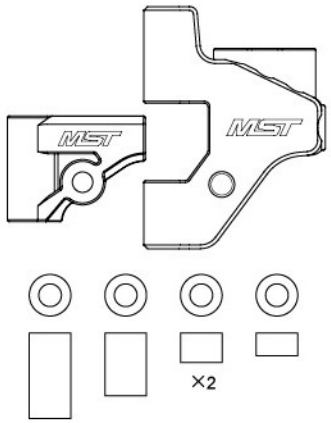


M Front upper & lower arm set ×2
M 前上下擺臂組
230151




M Black RE wheel 24.5mm (+5) (4)
M 黑RE輪框 24.5mm (+5) (4)
832552BK

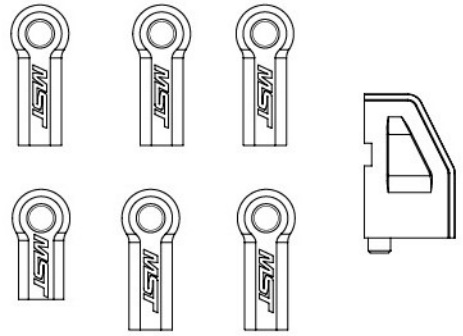


4.8 Rod ends set (M/S) ×2
4.8 拉桿頭組 (M/S)
230067

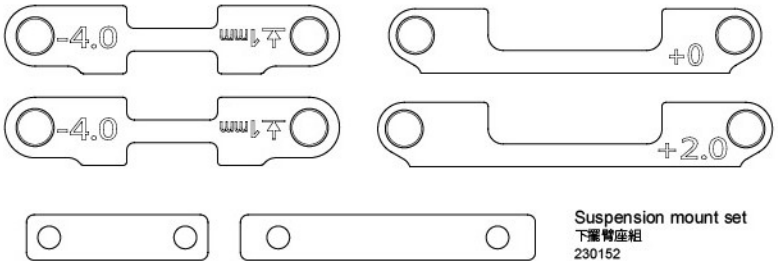


Suspension mount set
下擺臂座組
230152

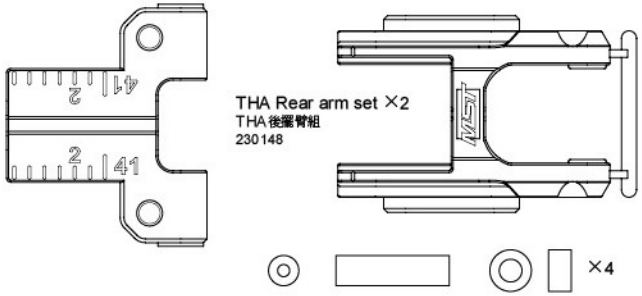


THA Rear arm set ×2
THA後擺臂組
230148

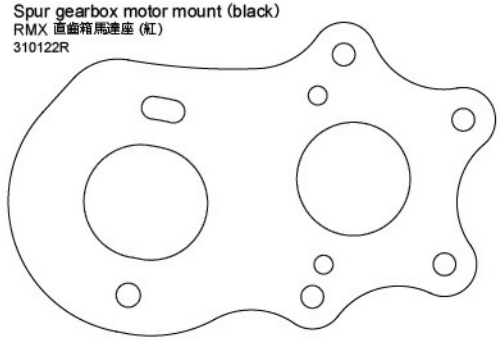


Spur gearbox motor mount (black)
RMX 直齒箱馬達座 (紅)
310122R

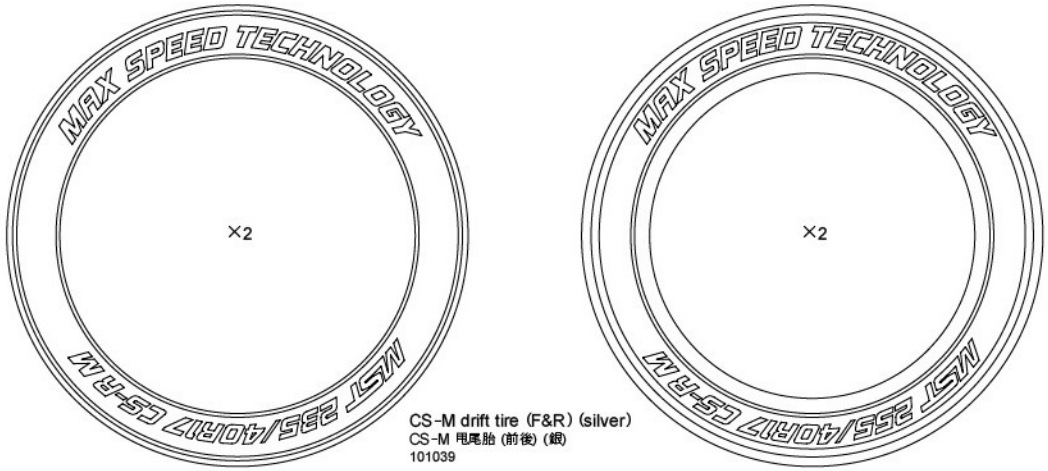


CS-M drift tire (F&R) (silver)
CS-M 甩尾胎 (前後) (銀)
101039

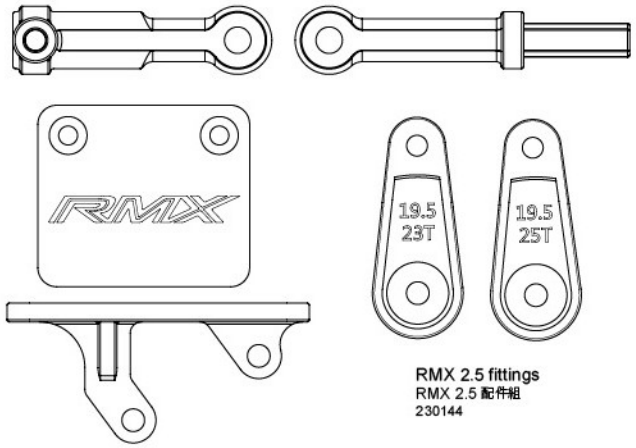


RMX 2.5 fittings
RMX 2.5 配件組
230144

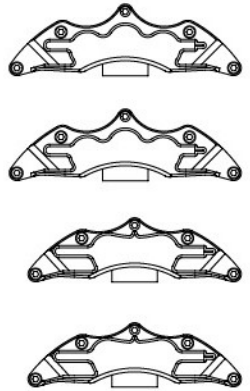


Brake calipers (red)
煞車卡鉗 (紅)
210145CR

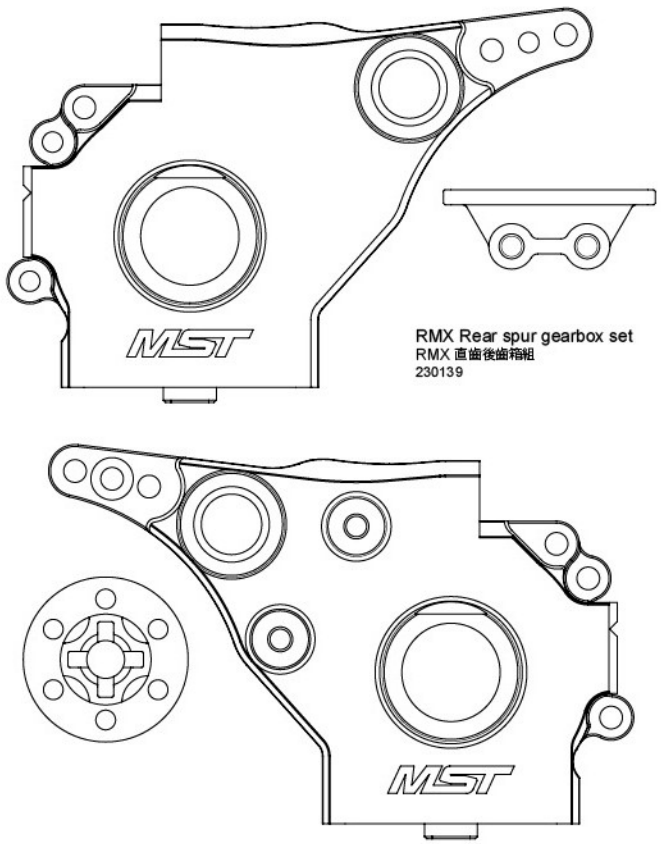


RMX Rear spur gearbox set
RMX 直齒後齒箱組
230139

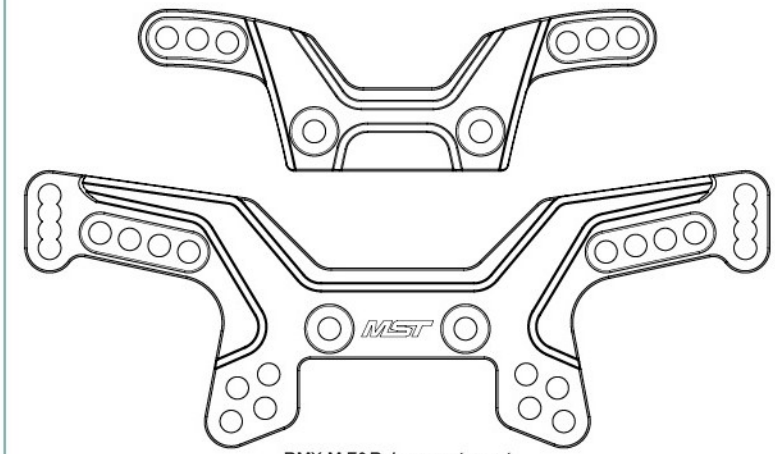


RMX M F&R damper stay set
RMX M 前後避震架組
230149

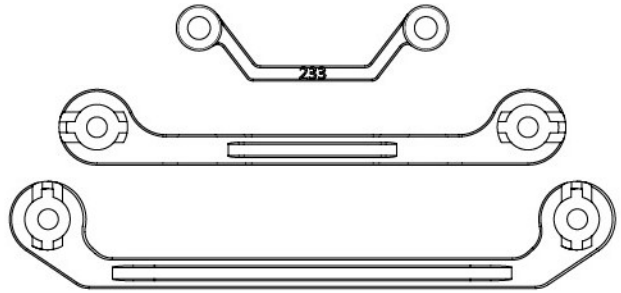


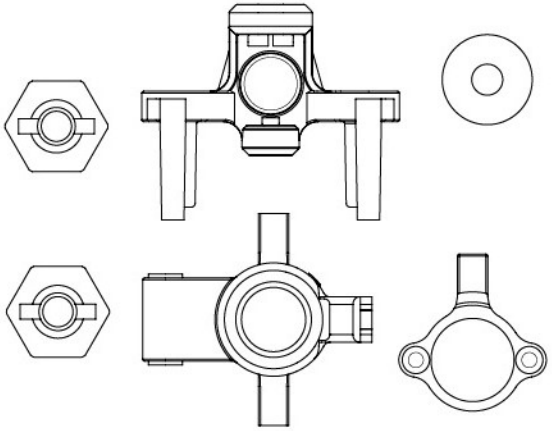



ATK V2 Front wheel hubs ×2
& THA rear hubs
ATK V2 前輪座組 & THA 後輪座
230153

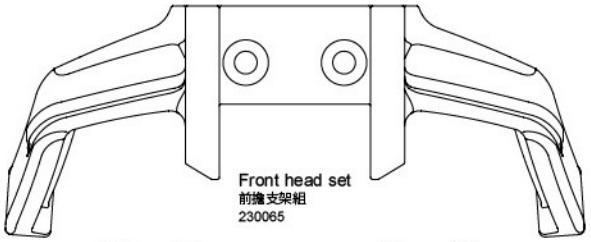


Front head set
前擋支架組
230065

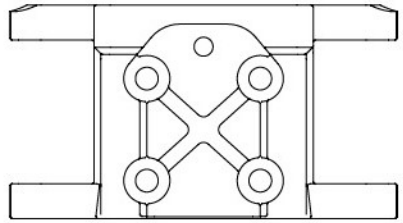

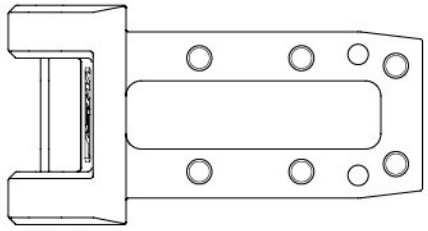


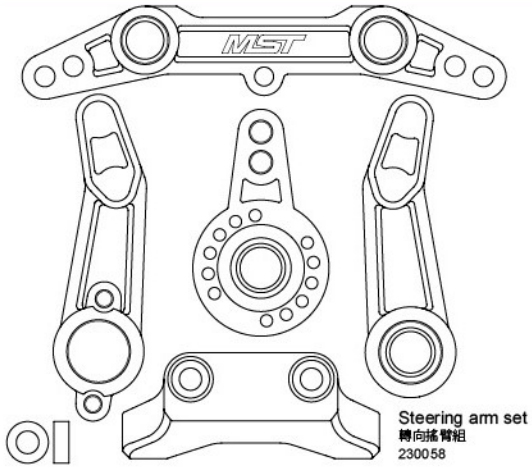


Steering arm set
轉向搖臂組
230058

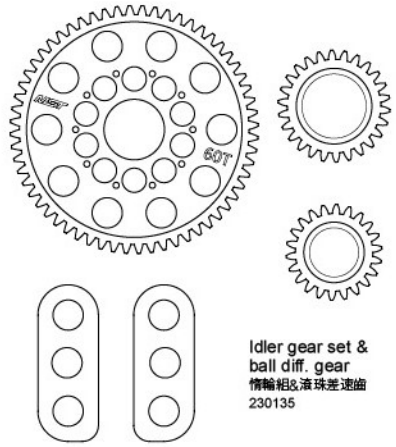

Idler gear set &
ball diff. gear
惰輪組&滾珠差速齒
230135

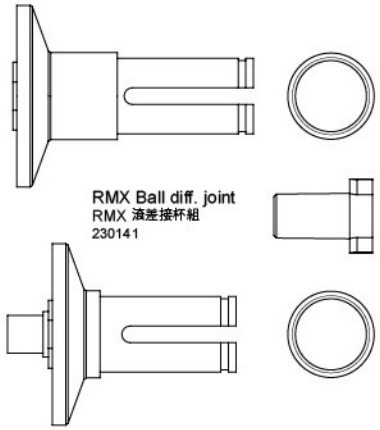


RMX Ball diff. joint
RMX 滾差接杯組
230141

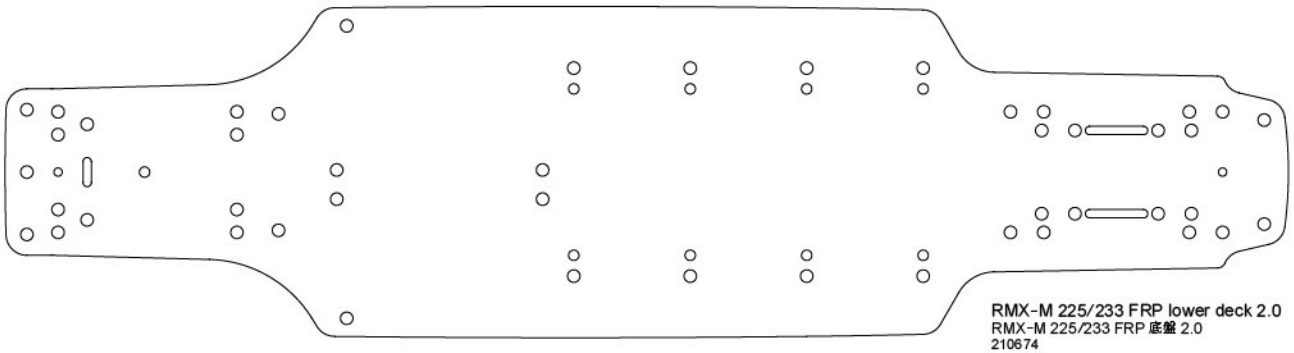


RMX-M 225/233 FRP lower deck 2.0
RMX-M 225/233 FRP 底盤 2.0
210674


RMX-M 239/245 FRP lower deck 2.0
RMX-M 239/245 FRP 底盤 2.0
210675

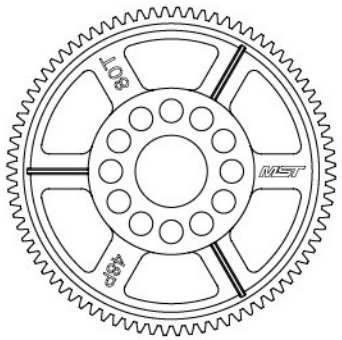


Spur gear 48P 80T
大直齒
230068

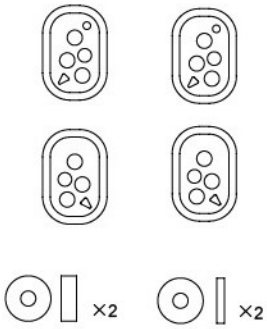


Shaft bush & spacer set
襯套墊片組
230070BK

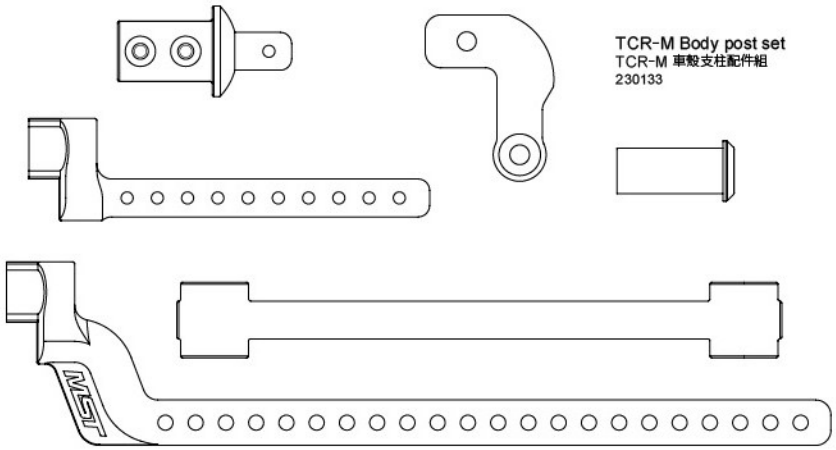


TCR-M Body post set
TCR-M 車殼支柱配件組
230133

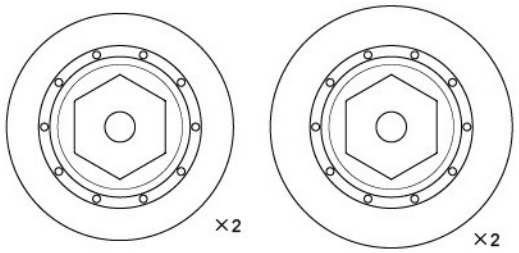


Wheel hubs w/disc shape 32&30
碟型六角輪座組 32&30 附貼紙
230109




Pinion gear 48P-22T ×1
馬達齒
148022P

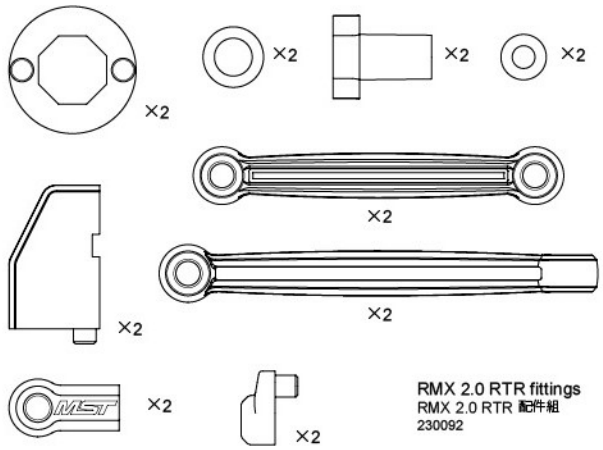


RMX 2.0 RTR fittings
RMX 2.0 RTR 配件組
230092

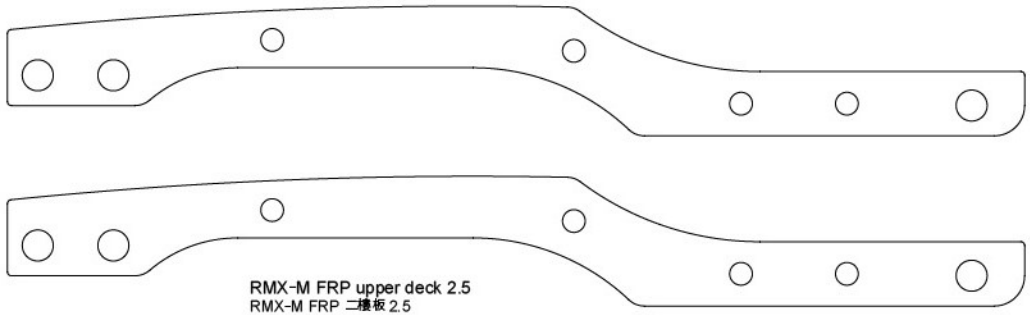

RMX-M FRP upper deck 2.5
RMX-M FRP 二樓板 2.5
210673

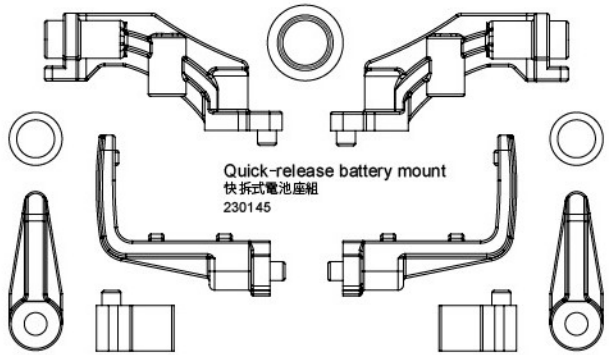

Quick-release battery mount
快拆式電池座組
230145

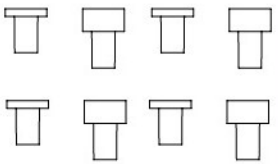

Shaft bush & spacerset (white)
襯套墊片組 (白)
210063(W)

PARTS CODE

101039	CS M drift tire (F&R) (silver) (4)	110083	Set screw M3×4 (6)	210235	Piston spacer set	310001	Ball connector 4.8×4.5 (5)
110001	Round head screw M3×6 (10)	110084	Round head screw M2×10 (6)	210433	Ball connector 4.8×4.5 S (5)	310008	Piston rod (4)
110002	Round head screw M3×8 (10)	110086	Round head screw M3×16 (6)	210491	Ball connector L 5.8×4 (4)	310015	Diff screw & spring set
110004	Round head screw M2×4 (6)	110091	Cap screw M3×40 (6)	210673	RMX-M FRP upper deck 2.5	310047	Arm shaft 2.0×22 (2)
110005	Countersunk screw M3×8 (10)	110099	Countersunk screw M3×4 (10)	210674	RMX-M 225/233 FRP lower deck 2.0	310048	Arm shaft 2.5×46 (4)
110008	Set screw M3×25 (6)	110100	Cap screw M3×30 (6)	210675	RMX-M 239/245 FRP lower deck 2.0	310065	Wheel axle (2)
110009	Set screw M3×20 (6)	110101	Countersunk screw M3×20 (6)	230058	Steering arm set	310103	Arm shaft 2×28 (2)
110011	Cap screw M3×6 (6)	110112	Countersunk screw M2.5×6 (6)	230065	Front head set	310106R	Spring retainer (red) (2)
110013	E-clip 2.0 (10)	110120	Round head screw w/washer M3×8 (6)	230067	4.8 Rod ends set (M/S)	310118	Alum. main shaft 48P 20T
110017	Shaft 2×9.8 (10)	120001	Ball bearing 10×15 (4)	230068	Spur gear 48P-80T	310119	4×21 Steel center shaft (2)
110024	Countersunk screw M3×6 (10)	120002	Ball bearing 5×10 (4)	230070BK	Shaft bush & spacer set	310122R	RMX Alum. spur gearbox motor mount (red)
110025	Tapping round head screw 2.6×10 (6)	120003	Ball bearing 5×8 (4)	230092	RMX 2.0 RTR fittings	820017	Spacer 4×6×0.3 (8)
110026	Round head screw M3×10 (10)	120013	Ball bearing 4×8×3 (2)	230109	Wheel hubs w/disc shape 32&30	820018	Spacer 5×7×0.1 (8)
110029	Round head screw M3×12 (6)	120018	Ball bearing 4×10×4 (2)	230133	TCR-M Body post set	820020	Spacer 5×7×0.3 (8)
110035	Set screw M3×3 (6)	120024	Bearing 3×6×2.5 (4)	230135	Idler gear set & ball diff. gear	820030	Cross joint (2)
110042	Countersunk screw M2×6 (6)	130004	Oil seal (4)	230139	RMX Rear spur gearbox set	820074	Wheel nut m4 (4)
110043	Countersunk screw M3×12 (10)	130032	Damper cap O-ring (10)	230141	RMX ball diff. joint (spur)	820075	R-clip 5.0 (10)
110045	Round head screw M2×8 (partial thread) (6)	130049	O-ring 12×1 (4)	230144	RMX 2.5 fittings	820079	Damper plastic maintenance set (2)
110046	Shaft 2×9.8 (8)	130059	High-smooth damper O-ring P3 (white) (10)	230145	Quick-release battery mount	820095	AKM 2WD axle (2)
110047	Spacer 3×6×0.5 (8)	148022P	MST 48P Pinion 22T	230148	THA Rear arm set	820114	29mm Coil spring set (8)
110048	Spacer 3×8×0.5 (8)	210031	Reinforced adjuster set 5.8×26	230149	RMX M F&R damper stay set	820115	29mm Soft coil spring set (8)
110052	Countersunk screw M3×10 (10)	210057	Damper cap set	230150	RMX M Front bumper support & rear upper deck connector	820153	Steel CVD universal shaft 29 (40°)
110060	Set screw M3×2.6 (10)	210063W	Shaft bush & spacer set (white)			832552BK	M Black RE wheel 24.5mm (+5) (4)
110061	Round head screw M3×14 (6)	210071	Damper cylinder (2)	230151	M Front upper & lower arm set		
110063	Round head screw M2×8 (6)	210145CR	Brake calipers (red) (4)	230152	Suspension mount set		
110081	Countersunk screw M3×14 (6)	210161	Ball connector nut 4.8 (4)	230153	ATK V2 Front wheel hubs & THA rear hubs		

部品編號

101039	CS-M 甩尾胎 (前後) (銀) (4)	110083	六角止付螺絲 M3×4 (6)	210235	避震器活塞墊片組	310008	避震軸心 (4)
110001	六角半圓頭螺絲 M3×6 (10)	110084	六角半圓頭螺絲 M2×10 (6)	210433	內六角公球頭 4.8×4.5 S (5)	310015	滾差彈簧螺絲組
110002	六角半圓頭螺絲 M3×8 (10)	110086	六角半圓頭螺絲 M3×16 (6)	210491	球頭螺絲 L 5.8×4 (4)	310047	擺臂插銷 2.0×22 (2)
110004	六角半圓頭螺絲 M2×4 (6)	110091	六角有頭螺絲 M3×40 (半牙) (6)	210673	RMX-M FRP 二樓板 2.5	310048	擺臂插銷 2.5×46 (4)
110005	六角沉頭螺絲 M3×8 (10)	110099	六角沉頭螺絲 M3×4 (10)	210674	RMX-M 225/233 FRP 底盤 2.0	310065	萬向接杆 (2)
110008	六角止付螺絲 M3×25 (6)	110100	六角有頭螺絲 M3×30 (半牙) (6)	210675	RMX-M 239/245 FRP 底盤 2.0	310103	擺臂插銷 2×28 (2)
110009	六角止付螺絲 M3×20 (6)	110101	六角沉頭螺絲 M3×20 (6)	230058	轉向搖臂組	310106R	避震調整環 (紅) (2)
110011	六角有頭螺絲 M3×6 (半牙) (6)	110112	六角沉頭螺絲 M2.5×6 (6)	230065	前擔支架組	310118	鋁合金主齒軸 48P 20T
110013	E扣 2.0 (10)	110120	六角半圓頭帶墊片螺絲 M3×8 (6)	230067	4.8 拉桿頭組 (M/S)	310119	4×21 鋼製心軸 (2)
110017	插銷 2×9.8 (10)	120001	培林 10×15 (4)	230068	大齒盤 48P-80T	310122R	RMX 鋁合金直齒箱馬達座 (紅)
110024	六角沉頭螺絲 M3×6 (10)	120002	培林 5×10 (4)	230070BK	襯套墊片組	820017	墊片 4×6×0.3 (8)
110025	自攻六角半圓頭螺絲 2.6×10 (6)	120003	培林 5×8 (4)	230092	RMX 2.0 RTR 配件組	820018	墊片 5×7×0.1 (8)
110026	六角半圓頭螺絲 M3×10 (10)	120013	培林 4×8×3 (2)	230109	碟型六角輪座組 32&30	820020	墊片 5×7×0.3 (8)
110029	六角半圓頭螺絲 M3×12 (6)	120018	培林 4×10×4 (2)	230133	TCR-M 車殼支柱配件組	820030	連接軸 (2)
110035	六角止付螺絲 M3×3 (6)	120024	軸承 3×6×2.5 (4)	230135	惰輪組&滾珠差速齒	820074	輪框螺帽 M4 (4)
110042	六角沉頭螺絲 M2×6 (6)	130004	避震氣室 (4)	230139	RMX 直齒式後齒箱組	820075	R銷 5.0 (10)
110043	六角沉頭螺絲 M3×12 (10)	130032	避震上蓋O環 (10)	230141	RMX 滾差接杆組 (直齒用)	820079	避震膠件包 (2)
110045	六角半圓頭螺絲 M2×8 (半牙) (6)	130049	O環 12×1 (4)	230144	RMX 2.5配件組	820095	AKM 二驅輪軸 (2)
110046	插銷 2×9.8 (削溝) (8)	130059	高順暢阻尼器O環 P3 (白)(10)	230145	快拆式電池座組	820114	29mm 避震彈簧組 (8)
110047	墊片 3×6×0.5 (8)	148022P	MST 48P 馬達齒 22T	230148	THA後擺臂組	820115	29mm 軟避震彈簧組 (8)
110048	墊片 3×8×0.5 (8)	210031	強化拉桿頭組 5.8×26	230149	RMX M 前後避震架組	820153	鋼製CVD傳動軸 29 (40°)
110052	六角沉頭螺絲 M3×10 (10)	210057	避震器上下蓋組	230150	RMX M 前防撞板 & 後連結架	832552BK	M 黑RE輪框 24.5mm (+5) (4)
110060	六角止付螺絲 M3×2.6 (10)	210063W	襯套墊片組 (白)	230151	M 前上下擺臂組		
110061	六角半圓頭螺絲 M3×14 (6)	210071	避震器筒身 (2)	230152	下擺臂座組		
110063	六角半圓頭螺絲 M2×8 (6)	210145CR	煞車卡鉗 (紅) (4)	230153	ATK V2 前輪座組 & THA 後輪座		
110081	六角沉頭螺絲 M3×14 (6)	210161	球頭螺帽 4.8 (4)	310001	內六角公球頭 4.8×4.5 (5)		

026269