
MST
max SPEED TECHNOLOGY

RRX-D VIP 2WD

1/10 SCALE RC 2WD HIGH PERFORMANCE DRIFT CAR

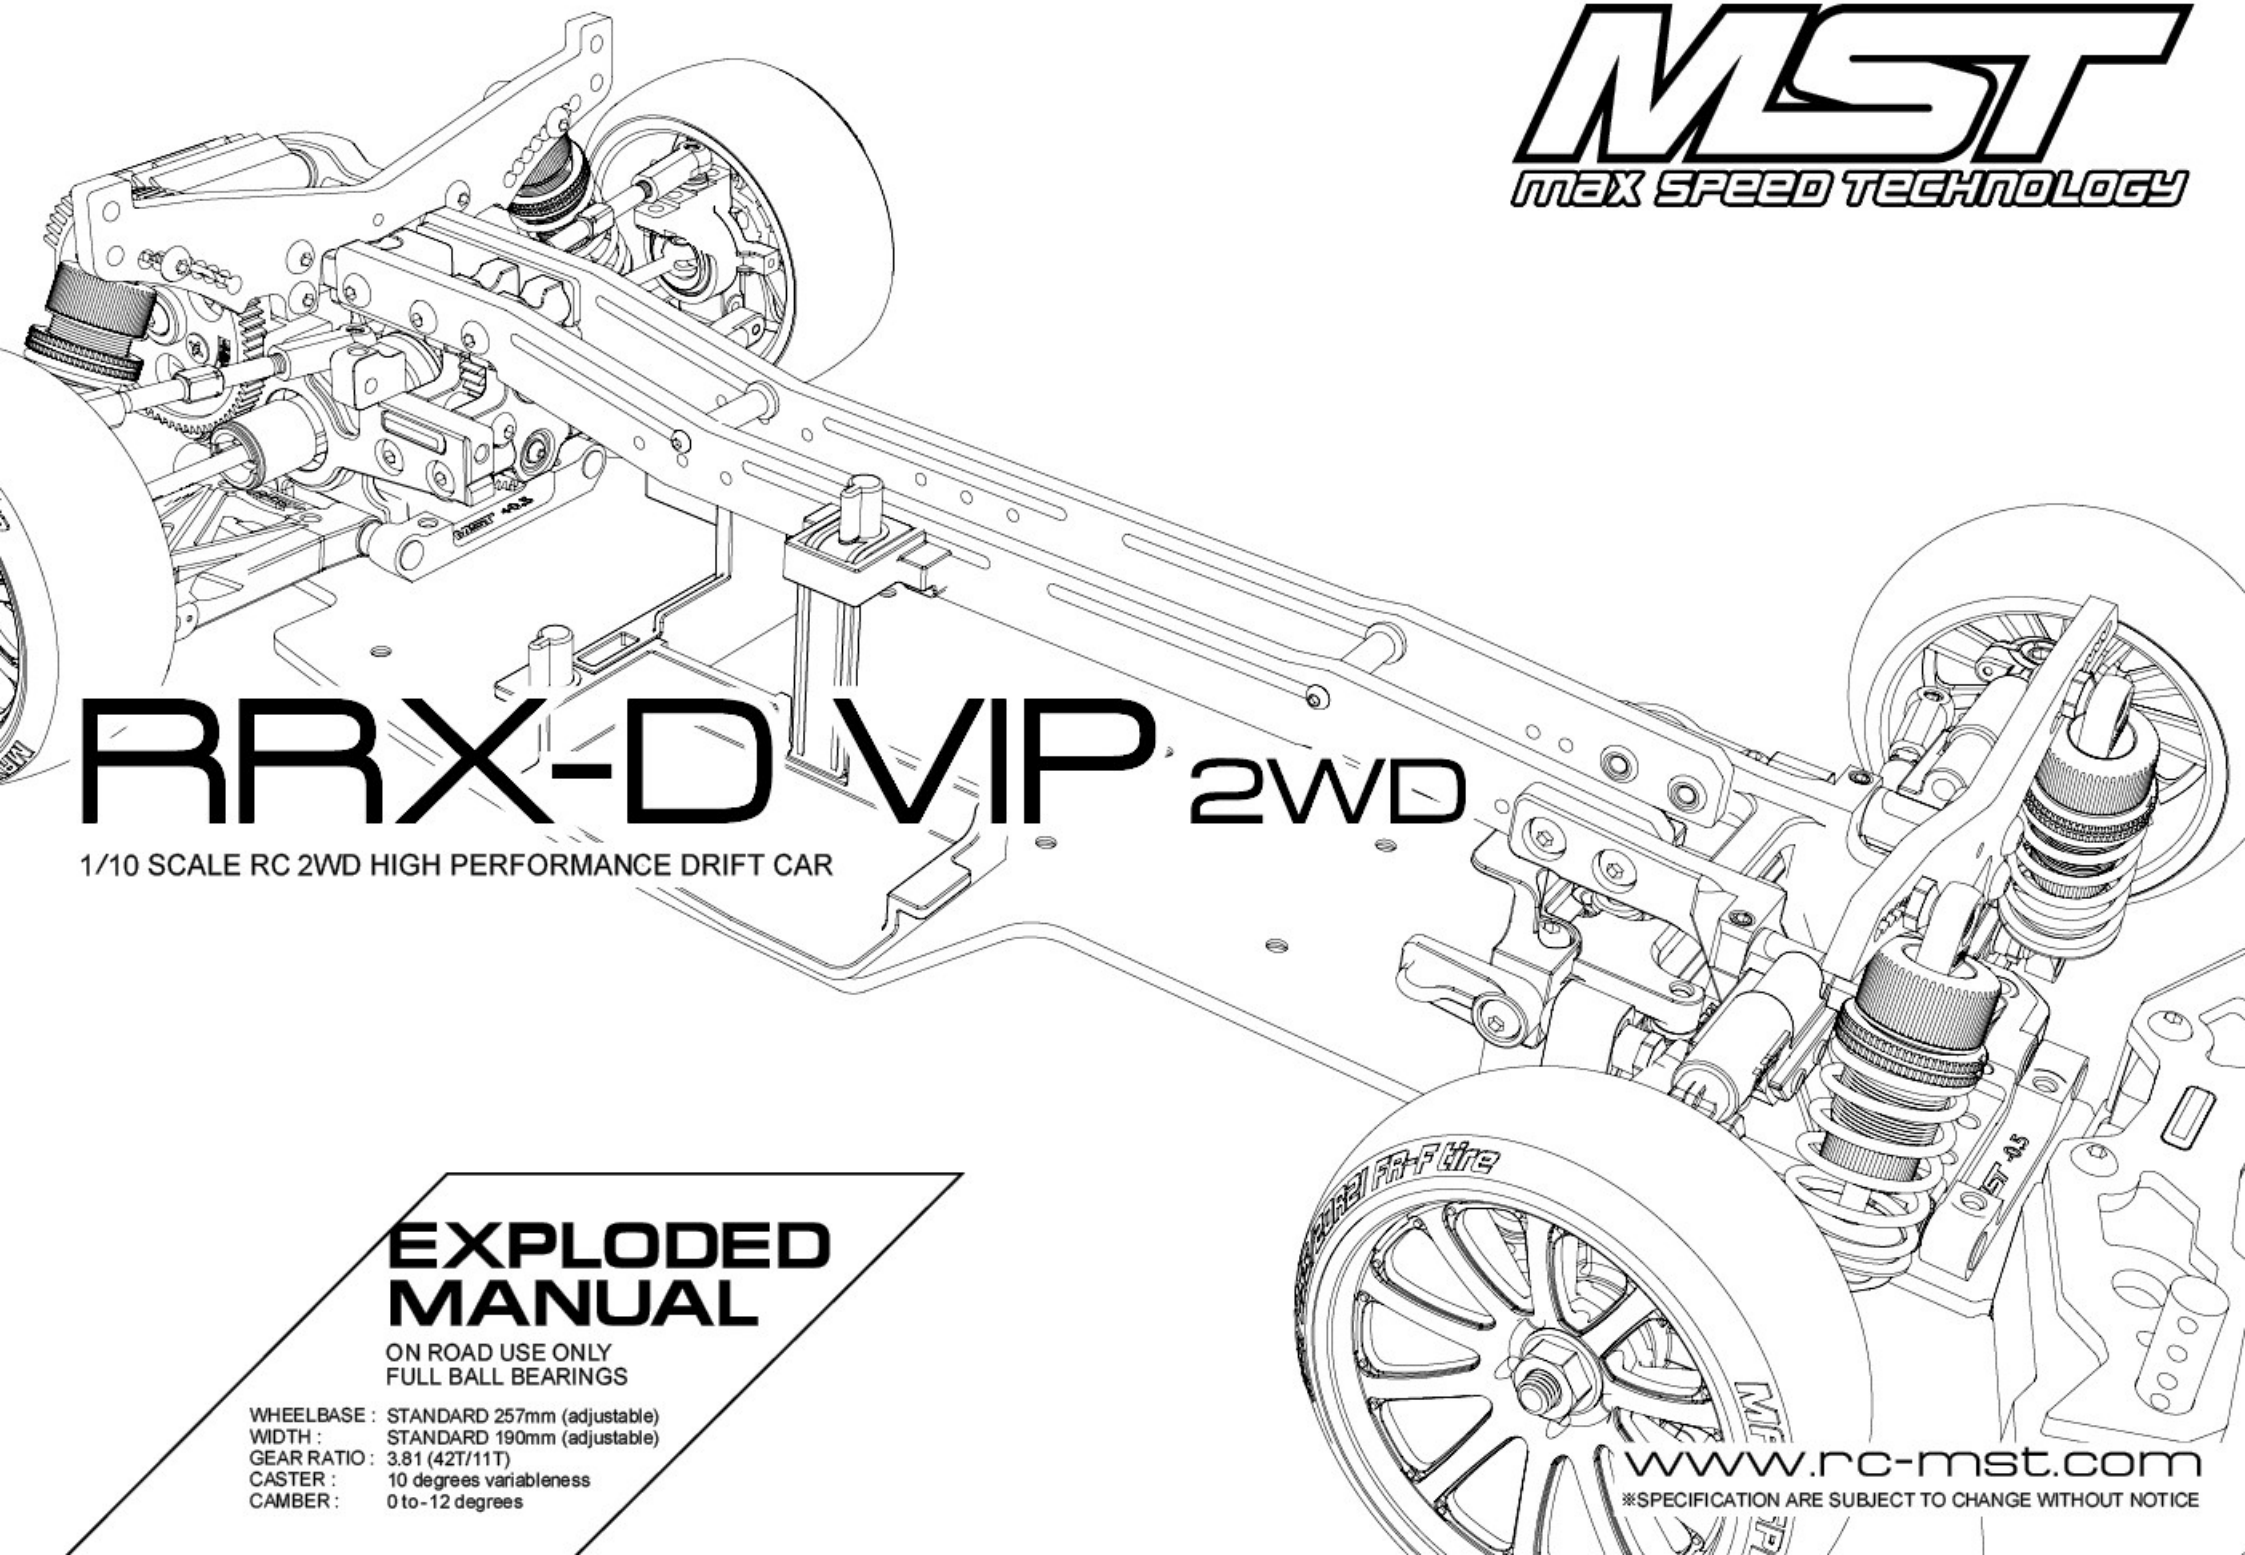

EXPLODED MANUAL

ON ROAD USE ONLY
FULL BALL BEARINGS

WHEELBASE :	STANDARD 257mm (adjustable)
WIDTH :	STANDARD 190mm (adjustable)
GEAR RATIO :	3.81 (42T/11T)
CASTER :	10 degrees variableness
CAMBER :	0 to -12 degrees

www.rc-mst.com

※SPECIFICATION ARE SUBJECT TO CHANGE WITHOUT NOTICE

RRX-D VIP 2WD


1/10 SCALE RC 2WD HIGH PERFORMANCE DRIFT CAR


EXPLODED VIEW

Please add color remark for ( ) part number.
e.g. 210123R for Red (210123)
請增加顏色標示在 ( ) 編號
例: 210123R for 紅色 (210123)


Color 顏色	Red 紅
Remark 標示	R

MST max speed technology

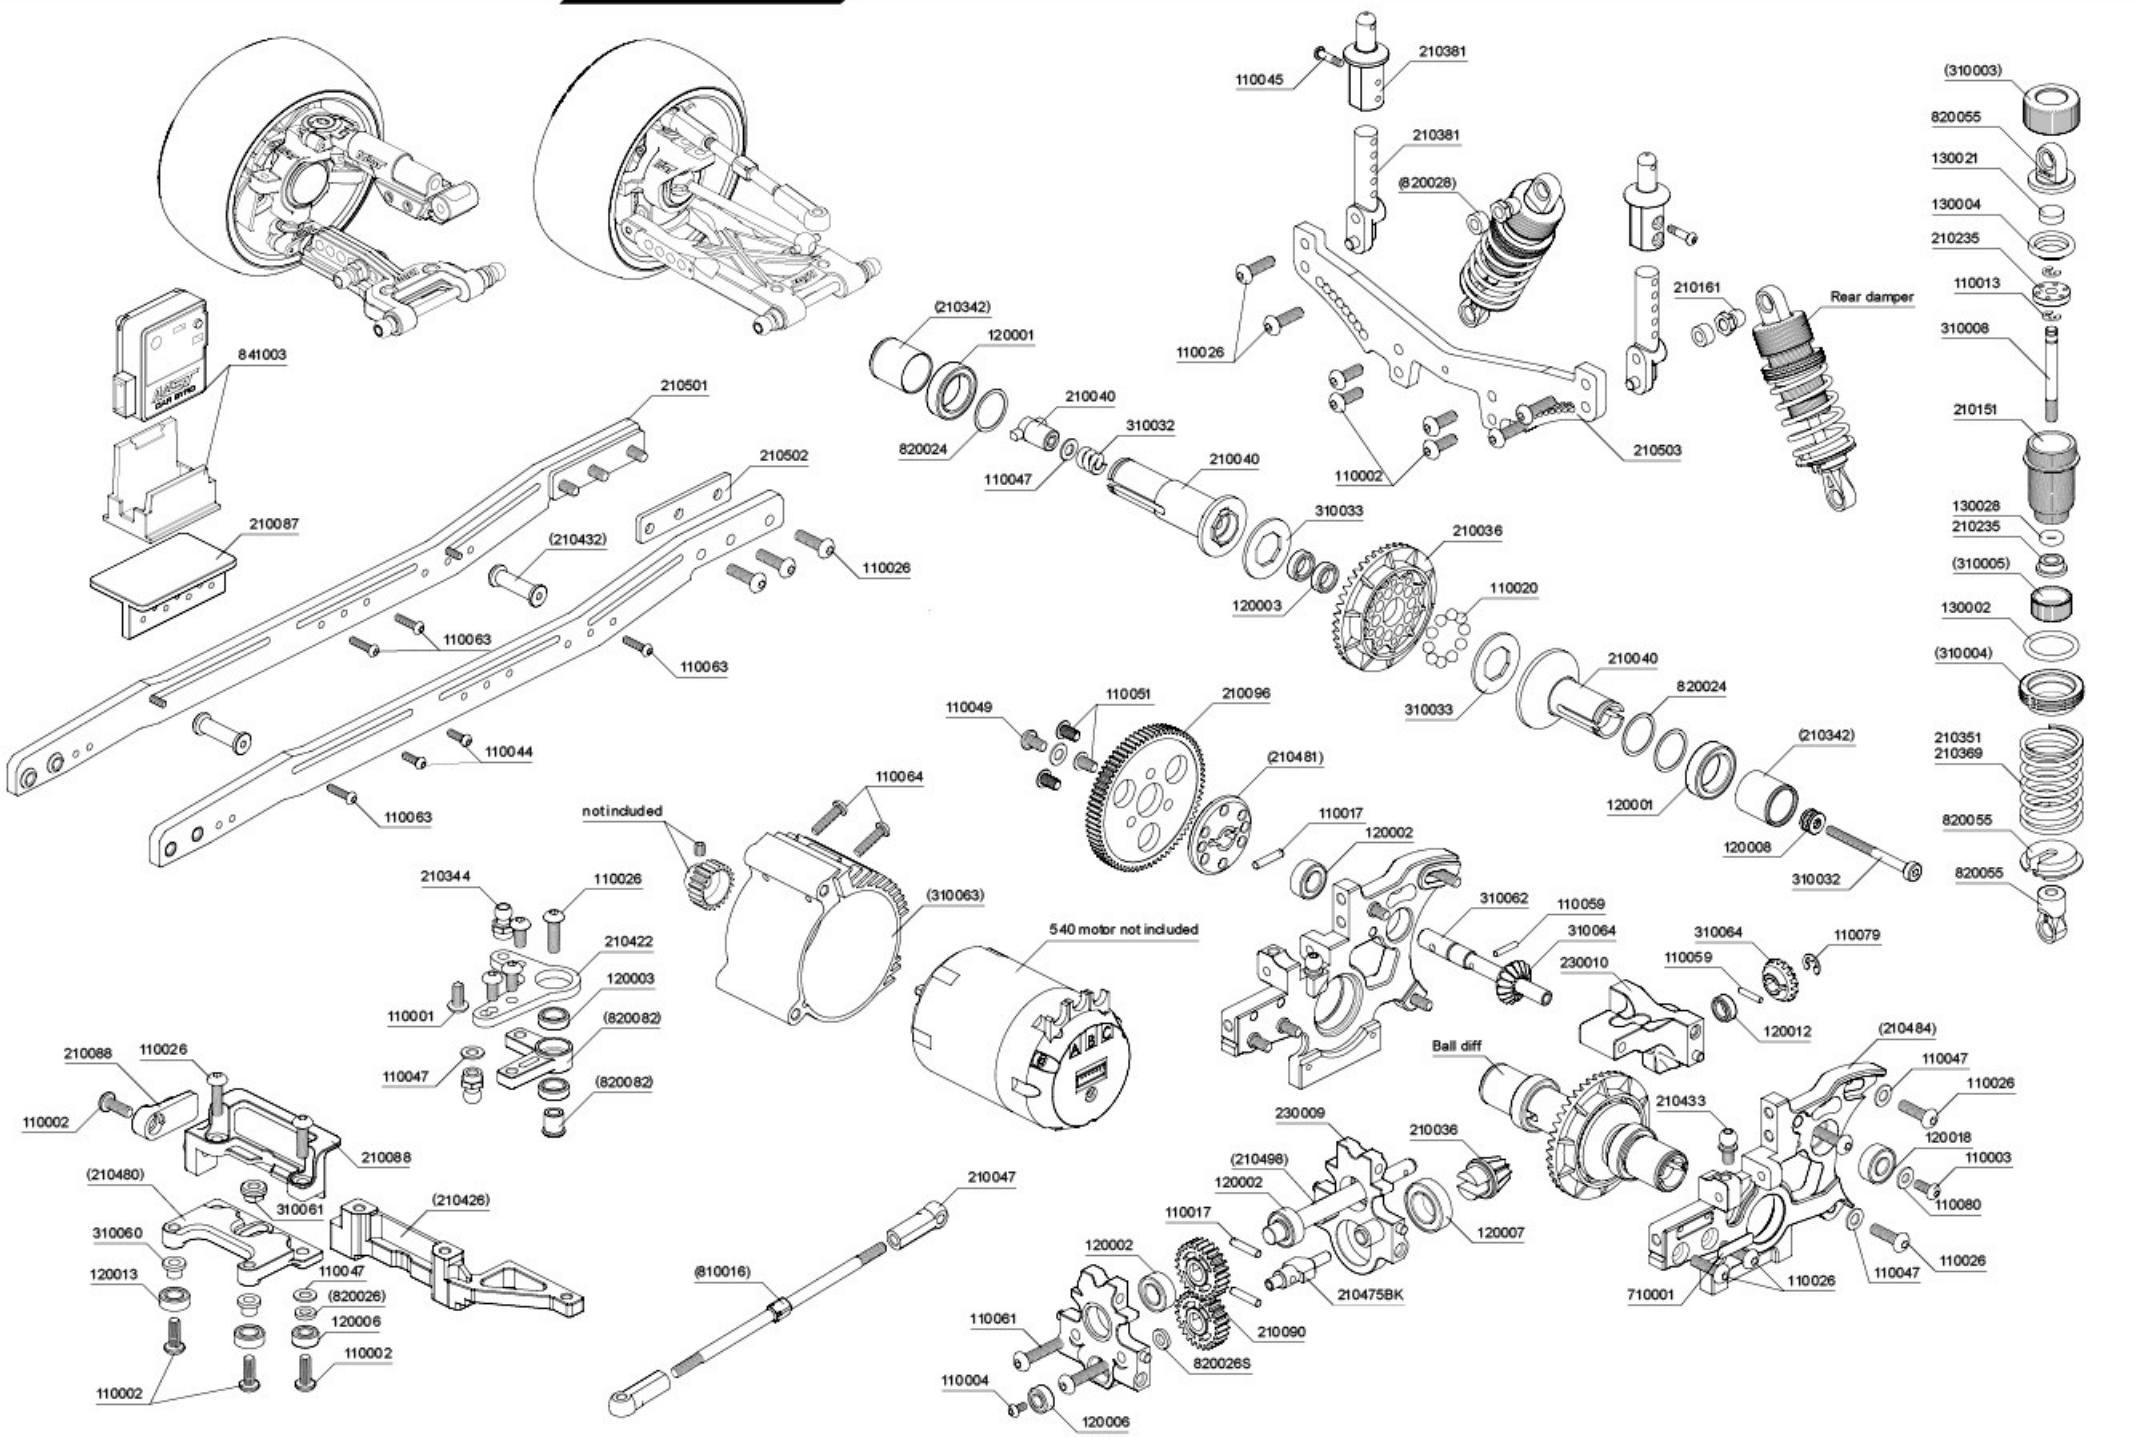


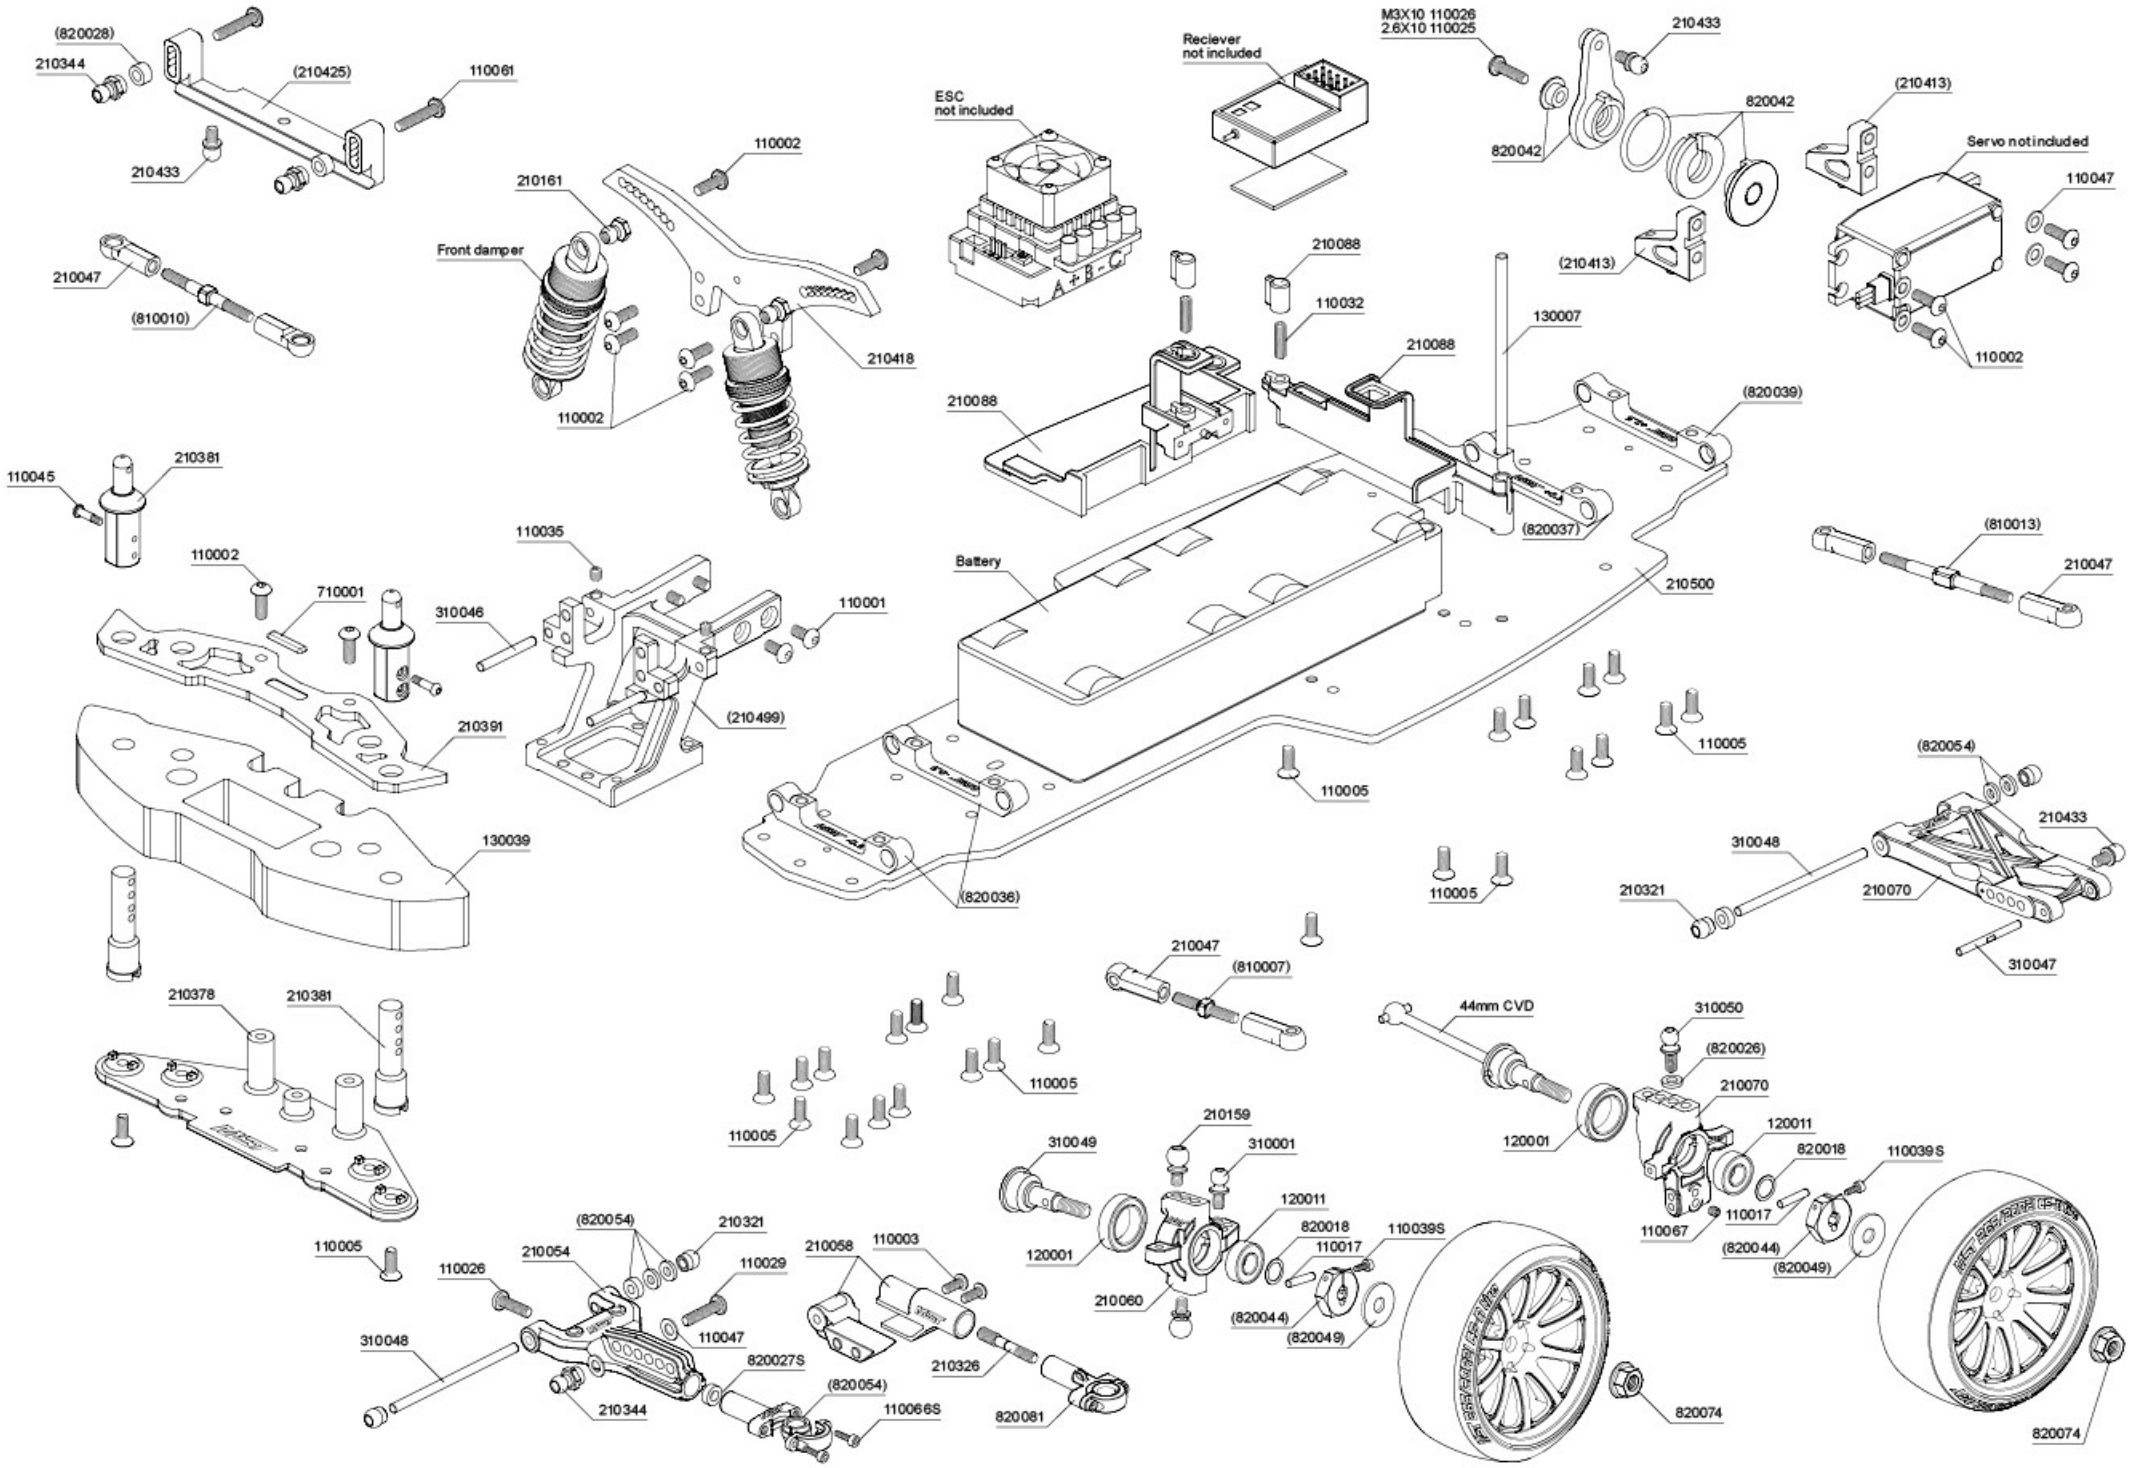

(820028)
210344
(210425)
110061
210433
210047
(810010)
210161
110002
Front damper
210418
110002
ESC
not included
Reciever
not included
M3X10 110026
2.6X10 110025
210433
820042
820042
(210413)
Servo not included
110047
(210413)
110002
210088
110032
210088
130007
210088
(820039)
(820037)
210500
(810013)
210047
110045
210381
110002
710001
310046
110035
110001
(210499)
210391
130039
Battery
110005
110005
110005
(820036)
310048
210321
(820054)
210433
210070
310047
210047
(810007)
110005
110005
210378
210381
44mm CVD
310050
(820026)
210070
120001
120011
820018
110039S
110017
110067
(820044)
(820049)
110005
210159
310001
310049
120001
120011
820018
110039S
110017
210060
(820044)
(820049)
110005
(820054)
210321
210054
110026
110029
110047
310048
820027S
(820054)
210344
110066S
210058
110003
210326
820081
820074
820074

STEP 1 Attaching Motor / Pinion Gear
安裝馬達 / 馬達齒

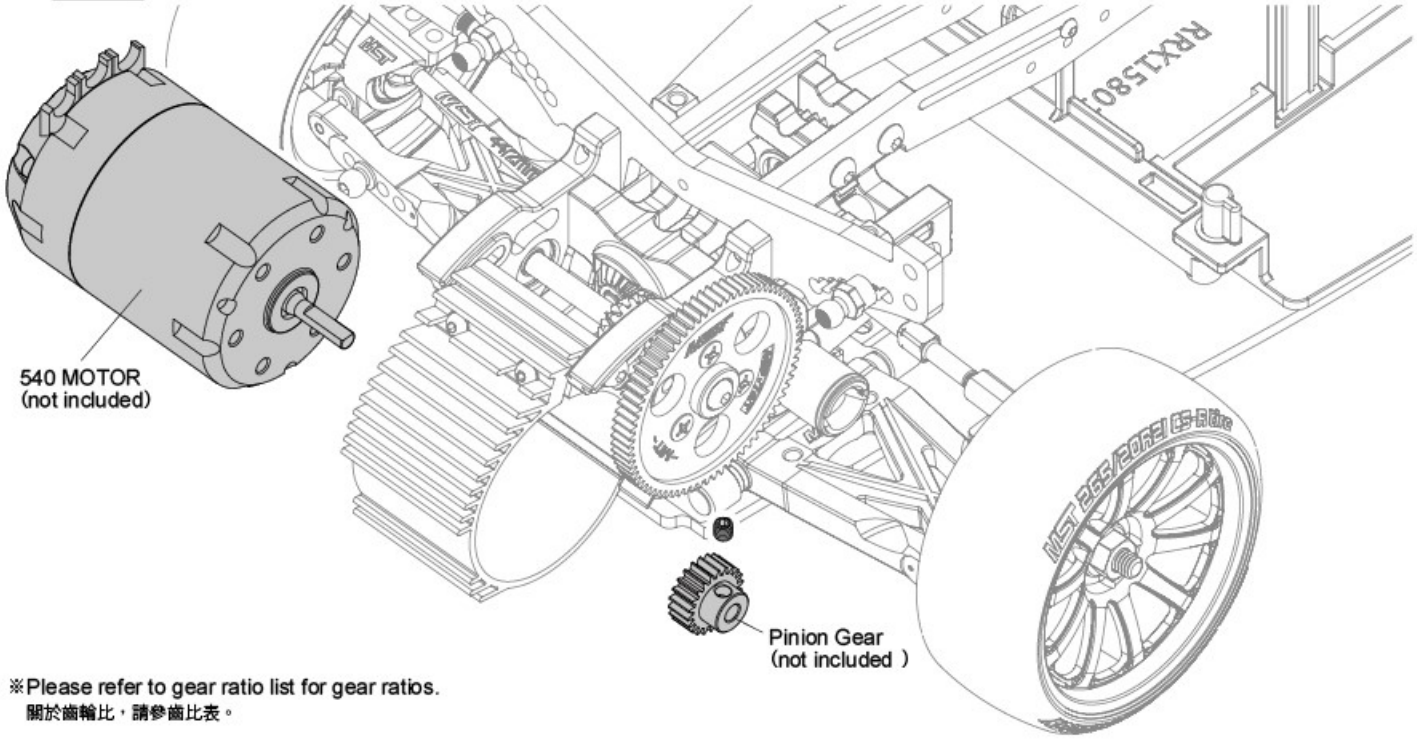



※Please refer to gear ratio list for gear ratios.
關於齒輪比，請參齒比表。

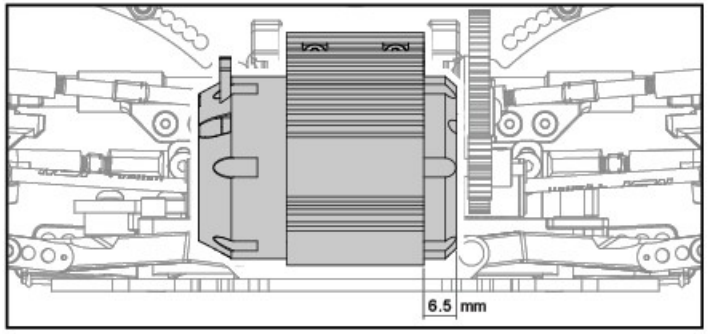


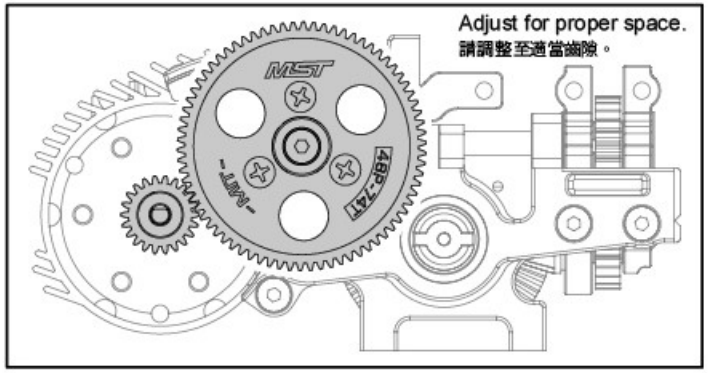


STEP 2 Attaching ESC
安裝電子變速器

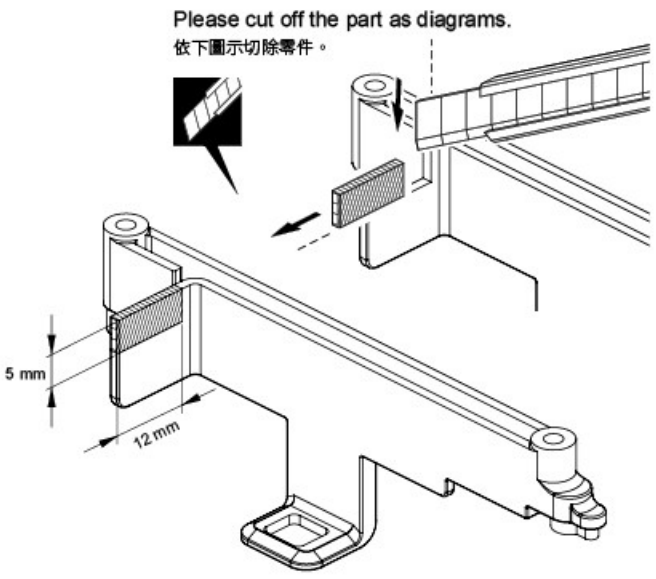


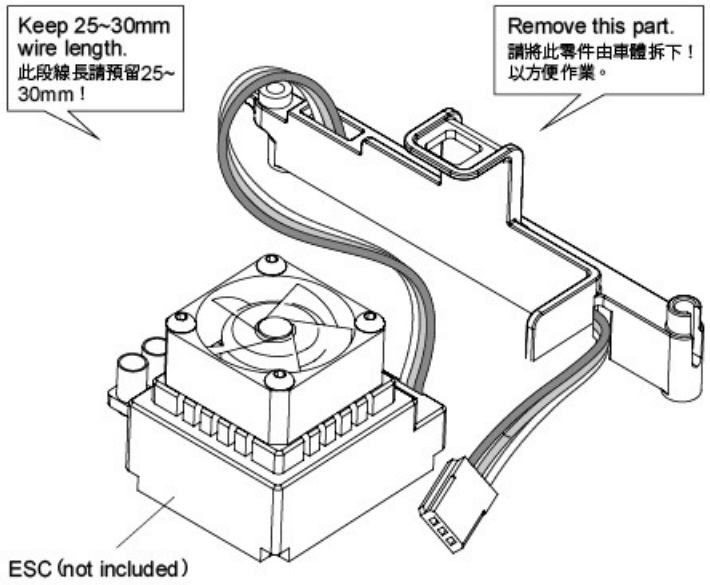

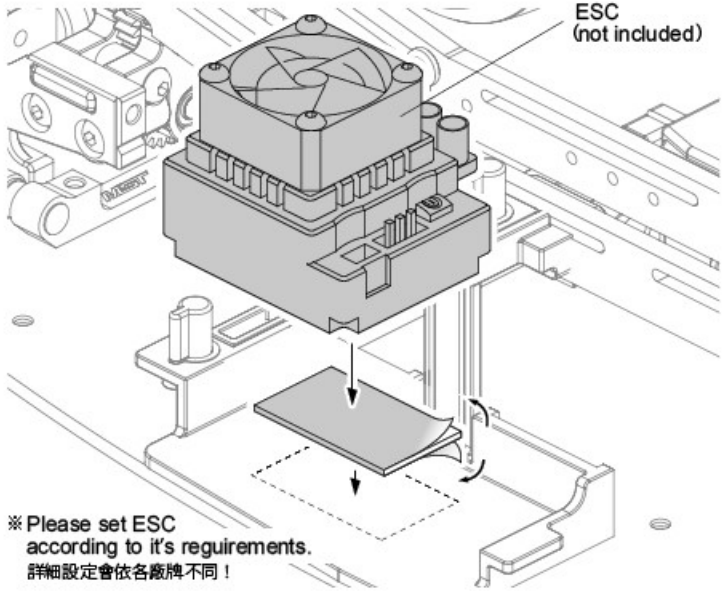


STEP 3 Attaching ESC Plate
拆裝變電托盤

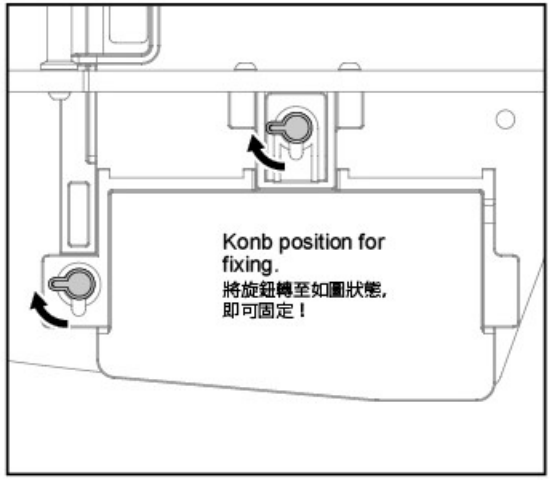

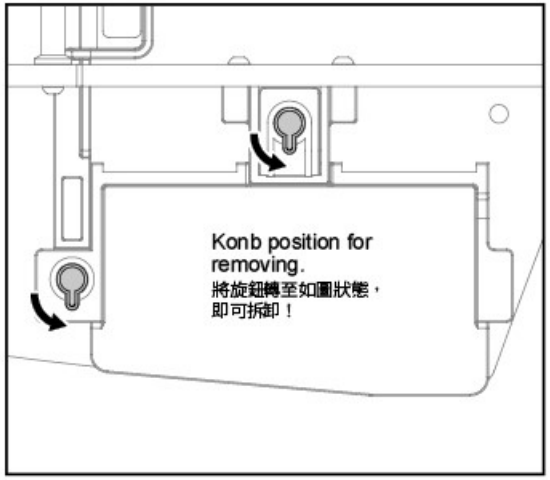



STEP 4 Attaching Receiver
安裝接收器

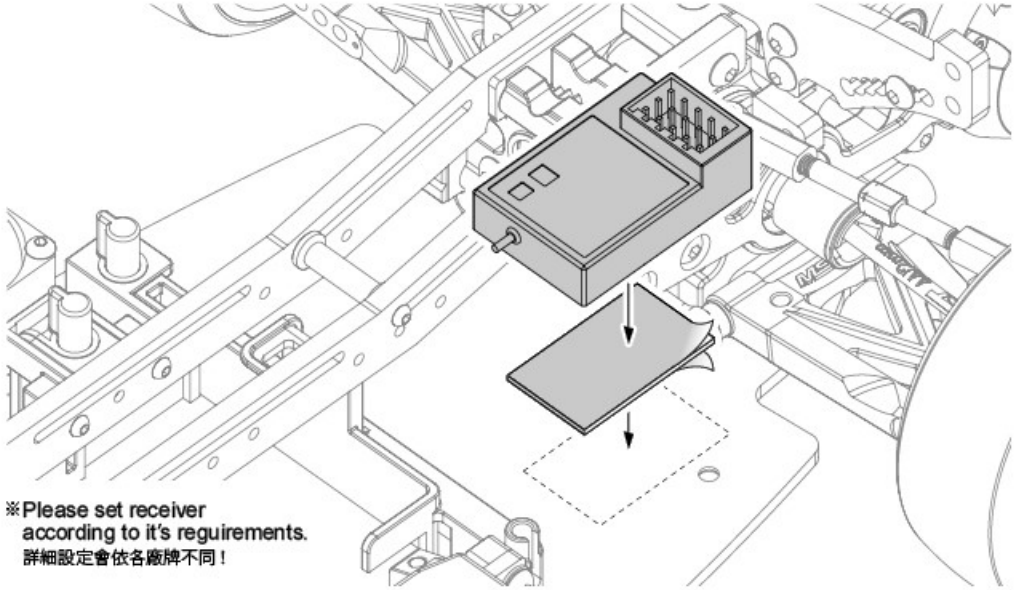

※Please set receiver according to it's reguirements.
詳細設定會依各廠牌不同！


STEP 5 Steering Servo Assembly
轉向伺服組裝

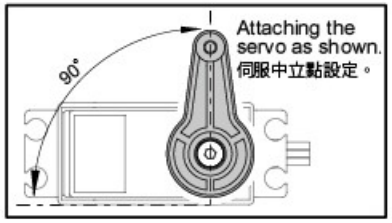


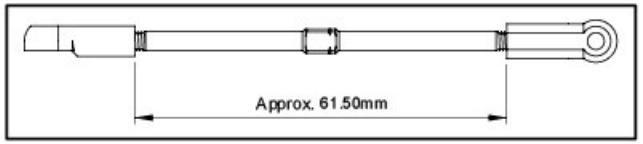

STEP 6 Attaching Gyro
安裝陀螺儀

Please cut off the part as diagrams.
依下圖示切除零件。

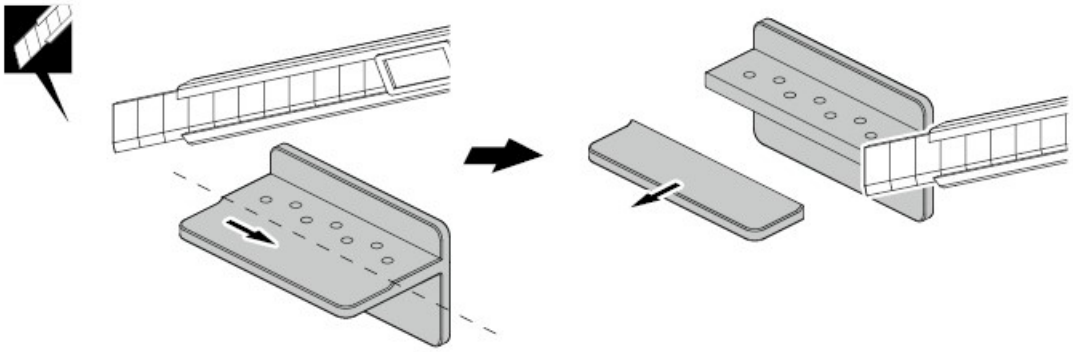


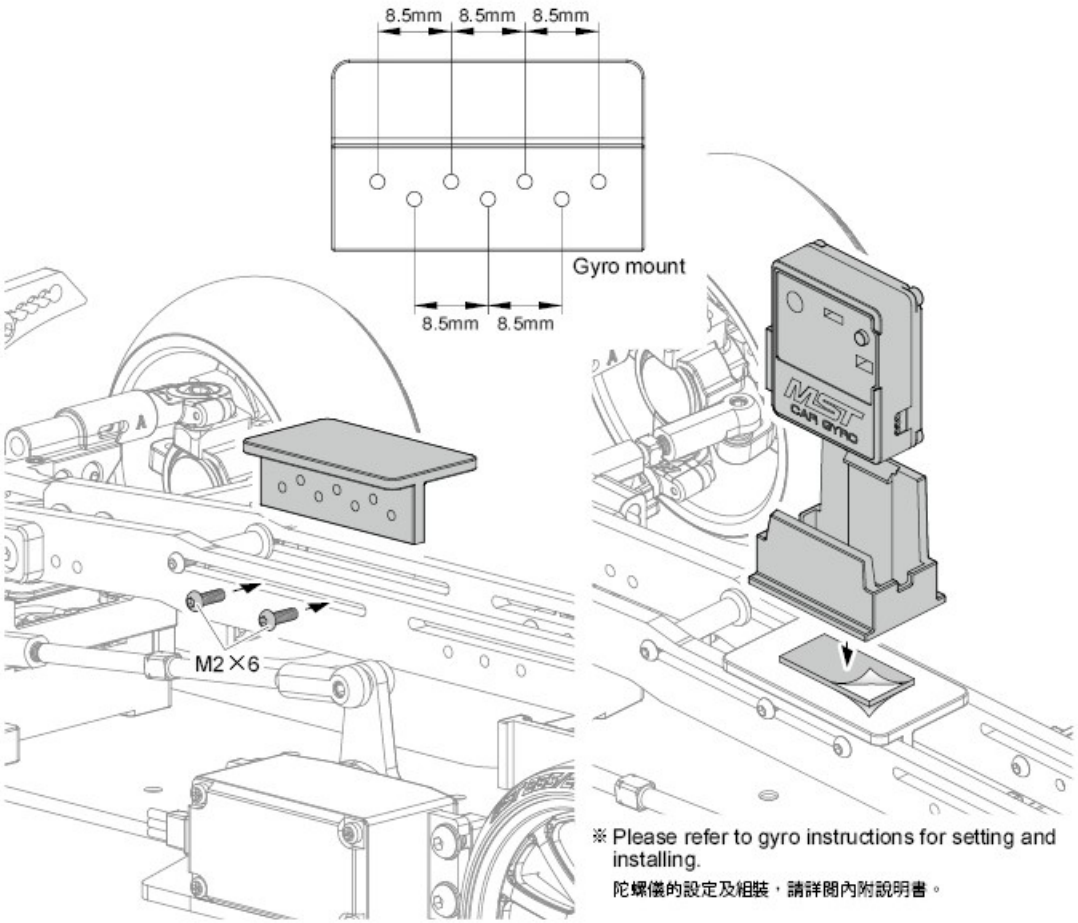


※ Please refer to gyro instructions for setting and installing.
陀螺儀的設定及組裝，請詳閱內附說明書。

STEP 7 Attaching Battery
安裝電池


※Notice the latch is in "Open" position for attaching battery.
注意，門栓位置是否位於"開"的狀態，才可安裝電池。

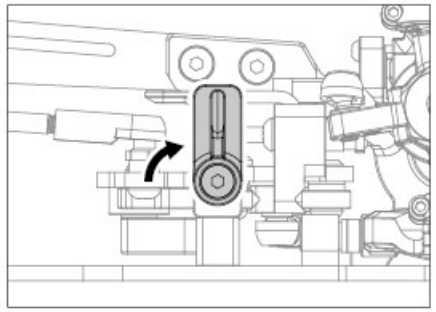

Open 開

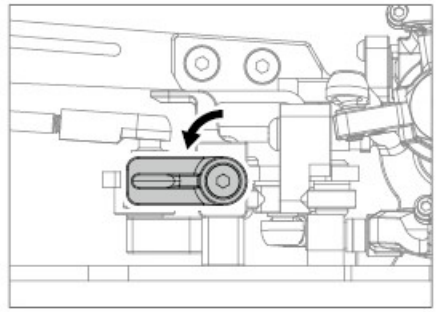


Close 關

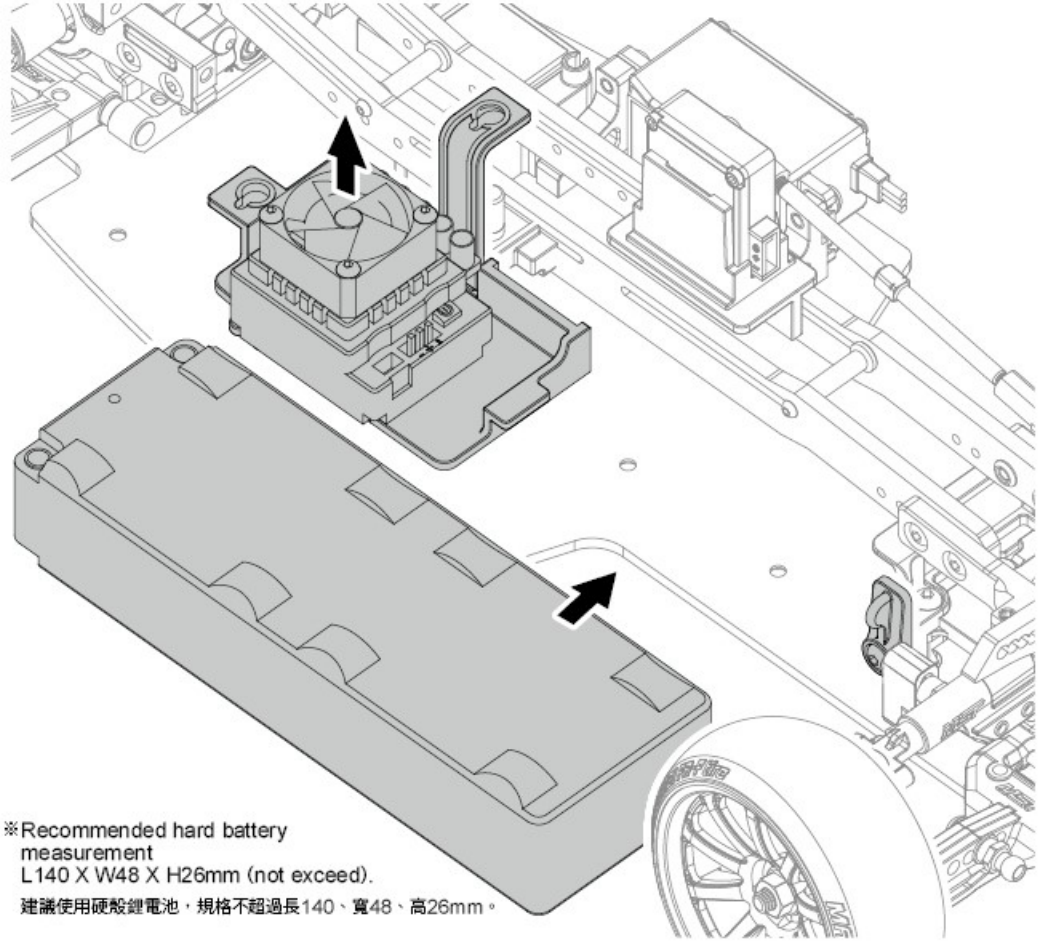



※Recommended hard battery measurement
L140 X W48 X H26mm (not exceed).
建議使用硬殼鋰電池，規格不超過長140、寬48、高26mm。


STEP 8 Damper Assembly
避震器組裝

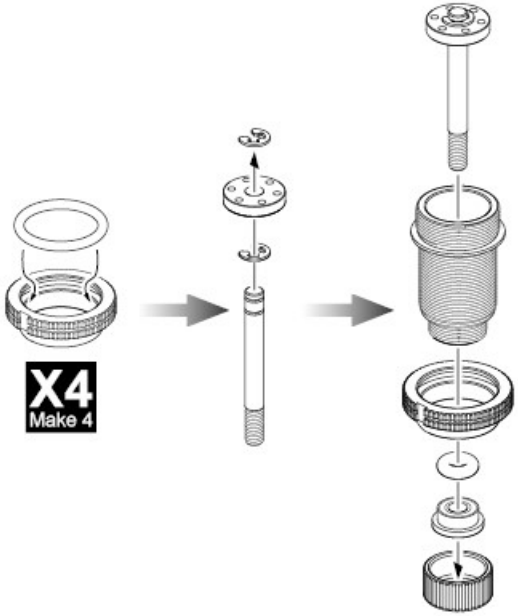



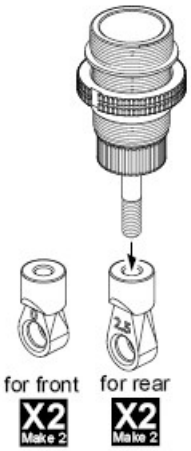

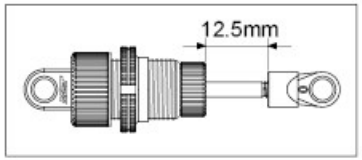


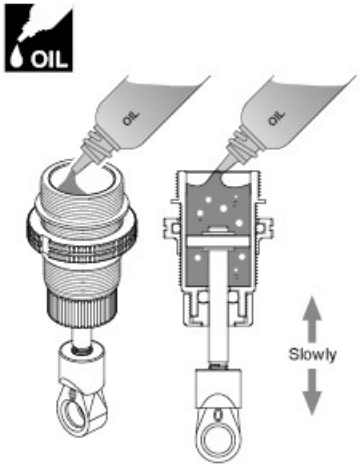

Pull down piston and pour oil into cylinder.
Remove air bubbles by slowly moving piston up and down.


拉下活塞並填入矽油，緩慢上下移動活塞將氣泡移除。




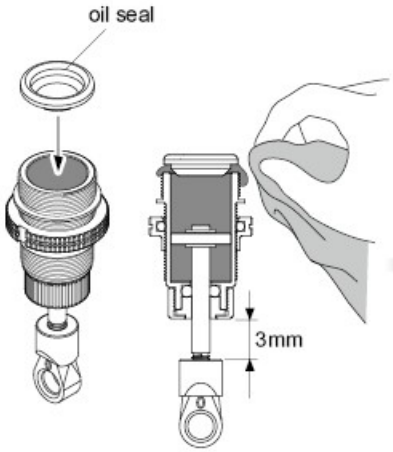


Pull down piston rod 3mm, attach oil seal and absorb oil overflow with tissue paper.

將軸心下拉 3mm 後，蓋上氣室並以面紙拭去溢出的矽油。

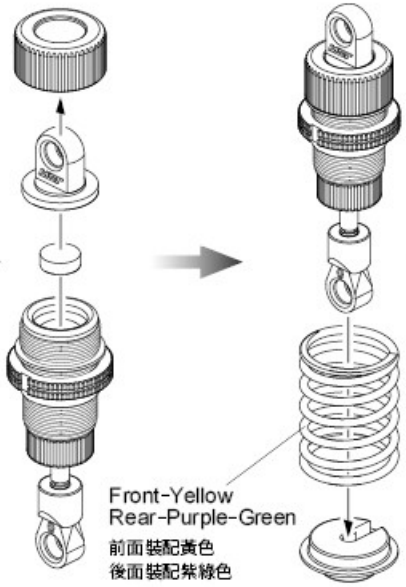


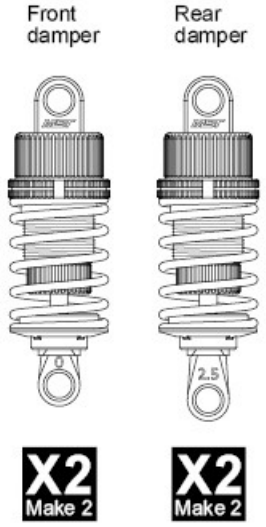


Attaching Front Damper
安裝前避震器

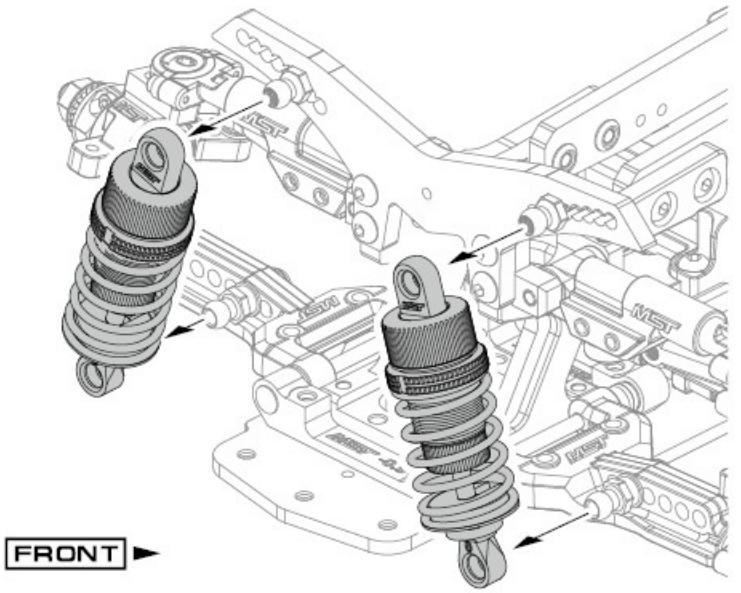


Attaching Rear Damper
安裝後避震器

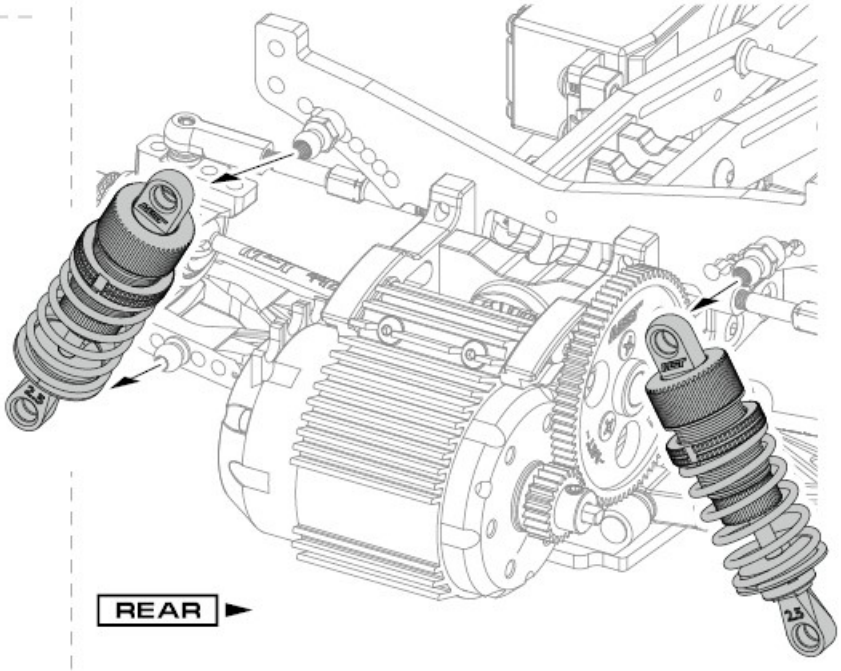


STEP 9 Front Bumper Assembly
前防撞板組裝

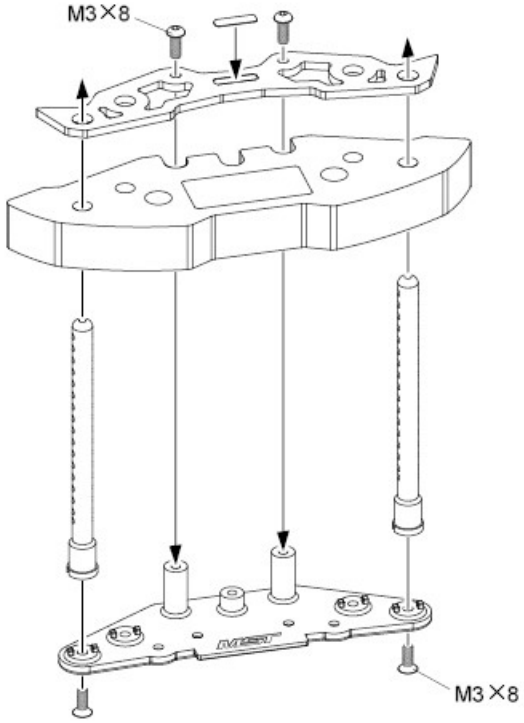


Attaching Bumper
安裝防撞板

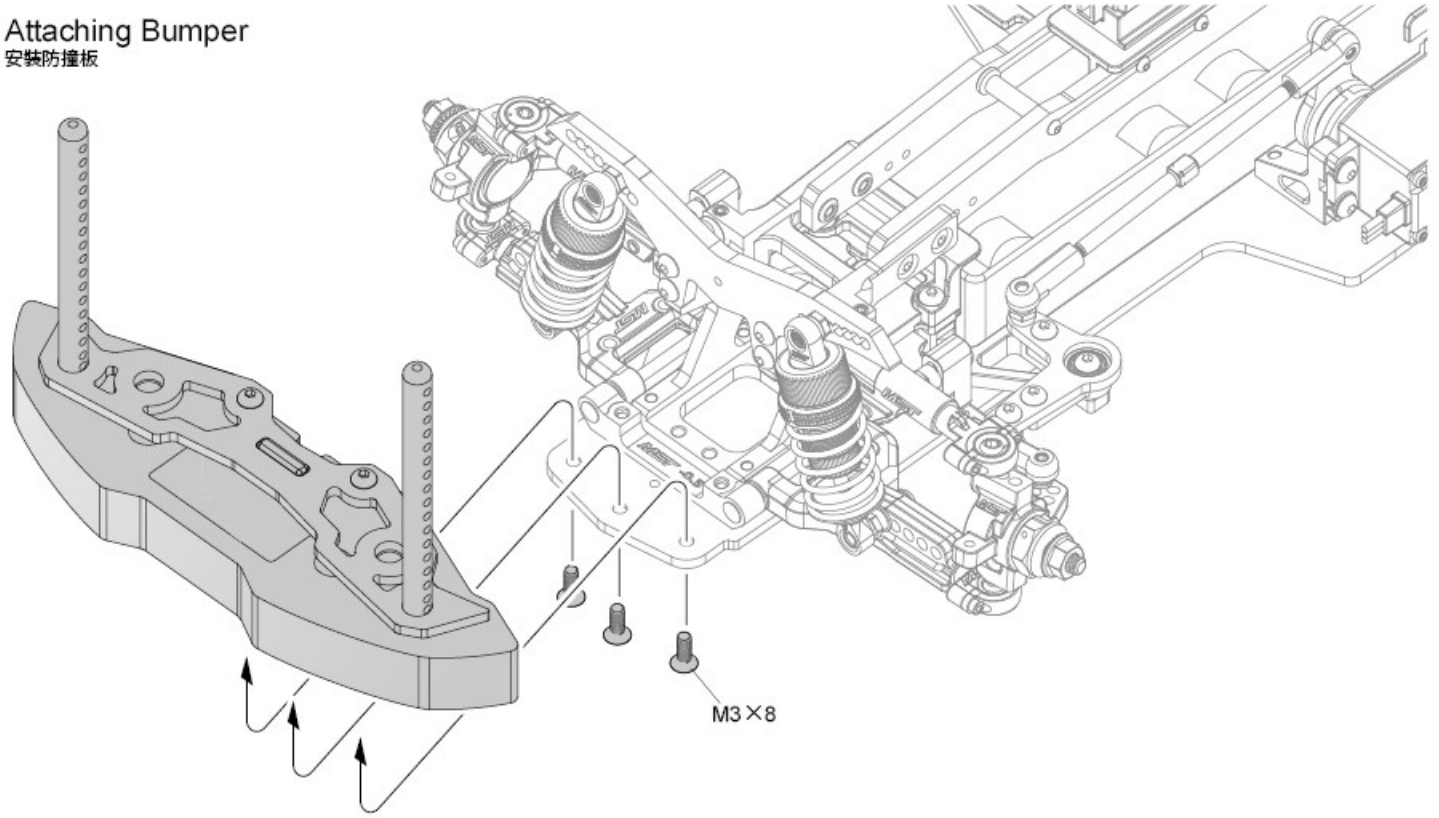


STEP 10 Attaching Tire
安裝車輪

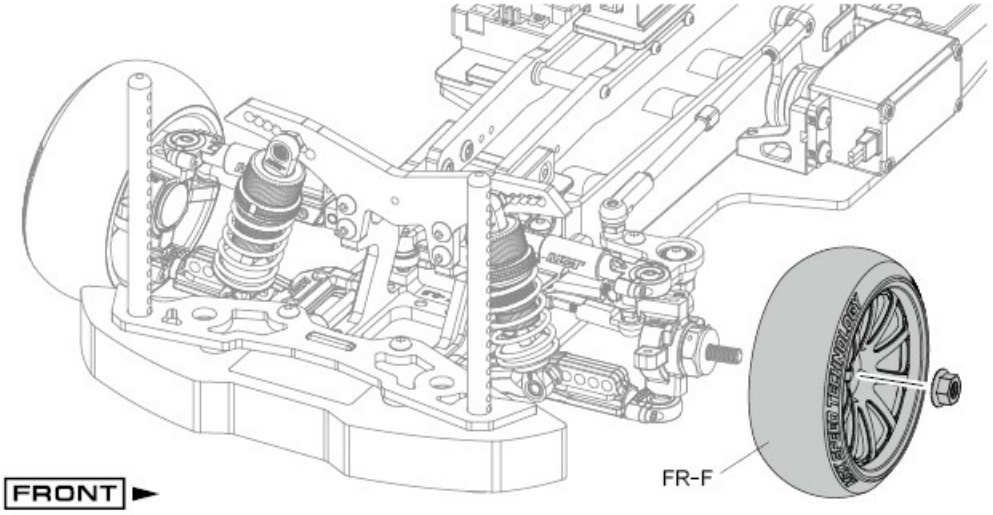


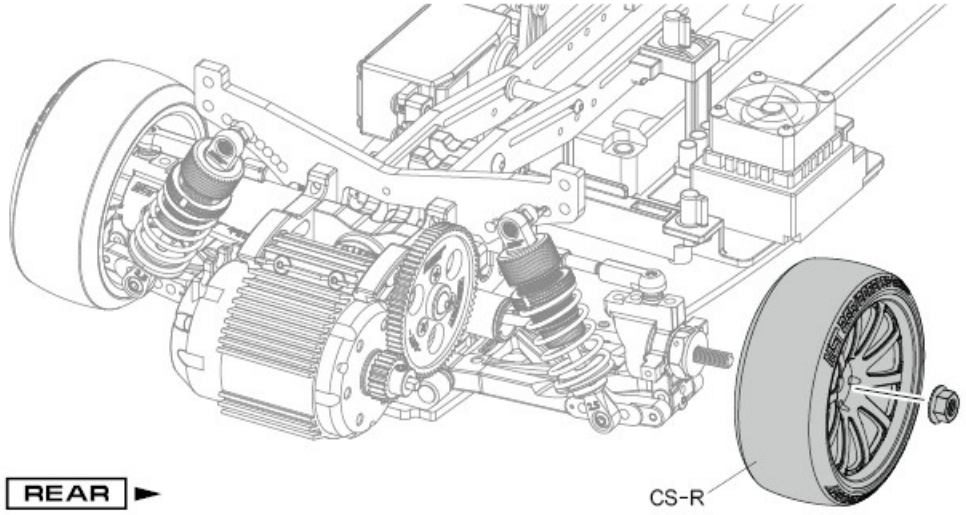

STEP 11 Attaching Rear Body Post
安裝後車殼支柱

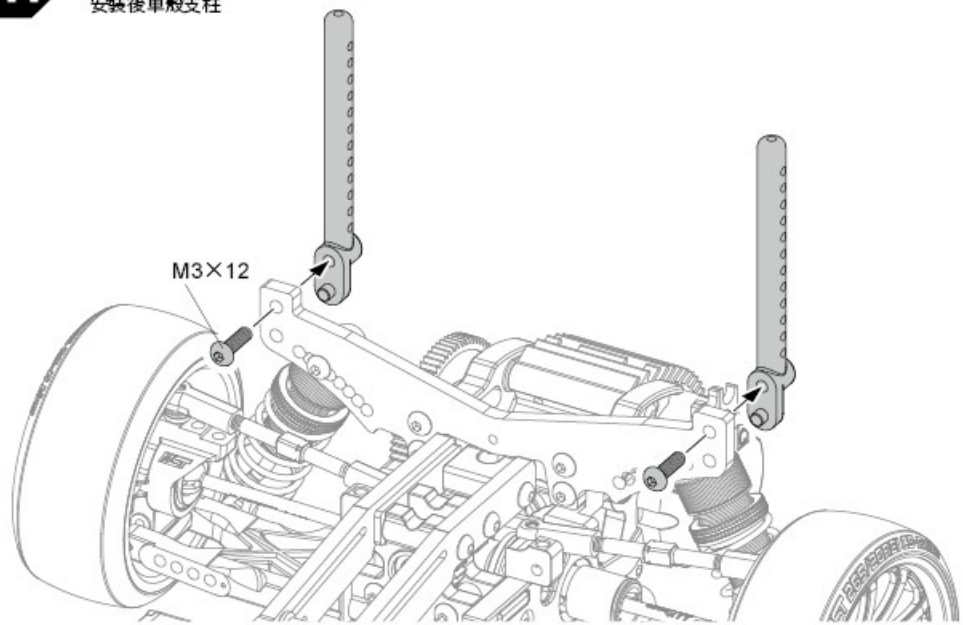


STEP 13 Attaching antenna pipe
安裝天線管

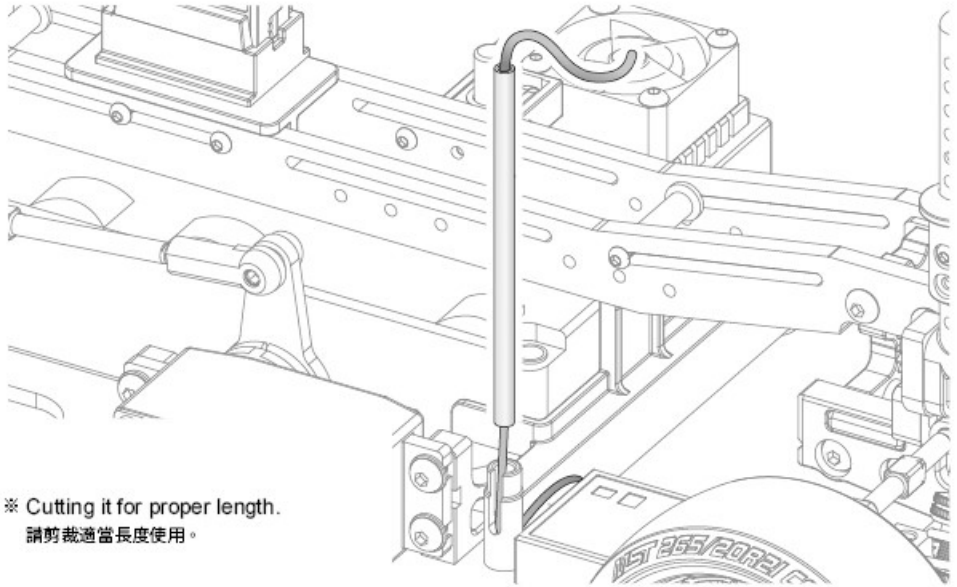

※ Cutting it for proper length.
請剪裁適當長度使用。


STEP 12 Attaching Body Mounts
安裝車殼固定座

※ Please set the body mounts according to the car body.
請依車殼高度安裝車殼固定座。

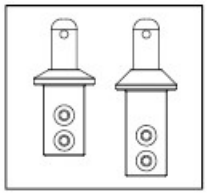

REAR ►

◄ FRONT

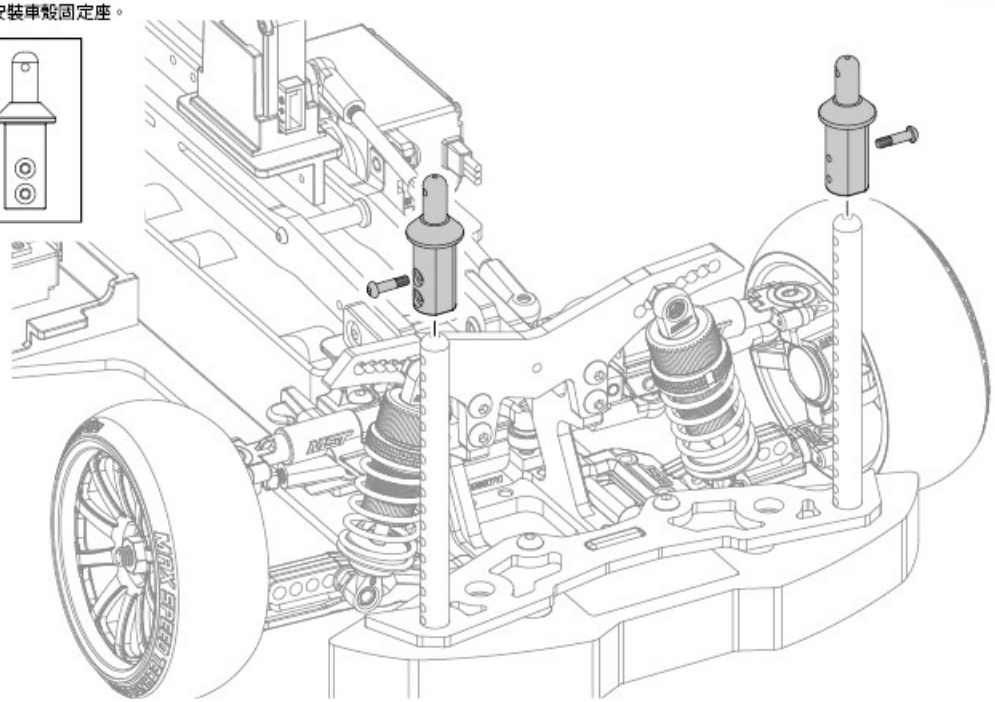

PARTS



M2×4 Screw ×1
圓頭螺絲
110004



M2×6 Screw ×2
圓頭螺絲
110044



M2×8 Screw ×6
圓頭螺絲
110063



M2.5×6 Screw ×5
圓頭螺絲
110003



M2.5×10 Screw ×2
圓頭螺絲
110064



M3×5 Screw ×1
圓頭螺絲
110049



M3×6 Screw ×8
圓頭螺絲
110001



M3×8 Screw ×20
圓頭螺絲
110002



M3×10 Screw ×26
圓頭螺絲
110026




M3×12 Screw ×2
圓頭螺絲
110029




M3×14 Screw ×4
圓頭螺絲
110061




M2.5×10 Screw ×1
自攻螺絲
110025




M2×8 Screw ×4
圓頭螺絲(半牙)
110045



M1.6×4 Screw ×4
有頭螺絲
110039S



M1.6×6 Screw ×8
有頭螺絲
110086S



M3×8 Screw ×27
沉頭螺絲
110005



M3×5 Screw ×3
十字螺絲
110051



M2.5×2.5 Screw ×2
止付螺絲
110087



M3×3 Screw ×3
止付螺絲
110035




M3×10 Screw ×2
止付螺絲
110032



4.8×4.5 S Ball connector ×6
球頭螺絲
210433




4.8×4.5 Ball connector ×2
球頭螺絲
310001



4.8×6 Ball connector ×2
內六角公球頭
310050



5.8×4 Ball connector ×4
球頭螺絲
210159



4.8 Ball connector nut ×4
外六角球頭
210161



4.8 Ball connector nut L ×6
外六角球頭(長)
210344



2.5×5 Suspension balls ×8
插銷球頭
210321



3×4×1 Bearing bush ×2
培林襯套
310060



Universal adjusting mount ×1
通用型調整座
310061



3×5.5×1.0 Alum. spacer ×4
鋁墊片
(820026)



3×5.5×2.0 Alum. spacer ×2
鋁墊片
(820027)



3×5.5×3.0 Alum. spacer ×4
鋁墊片
(820028)



5×7×0.1 Spacer ×4
墊片
820018



10×12×0.3 Spacer ×3
墊片
820024




2.6×5.8×0.6 Spacer ×1
墊片
110080




3×6×0.5 Spacer ×18
墊片
110047



3×3.5×20
Steel turnbuckle ×2
鋼製可調螺桿
210326



FSX Alum. quick-release drive gear shaft
FSX 鋁合金驅動齒軸(快拆)
210475BK



2WD Axle ×2
二驅輪軸
310049

Steel ball 3.0 ×10
差速鋼珠 3.0
110020

E-clip 2.5 ×1
E扣2.5
110079

Cross joint ×2
連接軸
820030

1.5×7.8 Shaft ×2
插銷
110059

Wheel nut M4 ×4
輪框螺帽 M4
820074

R-clip 5.0 (black) ×4
R形扣 5.0 (黑)
820075BK

2.5×6 Thrust bearing ×1
止推培林
120008

Alum. joint ring ×2
鋁合金接杯環
(210342)

2.0×22 Arm shaft ×2
擺臂插銷
310047

2×9.8 Shaft ×9
插銷
110017

2.5×20 Arm shaft ×2
擺臂插銷
310046

2.5×46 Arm shaft ×4
擺臂插銷
310048

Diff. screw & spring set
滾差彈簧螺絲組
310032

FSX Main shaft
FSX 主齒軸
310062

3×7 Ball bearing ×2
培林
120006

4×7 Ball bearing ×1
培林
120012

5×8 Ball bearing ×4
培林
120003

4×8×3 Ball bearing ×2
培林
120013

4×10×4 Ball bearing ×1
培林
120018


5×10 Ball bearing ×3
培林
120002

5×11 Ball bearing ×4
培林
120011


8×14×4 Ball bearing ×1
培林
120007

10×15 Ball bearing ×6
培林
120001


Diff. plate ×2
滾差墊板
310033

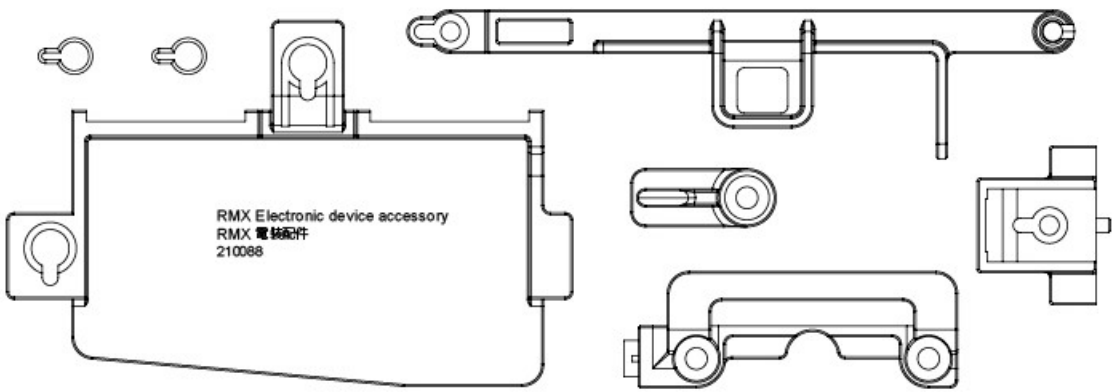


RMX Electronic device accessory
RMX 電裝配件
210088

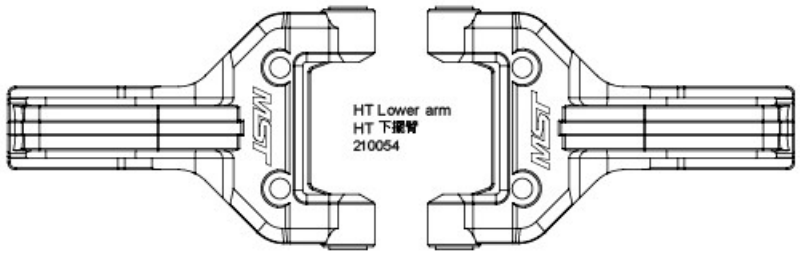


HT Lower arm
HT 下擺臂
210054

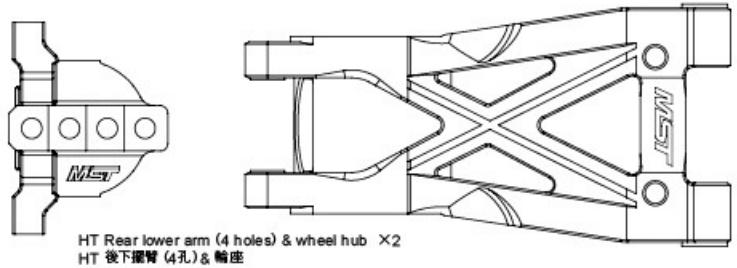


HT Rear lower arm (4 holes) & wheel hub ×2
HT 後下擺臂 (4孔) & 輪座
210070

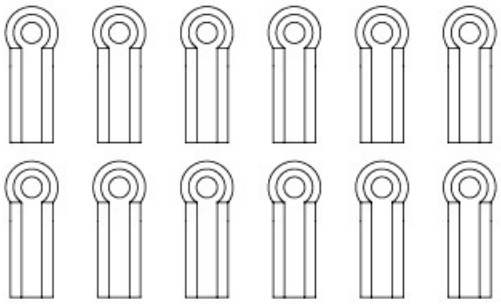


4.8×18 Reinforced adjuster set
強化拉桿頭組
210047

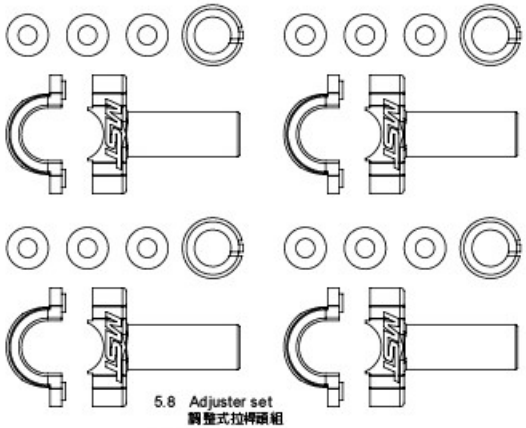

5.8 Adjuster set
調整式拉桿頭組
820081

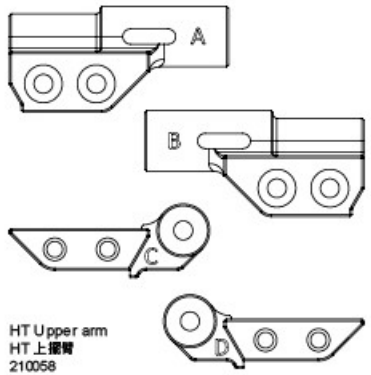


HT Upper arm
HT 上擺臂
210058

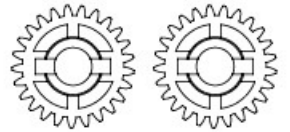


Idler gear M0.6 25T
惰輪 M0.6 25T
210090




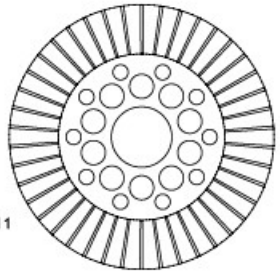


Bevel gear set 42-11
傘齒組 42-11
210036

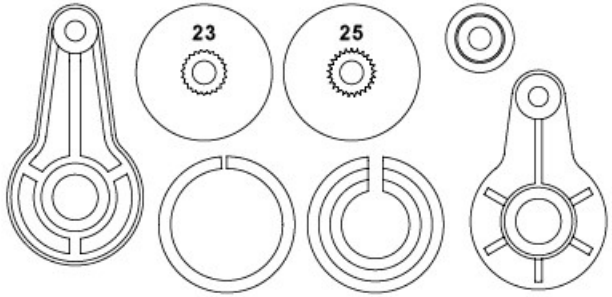


Universal servo saver set
通用型伺服器護組
820042

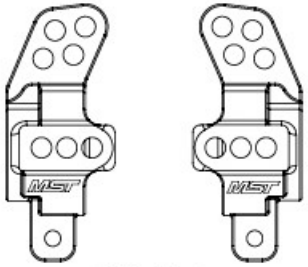

KPI Upright set
KPI 輪座組
210060

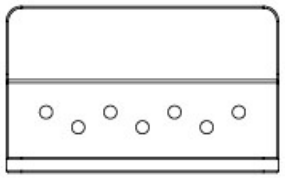


Gyro mount
陀螺儀座
210087




Bevel gear 16T
傘齒16T
310064


PARTS



3×20 Alum. reinforced turnbuckle
鋁合金強化可調拉桿
(810007)




3×32 Alum. reinforced turnbuckle
鋁合金強化可調拉桿
(810010)



3×44
Alum. reinforced turnbuckle
鋁合金強化可調拉桿
(810013)



3×76 Alum. turnbuckle
鋁製可調拉桿
(810016)

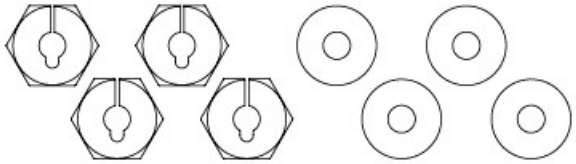

4mm Alum. hex. wheel hubs
鋁合金六角輪座
(820044)

Wheel hub spacer 1.0
輪座墊片 1.0
(820049)



Alum. suspension mount (-0.5) ×2
鋁合金擺臂座 (-0.5)
(820036)




Alum. suspension mount (+0.5)
鋁合金擺臂座 (+0.5)
(820037)




Alum. suspension mount (+2.5)
鋁合金擺臂座 (+2.5)
(820039)




RRX Alum. rear drive shaft
RRX 鋁合金後傳軸
(210498)

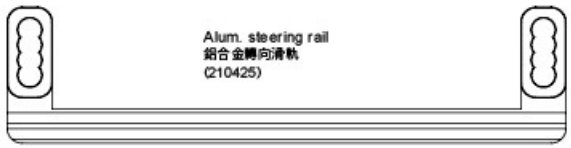


Alum. steering rail
鋁合金轉向滑軌
(210425)

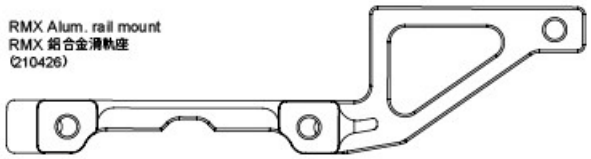


RMX Alum. rail mount
RMX 鋁合金滑軌座
(210426)

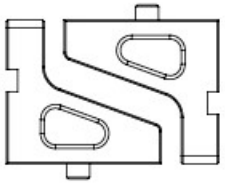


Alum. servo mount
鋁合金伺服機座
(210413)

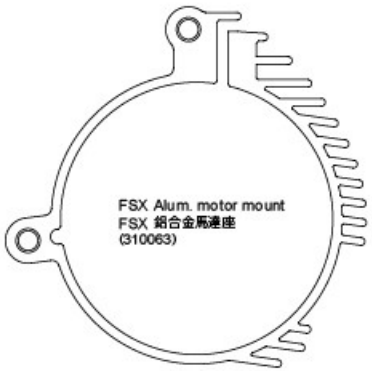


FSX Alum. motor mount
FSX 鋁合金馬達座
(310063)

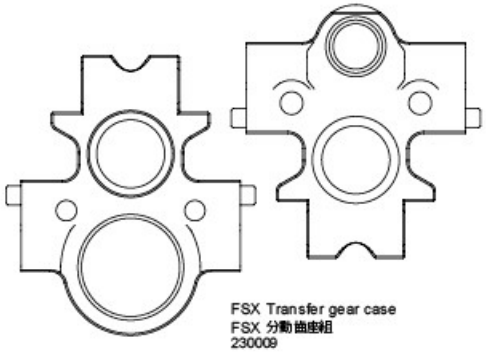


FSX Transfer gear case
FSX 分動齒座組
230009

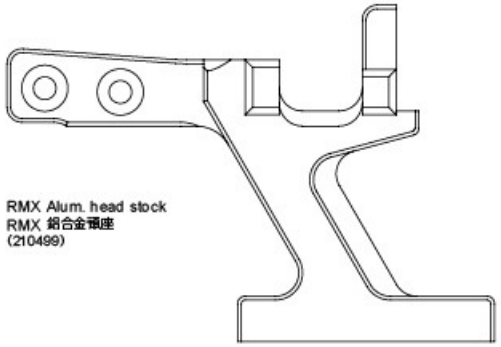


RMX Alum. head stock
RMX 鋁合金頭座
(210499)

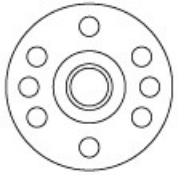


FSX Alum. spur gear holder
FSX 鋁合金大齒盤座
(210481)



RMX Alum. strengthen post ×2
鋁合金補強柱
(210432)

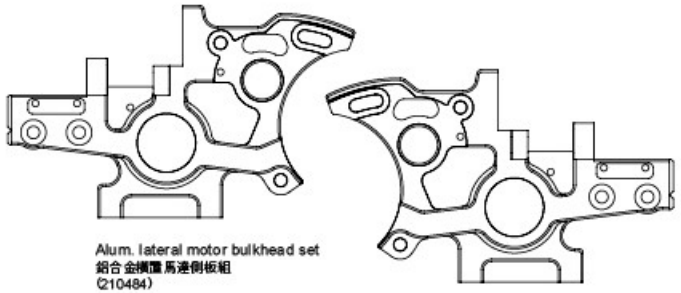

Alum. lateral motor bulkhead set
鋁合金橫置馬達側板組
(210484)




Wheel axle
萬向接杆
310006




44 Steel CVD great angle universal shaft
鋼製大角度CVD傳動軸 44
820005



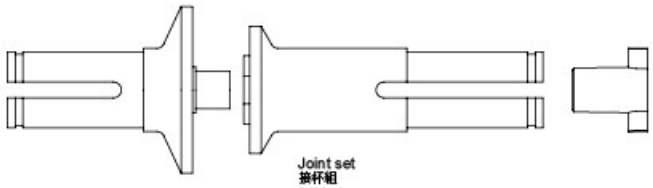


Joint set
接杆組
210040

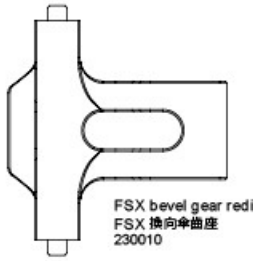

FSX bevel gear redirected mount
FSX 換向傘齒座
230010




Alum. arm set
鋁合金搖臂組
(820082)

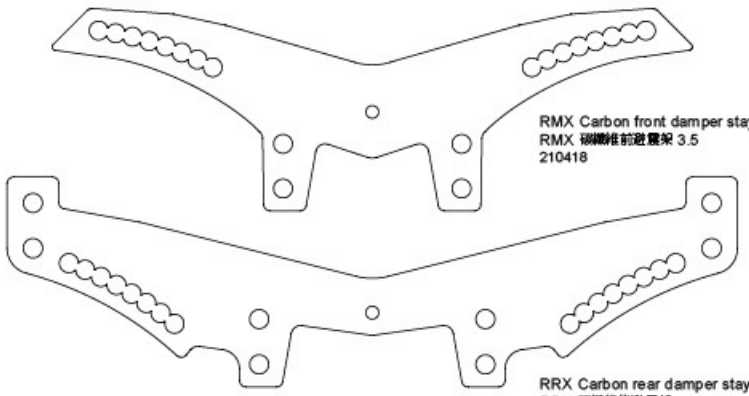


RMX Carbon front damper stay 3.5
RMX 碳纖維前避震架 3.5
210418

RRX Carbon rear damper stay 3.5
RRX 碳纖維後避震架 3.5
210503

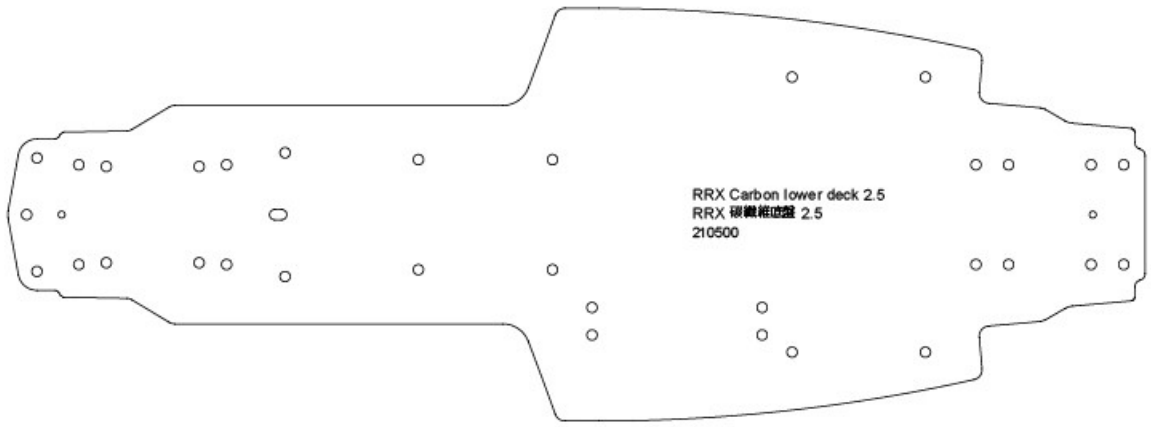


RRX Carbon lower deck 2.5
RRX 碳纖維底盤 2.5
210500

Wide balancing bumper
寬形配重防撞板
210378

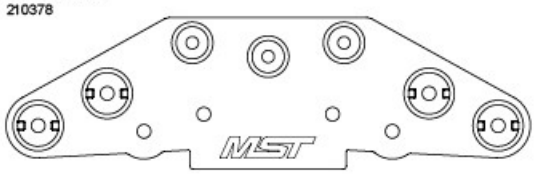





RMX Alum. rail frame
RMX 鋁合金滑軌架
(210480)

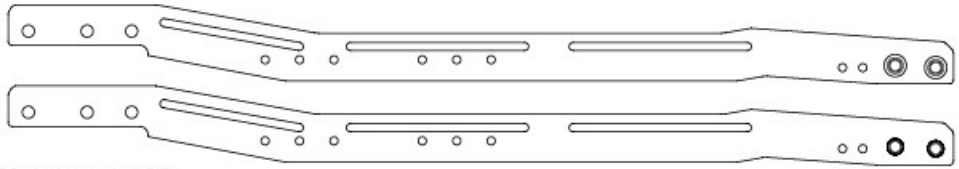


RRX Carbon upper deck 3.5
RRX 碳纖維二樓板 3.5
210501

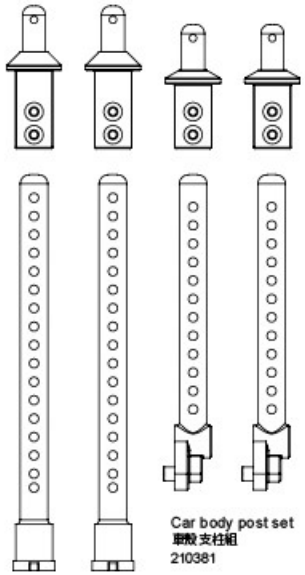

Car body post set
車殼支柱組
210381

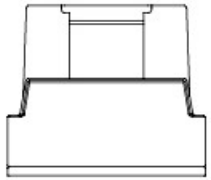


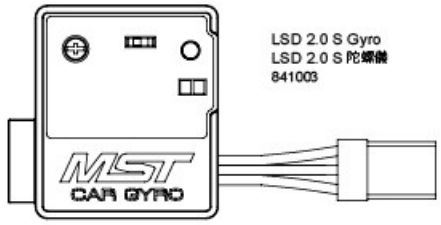


LSD 2.0 S Gyro
LSD 2.0 S 陀螺儀
841003



RMX Carbon steering arm extension 2.5
RMX 碳纖維搖臂延伸板 2.5
210422

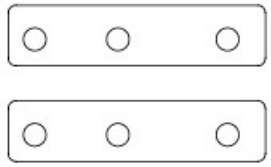

RRX Carbon upper deck spacer 1.5
RRX 碳纖維二樓板墊片 1.5
210502

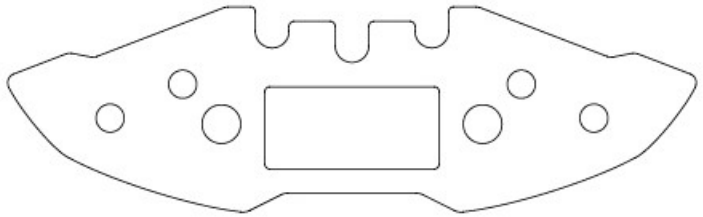


Wide balancing bumper sponge
寬形配重防撞泡棉
130039



Carbon bumper support L 2.5
碳纖維泡棉壓板 L 2.5
210391

PARTS



4mm Alum. turnbuckle wrench
鋁合金拉桿扳手
(210272)



Black grease
黑色油膏
130008




MST-PU Sticker ×3
MST-PU貼紙
710001


0.05" L Wrench
L 板手
110067



Damper oil #300
避震油
130009

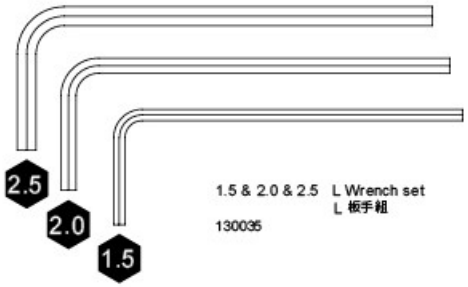


1.5 & 2.0 & 2.5 L Wrench set
L 板手組
130035

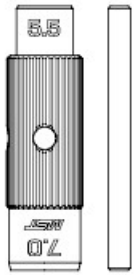


5.5 & 7.0 Alum. wrench
鋁合金套筒工具
(700003)

(210115)




11.5×1.5 O-ring ×4
O環
130002

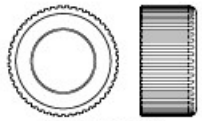


Cylinder cap ×4
避震器上蓋
(310003)


Piston rod ×4
避震軸心
310008




Oil seal ×4
避震器氣室
130004




Piston spacer set ×4
避震器活塞墊片組
210235

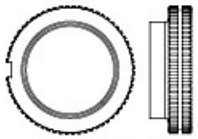


Spring retainer ×4
避震器調整環
(310004)

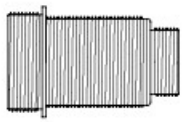

Alum. damper cylinder ×4
鋁合金避震筒身
210151



Rod guide cap ×4
避震器下蓋
(310005)



Piston spacer set ×4
避震器活塞墊片組
210235


Damper O-ring P3 (blue) ×4
避震器O環 (藍)
130028



6.5×2 sponge ×4
泡綿
130021




E-clip ×10
E形扣
110013

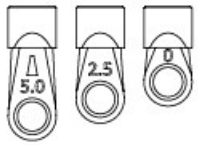






Reinforced damper plastic maintenance set ×4
強化避震器件包
820055

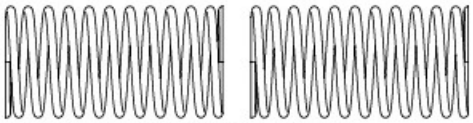

32mm Soft coil spring (medium) (purple-green)
軟避震彈簧 (中) (紫-綠)
210369-2

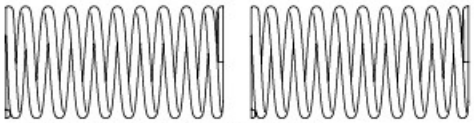

29mm Soft coil spring (super-soft) (yellow)
軟避震彈簧 (超軟) (黃)
210351-4



Inner sponge
吸震泡棉
130017



Double sided tape
泡棉雙面膠
130006



20×80×1 Sponge
吸震泡棉
130034




Antenna pipe
天線管
130007



Spur gear 48P-74T
大齒盤 48P-74T
210096

GEAR RATIO 齒比表

For **48P** Spur Gear **74T**		
Pinion Gear 馬達齒	210035 40T/13T 3.08	210036 42T/11T 3.81
23	9.91	12.26
24	9.50	11.75
25	9.12	11.28
26	8.77	10.84
27	8.44	10.44
28	8.14	10.07
29	7.86	9.72
30	7.60	9.40
31	7.35	9.09

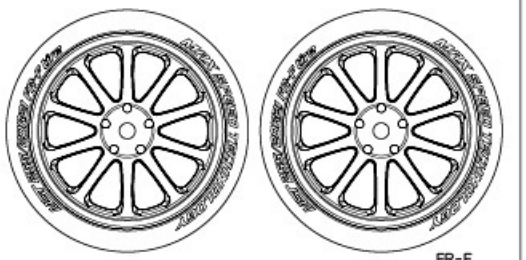

FR-F



CS-R

PARTS CODE

110001	Round head screw M3×6 (10)	120002	Ball bearing 5×10 (4)	210088	RMX Electronic device accessory	(210484)	Alum. lateral motor bulkhead set	310064	Bevel gear 16T (2)
110002	Round head screw M3×8 (10)	120003	Ball bearing 5×8 (4)	210090	Idler gear M0.6 25T (2)	(210498)	RRX Alum. rear drive shaft	(700003)	5.5 & 7.0 Alum. Wrench
110003	Round head screw M2.5×6 (6)	120006	Ball bearing 3×7 (2)	210096	Spur gear 48P-74T	(210499)	RMX Alum. head stock	710001	MST-PU Sticker (4)
110004	Round head screw M2×4 (6)	120007	Ball bearing 8×14 (2)	210151	Alum. damper cylinder (4)	210500	RRX Carbon lower deck 2.5	(810007)	Alum. reinforced turnbuckle 3×20 (2)
110005	Countersunk screw M3×8 (10)	120011	Ball bearing 5×11 (4)	210159	Ball connector 5.8×4 (4)	210501	RRX Carbon upper deck 3.5	(810010)	Alum. reinforced turnbuckle 3×32 (2)
110013	E-clip 2.0 (10)	120012	Ball bearing 4×7 (2)	210161	Ball connector nut 4.8 (4)	210502	RRX Carbon upper deck spacer (2)	(810013)	Alum. reinforced turnbuckle 3×44 (2)
110017	Shaft 2×9.8 (10)	120013	Ball bearing 4×8×3 (2)	210235	Piston spacer set	210503	RRX Carbon rear damper stay 3.5	(810016)	Alum. turnbuckle 3×76
110020	Steel ball 3.0 (13)	120018	Bearing 4×10×4 (2)	(210272)	Alum. turnbuckle wrench 4mm	210504	RRX Alum. ball diff. set (42-11)	820018	Spacer 5×7×0.1 (8)
110025	Tapping round head screw 2.6×10 (6)	130002	O-ring 11.5×1.5 (4)	210321	Suspension balls 2.5×5 (8)	230009	FSX Transfer gear case	820024	Spacer 10×12×0.3 (8)
110026	Round head screw M3×10 (10)	130004	Oil seal (4)	210326	Steel turnbuckle 3×3.5×20 (2)	230010	FSX Receiver holder & bevel gear redirected mount	(820026)	Alum. spacer 3×5.5×1.0 (5)
110029	Round head screw M3×12 (6)	130006	Double sided tape(5)	(210342)	Alum. joint ring			(820027)	Alum. spacer 3×5.5×2.0 (5)
110032	Set screw M3×10 (6)	130007	Antenna pipe (2)	210344	Ball connector nut L 4.8 (4)	310001	Ball connector 4.8×4.5 (5)	(820028)	Alum. spacer 3×5.5×3.0 (5)
110035	Set screw M3×3 (6)	130008	Black grease	210351-4	Soft coil spring 29mm (super-soft) (yellow) (2)	(310003)	Cylinder cap (2)	820030	Cross joint (2)
110039S	Cap screw M1.6×4 (10)	130009	Damper oil #300	210369-2	Soft coil spring 32mm (medium) (purple-green) (2)	(310004)	Spring retainer (2)	(820036)	Alum. suspension mount (-0.5)
110044	Round head screw M2×6 (6)	130017	Inner sponge (8)			(310005)	Rod guide cap (2)	(820037)	Alum. suspension mount (+0.5)
110045	Round head screw M2×8 (partial thread) (6)	130021	Sponge 6.5×2 (10)	210378	Wide balancing bumper	310006	Wheel axle (2)	(820039)	Alum. suspension mount (+2.5)
110047	Spacer 3×6×0.5 (8)	130028	Damper O-ring P3 (blue) (10)	210381	Car body post set	310008	Piston rod (4)	820042	Universal servo saver set
110049	Round head screw M3×5 (10)	130034	Sponge 20×80×1 (4)	210391	Carbon bumper support 2.5 L	310032	Diff. screw & spring set	(820044)	Alum. hex. wheel hubs 4mm (4)
110051	Flat head screw M3×5 (5)	130035	L Wrench set (1.5 & 2.0 & 2.5)	(210413)	Alum. servo mount	310033	Diff. plate (2)	(820049)	Wheel hub spacer 1.0 (4)
110059	Shaft 1.5×7.8 (8)	130037	Bumper (C)	210418	RMX Carbon front damper stay 3.5	310046	Arm shaft 2.5×20 (2)	(820054)	5.8 Ball end bush
110061	Round head screw M3×14 (6)	210036	Bevel gear set 42-11	210422	RMX Carbon steering arm extension 2.5	310047	Arm shaft 2.0×22 (2)	820055	Reinforced damper plastic maintenance set (4)
110063	Round head screw M2×8 (6)	210040	Joint set	(210425)	Alum. steering rail	310048	Arm shaft 2.5×46 (4)	820074	Wheel nut m4 (4)
110064	Round head screw M2.5×10 (6)	210047	Reinforced adjuster set 4.8×18 (8)	(210426)	RMX Alum. rail mount	310049	2WD Axle (2)	820075BK	R-clip 5.0 (black) (10)
110066S	Cap screw M1.6×6 (10)	210054	HT Lower arm	(210432)	RMX Alum. strengthen post (2)	310050	Ball connector 4.8×6 (5)	820081	Adjuster set 5.8 (4)
110067	Set screw M2.5×2.5 (6)	210058	HT Upper arm	210433	Ball connector 4.8×4.5 S (5)	310060	Bearing bush 3×4×1 (4)	(820082)	Alum. arm set
110079	E-clip 2.5 (10)	210060	KPI Upright set	210475BK	FSX Alum. quick-release drive gear shaft (black)	310061	Universal adjusting mount (2)	841003	LSD 2.0 S Gyro
110080	Spacer 2.6×5.8×0.6 (8)	210070	HT Rear lower arm (4 holes) & wheel hub	(210480)	RMX Alum. rail frame	310062	FSX Main shaft		
120001	Ball bearing 10×15 (4)	210087	Gyro mount	(210481)	FSX Alum. spur gear holder	(310063)	FSX Alum. motor mount		

Please add color remark for ( ) part number.
e.g. 210123R for Red (210123)

Color	Red
Remark	R

OPTION PARTS CODE

(210354)	HT Alum. rear upright (2)	(210495)	Alum. lateral motor bevel gear box	820052	Wheel weighting ring (2)	(820064)	HT Alum. rear lower arm set	820089	Alum. adjustable shock upper end (4)
(210461)	RMX Alum. spur gear cover	(820029)	KPI Alum. upright (2)	(820057)	Adjustable alum. suspension mount (-0.5-+1.0)	(820068)	Alum. 3 wires clamps	820091	Wheel weighting ring (heavy) (2)
(210483)	Alum. HT upper arm C & D	(820043)	Alum. hex. wheel hubs 5mm (4)	(820058)	Adjustable alum. suspension mount (+1.5-+3.0)	(820069)	Alum. 4 wires clamps	820092	Upright weight 10g
210492	Alum. wheel hubs 6mm (large brake disc shaped)	(820046)	Alum. damper retainer (lower type) (4)	820059	Suspension mount spacer 0.2mm (10)	(820086)	Alum. 8-adjusting servo saver	(820093)	AKM Alum. upright (2WD) (2)
(210493)	RMX-D IFS Alum. conversion set	(820048)	Wheel hub spacer 0.5 (4)	(820060)	HT Alum. front lower arm set	820087	MST Balancing weights 10g (4)	841002	LSD 2.0 RS Gyro
(210494)	Alum. lateral motor transfer mount set	(820050)	Alum. damper retainer (4)	(820063)	Suspension mount spacer 0.5mm (4)	820088	MST Balancing weights 30g (4)	(841004)	DX251L Brushless servo

部品編號

110001	六角半圓頭螺絲 M3×6 (10)	120002	培林 5×10 (4)	210088	RMX 電裝配件	(210498)	RRX 鋁合金後傳軸	710001	MST-PU貼紙 (4)
110002	六角半圓頭螺絲 M3×8 (10)	120003	培林 5×8 (4)	210090	惰輪 M0.6 25T (2)	(210499)	RMX 鋁合金頭座	(810007)	鋁合金強化可調拉桿 3×20 (2)
110003	六角半圓頭螺絲 M2.5×6 (6)	120006	培林 3×7 (2)	210096	大齒盤 48P-74T	210500	RRX 碳纖維底盤 2.5	(810010)	鋁合金強化可調拉桿 3×32 (2)
110004	六角半圓頭螺絲 M2×4 (6)	120007	培林 8×14 (2)	210151	鋁合金避震筒身 (4)	210501	RRX 碳纖維二樓板 3.5	(810013)	鋁合金強化可調拉桿 3×44 (2)
110005	六角沉頭螺絲 M3×8 (10)	120011	培林 5×11 (4)	210159	球頭螺絲 5.8×4 (4)	210502	RRX 碳纖維二樓板墊片 1.5 (2)	(810016)	鋁製可調拉桿 3×76
110013	E扣 2.0 (10)	120012	培林 4×7 (2)	210161	球頭螺帽 4.8 (4)	210503	RRX 碳纖維後避震架 3.5	820018	墊片 5×7×0.1 (8)
110017	插銷 2×9.8 (10)	120013	培林 4×8×3 (2)	210235	避震器活塞墊片組	210504	RRX 鋁合金滾珠差速組 (42-11)	820024	墊片 10×12×0.3 (8)
110020	差速鋼珠 3.0 (13)	120018	培林 4×10×4 (2)	(210272)	鋁合金拉桿扳手 4mm	230009	FSX 分動齒座組	(820026)	鋁墊片3×5.5×1.0 (5)
110025	自攻六角半圓頭螺絲 2.6×10 (6)	130002	O環 11.5×1.5 (4)	210321	插銷球頭 2.5×5 (8)	230010	FSX 接收機固定座 & 換向傘齒座	(820027)	鋁墊片3×5.5×2.0 (5)
110026	六角半圓頭螺絲 M3×10 (10)	130004	避震氣室 (4)	210326	鋼製可調螺桿 3×3.5×20 (2)	310001	內六角公球頭 4.8×4.5 (5)	(820028)	鋁墊片3×5.5×3.0 (5)
110029	六角半圓頭螺絲 M3×12 (6)	130006	泡棉雙面膠 (5)	(210342)	鋁合金接杆環	(310003)	避震器上蓋 (2)	820030	連接軸 (2)
110032	六角止付螺絲 M3×10 (6)	130007	天線管 (2)	210344	球頭螺帽L 4.8 (4)	(310004)	避震器調整環 (2)	(820036)	鋁合金擺臂座 (-0.5)
110035	六角止付螺絲 M3×3 (6)	130008	黑色油膏	210351-4	軟避震彈簧 29mm (超軟) (黃) (2)	(310005)	避震器下蓋 (2)	(820037)	鋁合金擺臂座 (+0.5)
110039S	六角有頭螺絲 M1.6×4 (10)	130009	避震油#300	210369-2	軟避震彈簧 32mm (中) (紫-綠) (2)	310006	萬向接杆 (2)	(820039)	鋁合金擺臂座 (+2.5)
110044	六角半圓頭螺絲 M2×6 (6)	130017	吸震泡棉 (8)	210378	異形配重防撞板	310008	避震軸心 (4)	820042	通用型伺服縮衝組
110045	六角半圓頭螺絲 M2×8 (半牙) (6)	130021	泡棉 6.5×2 (10)	210381	車殼支柱組	310032	滾差彈簧螺絲組	(820044)	鋁合金六角輪座 4mm (4)
110047	墊片 3×6×0.5 (8)	130028	阻尼器O環 P3 (藍) (10)	210391	碳纖維泡棉墊板 L 2.5	310033	滾差墊板 (2)	(820049)	輪座墊片 1.0 (4)
110049	六角半圓頭螺絲 M3×5 (10)	130034	吸震泡棉 20×80×1 (4)	(210413)	鋁合金伺服機座	310046	擺臂插銷 2.5×20 (2)	(820054)	5.8 球頭襯套
110051	十字扁頭螺絲 M3×5 (5)	130035	L 板手組 (1.5 & 2.0 & 2.5)	210418	RMX 碳纖維前避震架 3.5	310047	擺臂插銷 2.0×22 (2)	820055	強化避震膠件包 (4)
110059	插銷 1.5×7.8 (8)	130037	防撞泡棉 (C)	210422	RMX 碳纖維搖臂延伸板 2.5	310048	擺臂插銷 2.5×46 (4)	820074	輪框螺帽 M4 (4)
110061	六角半圓頭螺絲 M3×14 (6)	210036	傘齒組 42-11	(210425)	鋁合金轉向滑軌	310049	二驅輪軸 (2)	820075BK	R銷 5.0 (黑) (10)
110063	六角半圓頭螺絲 M2×8 (6)	210040	接杆組	(210426)	RMX 鋁合金滑軌座	310050	內六角公球頭 4.8×6 (5)	820081	調整式拉桿頭組 5.8 (4)
110064	六角圓頭螺絲 M2.5×10 (6)	210047	強化拉桿頭組 4.8×18 (8)	(210432)	RMX 鋁合金補強柱 (2)	310060	培林襯套 3×4×1 (4)	(820082)	鋁合金搖臂組
110066S	六角有頭螺絲 M1.6×6 (10)	210054	HT 下擺臂	210433	內六角公球頭 4.8×4.5 S (5)	310061	通用型調整座 (2)	841003	LSD 2.0 S 陀螺儀
110067	六角止付螺絲 M2.5×2.5 (6)	210058	HT 上擺臂	210475BK	FSX 鋁合金驅動齒軸(快拆) (黑)	310062	FSX 主齒軸		
110079	E扣 2.5 (10)	210060	KPI 輪座組	(210480)	RMX 鋁合金滑軌架	(310063)	FSX 鋁合金馬達座		
110080	墊片 2.6×5.8×0.6 (8)	210070	HT 後下擺臂 (4孔) & 輪座	(210481)	FSX 鋁合金大齒盤座	310064	傘齒16T (2)		
120001	培林 10×15 (4)	210087	陀螺儀座	(210484)	鋁合金橫置馬達側板組	(700003)	5.5 & 7.0 鋁合金套筒工具		

請增加顏色標示在 ( ) 編號
例: 210123R for 紅色 (210123)

顏色	紅
標示	R

改裝品編號

(210354)	HT 鋁合金後輪座 (2)	(210495)	鋁合金橫置馬達傘齒座	820052	輪框加重環 (2)	(820064)	HT 鋁合金後下擺臂組	820089	鋁合金避震器 可調上座 (4)
(210461)	RMX 鋁合金齒盤墊板	(820029)	KPI鋁合金輪座 (2)	(820057)	可調式鋁合金擺臂座 (-0.5-+1.0)	(820068)	3線鋁合金集線器	820091	輪框加重環 (重型) (2)
(210483)	鋁合金 HT 上擺臂 C&D	(820043)	鋁合金六角輪座 5mm (4)	(820058)	可調式鋁合金擺臂座 (+1.5-+3.0)	(820069)	4線鋁合金集線器	820092	輪座配重塊 10g
210492	鋁合金六角輪座6mm (加大煞車碟型)	(820046)	鋁合金彈簧座 (降低型) (4)	820059	擺臂座墊片0.2mm (10)	(820086)	鋁合金8段調整縮衝組	(820093)	AKM鋁合金輪座 (2WD) (2)
(210493)	RMX-D IFS 鋁合金套件	(820048)	輪座墊片 0.5 (4)	(820060)	HT 鋁合金前下擺臂組	820087	MST 配重塊 10g (4)	841002	LSD 2.0 RS 陀螺儀
(210494)	鋁合金橫置馬達分動座組	(820050)	鋁合金彈簧座 (4)	(820063)	擺臂座墊片0.5mm (4)	820088	MST 配重塊 30g (4)	(841004)	DX251L 無刷伺服機

MST
max speed technology

RRX-D VIP 2WD

1/10 SCALE RC 2WD HIGH PERFORMANCE DRIFT CAR

EXPLODED MANUAL

www.rc-mst.com

[facebook.com/MST.tw]

Max Speed Technology

PRINTED WITH SOY INK

026104