
1 / 10 SCALE RC 4WD HIGH PERFORMANCE DRIFT CAR

MS-01D Pro

1 / 10 DRIFT CHASSIS KIT

MS-01D Pro

ON ROAD USE ONLY
FULL BALL BEARINGS

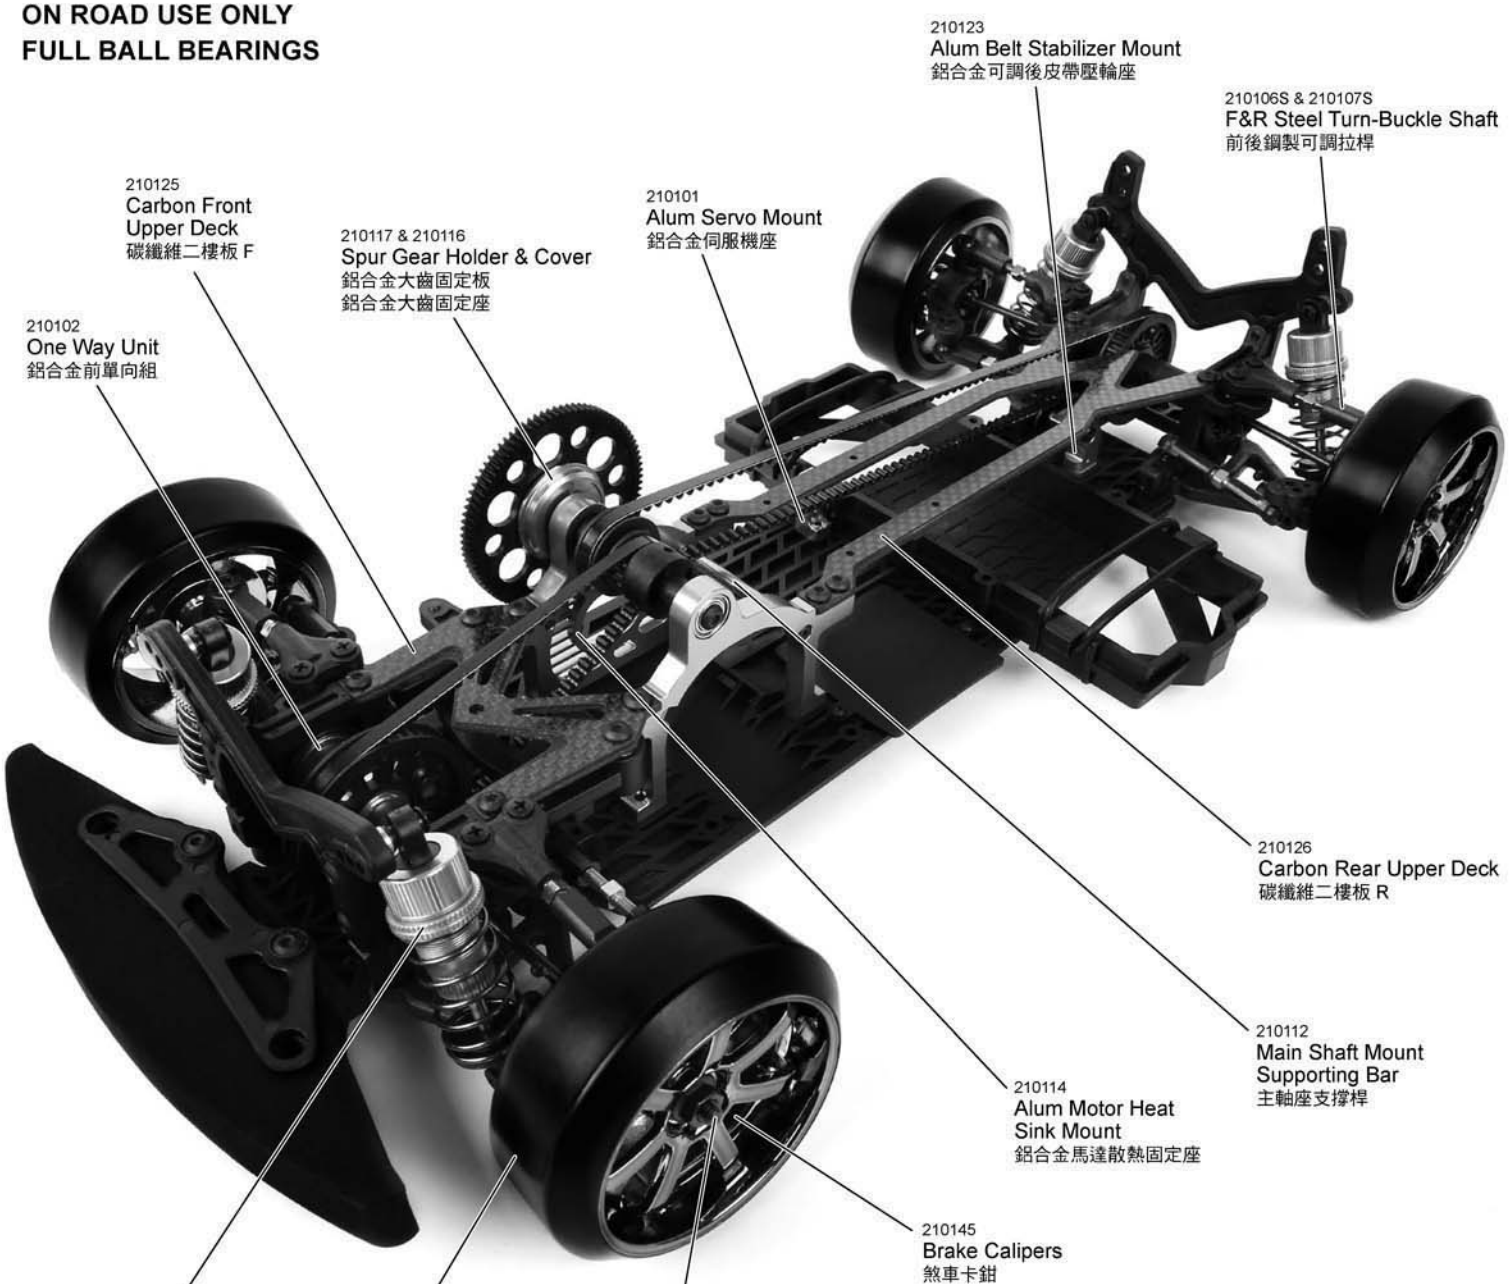

* 210111 CS pulley set (1.51/1.66/1.82) & 210145 Brake calipers are also included.
另附反胎齒比組與煞車卡鉗組。

※ Specifications are subject to change without notice.

1

A5 ×4
3×8mm 沉頭螺絲
Screw

2

A5 ×4
3×8mm 沉頭螺絲
Screw

A15 ×3
2.5×6mm 半圓頭螺絲
Screw

A16 ×2
2×8mm 有頭螺絲
Screw

P1 ×1
馬達散熱座
Alum Moter Heat Sink Mount


P3 ×1
主軸座支撐桿
Main Shaft Mount Sipporting Bar

3


A5 ×4
3×8mm 沉頭螺絲
Screw


P17 ×2
4.8×5mm 球頭
Ball Connector

1 前側板底盤組合
Attaching Front Bulkhead

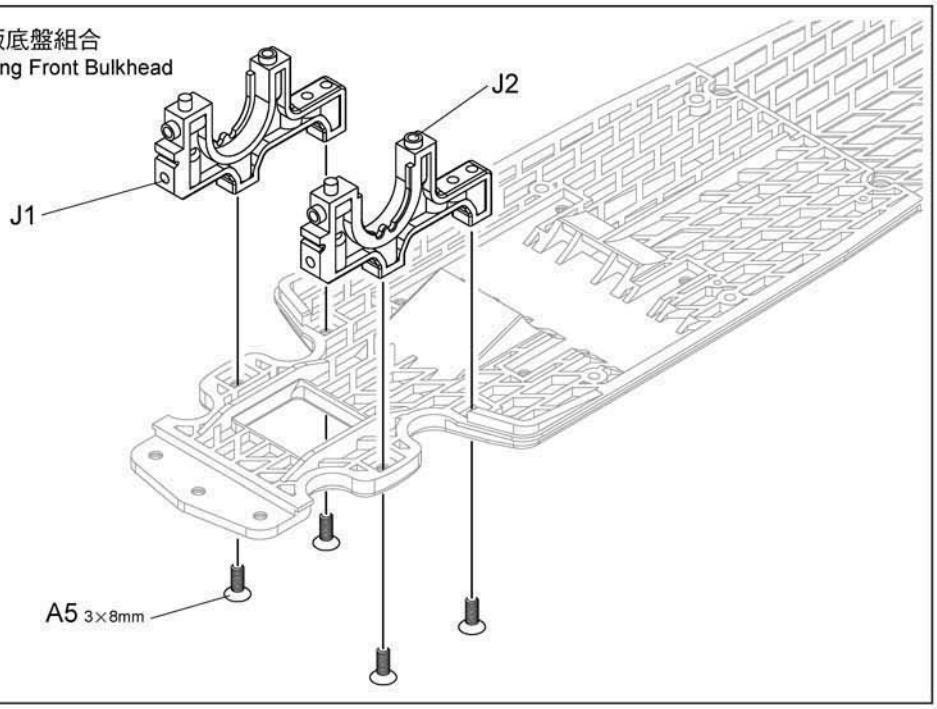


2 馬達座底盤組合
Attaching Motor Mount

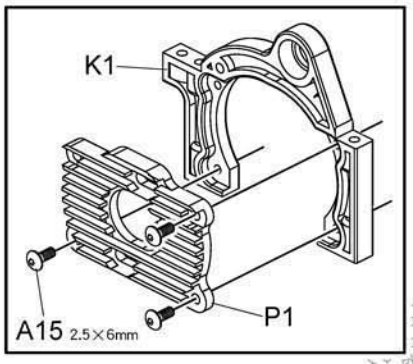


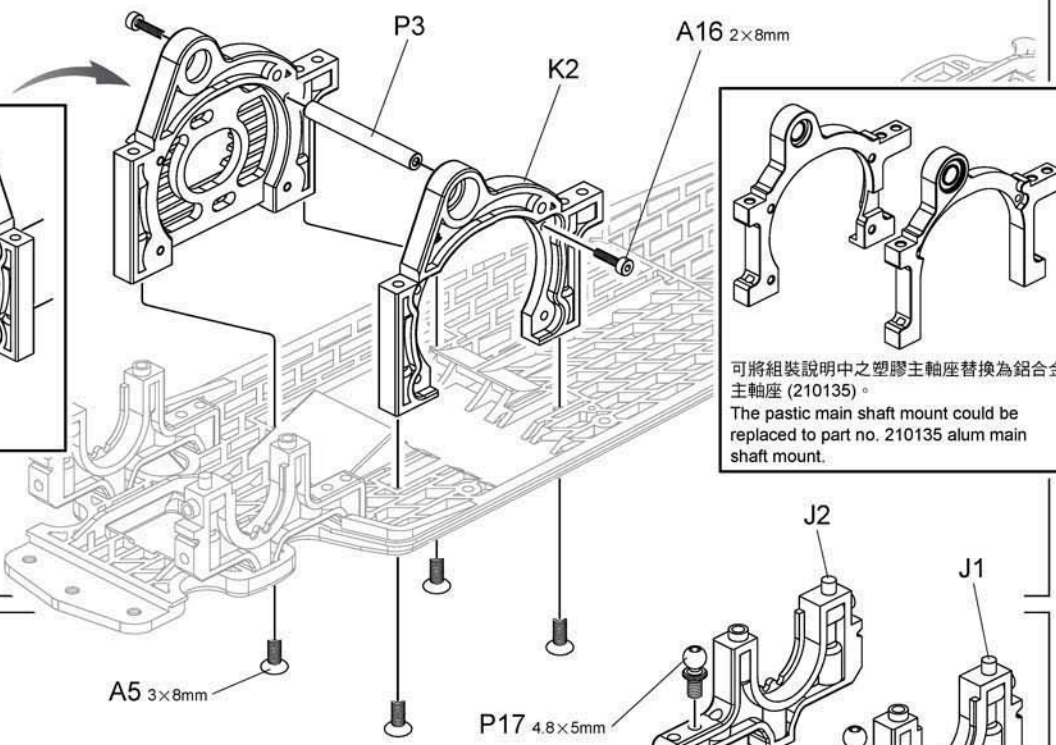

可將組裝說明中之塑膠主軸座替換為鋁合金主軸座 (210135)。
The pastic main shaft mount could be replaced to part no. 210135 alum main shaft mount.

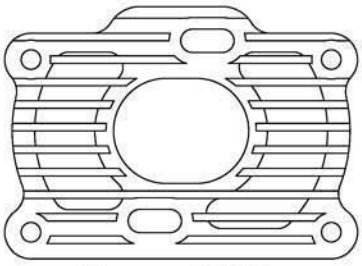

3 後側板底盤組合
Attaching Rear Bulkhead

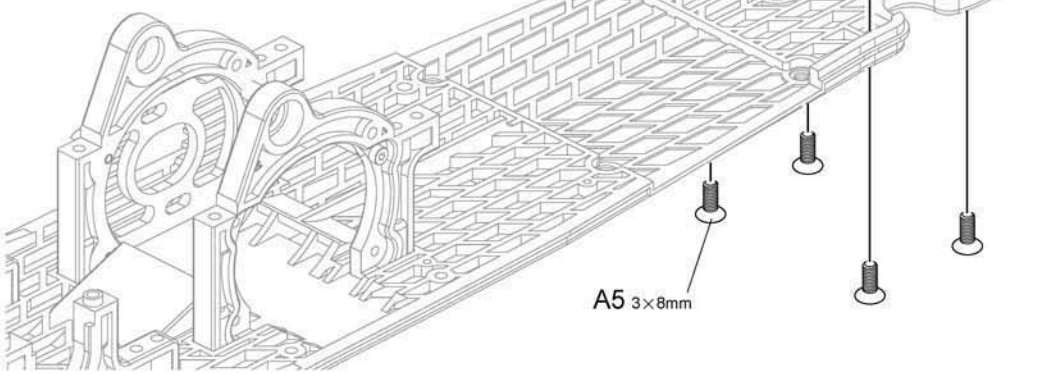

4




A1 ×1
3×12mm 半圓頭螺絲
Screw




A6 ×1
3×6mm 沉頭螺絲
Screw



A19 ×1
M3防鬆螺帽
M3 Nut

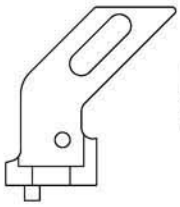

P12 ×1
後可調皮帶壓輪座
Belt Stabilizer Mount

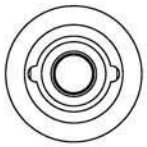

P13 ×1
後可調皮帶壓輪
Belt Pully




P14 ×1
培林座
Bearing mount

5




A4 ×1
3×6mm 半圓頭螺絲
Screw

A21 ×1
2×11.8mm 插銷
Shaft



P2 ×1
主齒軸
Direct Center Shaft

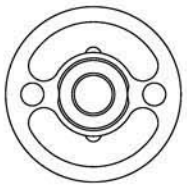

P8 ×1
主齒固定座
Spur Gear Holder



P9 ×1
主齒固定板
Spur Gear
Holder Cover

6




A4 ×1
3×6mm 半圓頭螺絲
Screw

A21 ×2
2×11.8mm 插銷
Shaft




B2 ×2
5×10mm 滾珠軸承
Ball Bearing




K5 ×1
主軸套管
Center Shaft Spacer


4 後皮帶壓輪組裝
Rear Pulley Assembly

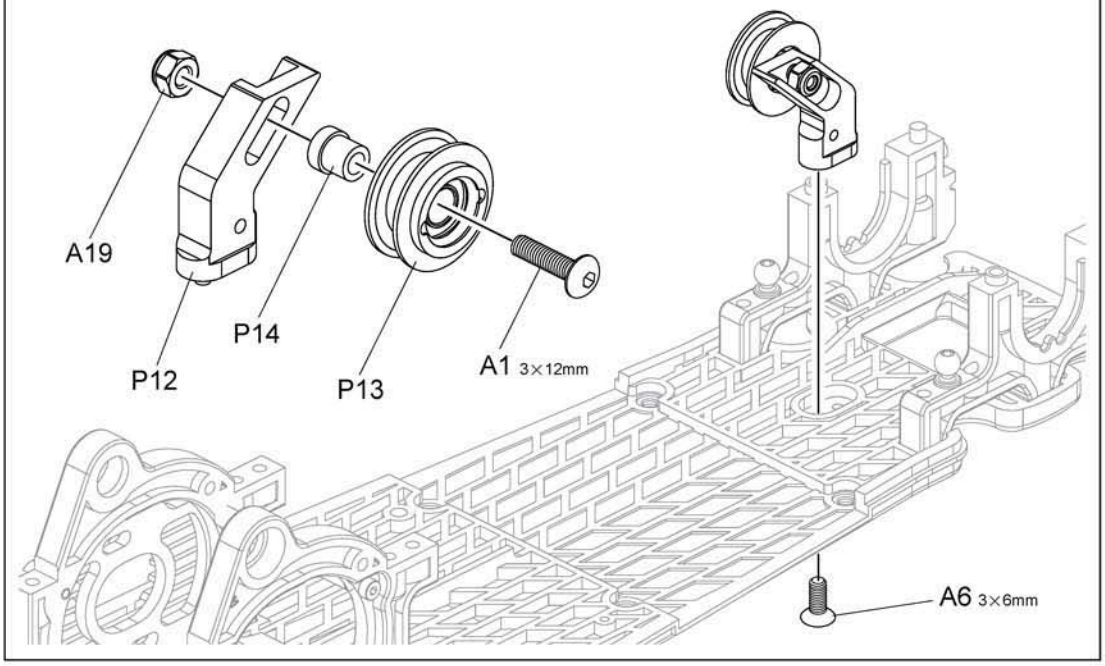

5 主軸齒盤組裝
Main Shaft & Spur Gear Assembly

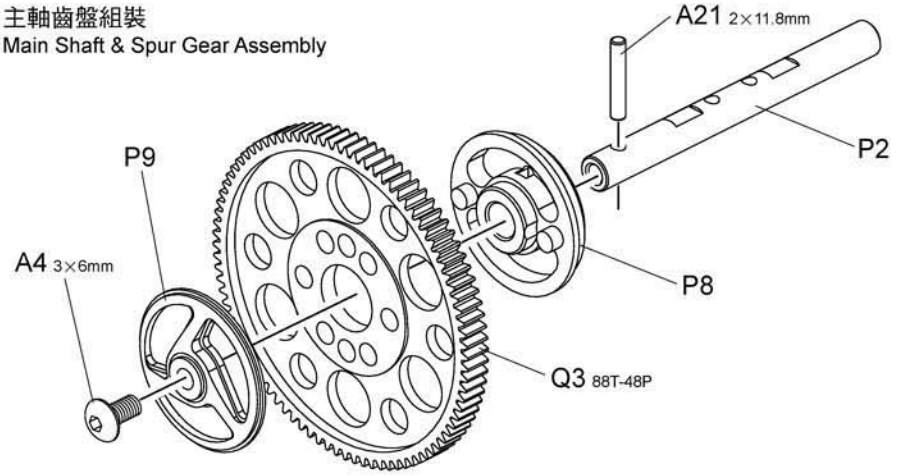


6 主軸底盤組裝
Attaching Main Shaft

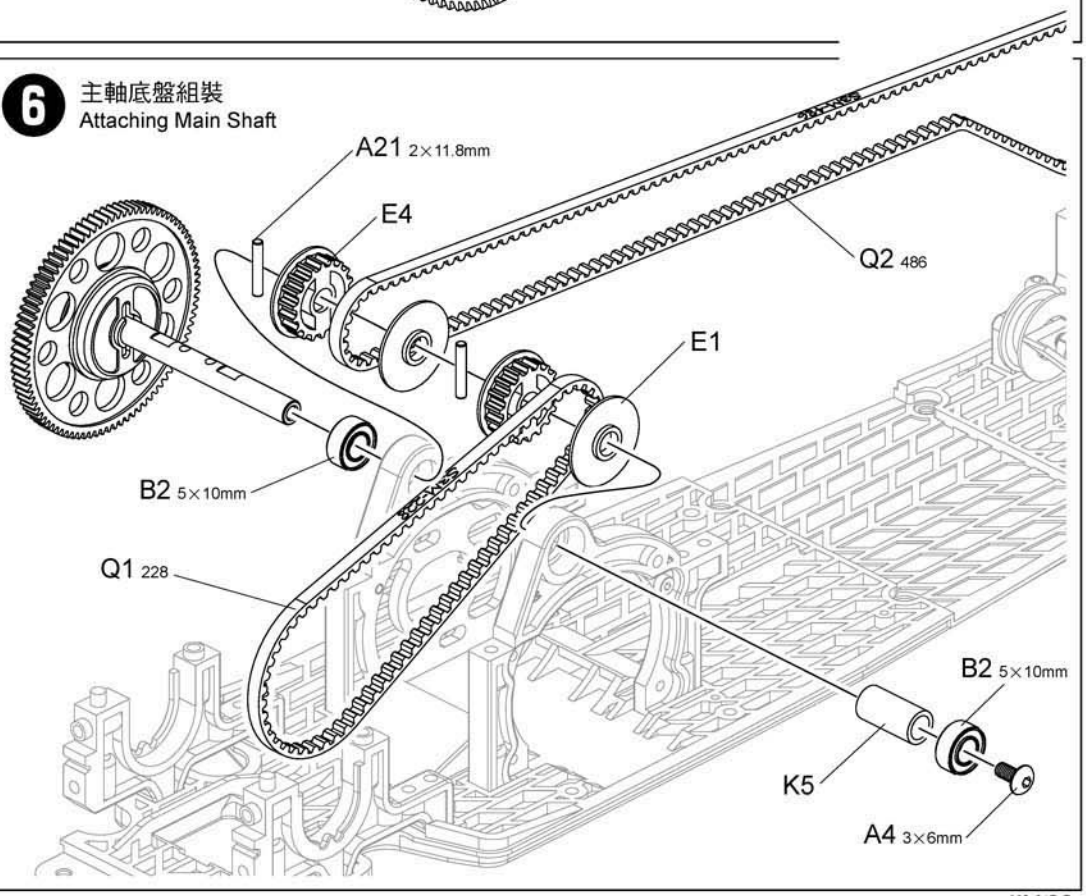


7

A15 ×3
2.5×6mm 半圓頭螺絲
Screw

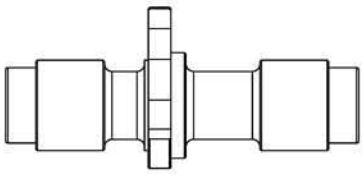

D1 ×1 單向座
One Way Unit



D2 ×2 單向接杯
One Way Joint




B1 ×2
10×15mm 滾珠軸承
Ball Bearing




J5 ×2
皮帶調整環
Belt Tension Adjuster

7 前單向組裝
Front One Way Assembly

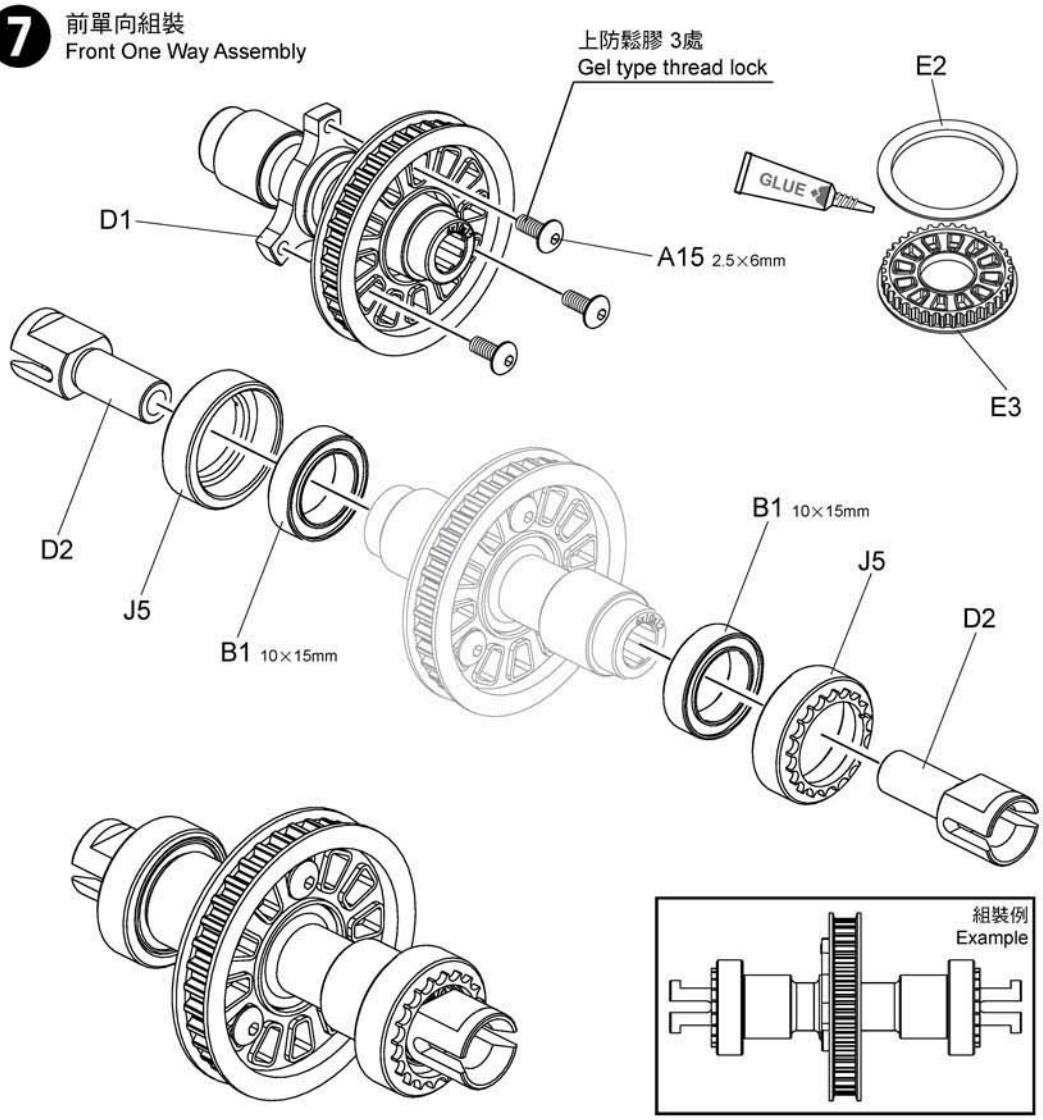

8


8 前皮帶組裝
Attaching Front Belt

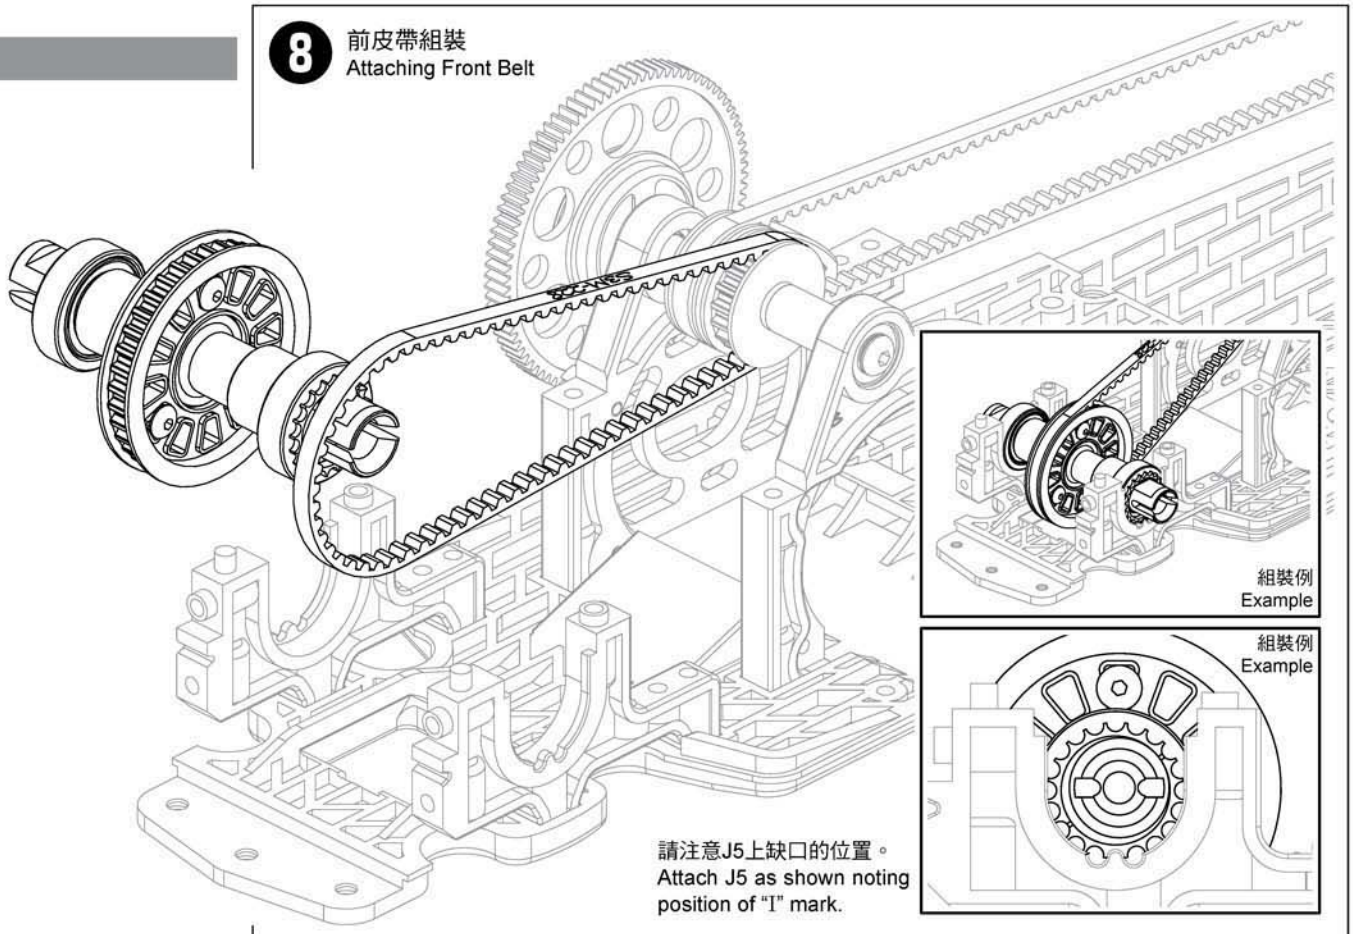

請注意J5上缺口的位置。
Attach J5 as shown noting position of "I" mark.


9


9 後直軸組
Rear Solid Axle (Spool) Assembly

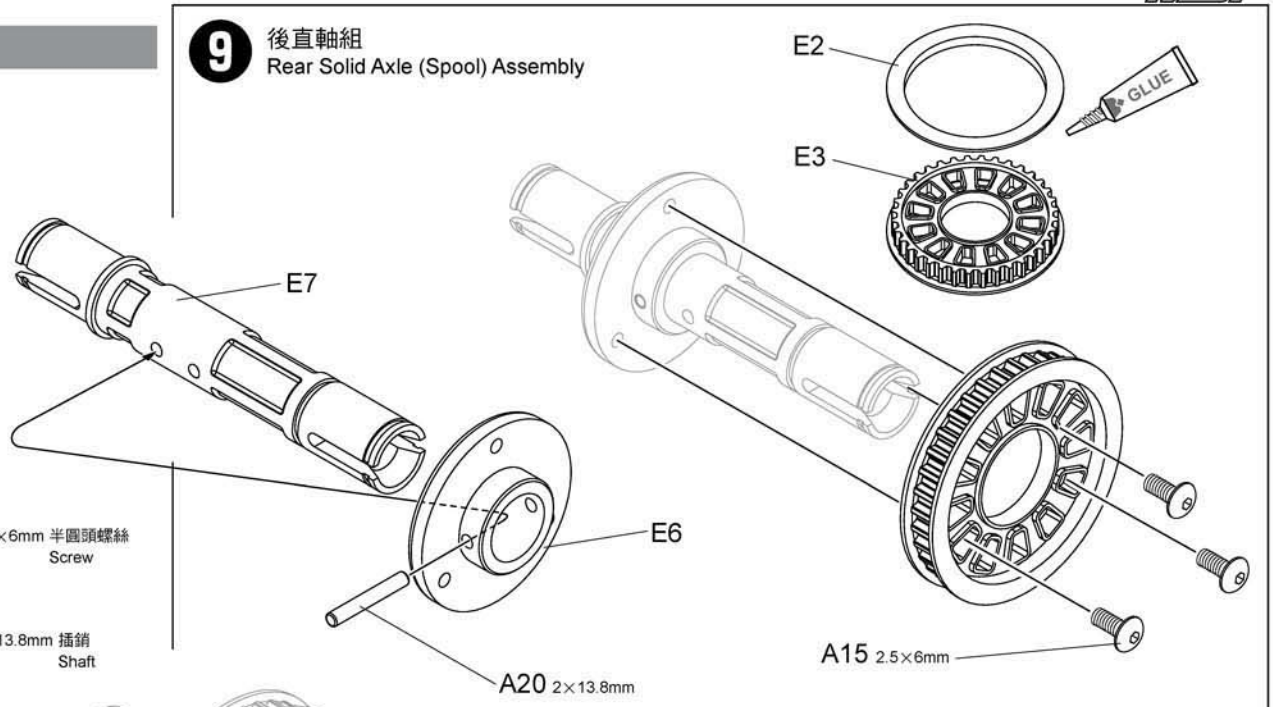


A15 ×3 2.5×6mm 半圓頭螺絲 Screw

A20 ×1 2×13.8mm 插銷 Shaft

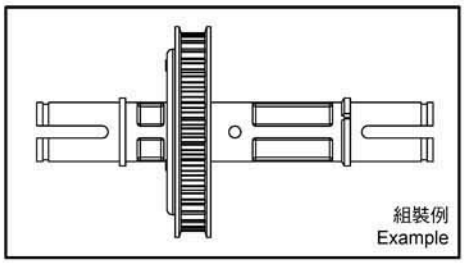

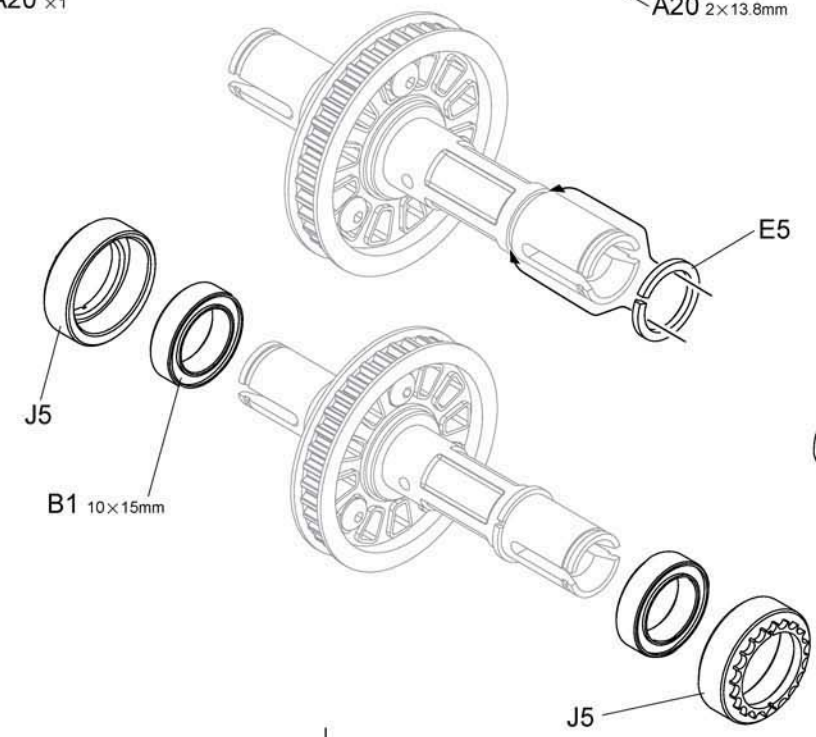

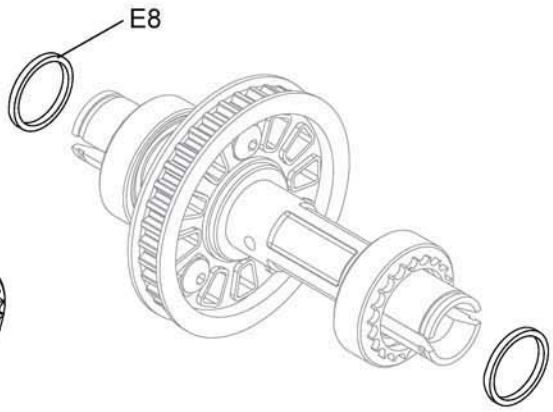



B1 ×2
10×15mm 滾珠軸承
Ball Bearing


E5 ×1
直軸C環
Solid Axle C Ring

E8 ×2
金屬接杯環
Joint Ring (Steel)

J5 ×2
皮帶調整環
Belt Tension Adjuster

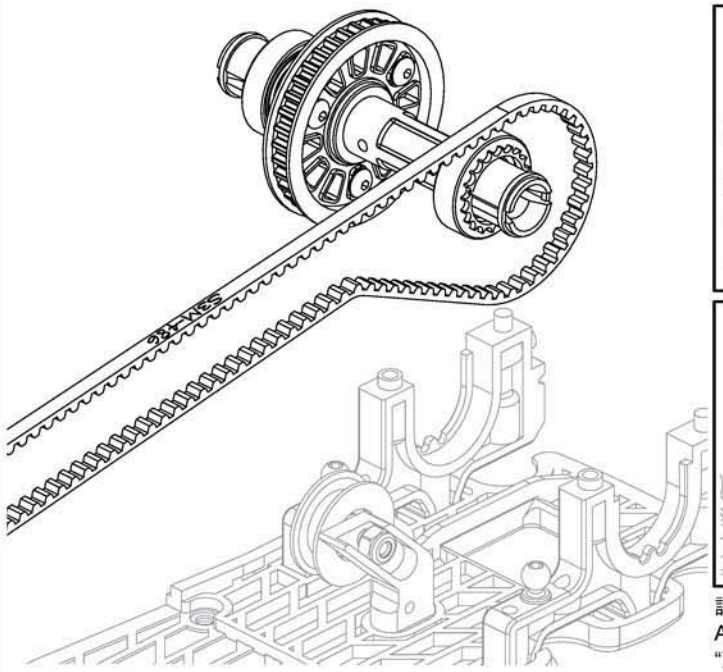

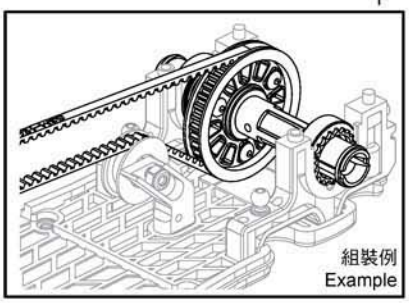


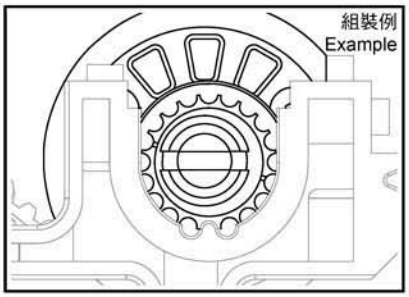


請注意J5上缺口的位置。
Attach J5 as shown noting position of "I" mark.


10

A9 ×2
3×6mm 止付螺絲
Screw

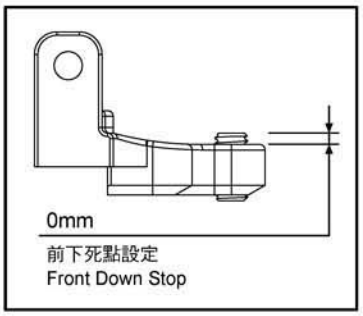

10 前上擺臂座組裝
Attaching Front Upper Arm Mount

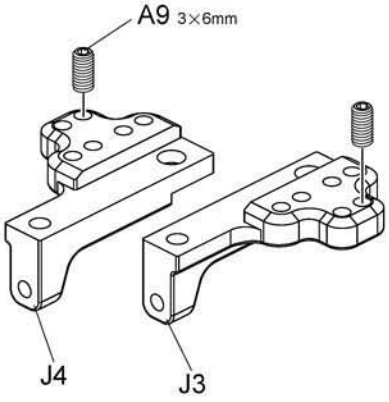

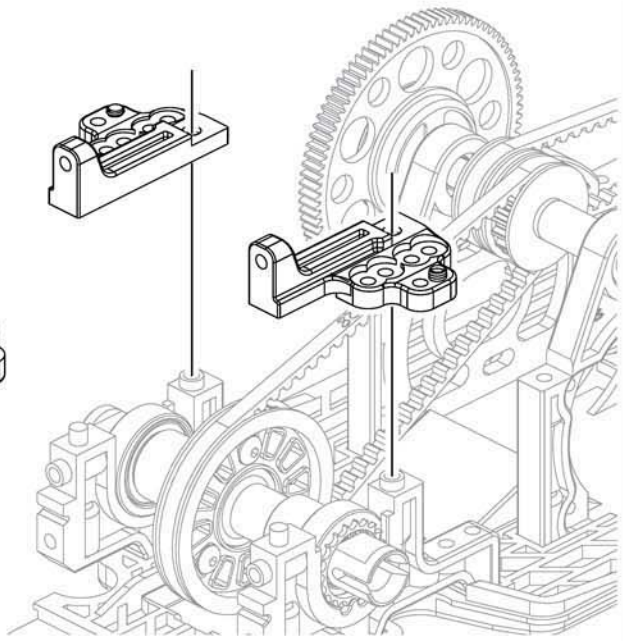

11

A4 ×4
3×6mm 半圓頭螺絲
Screw


A12 ×2
3×6mm 有頭螺絲
Screw

B3 ×4
5×8mm 滾珠軸承
Ball Bearing

M2 ×2
轉向支柱
Alum Steering Post

P17 ×3
4.8×5mm 球頭
Ball Connector

11 轉向搖臂組裝
Steering Arm Assembly

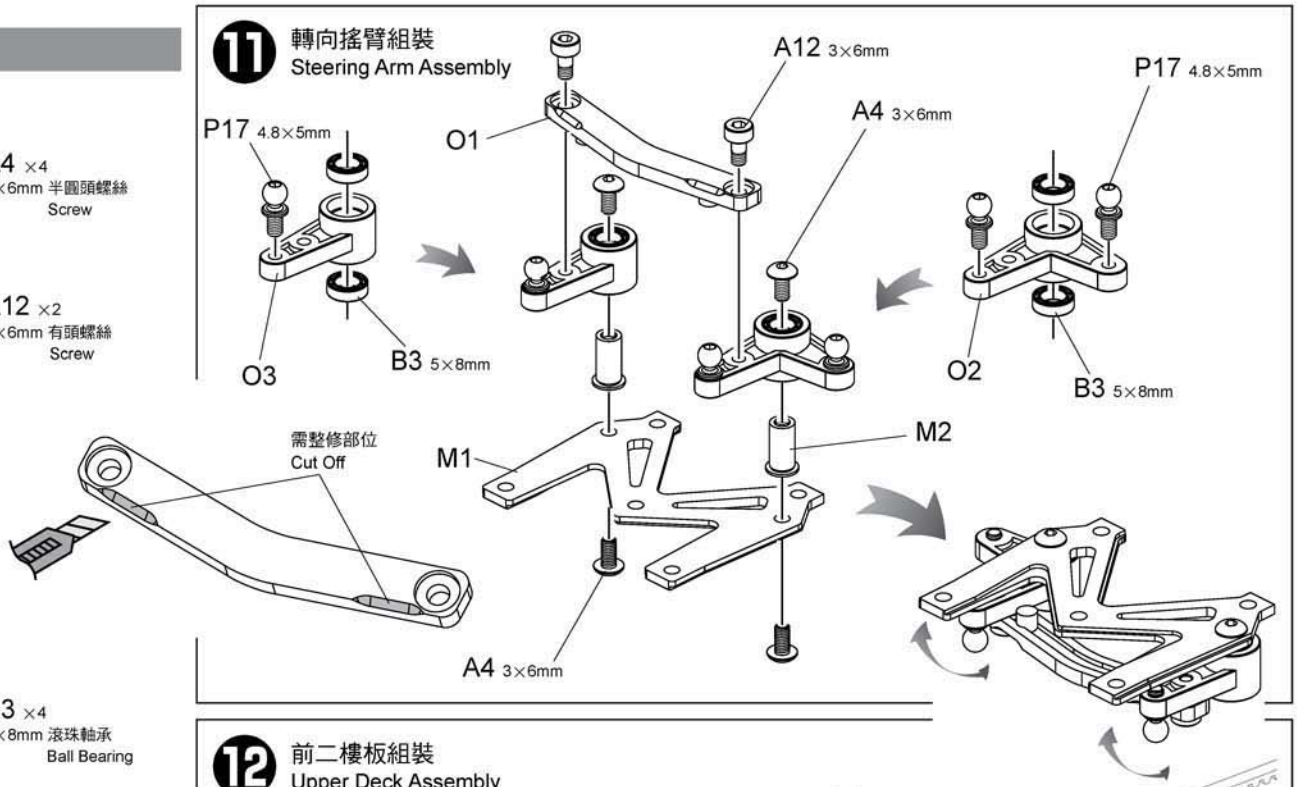


12

A3 ×2
3×8mm 半圓頭螺絲
Screw


A4 ×2
3×6mm 半圓頭螺絲
Screw

12 前二樓板組裝
Upper Deck Assembly

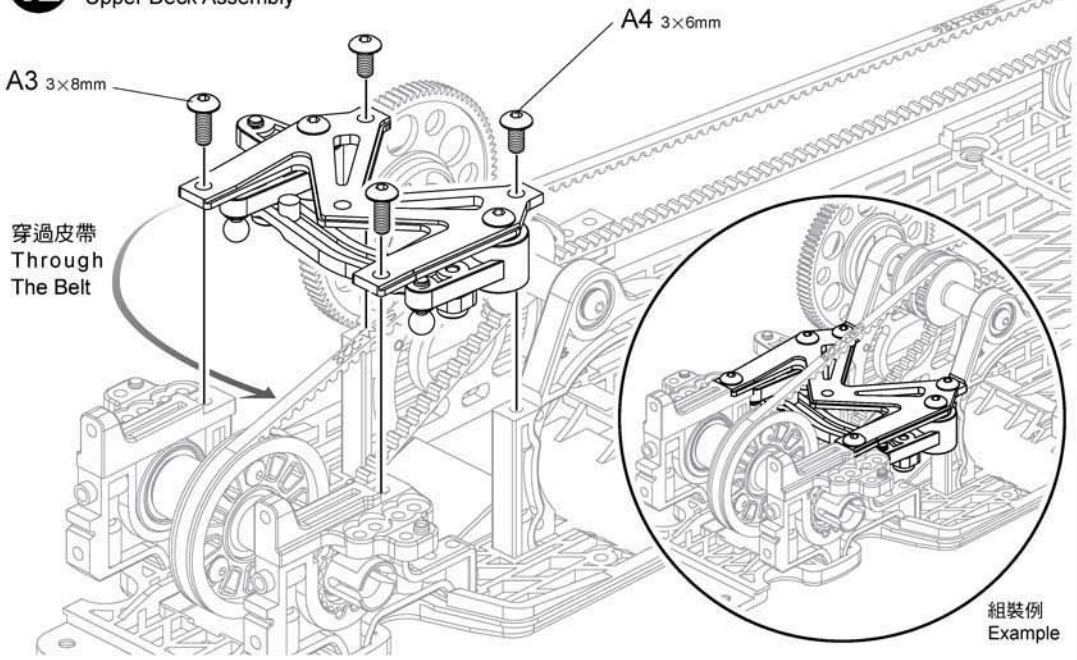


13

3×6mm 止付螺絲
Screw
A9 ×2

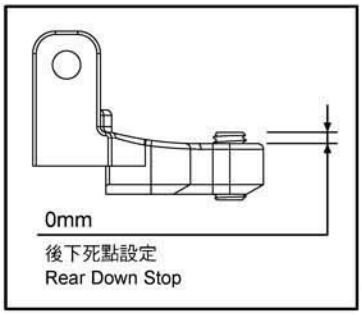

13 後上擺臂座組裝
Attaching Rear Upper Arm Mount

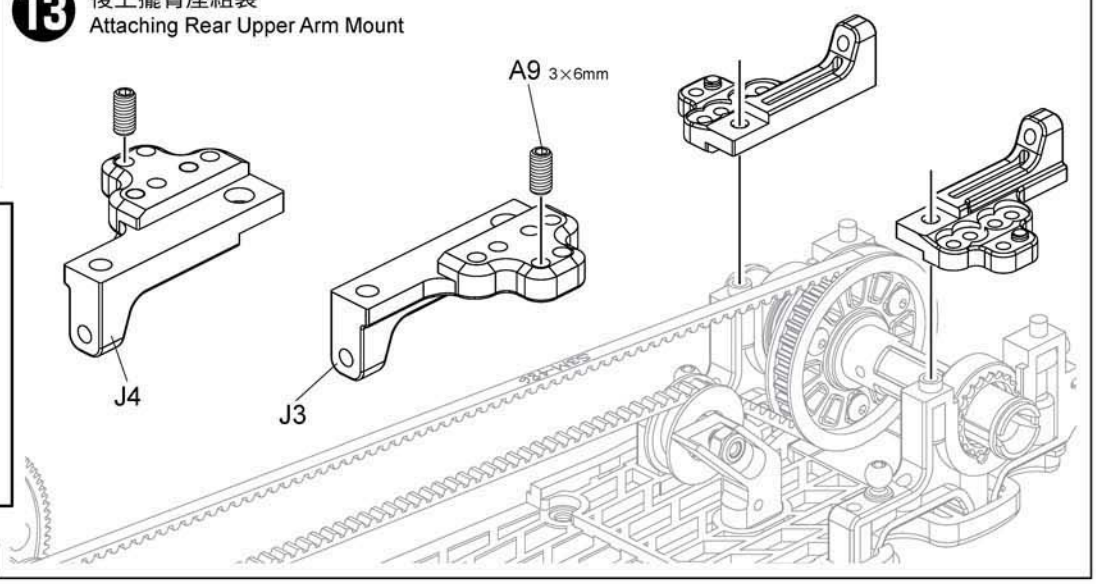


14

3×8mm 半圓頭螺絲
Screw
A3 ×2

3×6mm 半圓頭螺絲
Screw
A4 ×4

14 後二樓板組裝
Attaching Rear Upper Deck

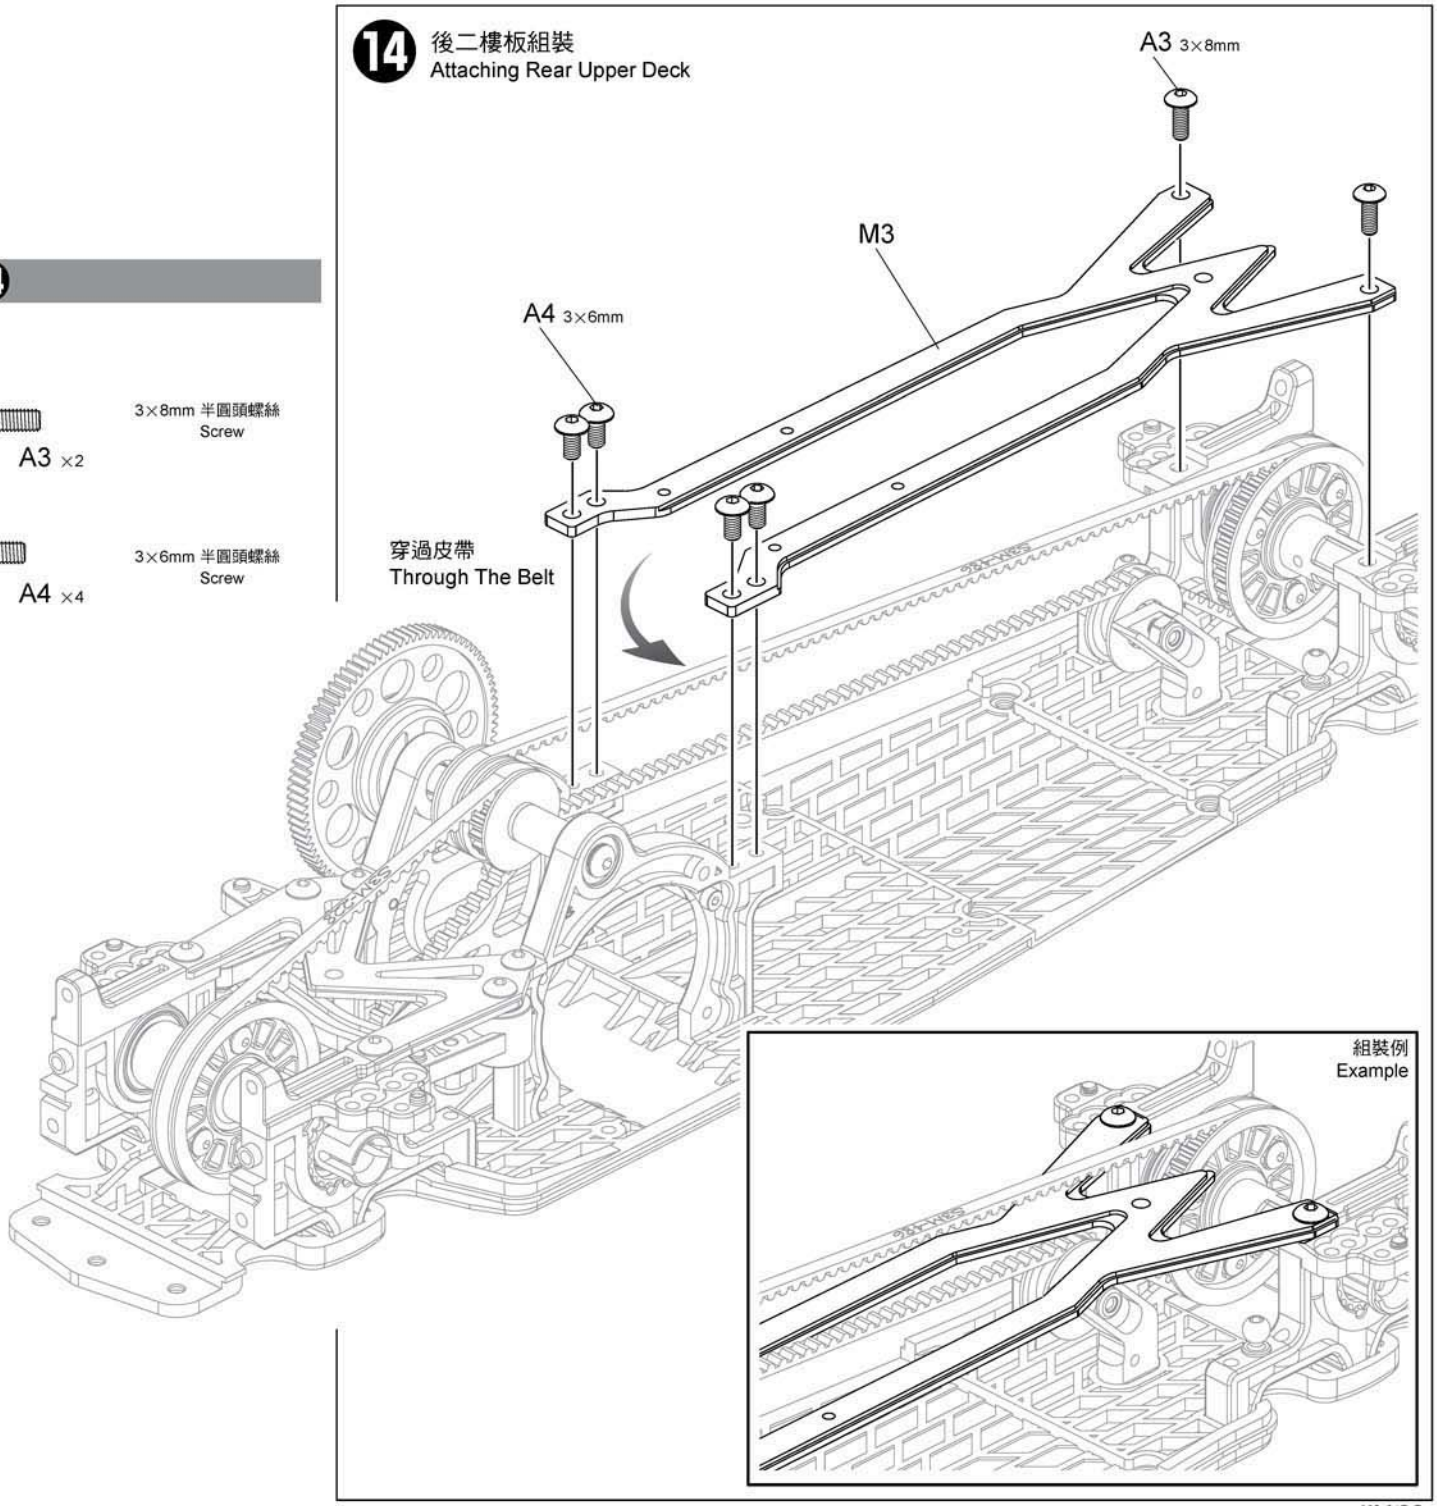

15

A6 ×2
3×6mm 沉頭螺絲
Screw


A8 ×2
3×16mm 止付螺絲
Screw


A10 ×4
3×13mm 扁頭螺絲
Screw


H4 ×2
5.8×21mm 拉桿頭
Adjuster


P15 ×4
5.8 球頭
Ball Connector

15 前下擺臂組裝
Attaching Front Lower Arm

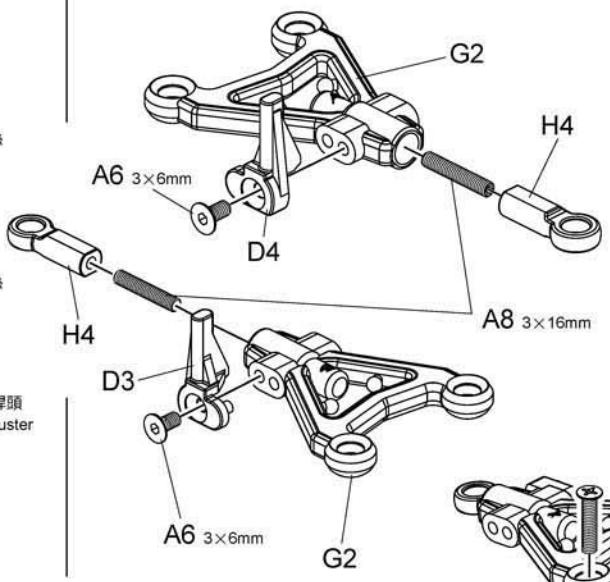

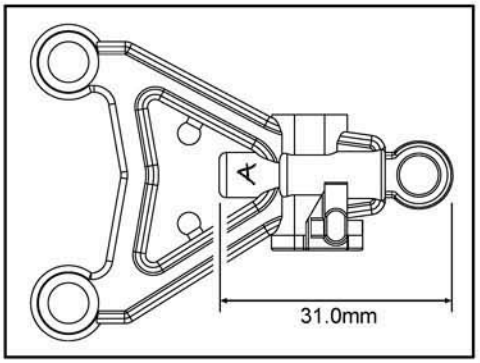

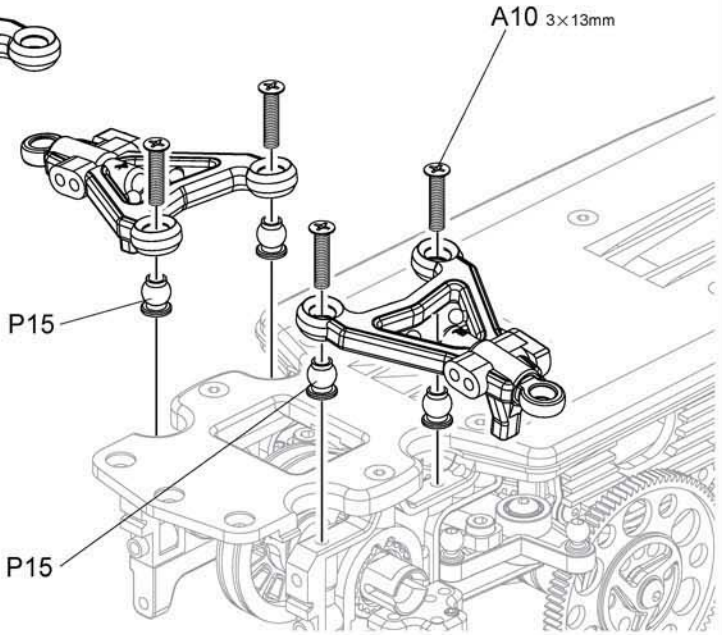

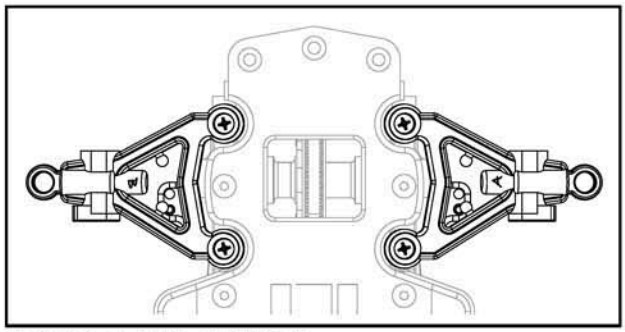

請參考圖示中擺臂上之字樣安裝
Attaching the arms per "A" "B" position as shown

16

A7 ×2
3×20mm 止付螺絲
Screw


A10 ×4
3×13mm 扁頭螺絲
Screw


P15 ×4
5.8 球頭
Ball Connector


H4 ×2
5.8×21mm 拉桿頭
Adjuster


16 後下擺臂組裝
Attaching Rear Lower Arm

＊ 製作2份
Make 2

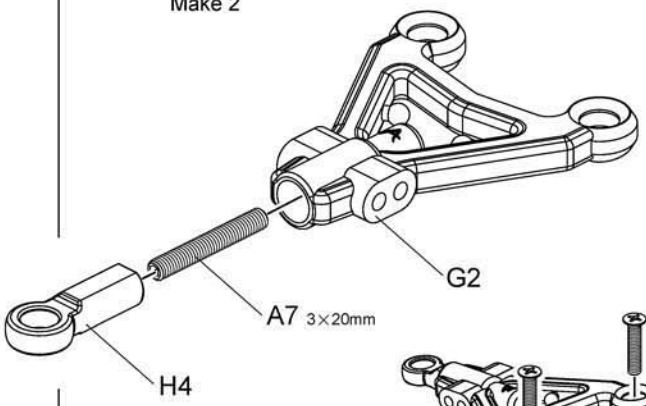

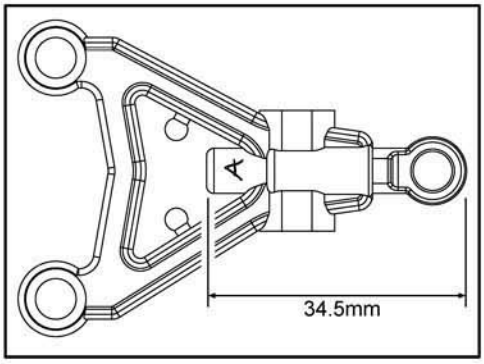


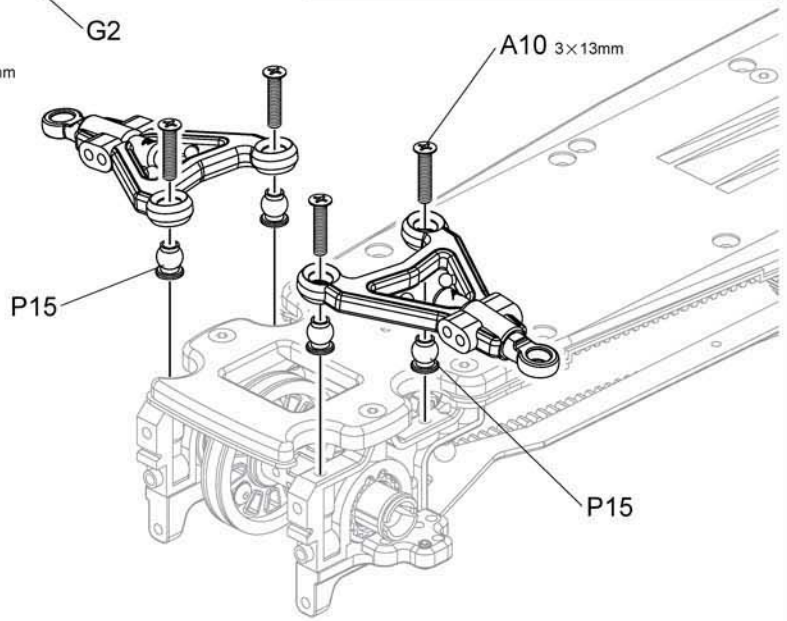

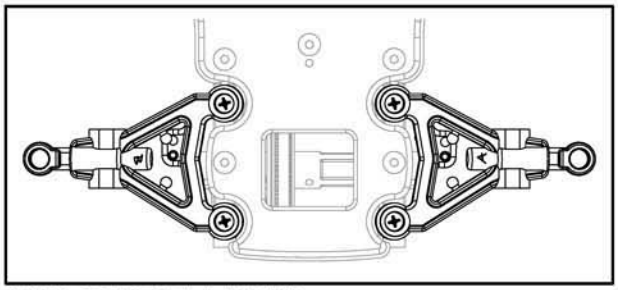

請參考圖示中擺臂上之字樣安裝
Attaching the arms per "A" "B" position as shown

17

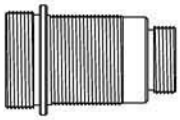

F4 ×4
避震器筒身
Damper Cylinder



F6 ×4 避震軸心
Piston Rod



F7 ×4
避震調整環
Spring Retainer



F9 ×4
避震器下蓋
Red Guide Cap




F10 ×4
O環墊片
Shaft Guide



F11 ×4
下蓋墊片
Rod Guide



F12 ×4
避震活塞
Piston

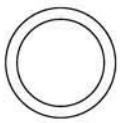

F13 ×4
11.5×1.5mm O形環
O-ring



F15 ×4
3mm O形環
O-ring




F16 ×8
E2.0 E扣
E-clip

18




F14 ×4
避震氣室
Oil Seal

19

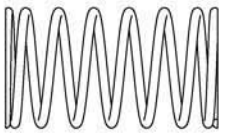


F5 ×4
避震彈簧
Coil Spring

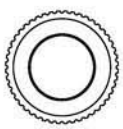


F8 ×4
避震器上蓋
Cylinder Cap

17 避震器組裝 Damper Assembly


＊ 製作4份
Make 4

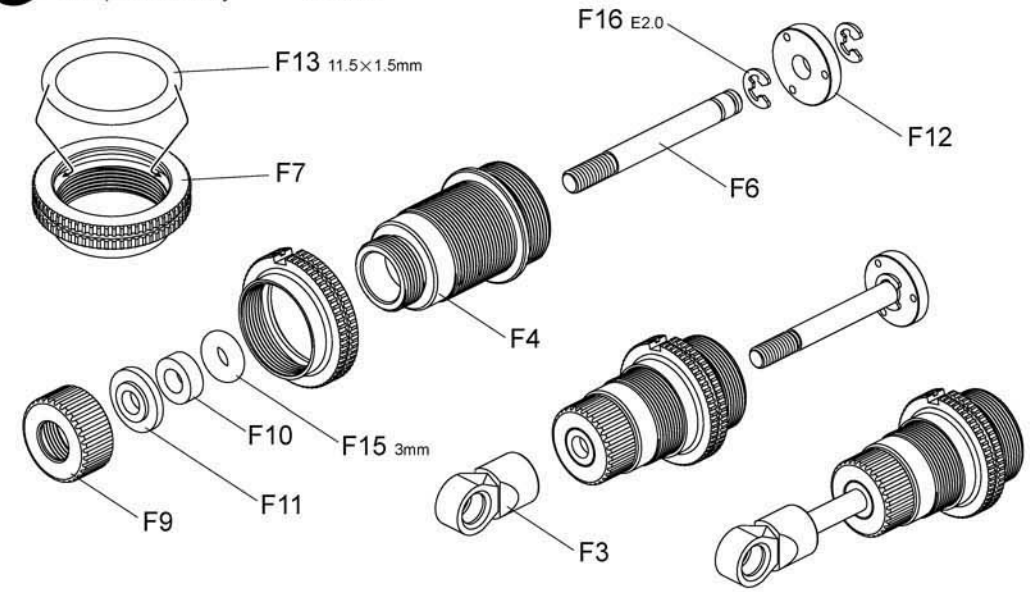

18 避震油組裝 Damper Oil

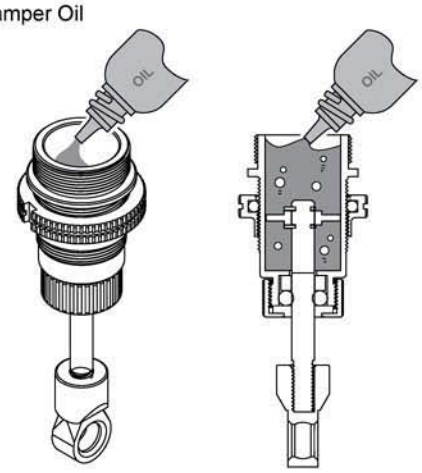


拉下活塞並填入矽油，緩慢上下移動活塞將氣泡移除
Pull down piston and pour oil into cylinder.
Remove air bubbles by slowly moving piston up and down.

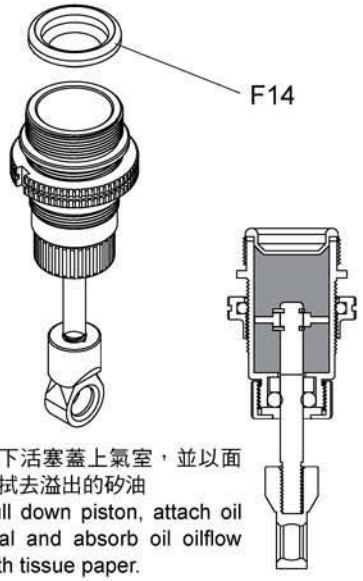


拉下活塞蓋上氣室，並以面紙拭去溢出的矽油
Pull down piston, attach oil seal and absorb oil oilflow with tissue paper.


19 避震油組裝 Damper Oil

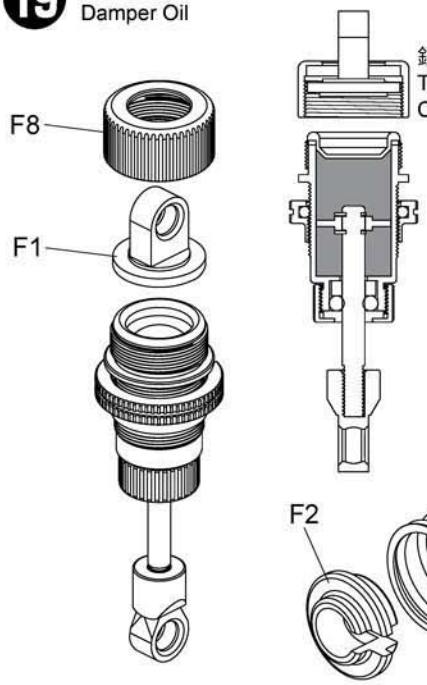

鎖緊上蓋
Tighten Cylinder Cap

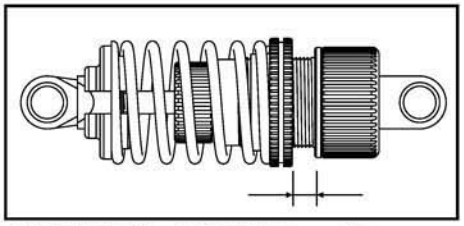

以前後車高來調整，預設車高為前5mm / 後6mm
The pre-setting height of chassis is at 5mm(front) / 6mm(rear). It's suggested to adjust the damper according this value.

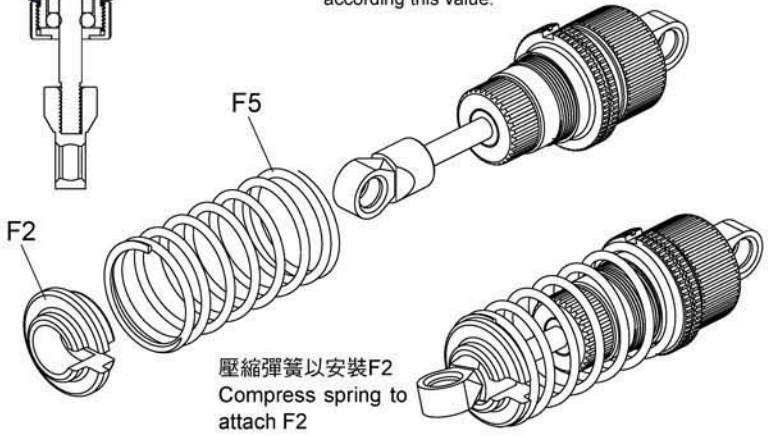

壓縮彈簧以安裝F2
Compress spring to attach F2

20

A3 ×4 — 3×8mm 半圓頭螺絲 Screw


A10 ×2 — 3×13mm 扁頭螺絲 Screw

A11 ×2 — 3×11mm 扁頭螺絲 Screw

P16 ×4 — 4.8 球頭 Ball Connector

P18 ×2 — 3×5.5×2 鋁墊片 Alum Spacer

20 前避震架組裝 Attaching Front Damper

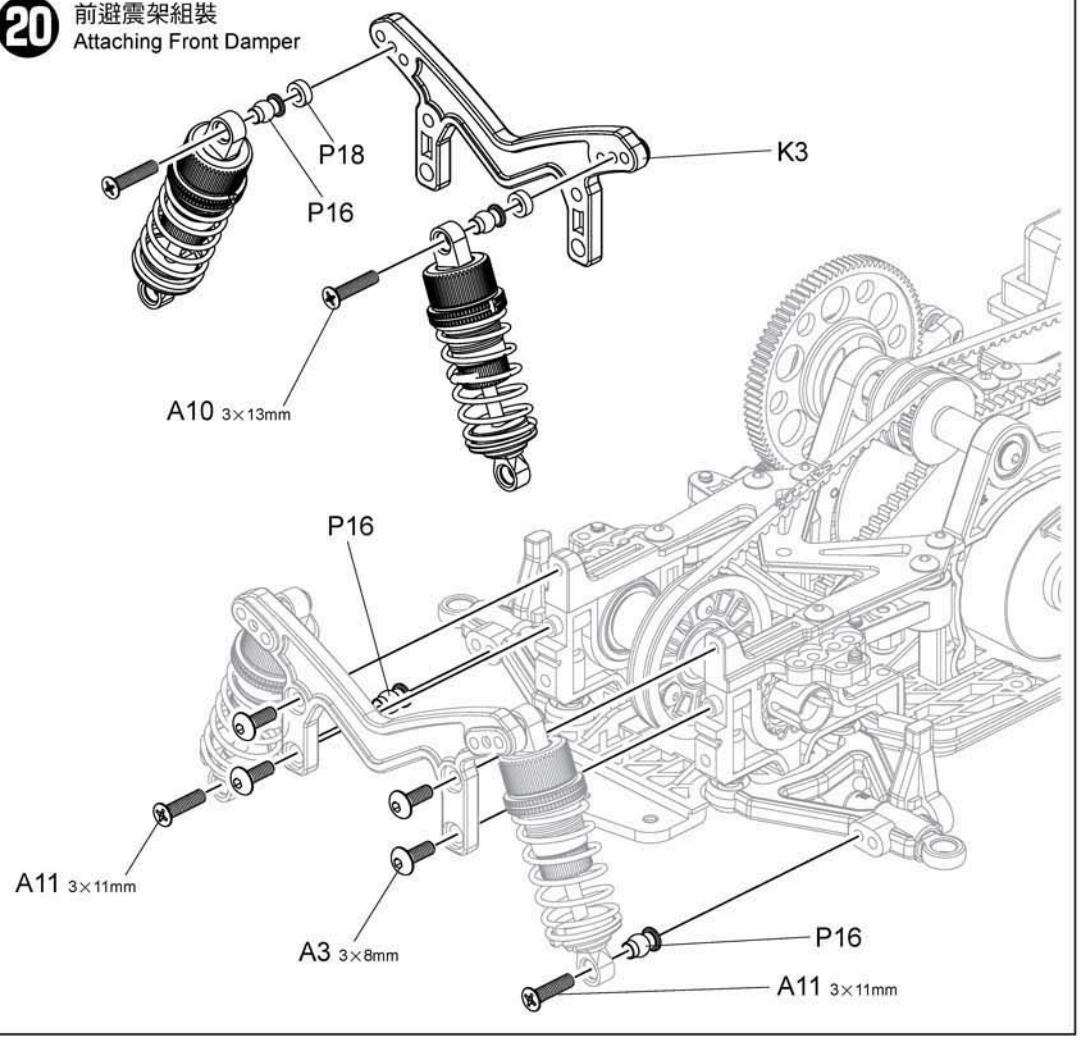

21

A3 ×4 — 3×8mm 半圓頭螺絲 Screw


A10 ×2 — 3×13mm 扁頭螺絲 Screw

A11 ×2 — 3×11mm 扁頭螺絲 Screw

P16 ×4 — 4.8 球頭 Ball Connector

P18 ×2 — 3×5.5×2 鋁墊片 Alum Spacer

21 後避震架組裝 Attaching Rear Damper

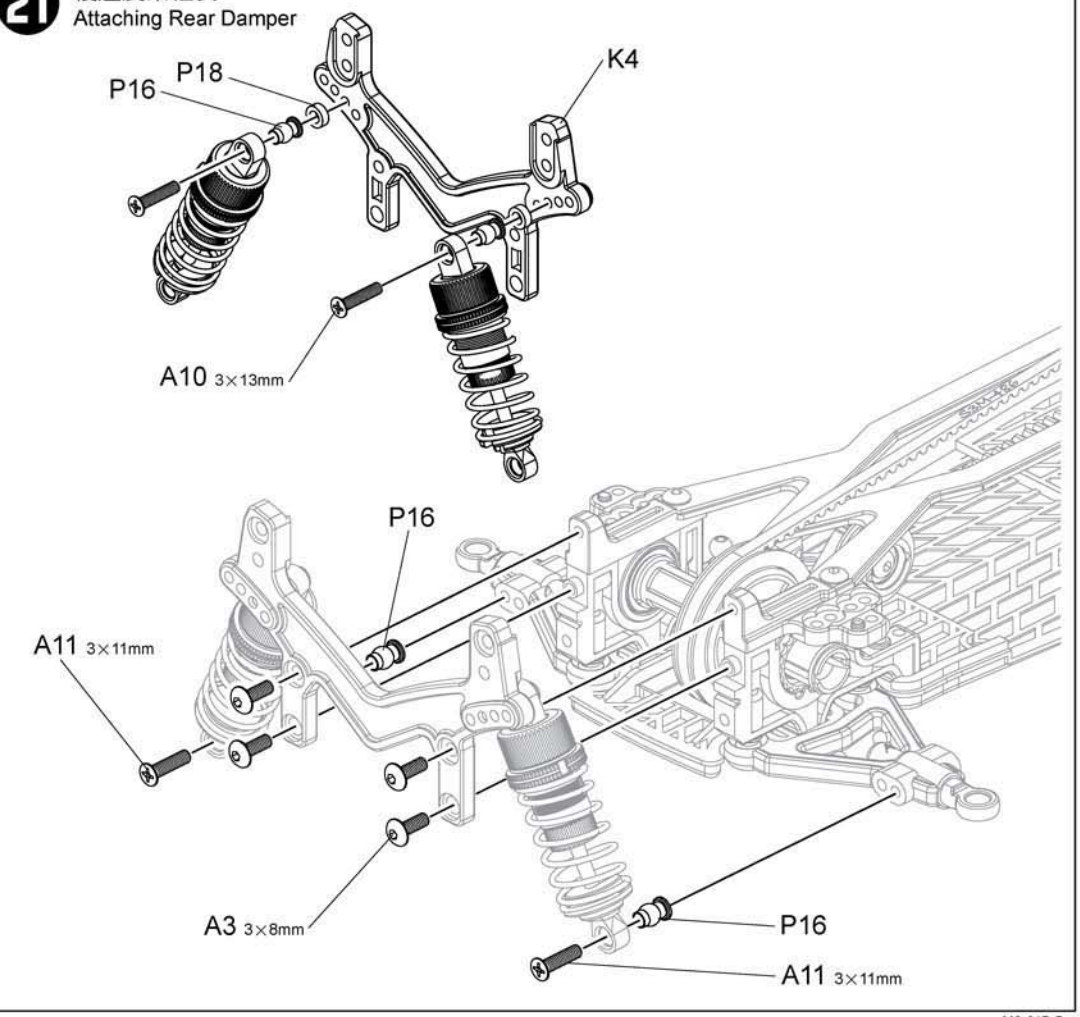


22

A11 ×4
3×11mm 扁頭螺絲
Screw

H4 ×2
5.8×21mm 拉桿頭
Adjuster

L3 ×2
3×20mm 可調拉桿（鋼）
Turn-Buckle Shaft (Steel)


P16 ×4
4.8 球頭
Ball Connector

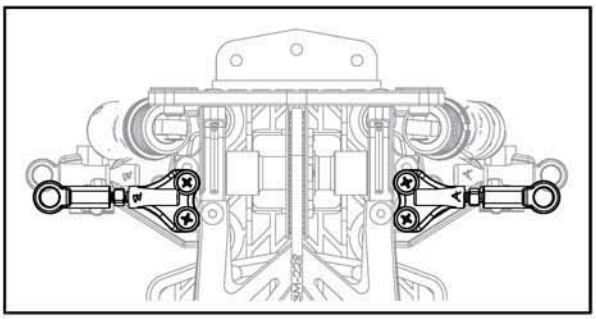


請參考圖示中擺臂上之字樣安裝
Attaching the arms per "A" "B" position as shown

22 前上擺臂組裝
Attaching Front Upper Arm

＊ 製作2份
Make 2

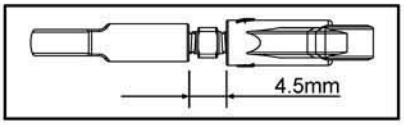

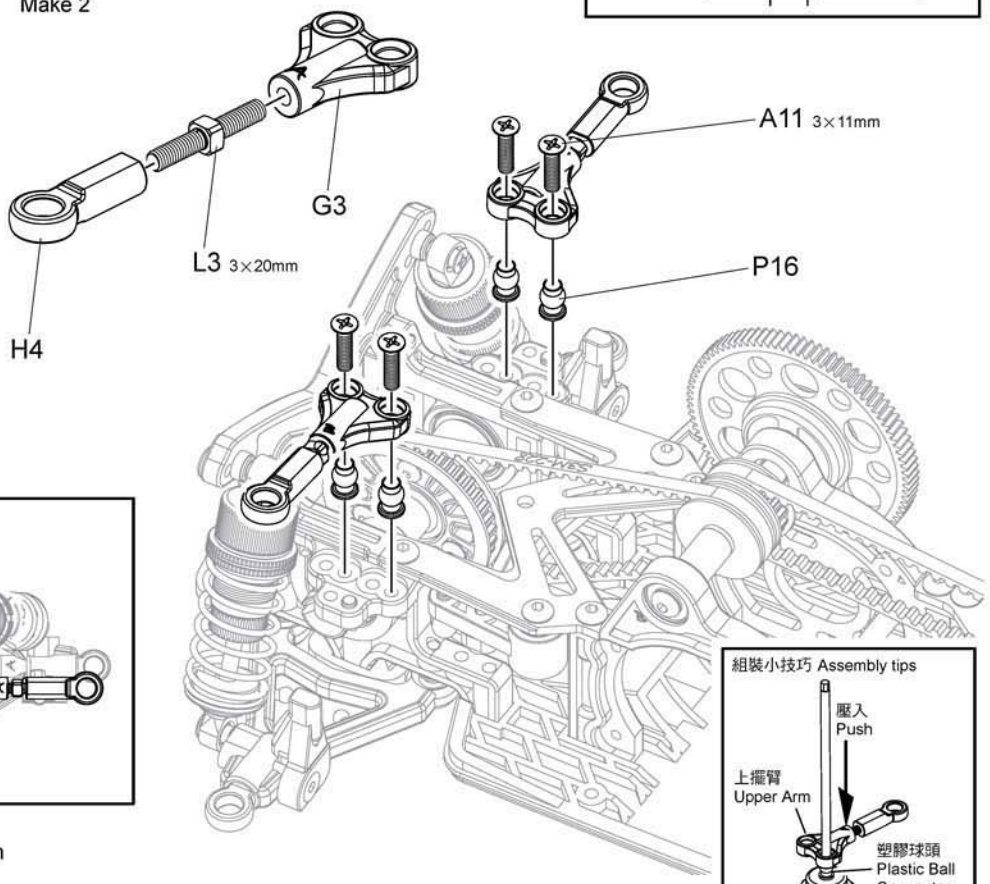


23

A11 ×4
3×11mm 扁頭螺絲
Screw

H4 ×2
5.8×21mm 拉桿頭
Adjuster

L4 ×2
3×25mm 可調拉桿（鋼）
Turn-Buckle Shaft (Steel)


P16 ×4
4.8 球頭
Ball Connector

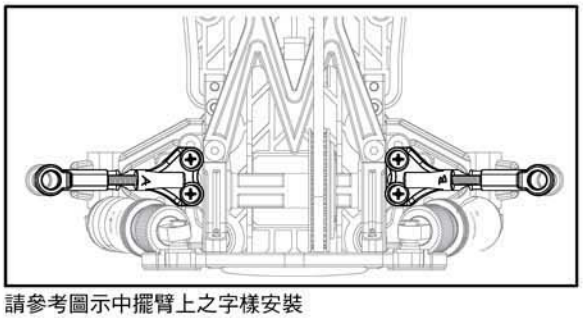


請參考圖示中擺臂上之字樣安裝
Attaching the arms per "A" "B" position as shown

23 後上擺臂組裝
Attaching Rear Upper Arm

＊ 製作2份
Make 2

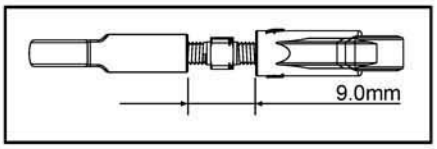


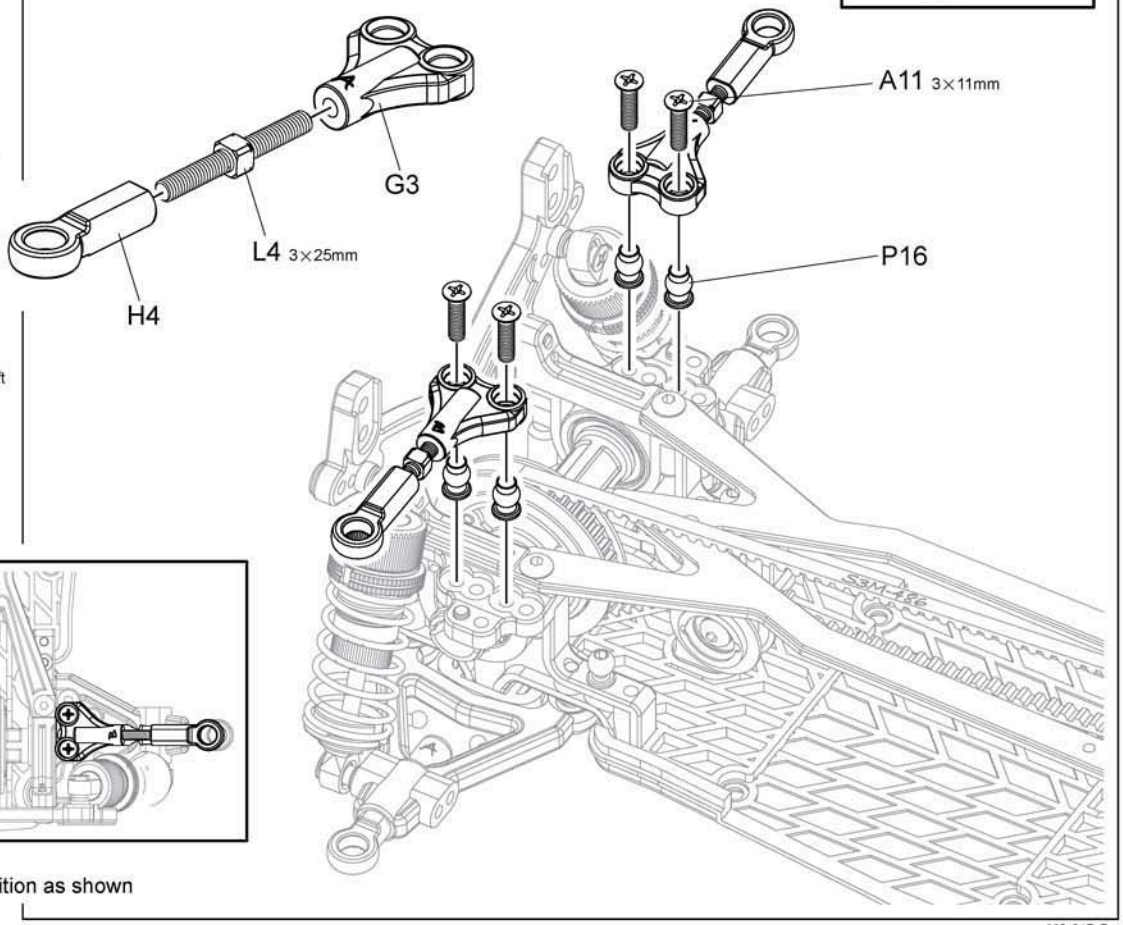

24





H5 ×4　4.8×18mm 拉桿頭
Adjuster




L2 ×2　3×28mm 可調拉桿 (鋼)
Turn-Buckle Shaft
(Steel)

24 轉向拉桿組裝
Steering Rod Assembly

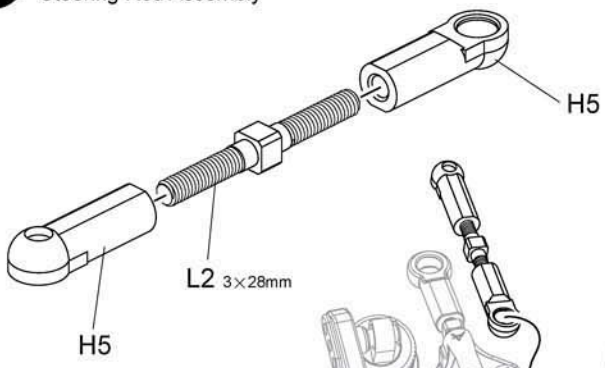

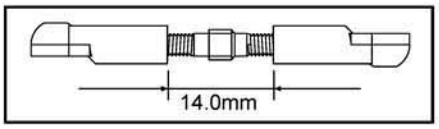

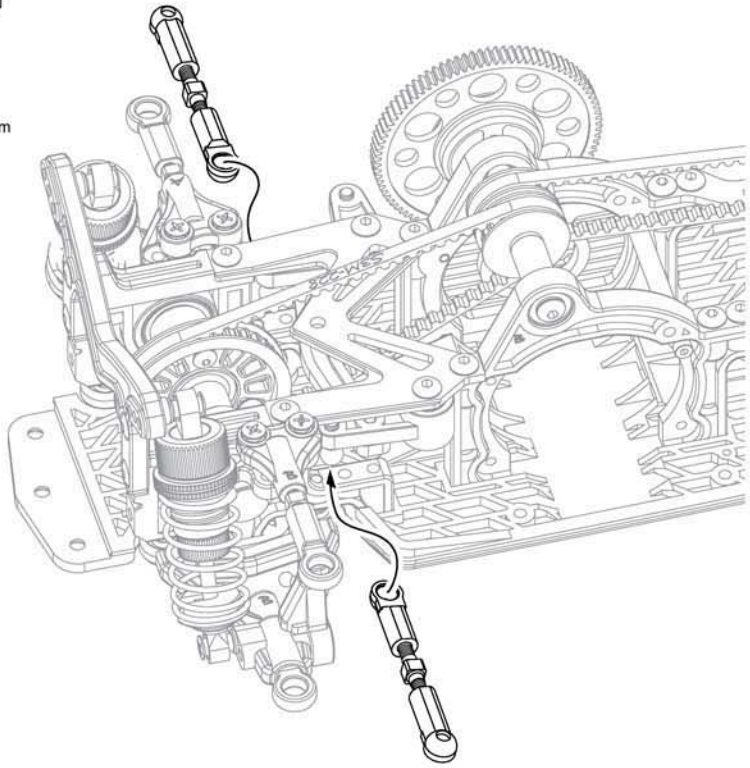

25





H5 ×4　4.8×18mm 拉桿頭
Adjuster




L3 ×2　3×20mm 可調拉桿 (鋼)
Turn-Buckle Shaft
(Steel)

25 後束角拉桿組裝
Rear Toe - in Rod Assembly

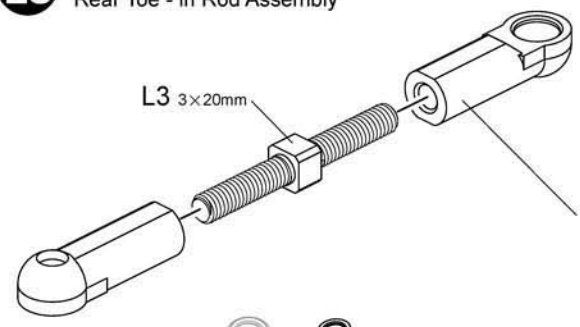

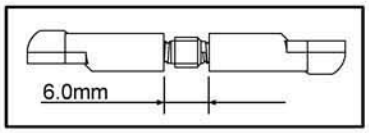

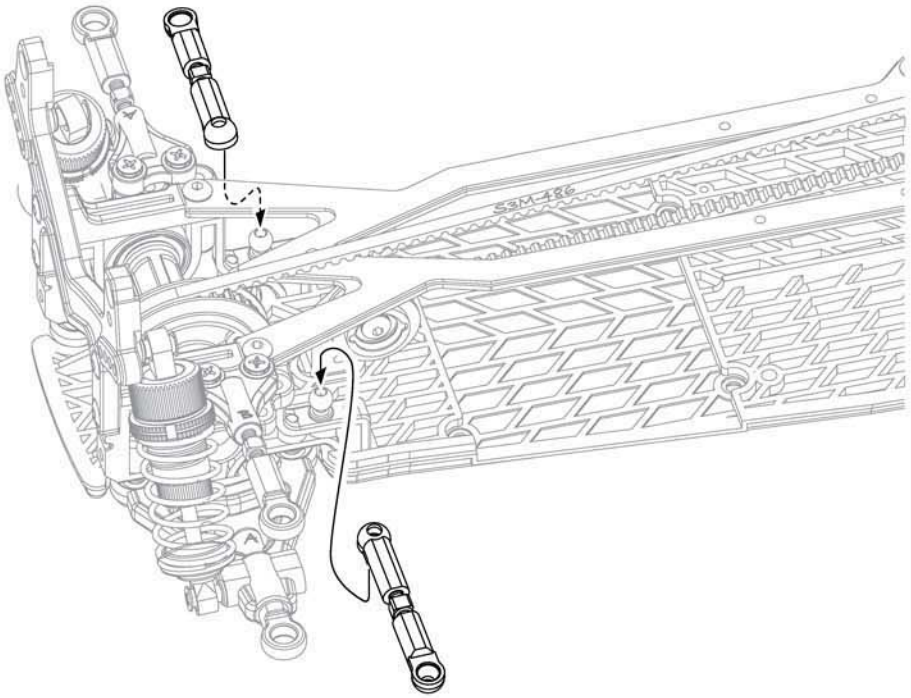

26

A22 ×4
2×9.8mm 插銷
Shaft

B1 ×2
10×15mm 滾珠軸承
Ball Bearing

B2 ×2
5×10mm 滾珠軸承
Ball Bearing

P4 ×2 大角度CVD傳動軸
60 Deg Universal Shaft

P6 ×2 輪軸
Wheel Axle

P7 ×2
連接軸
Cross Joint

P17 ×2
4.8×5mm 球頭
Ball Connector


27

A11 ×4
3×11mm 扁頭螺絲
Screw

P15 ×4
5.8 球頭
Ball Connector

26 前輪座組裝
Front Axle Assembly


＊ 製作2份
Make 2

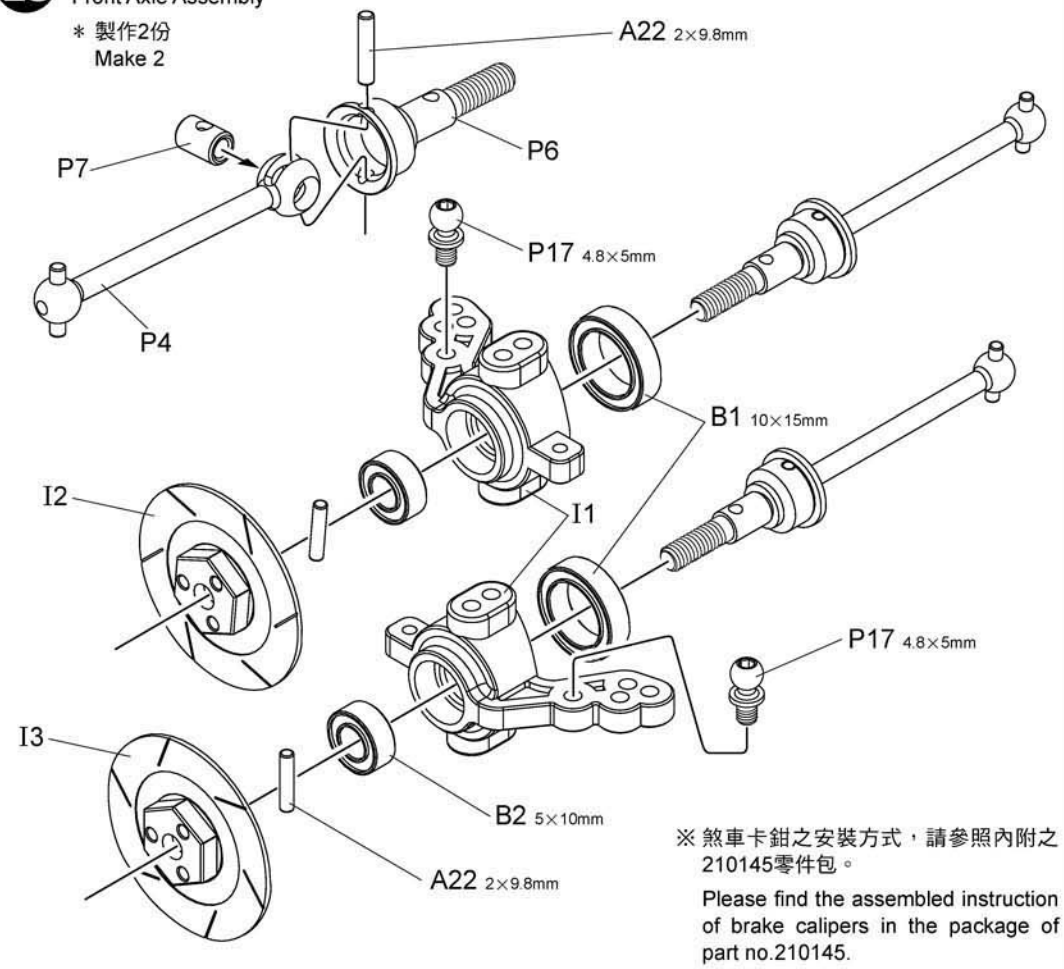

※ 煞車卡鉗之安裝方式，請參照內附之210145零件包。

Please find the assembled instruction of brake calipers in the package of part no.210145.

27 前輪座組裝
Attaching Front Axle

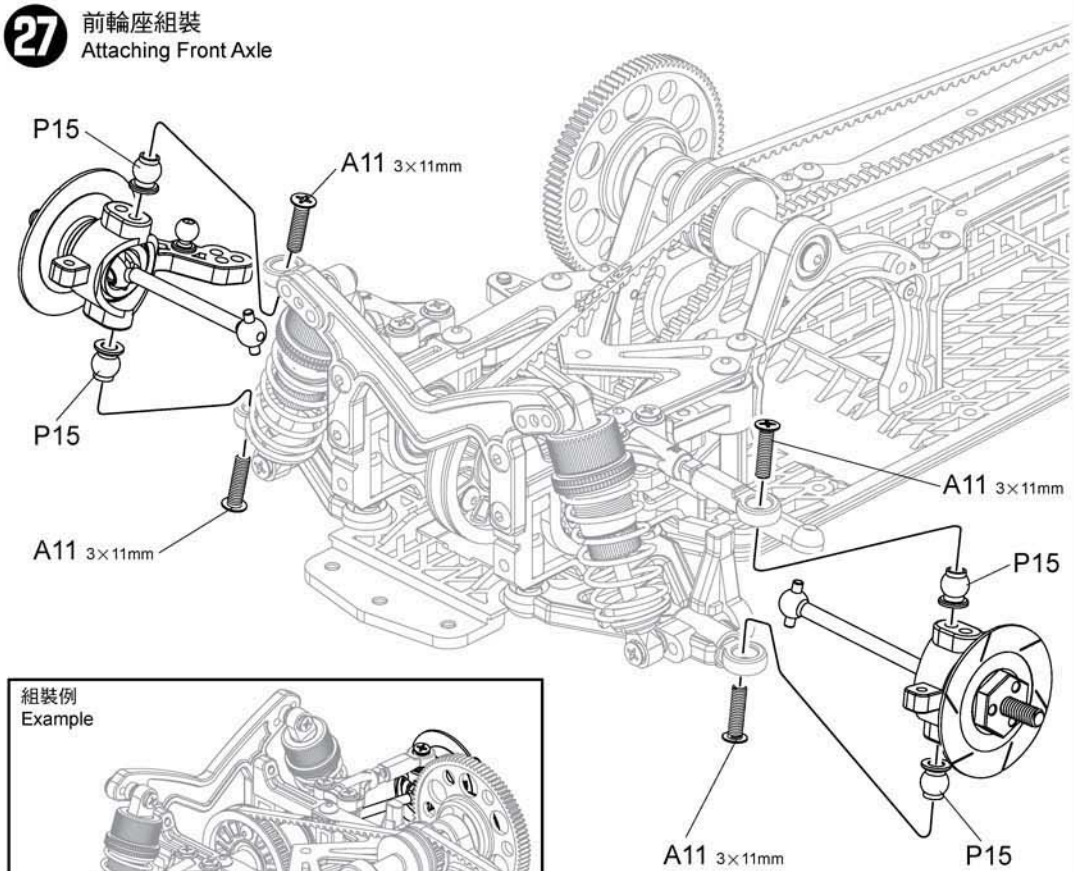

組裝例
Example

28

A22 ×4
2×9.8mm 插銷
Shaft

B1 ×2
10×15mm 滾珠軸承
Ball Bearing

B2 ×2
5×10mm 滾珠軸承
Ball Bearing


P5 ×2 CVA 傳動軸
CVA Swing Shaft

P6 ×2 輪軸
Wheel Axle

P17 ×2
4.8×5mm 球頭
Ball Connector

28 後輪座組裝
Rear Axle Assembly

＊ 製作2份
Make 2

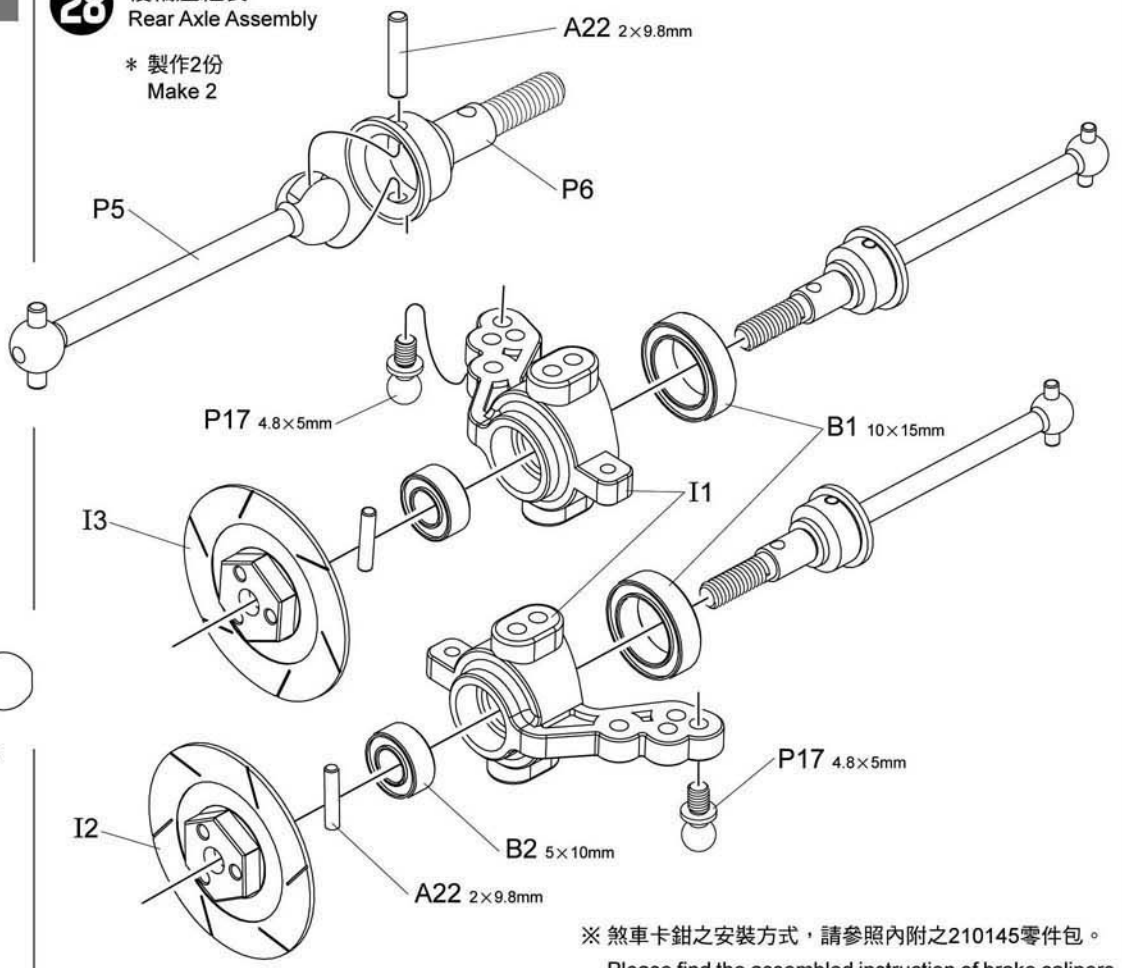


※ 煞車卡鉗之安裝方式，請參照內附之210145零件包。
Please find the assembled instruction of brake calipers in the package of part no.210145.

29

A11 ×4
3×11mm 扁頭螺絲
Screw

P15 ×4
5.8 球頭
Ball Connector

29 後輪座組裝
Attaching Rear Axle

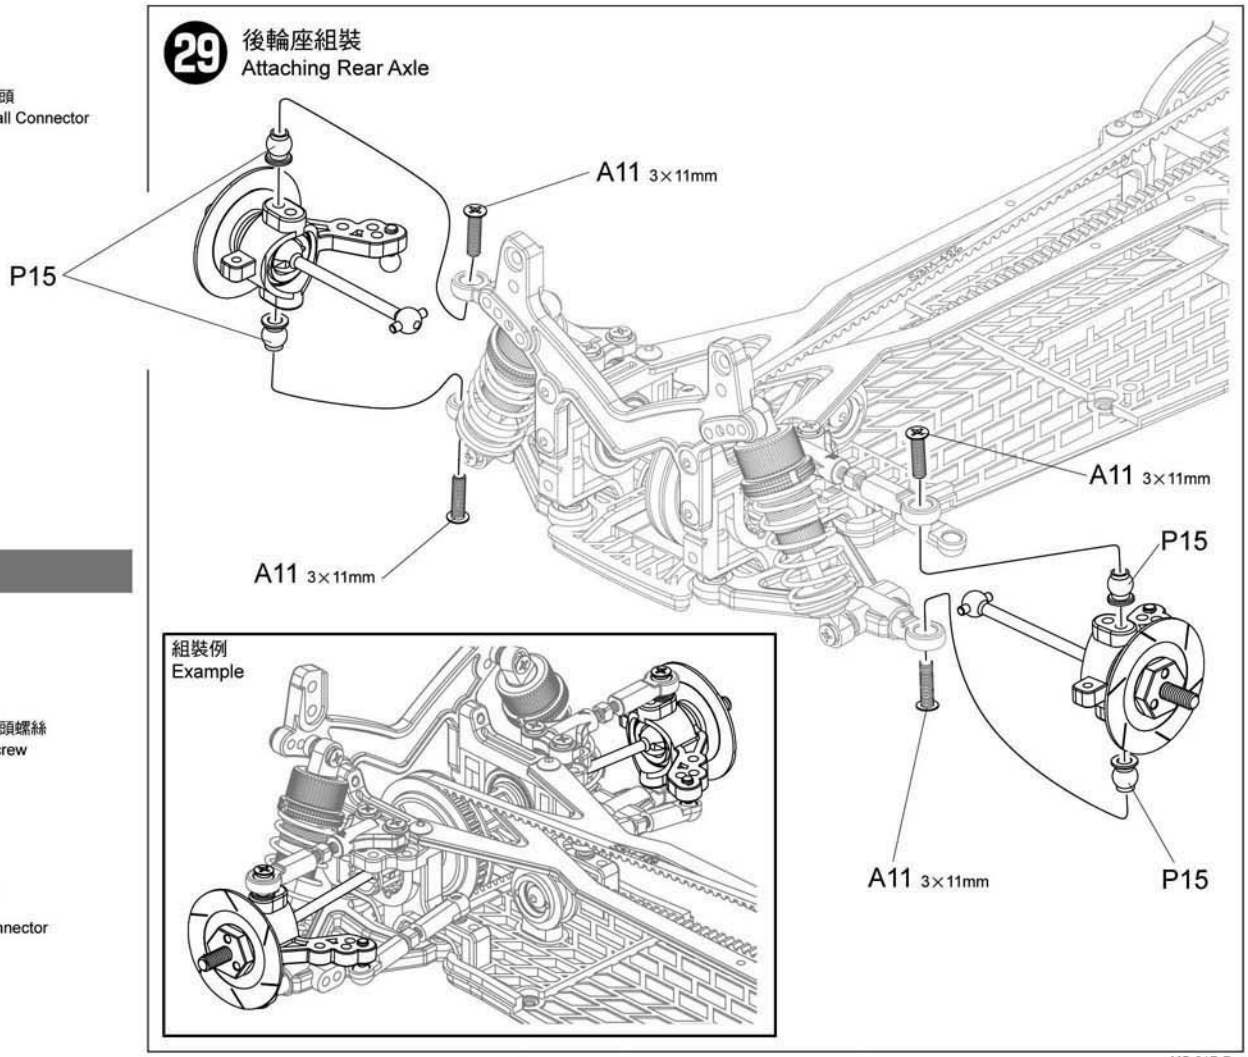

組裝例
Example


30




A4 ×2 — 3×6mm 半圓頭螺絲 Screw



A5 ×5 — 3×8mm 沉頭螺絲 Screw



A23 ×2 — R形扣 R-clip

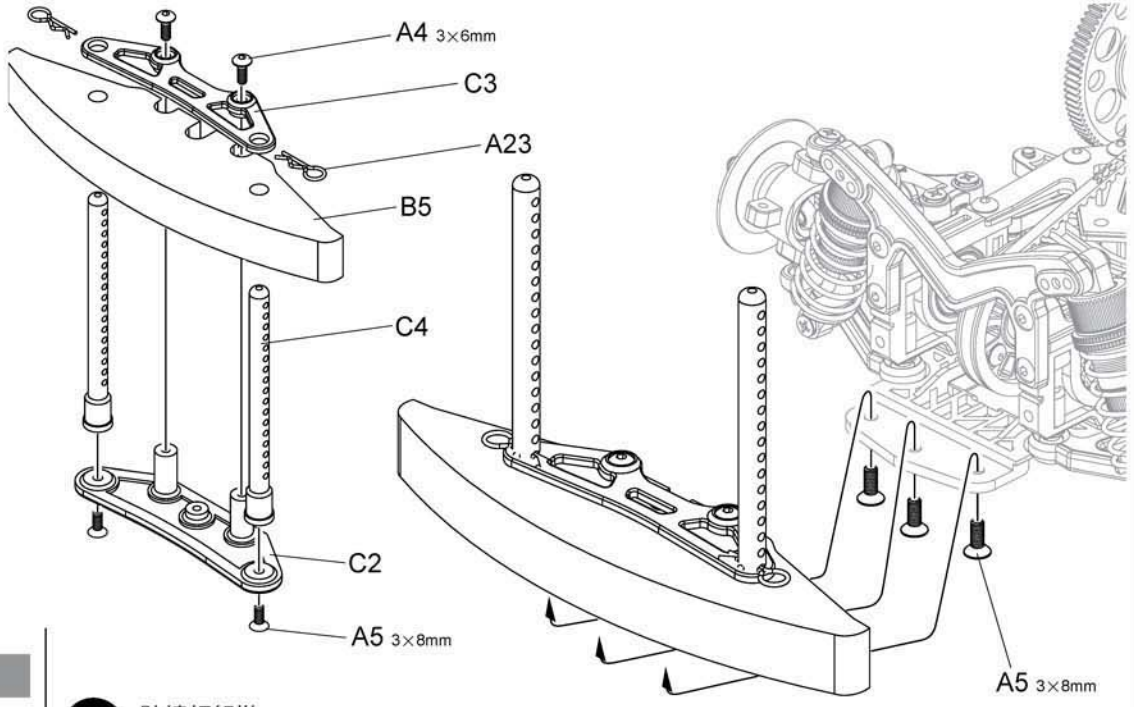


30 防撞板組裝
Attaching Bumper


31



A3 ×2 — 3×8mm 半圓頭螺絲 Screw



A13 ×2 — 2.5×14mm 半圓頭螺絲 Screw

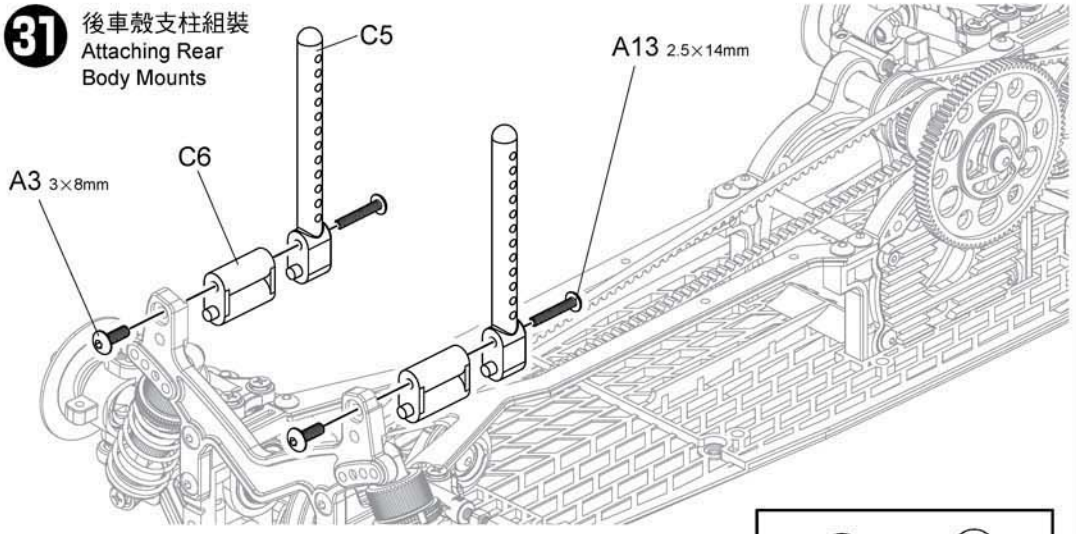

31 後車殼支柱組裝
Attaching Rear Body Mounts

32

車體之電子設備請依各廠之說明書安裝設定，本說明書僅做安裝範例。

This instruction of R/C unit assembly is only for reference. Please follow the instruction manual of R/C unit which is used.



A2 ×1 — 3×10mm 半圓頭螺絲 Screw



A14 ×1 — 2.6×10mm 半圓頭螺絲 Screw


依照伺服機規格挑選適合的螺絲。
Match part with servo.



A4 ×4 — 3×6mm 半圓頭螺絲 Screw



P17 ×1 — 4.8×5mm 球頭 Ball Connector

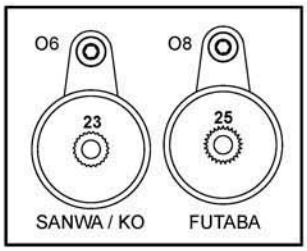

32 伺服緩衝組裝
Attaching Servo Saver


伺服中立點設定
Attaching the servo as shown

33



3×8mm 沉頭螺絲
Screw

A5 ×2

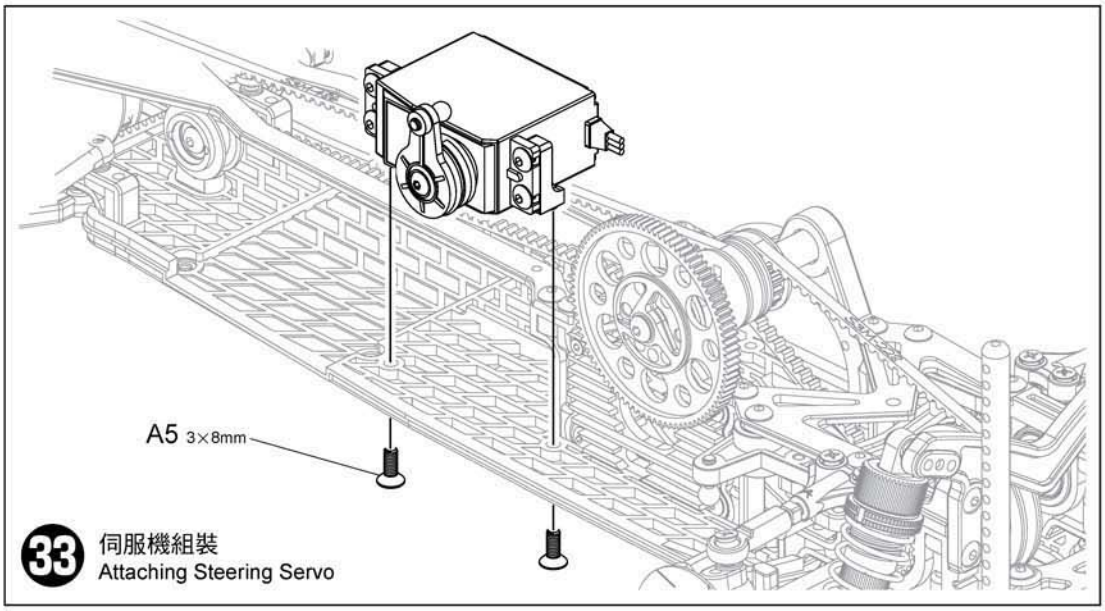

34


車體之電子設備請依各廠之說明書安裝設定，本說明書僅做安裝範例。

This instruction of R/C unit assembly is only for reference. Please follow the instruction manual of R/C unit which is used



2×4mm 半圓頭螺絲
Screw


A17 ×2

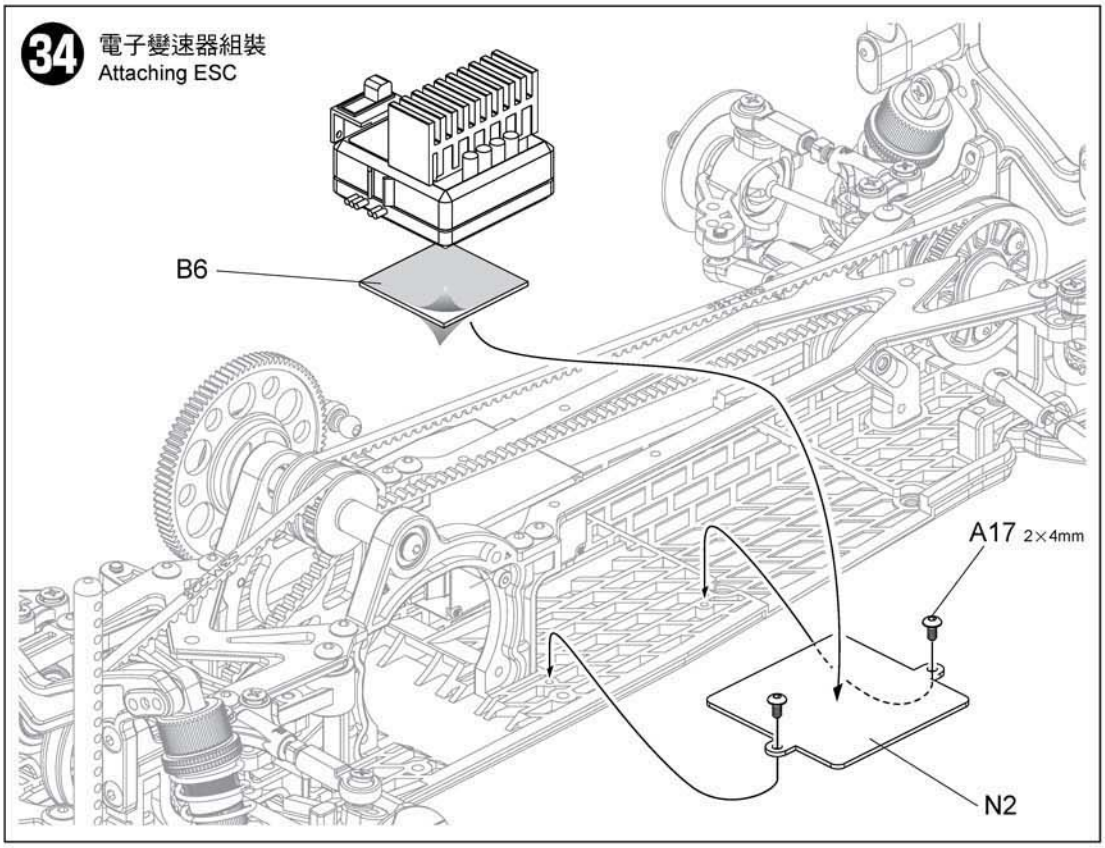

35

車體之電子設備請依各廠之說明書安裝設定，本說明書僅做安裝範例。

This instruction of R/C unit assembly is only for reference. Please follow the instruction manual of R/C unit which is used

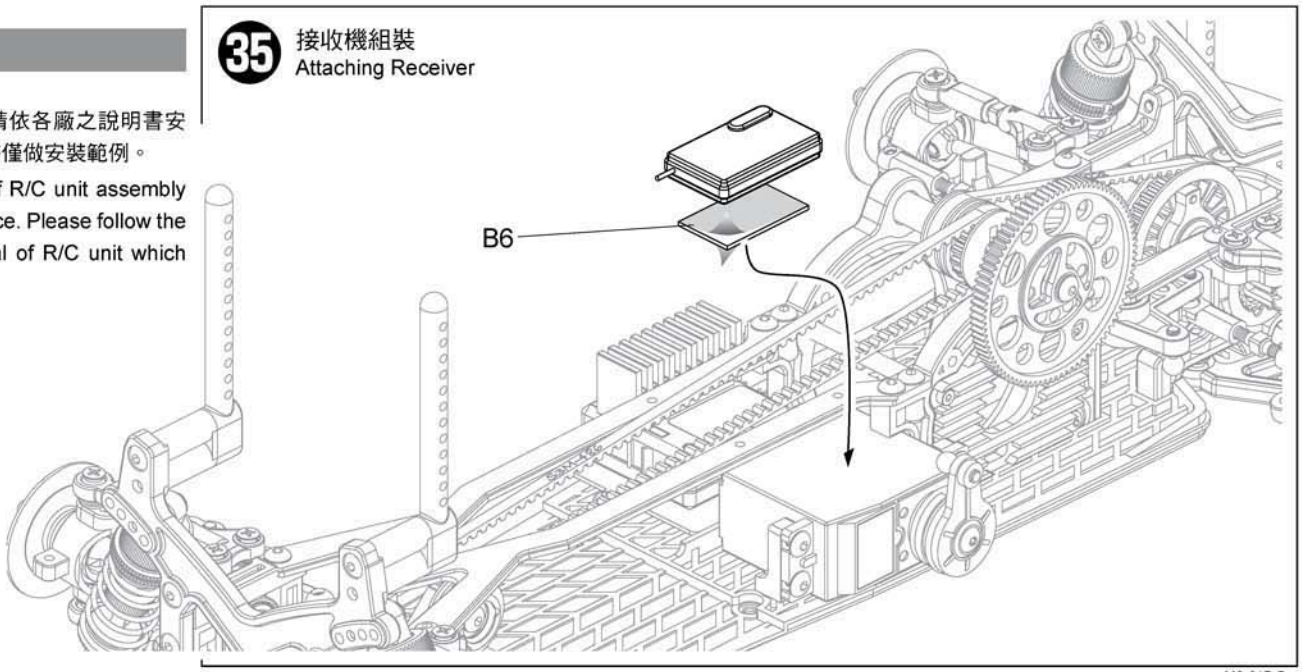


36



3×8mm 沉頭螺絲
Screw

A5 ×4

36 電池座組裝 Attaching Battery Mount

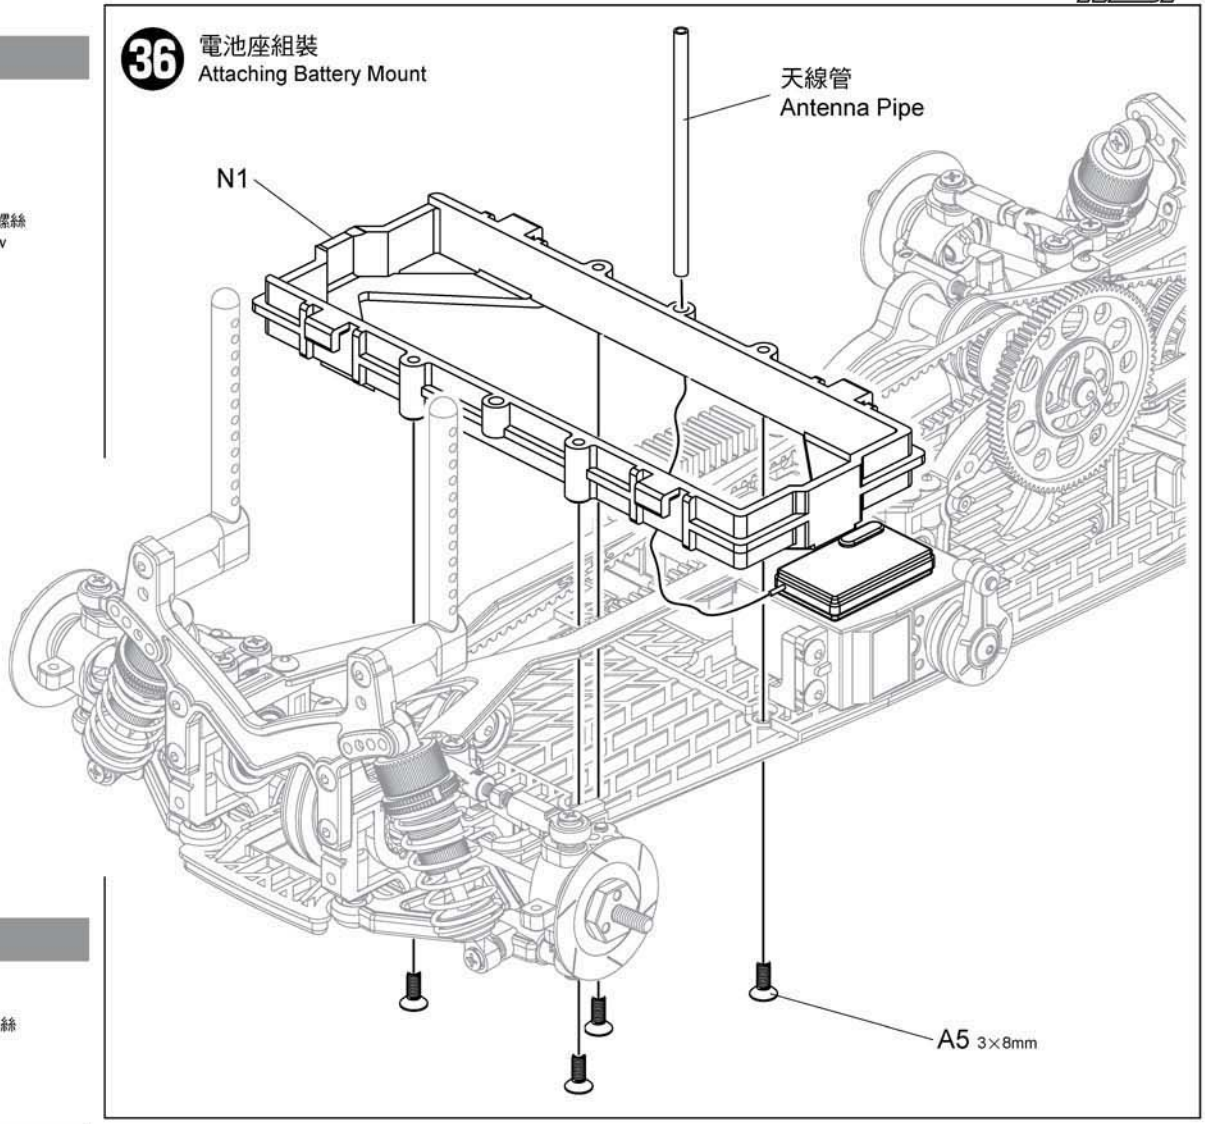

37



3×6mm 半圓頭螺絲
Screw

A4 ×2


齒比表 Gear Ratio		
大齒盤 Spur Gear	馬達齒 Pinion Gear	齒輪比 Gear Ratio
88 (210003) (OP.148088)	24	7.33
	25	7.04
	26	6.77
	27	6.52
	28	6.29
89 (OP.148089)	23	7.74
	24	7.42
	25	7.12
	26	6.85
	27	6.59
90 (OP.148090)	22	8.18
	23	7.83
	24	7.50
	25	7.20
	26	6.92
91 (OP.148091)	21	8.67
	22	8.27
	23	7.91
	24	7.58
	25	7.28
92 (OP.148092)	20	9.20
	21	8.76
	22	8.36
	23	8.00
	24	7.67

＊齒比計算公式 Formula：

$$\left(\frac{\text{大齒盤齒數 Spur gear teeth}}{\text{馬達盤齒數 Pinion gear teeth}} \times 2.0\right) : 1$$

＊更多詳細內容請上官網
More details, please refer to MST website
[www.rc-mst.com]


37 馬達組裝 Attaching Motor

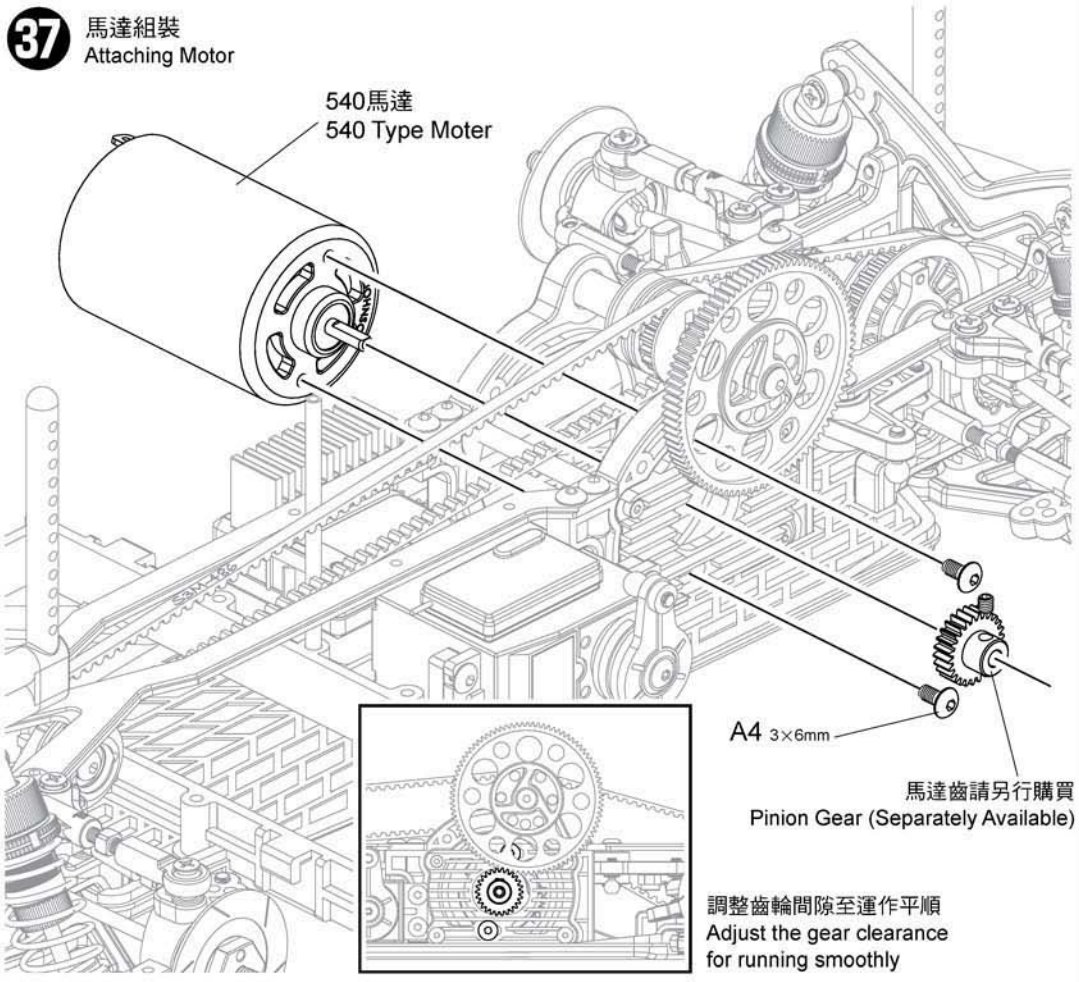

38




H5 ×2　4.8×18mm 拉桿頭
Adjuster



L1 ×1　3×60mm 可調拉桿
Turn-Buckle Shaft

38 轉向伺服拉桿組裝
Attaching Steering Rod

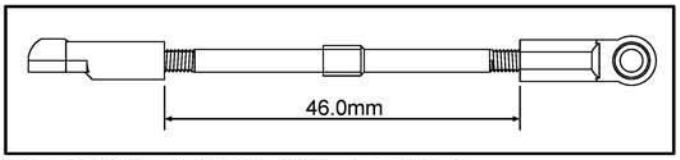


39



A18 ×2
M4 突緣螺帽
Flange Nut

39 前輪組裝
Attaching Front Wheels

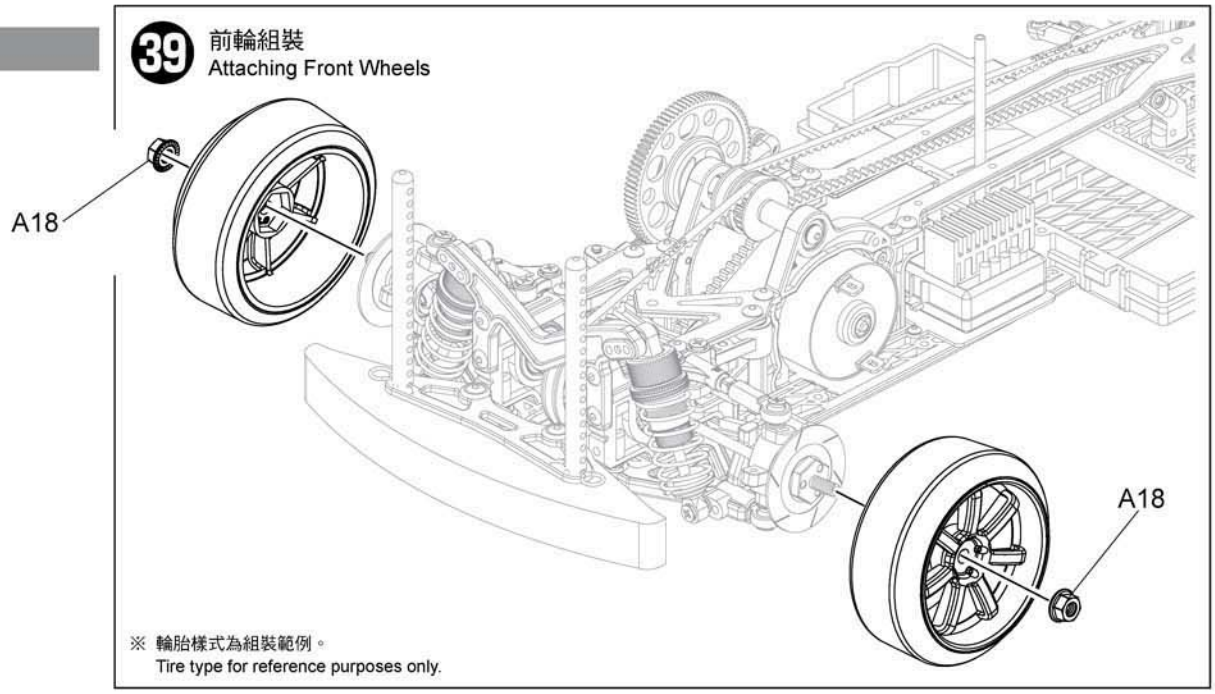


※ 輪胎樣式為組裝範例。
Tire type for reference purposes only.

40




A18 ×2
M4 突緣螺帽
Flange Nut

40 後輪組裝
Attaching Rear Wheels

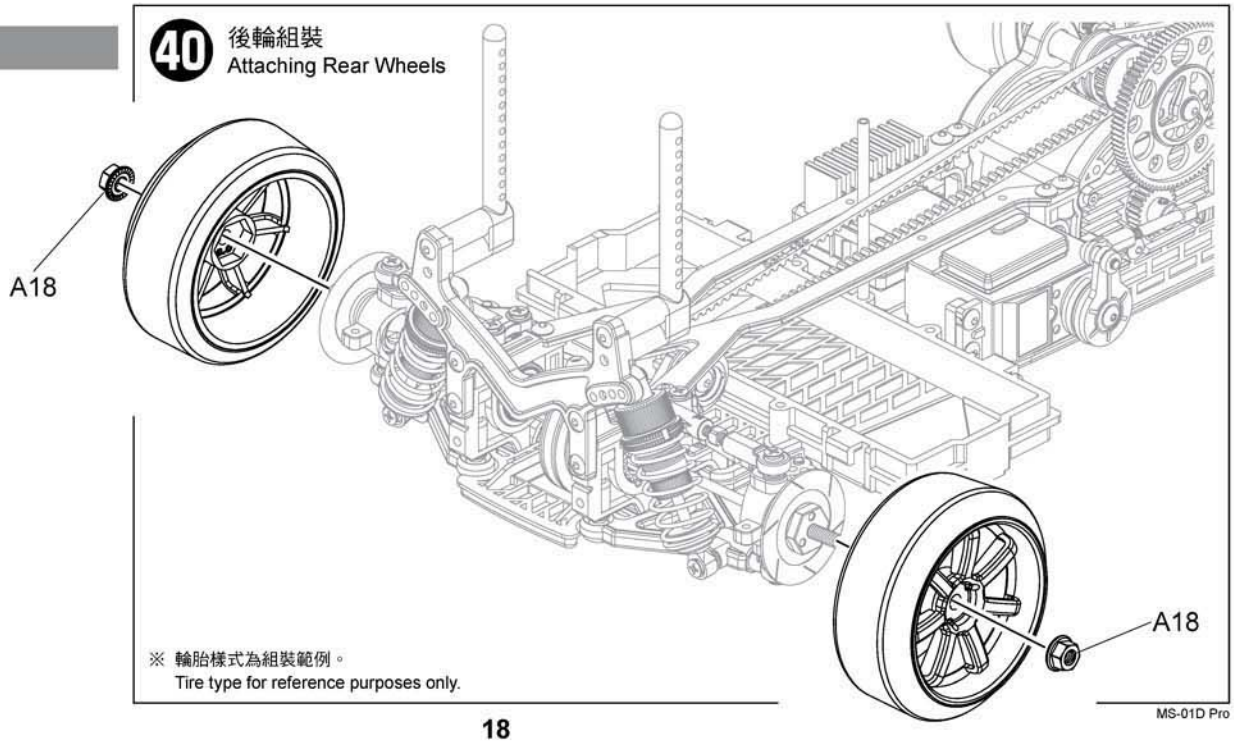


※ 輪胎樣式為組裝範例。
Tire type for reference purposes only.

41

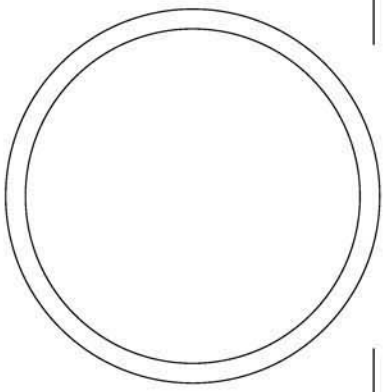

B4 ×2
44×2.6mm O形環
O-Ring

41 電池組裝
Attaching Battery

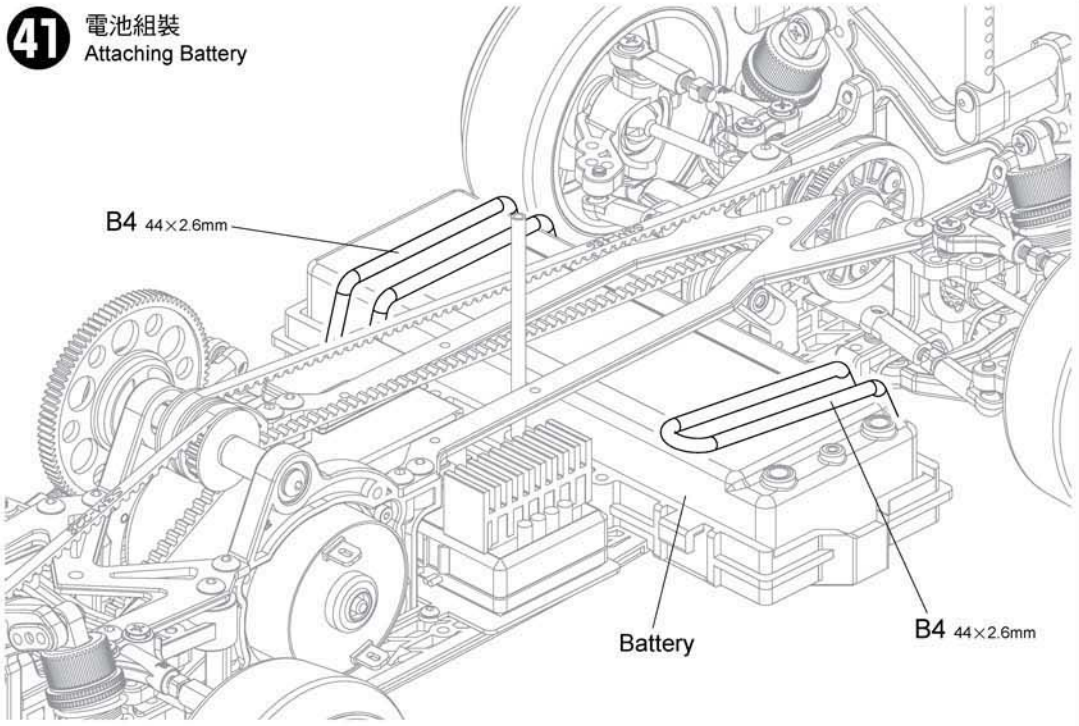

42



A21 ×4　2×11.8mm 插銷
Shaft

42 車殼固定座組裝
Attaching Body Mount

插銷孔位需依照車殼位置
Determine the position of shafts according to body

PARTS

不使用
Not Used

A PARTS



A1 ×1
110029
M3×12 半圓頭螺絲
Screw



A2 ×1
110026
M3×10 半圓頭螺絲
Screw



A3 ×14
110002
M3×8 半圓頭螺絲
Screw




A4 ×20
110001
M3×6 半圓頭螺絲
Screw



A5 ×24
110005
M3×8 沉頭螺絲
Screw



A6 ×3
110024
M3×6 沉頭螺絲
Screw



A7 ×2
110009
M3×20 止付螺絲
Screw



A8 ×2
110023
M3×16 止付螺絲
Screw



A9 ×4
110007
M3×6 止付螺絲
Screw



A10 ×12
110014
M3×13 扁頭螺絲
Screw



A11 ×20
110012
M3×11 扁頭螺絲
Screw



A12 ×2
110011
M3×6 CAP螺絲
Screw



A13 ×2
110010
M2.5×14 半圓頭螺絲
Screw



A14 ×1
110025
2.6×10 半圓頭螺絲
Screw



A15 ×10
110003
M2.5×6 半圓頭螺絲
Screw



A16 ×2
110027
M2×8 有頭螺絲
Screw



A17 ×2
110004
M2×4 半圓頭螺絲
Screw



A18 ×4
110015
M4 突緣螺帽
Nut



A19 ×1
110021
M3 防鬆螺帽
Nut




A20 ×1
110018
2×13.8 插銷
Shaft



A21 ×7
110019
2×11.8 插銷
Shaft



A22 ×8
110017
2×9.8 插銷
Shaft



A23 ×6
110016
R6 R形扣
R-clip

B PARTS




B1 ×8
120001
10×15 滾珠軸承
Ball bearing




B2 ×4
120002
5×10 滾珠軸承
Ball bearing



B3 ×4
120003
5×8 滾珠軸承
Ball bearing

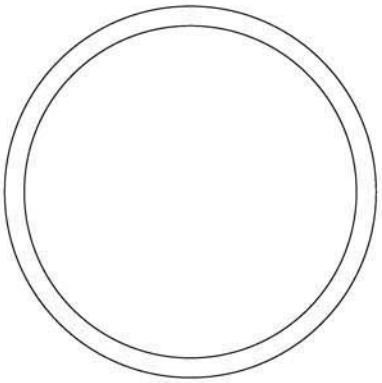


B4 ×2
130003
44×2.6 O形環
O-ring

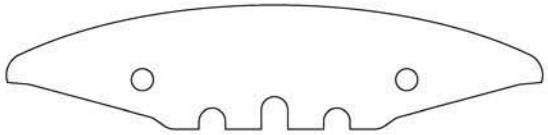

B5 ×1
130005
防撞泡棉
Bumper




B6 ×1
130006
泡棉雙面膠
Bumper



B7 ×1
130008
黑色油膏
Black grease



B8 ×1
130009
避震油 300#
Damper oil 300#





B9 ×1
130011
工具包
Tools


C PARTS


210002



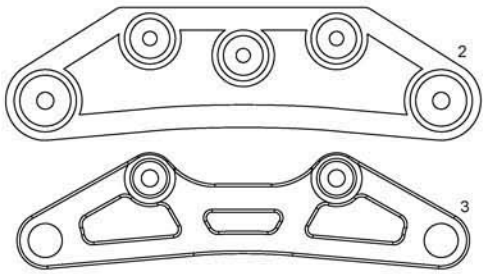


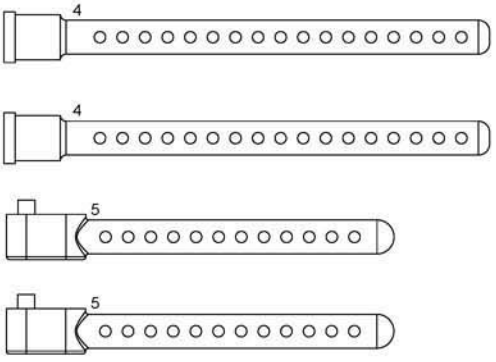



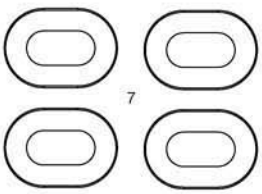

D PARTS

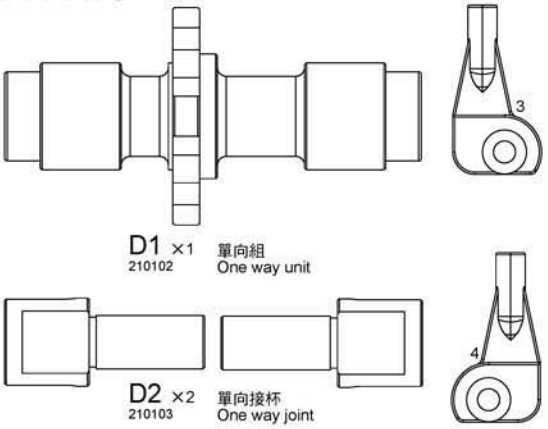


D1 ×1
210102
單向組
One way unit

D2 ×2
210103
單向接杯
One way joint


PARTS

不使用
Not Used


E PARTS ×2
210004

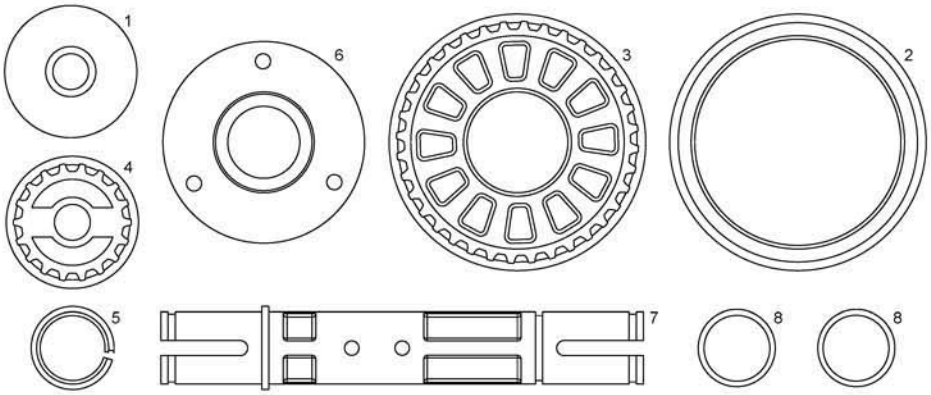


G PARTS ×4
210006

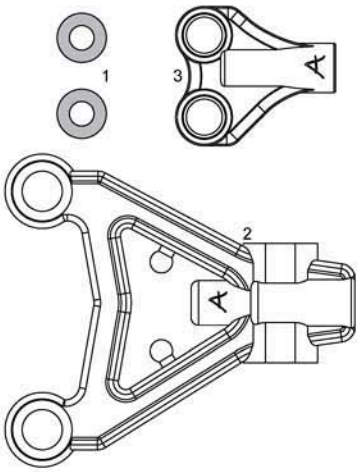


H PARTS ×2
210007

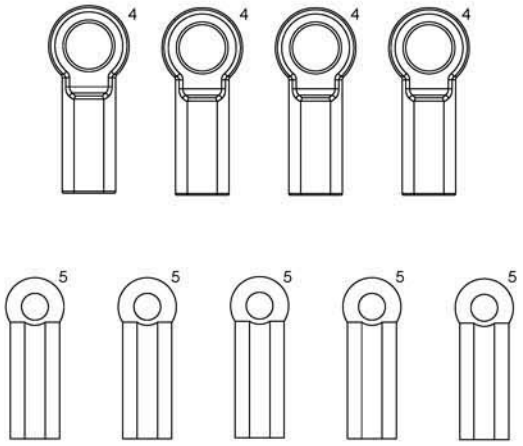


I PARTS ×2
210008

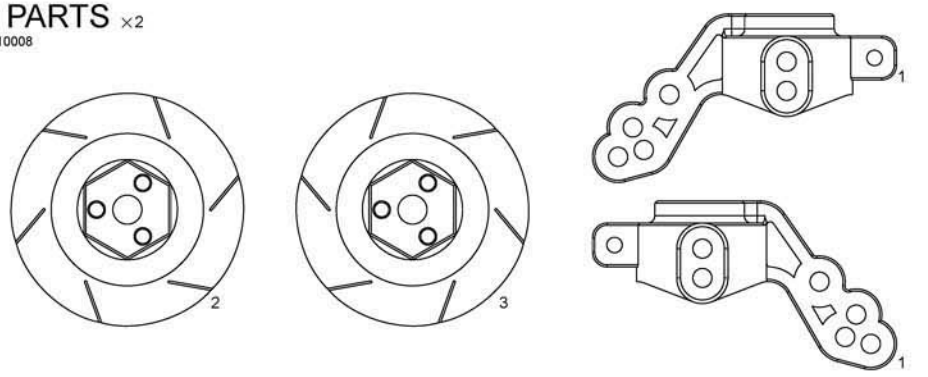

J PARTS ×2
210009

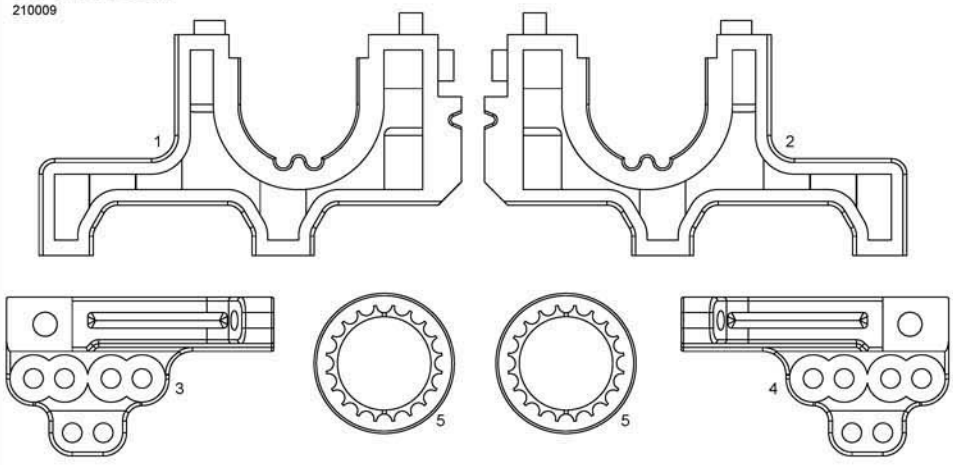

F PARTS
210115

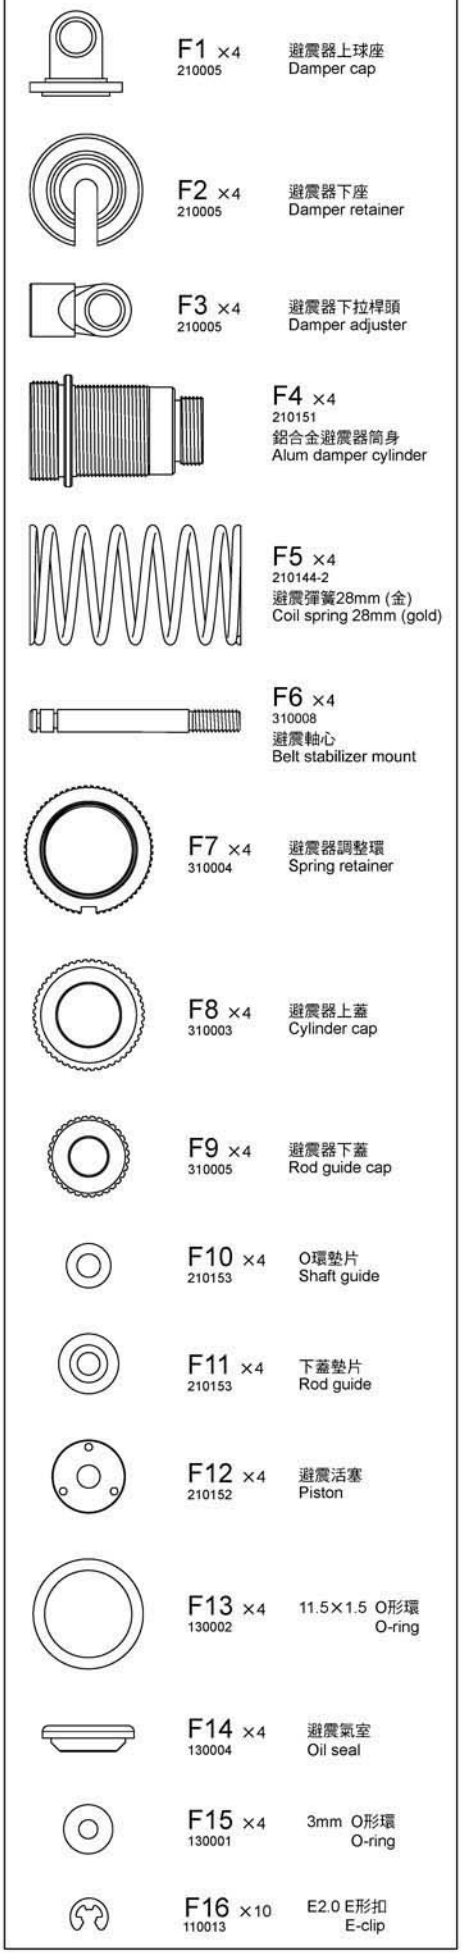


F1 ×4 210005	避震器上球座 Damper cap
F2 ×4 210005	避震器下座 Damper retainer
F3 ×4 210005	避震器下拉桿頭 Damper adjuster
F4 ×4 210151	鋁合金避震器筒身 Alum damper cylinder
F5 ×4 210144-2	避震彈簧28mm (金) Coil spring 28mm (gold)
F6 ×4 310008	避震軸心 Belt stabilizer mount
F7 ×4 310004	避震器調整環 Spring retainer
F8 ×4 310003	避震器上蓋 Cylinder cap
F9 ×4 310005	避震器下蓋 Rod guide cap
F10 ×4 210153	O環墊片 Shaft guide
F11 ×4 210153	下蓋墊片 Rod guide
F12 ×4 210152	避震活塞 Piston
F13 ×4 130002	11.5×1.5 O形環 O-ring
F14 ×4 130004	避震氣室 Oil seal
F15 ×4 130001	3mm O形環 O-ring
F16 ×10 110013	E2.0 E形扣 E-clip

PARTS


不使用
Not Used

K PARTS


210010

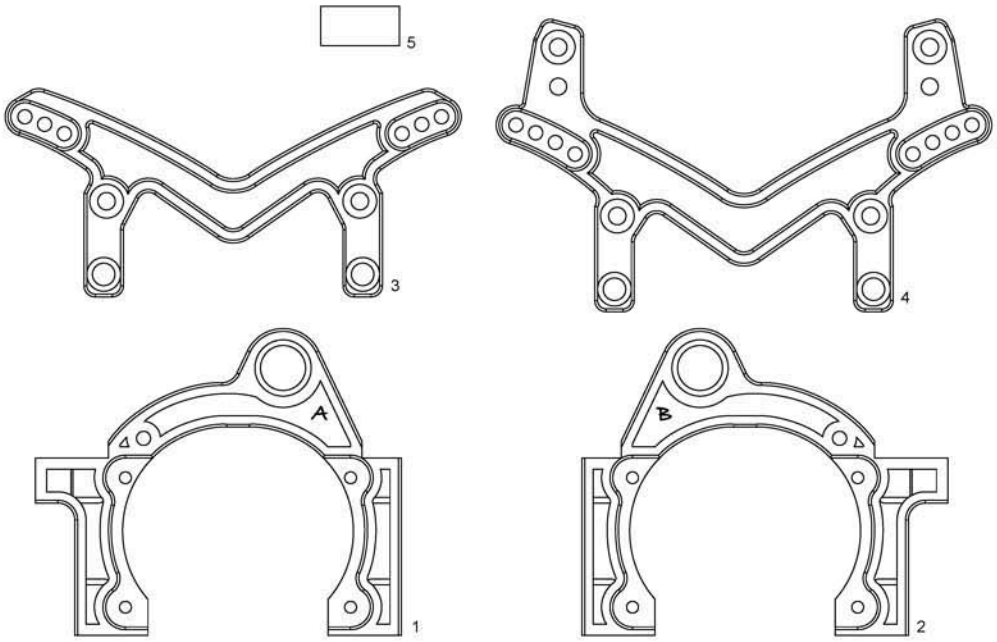


210135 ×1set
鋁合金主軸座R/L
Alum main shaft mount R/L

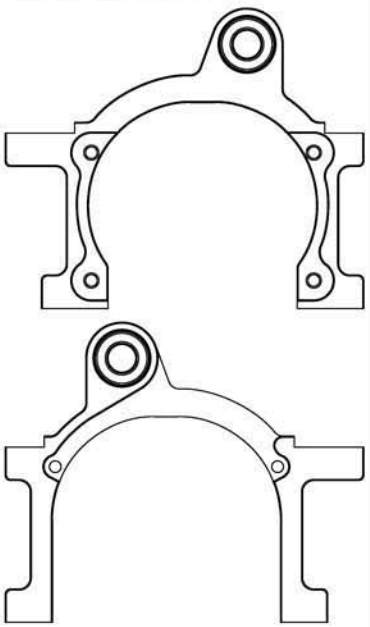


L PARTS



L1 ×1
210105
可調拉桿3×60mm
Turn-buckle shaft 3×60mm



L2 ×2
210198
鋼製可調拉桿3×28mm
Steel Turn-buckle shaft 3×28mm




L3 ×4
210166
鋼製可調拉桿3×20mm
Steel Turn-buckle shaft 3×20mm



L4 ×2
210168
鋼製可調拉桿3×25mm
Steel Turn-buckle shaft 3×25mm


O PARTS

210014

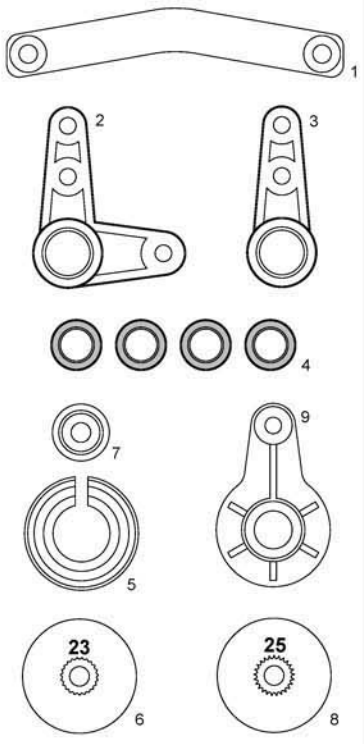

N PARTS

210012

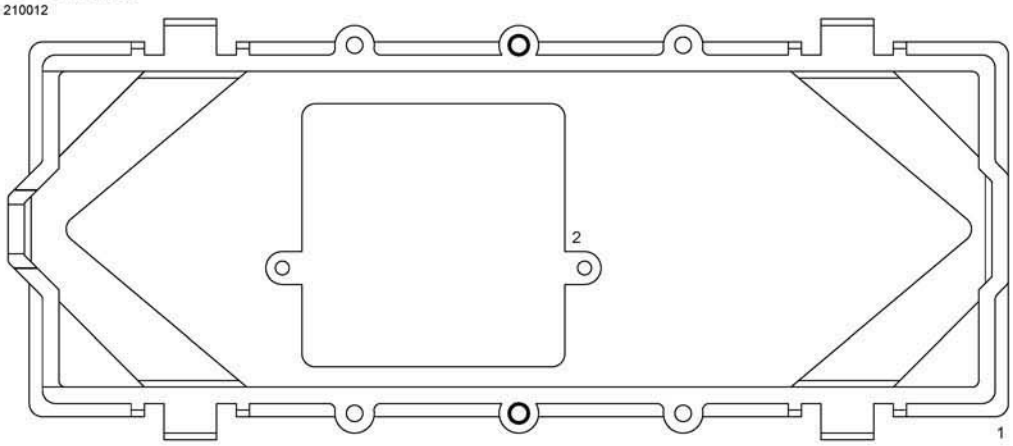


M PARTS




2

M2 ×2
210183
轉向支柱
Alum steering post

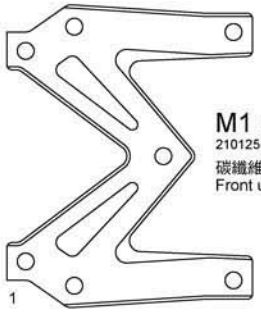

M1 ×1
210125
碳纖維二樓板 F
Front upper deck

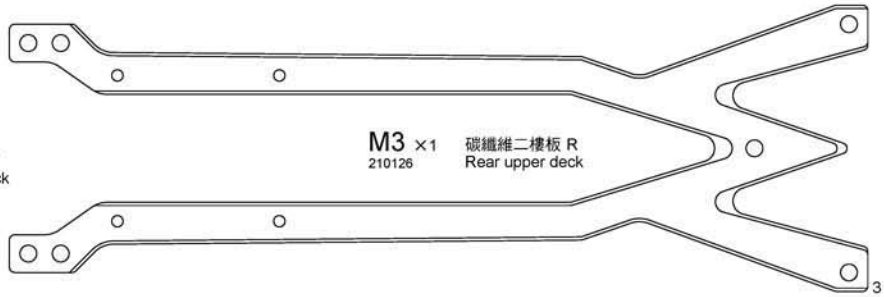


M3 ×1
210126
碳纖維二樓板 R
Rear upper deck

PARTS

不使用
Not Used

P PARTS

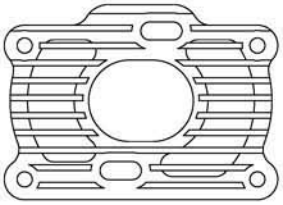

P1 ×1
210114
馬達散熱座
Alum motor heat sink mount




P2 ×1
310009
主齒軸
Direct center shaft




P3 ×1
210112
主軸座支撐桿
Main shaft mount supporting bar



P4 ×2
210194
大角度CVD傳動軸
60deg universal shaft



P5 ×2
310007
CVA 傳動軸
CVA swing shaft



P6 ×4
310006
輪軸
Wheel axle



P12 ×1
210123
後可調皮帶壓輪座
Belt stabilizer mount



P7 ×2
210193
連接軸
Cross joint



P13 ×1
210124
後可調皮帶壓輪
Belt pully



P8 ×1
210117
主齒固定座
Spur gear holder



P14 ×1
210123
培林座
Bearing mount



P9 ×1
210116
主齒固定板
Spur gear holder cover



P15 ×16
210133
5.8 金屬球頭
5.8 ball connector



P16 ×16
210132
4.8 金屬球頭
4.8 ball connector



P10 ×1
210155
緩衝器簧圈 (中) (藍)
Servo saver spring (M) (blue)



P17 ×10
310001
4.8×5 球頭
4.8x5 ball connector




P11 ×2
210101
伺服機座
Servo mount





P18 ×4
310019
3×5.5×2 鋁墊片
Alum. spacer

Q PARTS

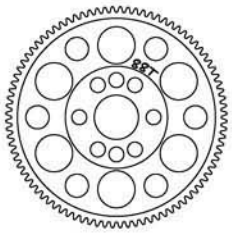

Q3 ×1
210013
大齒盤
Spur gear

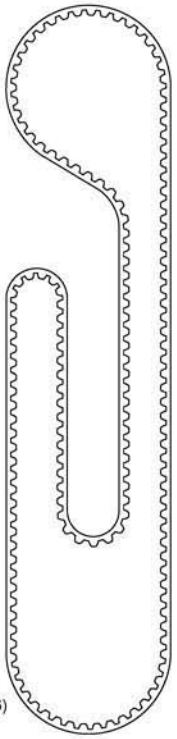


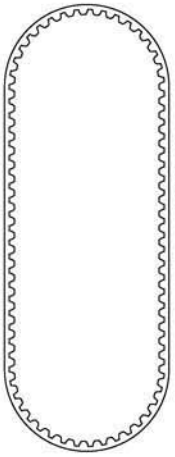


Q1 ×1
414228
皮帶 (228)
Drive belt (228)

Q2 ×1
414486
皮帶 (486)
Drive belt (486)


210145 ×1set
此為反胎用零件，請參照內附說明書組裝。
Here are the parts of counter steering.
Please refer to its assembled instraction (included).

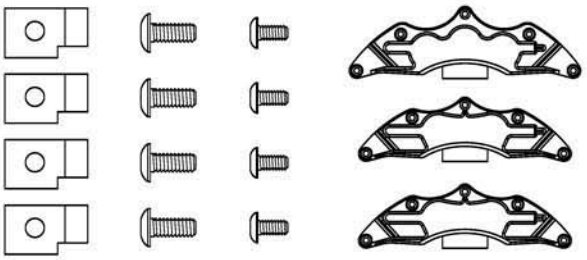

210111 ×1set
此為反胎用零件，請參照內附說明書組裝。
Here are the parts of counter steering.
Please refer to its assembled instraction (included).

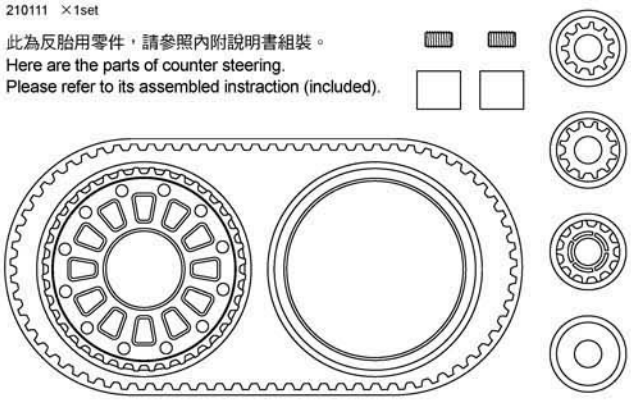

210001 ×1

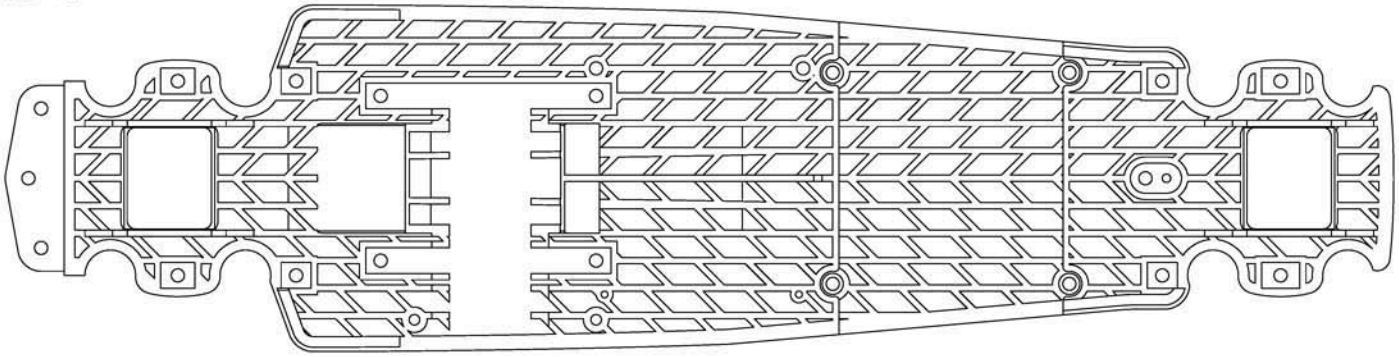

部品編號

101003H	大角度甩尾胎-硬 (4)	110025	自攻六角半圓頭螺絲-2.6×10 (6)	210008	I 部品	210135	鋁合金主軸座 R/L
101004M	大角度甩尾胎-中 (4)	110026	公制六角半圓頭螺絲-M3×10 (10)	210009	J 部品	210144-2	避震彈簧28mm (中×2) (金)
101005S	大角度甩尾胎-軟 (4)	110027	公制六角有頭螺絲-M2×8 (6)	210010	K 部品	210145	煞車卡鉗 (無烤漆) (4)
102011S	亮銀七幅框 (+3) (4)	110029	公制六角半圓頭螺絲-M3×12 (6)	210012	N 部品	210146	大角度CVD傳動軸組(2)
102011SBK	銀黑七幅框 (+3) (4)	120001	培林-10×15 (4)	210013	大齒盤88T-48P	210151	鋁合金避震筒身 (4)
102011W	白七幅框 (+3) (4)	120002	培林-5×10 (4)	210014	O 部品	210152	鐵氟龍避震器活塞 (4)
110001	公制六角半圓頭螺絲-M3×6 (10)	120003	培林 5×8 (4)	210016	R 部品	210153	鐵氟龍避震下墊片組 (4)
110002	公制六角半圓頭螺絲-M3×8 (10)	130001	O環- 3.0 (10)	210101	鋁合金伺服機座 (2)	210155	緩衝器簧圈 (中) (藍)
110003	公制六角半圓頭螺絲-M2.5×6 (6)	130002	O環-11.5×1.5 (4)	210102	鋁合金前單向組	210166	鋼可調拉桿 3×20mm (2)
110004	公制六角半圓頭螺絲-M2×4 (6)	130003	O環- 44×2.6 (2)	210103	前單向接杯 (2)	210168	鋼可調拉桿 3×25mm (2)
110005	公制六角沉頭螺絲-M3×8 (10)	130004	避震氣室(4)	210105	鋁可調拉桿 3×60mm	210183	轉向支柱 (2)
110007	公制六角止付螺絲-M3×6 (6)	130005	防撞泡棉	210111	反胎齒比總成 (1.54/1.66/1.82)	210193	連接軸 (4)
110009	公制六角止付螺絲-M3×20 (6)	130006	泡棉雙面膠 (5)	210111-1	皮帶齒40T	210194	鋼製 CVD 傳動軸 (2)
110010	公制六角半圓頭螺絲-M2.5×14 (6)	130007	天線管 (2)	210111-2	皮帶齒11T/12T/13T	210198	鋼製可調拉桿 3×28mm (2)
110011	公制六角有頭螺絲-M3×6 (半牙) (6)	130008	黑色油膏	210111-3	皮帶-225	310001	內六角公球頭4.8×5 (5)
110012	公制十字扁頭螺絲-M3×11 (10)	130009	避震油 300#	210112	主軸座支撐桿	310003	避震器上蓋(2)
110013	E扣-2.0 (10)	130011	工具包	210114	鋁合金馬達散熱固定座	310004	避震器調整環(2)
110014	公制十字扁頭螺絲-M3×13 (10)	130015	O環-3.5×1mm (10)	210115	鋁合金避震器組 (4)	310005	避震器下蓋(2)
110015	突緣螺帽-M4 (4)	210001	底盤	210116	鋁合金主齒固定板	310006	CVA接杯 (2)
110016	R銷-6 (10)	210002	C 部品	210117	鋁合金主齒固定座	310007	CVA狗骨 (2)
110017	插銷-2×9.8 (10)	210004	E 部品	210123	鋁合金可調後皮帶壓輪座	310008	避震軸心 (4)
110018	插銷-2×13.8 (5)	210004-1	原廠直軸組	210124	鋁合金後皮帶壓輪	310009	主齒軸
110019	插銷-2×11.8 (5)	210004-2	金屬接杯環 (2)	210125	碳纖維二樓板 F	310016	CVA傳動軸組
110021	防鬆螺帽-M3 (5)	210005	F 部品	210126	碳纖維二樓板 R	414228	皮帶-228
110023	公制六角止付螺絲-M3×16 (6)	210006	G 部品	210132	4.8金屬球頭 (5)	414486	皮帶-486
110024	公制六角沉頭螺絲-M3×6 (10)	210007	H 部品	210133	5.8金屬球頭 (5)		

改裝品編號

130010	MST 貼紙	210142	鋁合金防撞板上蓋	210161	4.8mm 外六角球頭螺帽 (4)	101006S	R角度甩尾胎-軟 (4)
130010S	MST 貼紙 (銀色)	210143	鋁合金剎車碟六角輪座組	210162	鋁合金皮帶壓輪座組	101007M	R角度甩尾胎-中 (4)
210104	前滾珠差速總成	210144	避震彈簧組28mm (4種硬度)	210163	鋁合金六角輪座 (4)	101008SS	R角度甩尾胎-超軟 (4)
210108	鋁可調拉桿 3×28mm (2)	210144-1	避震彈簧28mm (硬×2) (銀)	210165	鋁可調拉桿 3×20mm (2)	101015	大角度CS超硬胎 (4)
210110	防傾桿組 (半車份/前後通用)	210144-3	避震彈簧28mm (軟×2) (紅)	210167	鋁可調拉桿 3×25mm (2)	102012FS	消光銀BBS框 (+6) (4)
210113	後金屬滾珠差速器組	210144-4	避震彈簧28mm (超軟×2) (白)	210176	纖維板電池座組 (銀)	102012S	亮銀BBS框 (+6) (4)
210118	鋁合金轉向輪座 (2)	210145B	煞車卡鉗 (電鍍藍) (4)	210178	FS 前置馬達套件	102012SBK	銀黑BBS框 (+6) (4)
210119	前金屬滾珠差速接杯	210145GD	煞車卡鉗 (電鍍金) (4)	210186	滾珠差速螺絲	102012W	白BBS框 (+6) (4)
210120	鋁合金強力伺服緩衝器 (F/KO)	210145R	煞車卡鉗 (電鍍紅) (4)	210195	鋁製CVD傳動軸 (2)	102017BK	黑五幅框 (+3) (4)
210121	金屬直軸組	210147	緩衝器簧圈 (硬) (黑)	310013	MST齒輪收集器	102017FS	消光銀五幅框 (+3) (4)
210122	鋁合金轉向雙搖臂組	210148	鋁合金馬達散熱片 (可固定風扇)	310017	鋁墊片3×5.5×0.5mm	102017S	亮銀五幅框 (+3) (4)
210127	碳纖維避震架 F	210154	避震彈簧組 21mm (8)	310018	鋁墊片3×5.5×1.0mm	102017SBK	銀黑五幅框 (+3) (4)
210128	碳纖維避震架 R	210154-1	避震彈簧 21mm (硬×2) (銀)	310019	鋁墊片3×5.5×2.0mm	102017W	白五幅框 (+3) (4)
210129	碳纖維側板補強片	210154-2	避震彈簧 21mm (中×2) (金)	310020	墊片3×5×0.1mm (8)	102017Y	螢光黃五幅框 (+3) (4)
210130	碳纖維底盤	210154-3	避震彈簧 21mm (軟×2) (紅)	310021	墊片3×5×0.3mm (8)	102018BK	黑五幅框 (+5) (4)
210131	強化伺服緩衝器 (F/KO)	210154-4	避震彈簧 21mm (超軟×2) (白)	310022	墊片5×7×0.1mm (8)	102018FS	消光銀五幅框 (+5) (4)
210134	鋁合金上蓋組 R/L	210156	全車碳纖維 (六件組)	310023	墊片5×7×0.3mm (8)	102018S	亮銀五幅框 (+5) (4)
210136	鋁合金側板 R/L	210157	鋁合金CVD傳動軸組 (2)	310024	墊片10×12×0.1mm (8)	102018SBK	銀黑五幅框 (+5) (4)
210137	4mm拉桿板手	210159	5.8×4mm 球頭螺絲 (4)	310025	墊片10×12×0.3mm (8)	102018W	白五幅框 (+5) (4)
210141	碳纖維電變托盤	210160	5.8×6mm 球頭螺絲 (4)	501001	賽車圓盤	102018Y	螢光黃五幅框 (+5) (4)

PARTS CODE

101003H	Great angle tire (hard) (4)	110025	Taping screw 2.6×10 (6)	210008	I PARTS	210135	Alum main shaft mount R/L
101004M	Great angle tire (medium) (4)	110026	Round head socket screw M3×10 (10)	210009	J PARTS	210144-2	Coil spring set 28mm (medium×2) (gold)
101005S	Great angle tire (soft) (4)	110027	Cap screw M2×8 (6)	210010	K PARTS	210145	Brake calipers (4)
102011S	Silver 7 spoke wheels offset 3 (4)	110029	Round head socket screw M3×12 (6)	210012	N PARTS	210146	60deg universal shaft set (2)
102011SBK	Silver black 7 spoke wheels offset 3 (4)	120001	Ball bearing 10×15 (4)	210013	Spur gear 88T-48P	210151	Alum damper cylinder (4)
102011W	White 7 spoke wheels offset 3 (4)	120002	Ball bearing 5×10 (4)	210014	O PARTS	210152	Piston (4)
110001	Round head socket screw M3×6 (10)	120003	Ball bearing 5x8 (4)	210016	R PARTS	210153	Rod guide set (4)
110002	Round head socket screw M3×8 (10)	130001	O-ring 3mm (10)	210101	Alum Servo mount (2)	210155	Servo Saver Spring (medium) (blue)
110003	Round head socket screw M2.5×6 (6)	130002	O-ring 11.5×1.5 (4)	210102	Alum one way unit	210166	Steel turn-buckle shaft 3×20mm (2)
110004	Round head socket screw M2×4 (6)	130003	O-ring 44×2.6 (2)	210103	One way joint (2)	210168	Steel turn-buckle shaft 3×25mm (2)
110005	Countersunk hex head screw M3×8 (10)	130004	Oil seal (4)	210105	Alum turn-buckle shaft 3×60mm (1)	210183	Alum steering post (2)
110007	Drub screw M3×6 (6)	130005	Bumper	210111	CS pully set (1.54/1.66/1.82)	210193	Cross joint (4)
110009	Drub screw M3×20 (6)	130006	Double sided tape (5)	210111-1	40T pully	210194	Steel CVD universal shaft (2)
110010	Round head socket screw M2.5×14 (6)	130007	Antenna pipe (2)	210111-2	11T/12T/13T pully	210198	Steel turn-buckle shaft 3×28mm (2)
110011	Cap screw M3×6 (6)	130008	Black grease	210111-3	Drive belt-225	310001	Ball connector 4.8 X 5 (5)
110012	Flat head screw M3×11 (10)	130009	Damper oil #300	210112	Main shaft mount supporting bar	310003	Cylinder cap (2)
110013	E-clip E2.0 (10)	130011	Tools	210114	Alum motor heat sink mount	310004	Spring retainer (2)
110014	Flat head screw M3×13 (10)	130015	O-ring 3.5×1mm (10)	210115	Alum damper set (4)	310005	Rod guide cap (2)
110015	Flange nut M4 (4)	210001	Lower deck	210116	Alum spur gear holder cover	310006	CVA wheel axle (2)
110016	R-clip R6 (10)	210002	C PARTS	210117	Alum spur gear holder	310007	CVA swing shaft (2)
110017	Shaft 2×9.8 (10)	210004	E PARTS	210123	Alum belt stabilizer mount	310008	Piston rod (4)
110018	Shaft 2×13.8 (5)	210004-1	Spool unit	210124	Alum belt pully	310009	Direct center shaft
110019	Shaft 2×11.8 (5)	210004-2	Joint ring (steel) (2)	210125	Carbon front upper deck	310016	CVA universal shaft set
110021	Luck Nut M3 (5)	210005	F PARTS	210126	Carbon rear upper deck	414228	Drive belt-228
110023	Drub screw M3×16 (6)	210006	G PARTS	210132	4.8 ball connector (5)	414486	Drive belt-486
110024	Countersunk hex head screw M3×6 (10)	210007	H PARTS	210133	5.8 ball connector (5)		

OPTION PARTS CODE

130010	MST Sticker	210142	Alum bumper support	210161	4.8mm ball connector nut (4)	101006S	Arc angle tire (soft) (4)
130010S	MST Sticker (silver)	210143	Alum Wheel Hubs Set (brake disc shaped)	210162	Alum belt pully mount	101007M	Arc angle tire (medium) (4)
210104	Front ball diff unit	210144	Coil spring set 28mm (8)	210163	Alum hex wheel hubs (4)	101008SS	Arc angle tire (super soft) (4)
210108	Alum turn-buckle shaft 3×28mm (2)	210144-1	Coil spring set 28mm (hard×2) (silver)	210165	Alum turn-buckle shaft 3×20mm (2)	101015	Great angle CS tire (Hardest) (4)
210110	Stabilizer set (F/R)	210144-3	Coil spring set 28mm (soft×2) (red)	210167	Alum turn-buckle shaft 3×25mm (2)	102012FS	Flat silver BBS wheels offset 6 (4)
210113	Rear ball diff unit	210144-4	Coil spring set 28mm (super soft×2) (white)	210176	Battery holder(silver surface)	102012S	Silver BBS wheels offset 6 (4)
210118	Alum upright (2)	210145B	Brake calipers-Blue (4)	210178	Front motor mount conversion kit	102012SBK	Silver black BBS wheels offset 6 (4)
210119	Front ball diff joint	210145GD	Brake calipers-Gold (4)	210186	Diff ball srcrew	102012W	White BBS wheels offset 6 (4)
210120	Alum high torque servo saver (F/KO)	210145R	Brake calipers-Red (4)	210195	Alum CVD universal shaft (2)	102017BK	Black 5 spoke wheels offset 3 (4)
210121	Alum spool unit	210147	Servo Saver Spring (hard) (black)	310013	Pinion stocker	102017FS	Flat silver 5 spoke wheels offset 3 (4)
210122	Alum steering arm	210148	Alum motor heatsink	310017	Alum spacer 3×5.5×0.5	102017S	Silver 5 spoke wheels offset 3 (4)
210127	Carbon front damper stay	210154	Coil spring set 21mm (8)	310018	Alum spacer 3×5.5×1.0	102017SBK	Silver Black 5 spoke wheels offset 3 (4)
210128	Carbon rear damper stay	210154-1	Coil spring 21mm (hard×2)(silver)	310019	Alum spacer 3×5.5×2.0	102017W	White 5 spoke wheels offset 3 (4)
210129	Carbon bulkhead brace	210154-2	Coil spring 21mm (medium×2)(gold)	310020	Spacer 3×5×0.1mm (8)	102017Y	Fluorescein 5 spoke wheels offset 3 (4)
210130	Carbon lower deck	210154-3	Coil spring 21mm (soft×2)(red)	310021	Spacer 3×5×0.3mm (8)	102018BK	Black 5 spoke wheels offset 5 (4)
210131	High torque servo saver (F/KO)	210154-4	Coil spring 21mm (super soft×2)(white)	310022	Spacer 5×7×0.1mm (8)	102018FS	Flat silver 5 spoke wheels offset 5 (4)
210134	Alum upper bulkhead R/L	210156	Carbon chassis set (6 pieces)	310023	Spacer 5×7×0.3mm (8)	102018S	Silver 5 spoke wheels offset 5 (4)
210136	Alum bulkhead R/L	210157	Alum CVD universal shaft set (2)	310024	Spacer 10×12×0.1mm (8)	102018SBK	Silver Black 5 spoke wheels offset 5 (4)
210137	4mm Turnbuckle wrench	210159	5.8×4mm ball connector (4)	310025	Spacer 10×12×0.3mm (8)	102018W	White 5 spoke wheels offset 5 (4)
210141	Carbon ESC plate	210160	5.8×6mm ball connector (4)	501001	Disc	102018Y	Fluorescein 5 spoke wheels offset 5 (4)