


RMX 2.5 RS

MST
MAX SPEED TECHNOLOGY

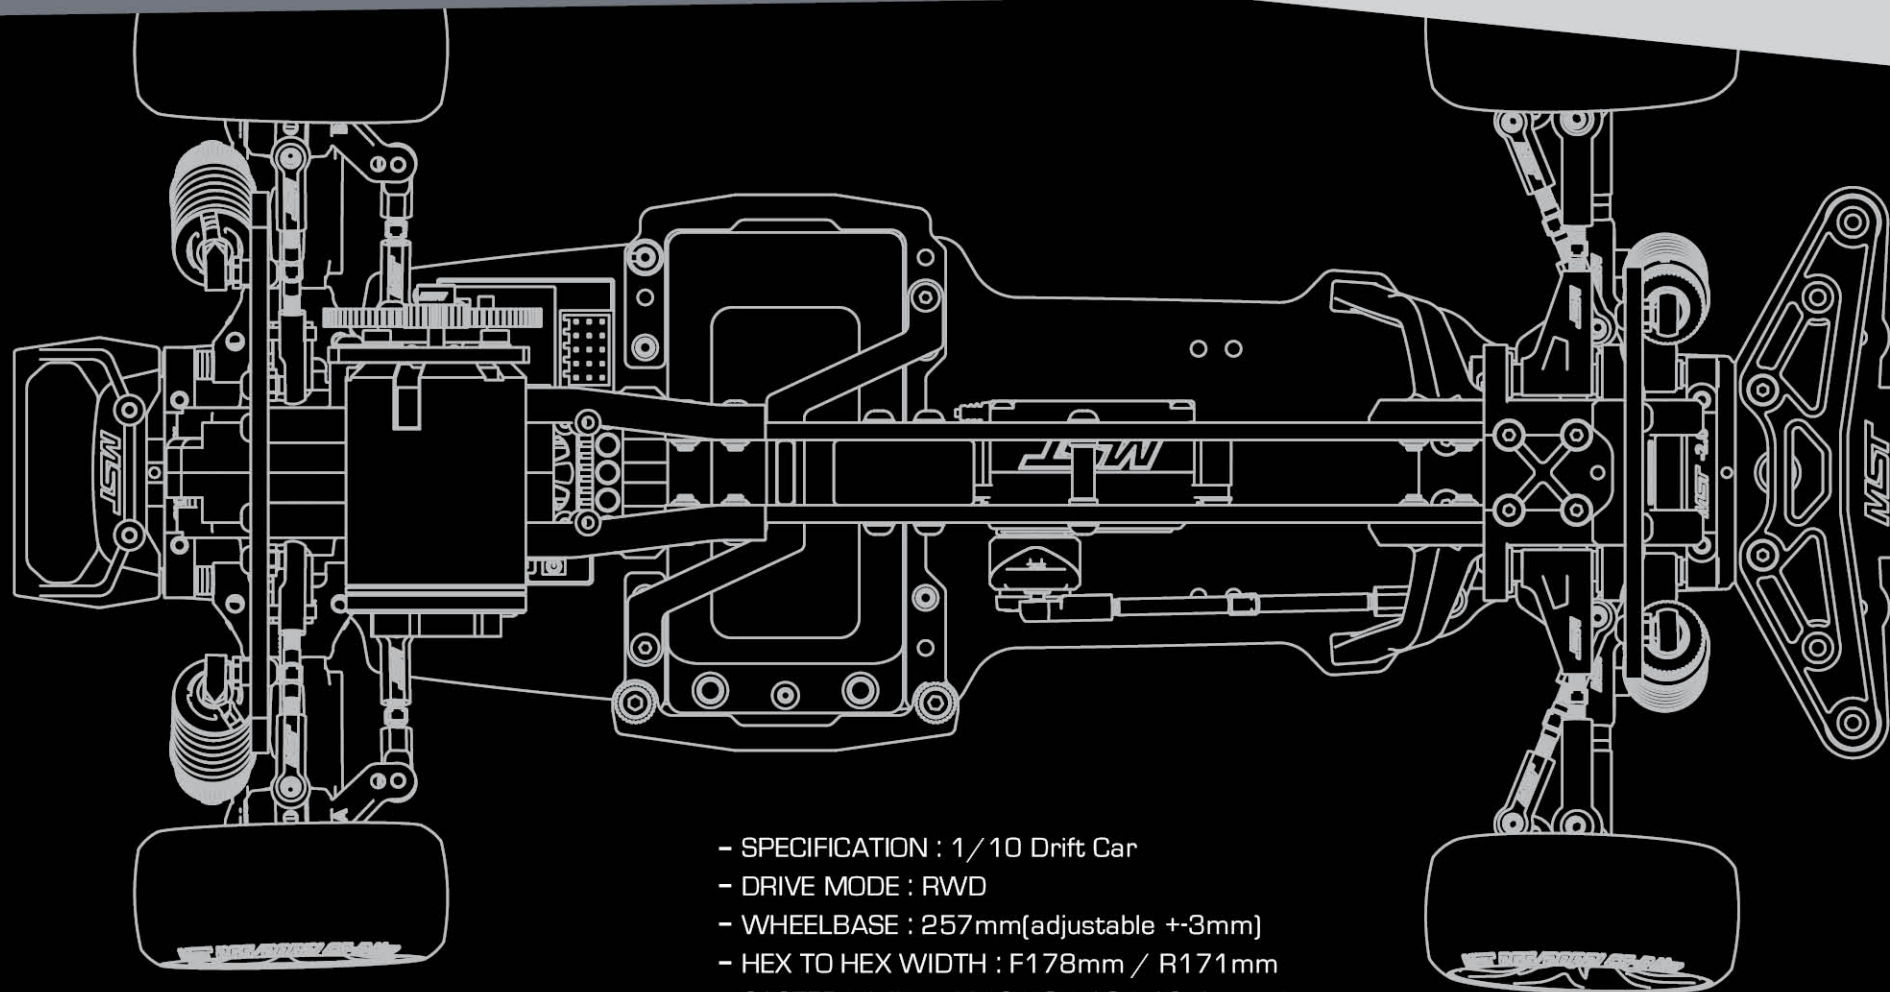


- SPECIFICATION : 1/10 Drift Car
- DRIVE MODE : RWD
- WHEELBASE : 257mm(adjustable +3mm)
- HEX TO HEX WIDTH : F178mm / R171mm
- CASTER : Adjustable 6/ 8/ 10/ 12 degrees
- CAMBER : Adjustable 0 to -12 degrees
- FULL BALL BEARING
- HYDRAULIC DAMPER SET

BLACK

ASSEMBLY KIT
www.rc-mst.com
※SPECIFICATION ARE SUBJECT TO CHANGE WITHOUT NOTICE





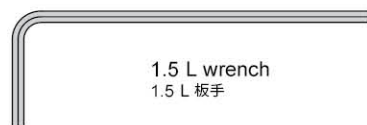

1.5 L wrench
1.5 L 板手

1.5
Hex



2.0 L wrench
2.0 L 板手

2.0
Hex



2.5 L wrench
2.5 L 板手

2.5
Hex



5.5 x 4.0 wrench
5.5 x 4.0 板手

7.0



5.5


5.5 & 7.0 alum. wrench
5.5 & 7.0 套筒板手

Please follow the assembling figures and instructions closely
for your [RMX 2.5 RS] best performance!
請依照說明書圖示步驟安裝以發揮 [RMX 2.5 RS] 最好效能!


NECESSARY TOOLS FOR ASSEMBLY 工具需求 (NOT INCLUDED IN KIT) [另購]




Hobby knife
美工刀




Screwdriver
螺絲起子

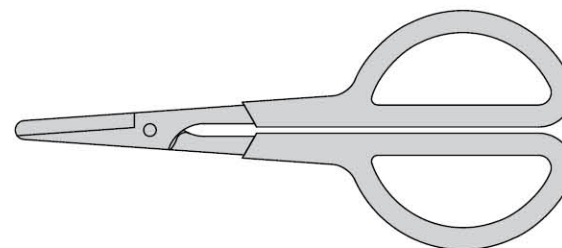


Scissors
剪刀

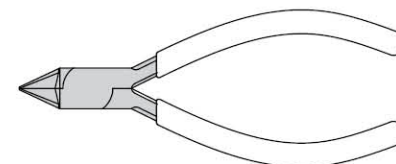


Side cutter
斜口鉗

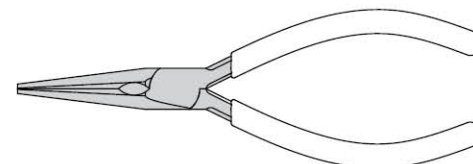

Needle nose pliers
尖嘴鉗

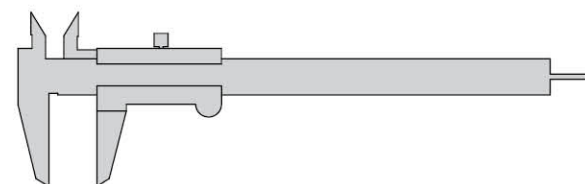

Vernier caliper
游標卡尺

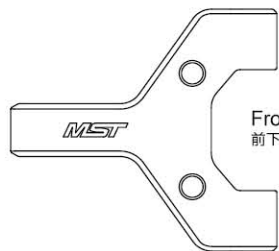


Front lower arm ×2
前下擺臂



Suspension mount (-2.0) ×2
下擺臂座 (-2.0)



Suspension mount spacer 0.5mm ×1
擺臂座墊片 0.5mm

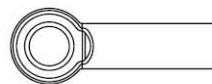

5.8×26 Adjuster ×2
拉桿頭



2.5×5 Suspension balls ×4
懸吊球頭



2.5×5.5×1 Spacer (white) ×4
墊片 (白色)



2.5×5.5×2 Spacer (white) ×2
墊片 (白色)




3×5.5×3 Spacer ×4
墊片



3×5.5×2 Spacer ×2
墊片



2.5×46 Arm shaft ×2
擺臂插銷



M3×40 screw ×2
有頭螺絲 (半牙)



M3×16 screw ×2
圓頭螺絲




M3×8 screw ×4
沉頭螺絲



4.8 Ball connector L ×2
外六角球頭 (長)


STEP 1 Front lower arm assembly


前下擺臂組裝

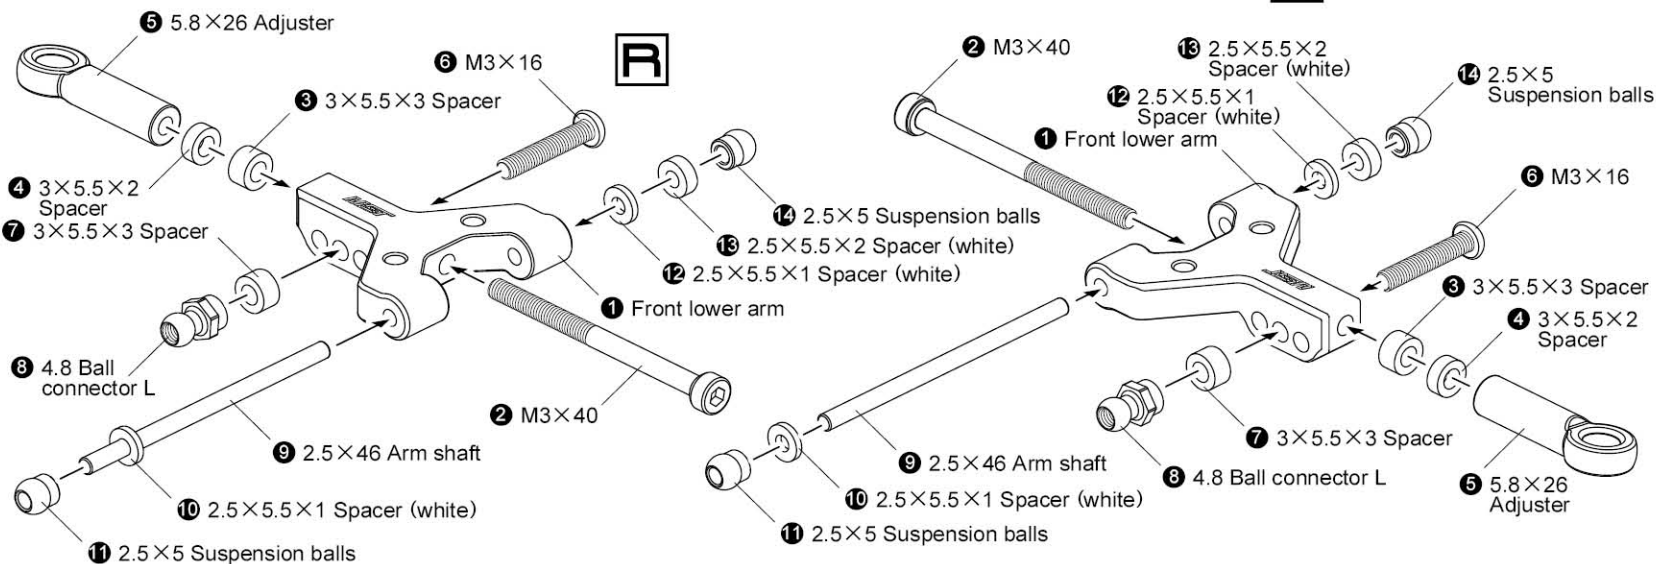

STEP 2 Attaching front lower arm

安裝前下擺臂

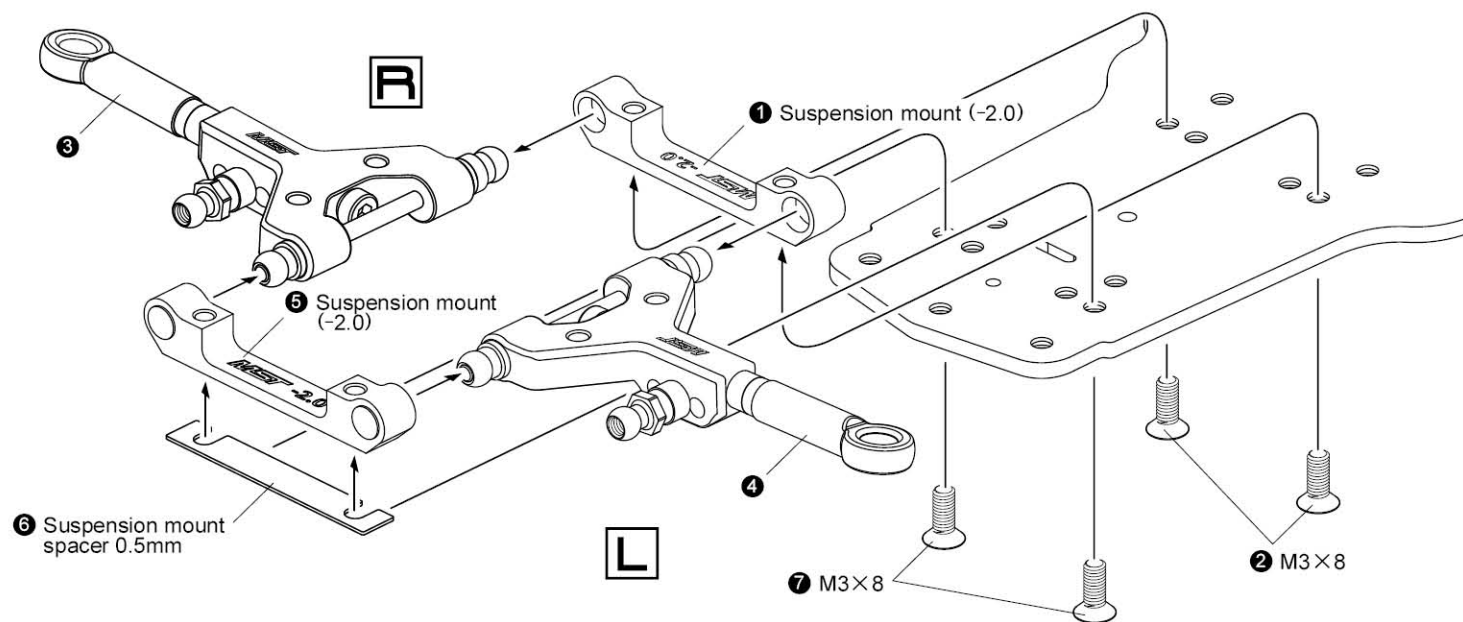

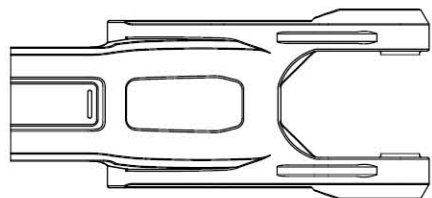

Rear lower arm B ×2
後下擺臂 B



Rear lower arm A ×2
後下擺臂 A



Suspension mount (+0.5) ×2
下擺臂座 (+0.5)



Suspension mount spacer 0.5mm ×2
擺臂座墊片 0.5mm



2.5×46 Arm shaft ×2
擺臂插銷



2.5×5 Suspension balls ×4
懸吊球頭



2.5×5.5×1 Spacer ×4
墊片



2.5×5.5×1 Spacer (white) ×4
墊片 (白色)



2.5×5.5×2 Spacer (white) ×2
墊片 (白色)



M2.5×12 screw ×4
圓頭螺絲




M3×8 screw ×4
沉頭螺絲





4.8×4.5 Ball connector ×2
球頭螺絲

STEP 1 Rear lower arm assembly 後下擺臂組裝

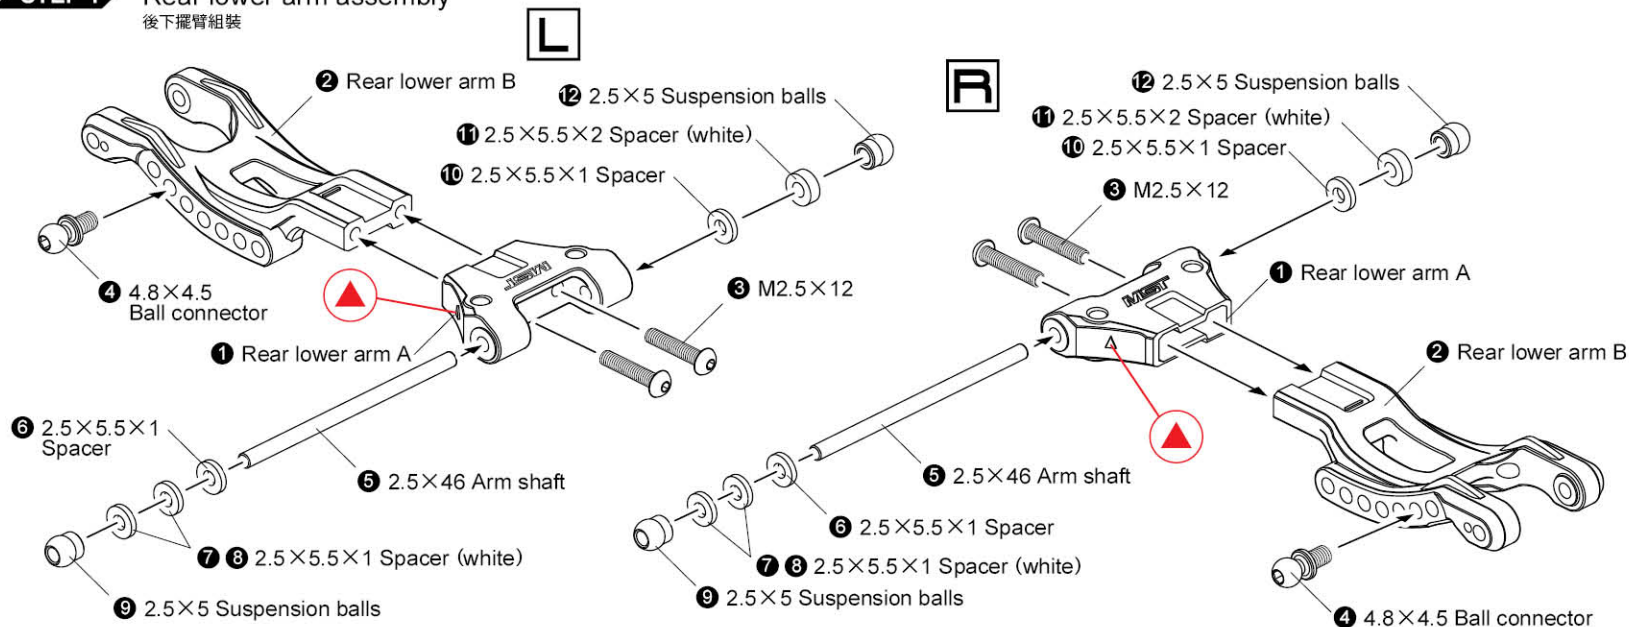


STEP 2 Attaching rear lower arm 安裝後下擺臂

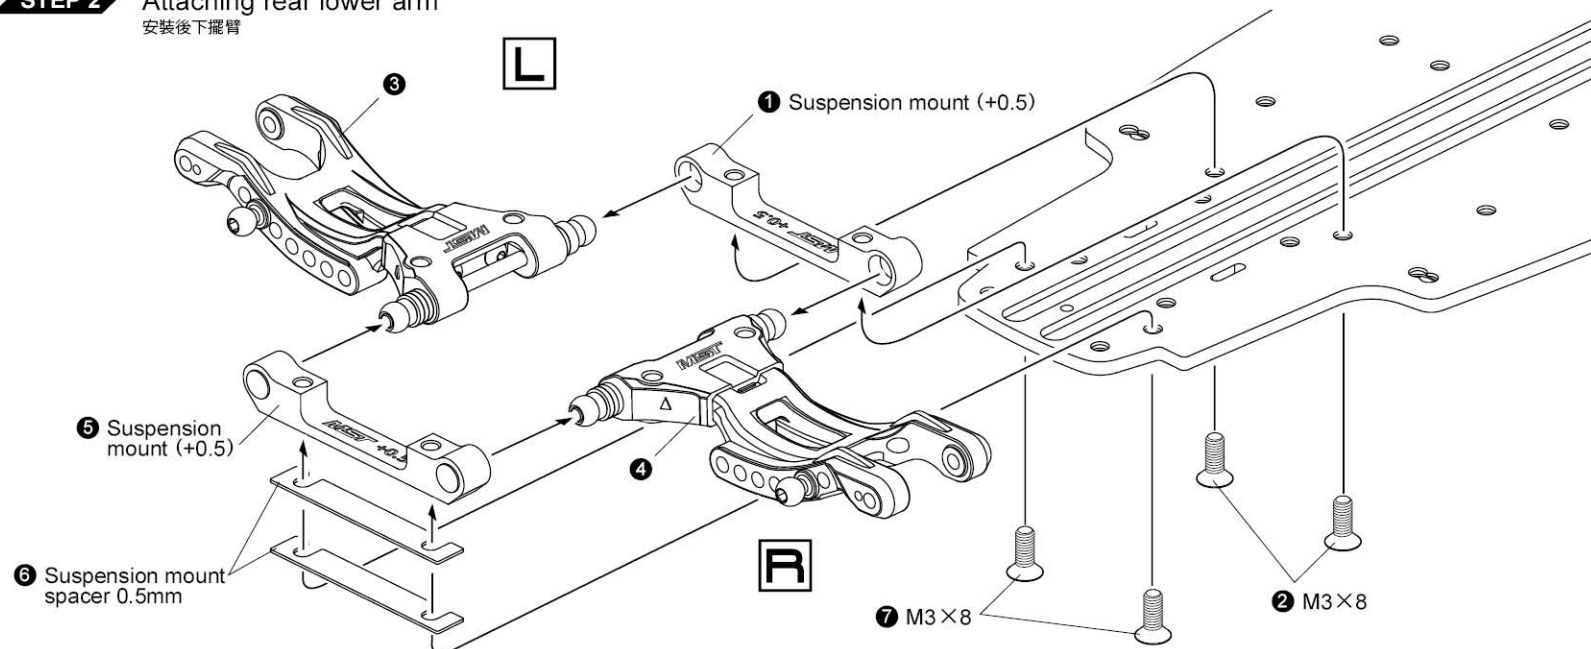


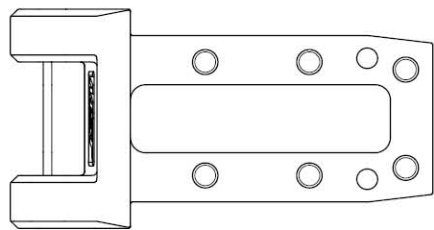

Front head mount A ×1
前擺座A

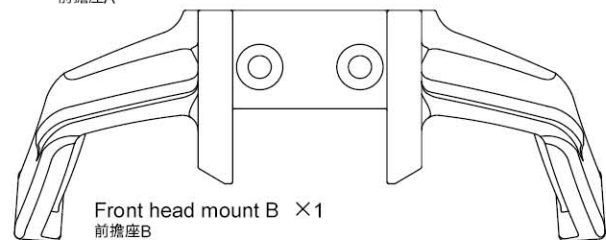


Front head mount B ×1
前擺座B

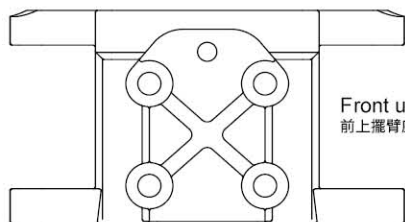


Front upper arm mount ×1
前上擺臂座



Front upper arm ×2
前上擺臂 (Bag 1)



M2 × 4 screw ×4
圓頭螺絲



M3 × 8 screw ×2
沉頭螺絲




M3 × 14 screw ×4
圓頭螺絲



M3 × 20 steel turnbuckle ×2
鋼製可調拉桿



2 × 28 shaft ×2
插銷




5.8 × 26 Adjuster ×2
拉桿頭




Arm shaft bush A ×2
擺臂襯套 A



Arm shaft bush B ×2
擺臂襯套 B




2 × 6 × 1 Spacer ×2
墊片





2 × 6 × 2 Spacer ×2
墊片


STEP 1 Front upper arm assembly 前上擺臂組裝

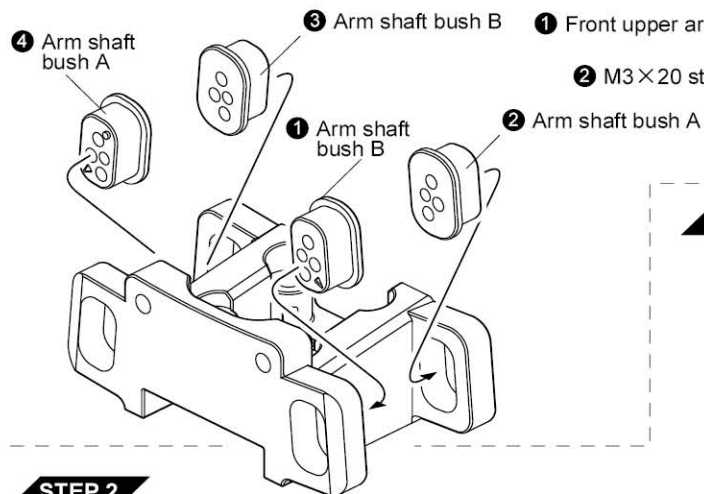


STEP 2

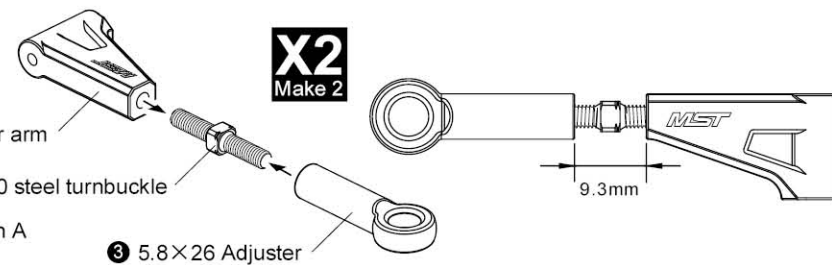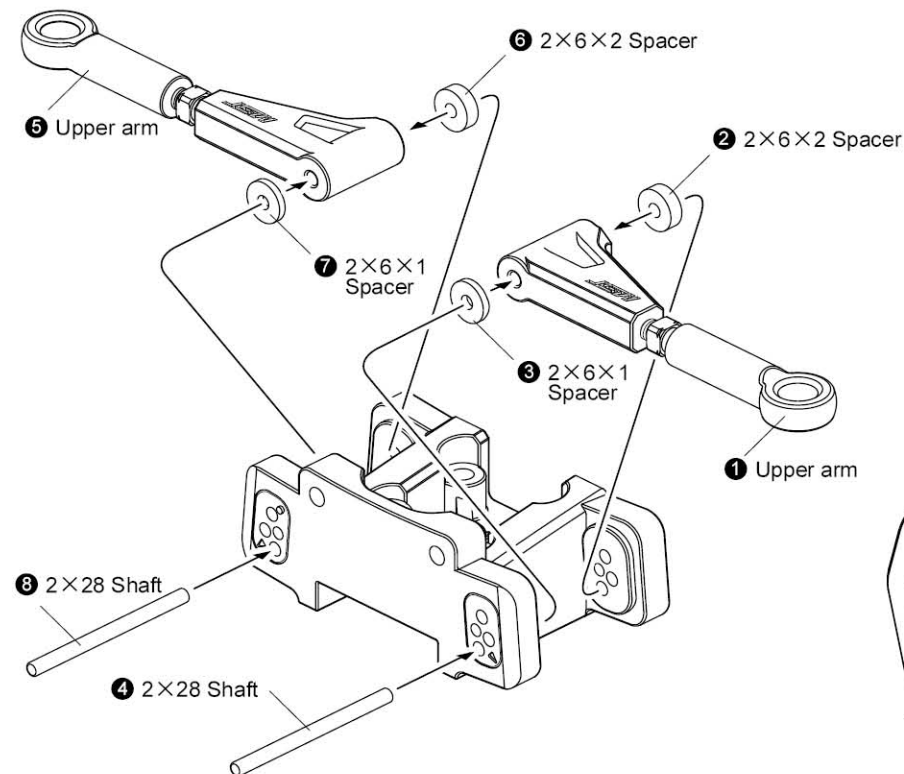


STEP 3

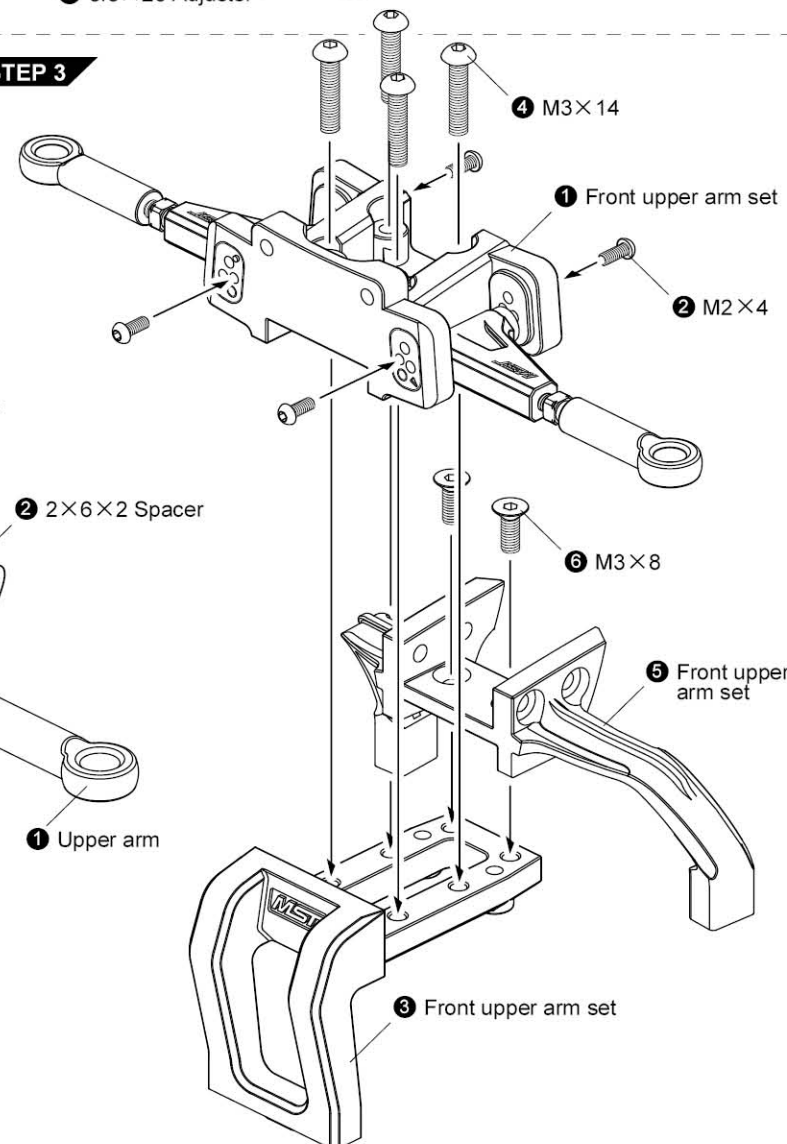

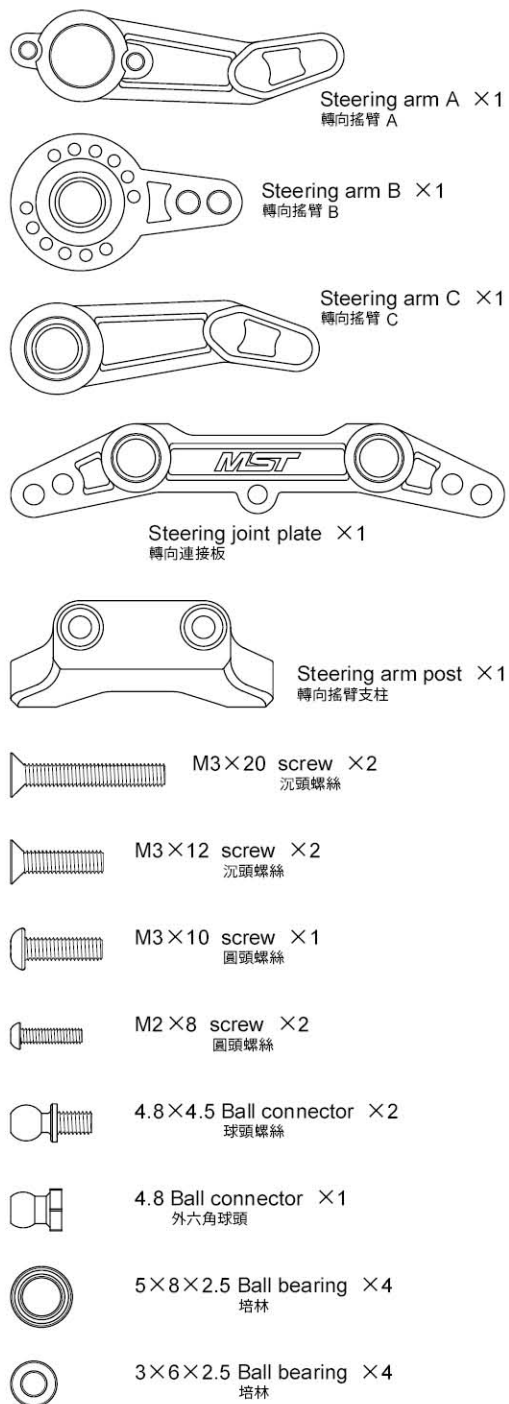

STEP 1 Steering arm assembly

轉向搖臂組裝

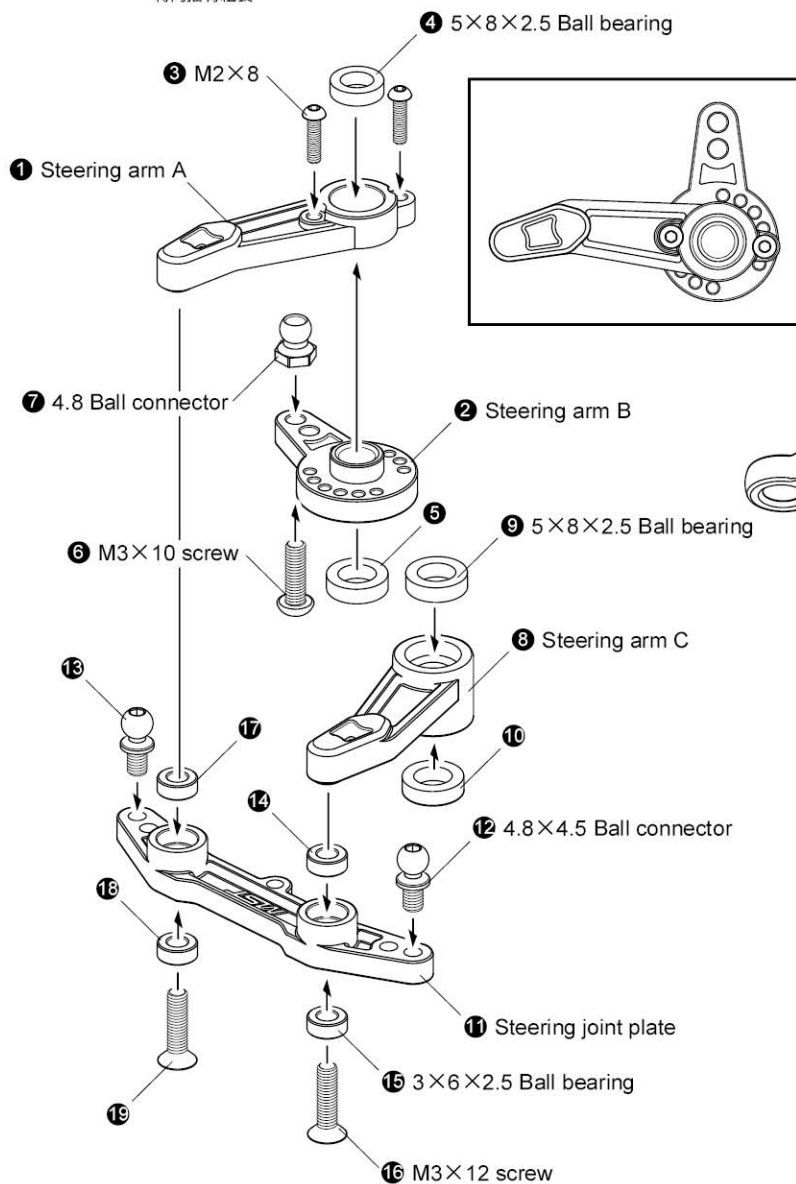


⚠ Please tighten the M3×12 screws with appropriate force. If it is overtightened, the bearing smoothness will be affected. Please loosen it until the arm can move smoothly.

M3×12 螺絲請以適當力道鎖緊即可, 若鎖太緊會影響培林順暢性, 請放鬆至搖臂能順暢作動為止!

STEP 2 Attaching steering arm

安裝轉向搖臂組

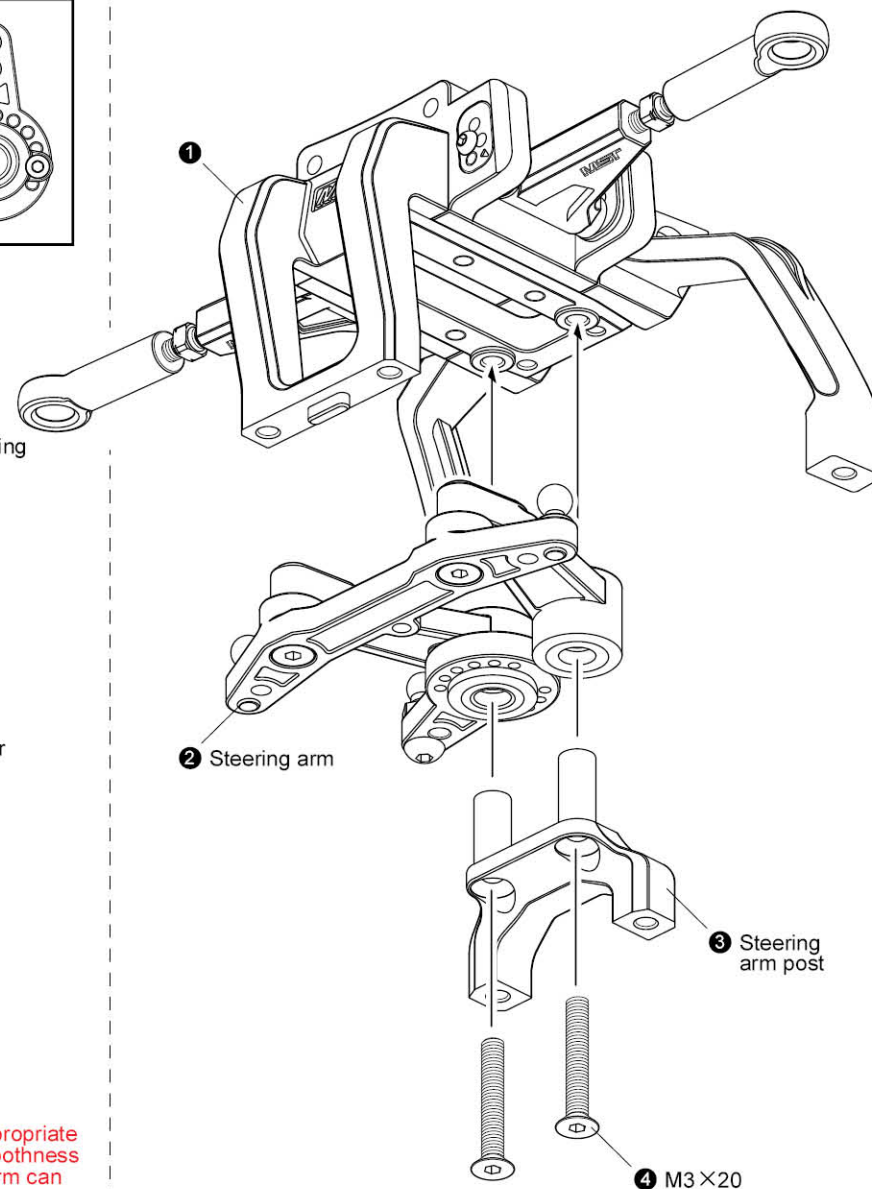



Long servo horn ×1
長伺服片



Servo saver cover ×1
伺服緩衝上蓋



Servo saver mount 23T ×1
23T 伺服緩衝座




Servo saver mount 25T ×1
25T 伺服緩衝座



4.8 Adjuster ×2
拉桿頭



4.8 Adjuster M ×4
拉桿頭



Servo mount ×2
伺服機座



M3×25 steel turnbuckle ×2
鋼製可調拉桿



M3×16 screw ×1
沉頭螺絲



M3×8 screw ×4
圓頭螺絲



M3×10 screw ×8
沉頭螺絲



4.8×4.5 Ball connector ×1
球頭螺絲



Servo saver spring (Gold) ×1
伺服緩衝彈簧(金)




3×6×0.5 Spacer ×4
墊片




M3×68 Alum. turnbuckle ×1
鋁合金可調拉桿


STEP 1 Steering servo assembly 轉向伺服機組裝

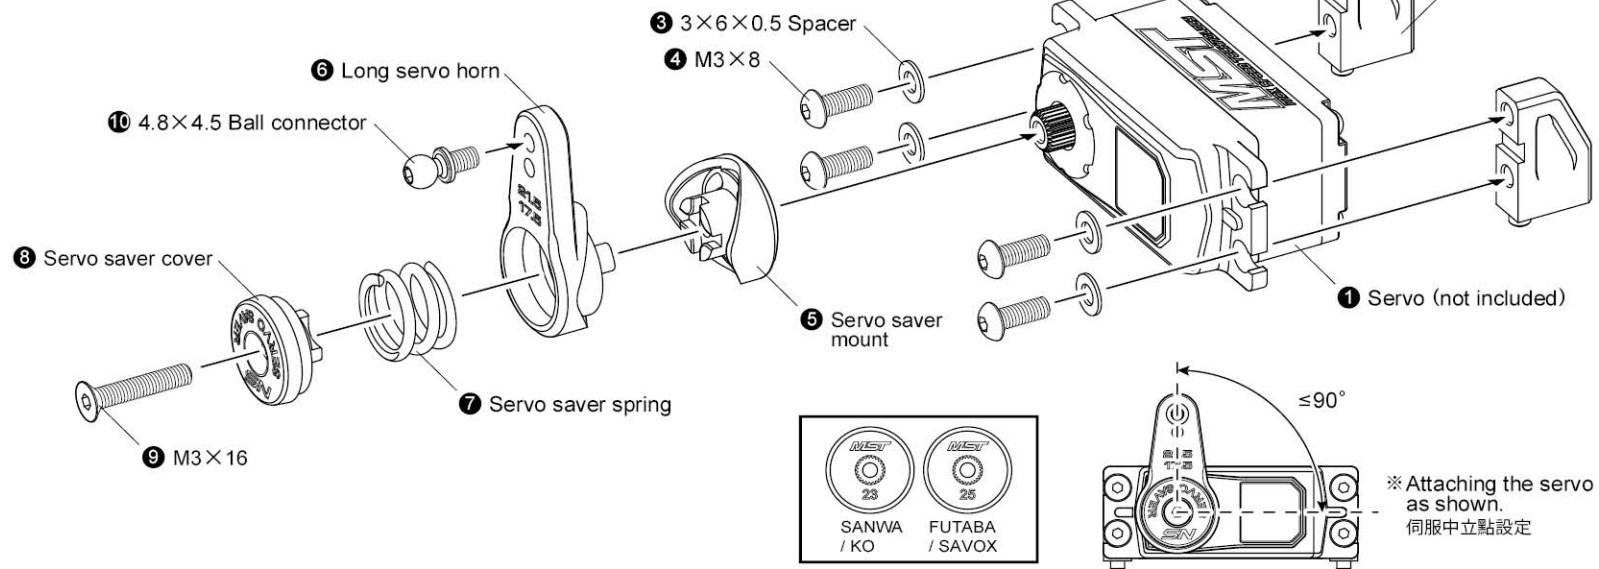

STEP 2 Servo saver turnbuckle assembly 伺服拉桿組裝

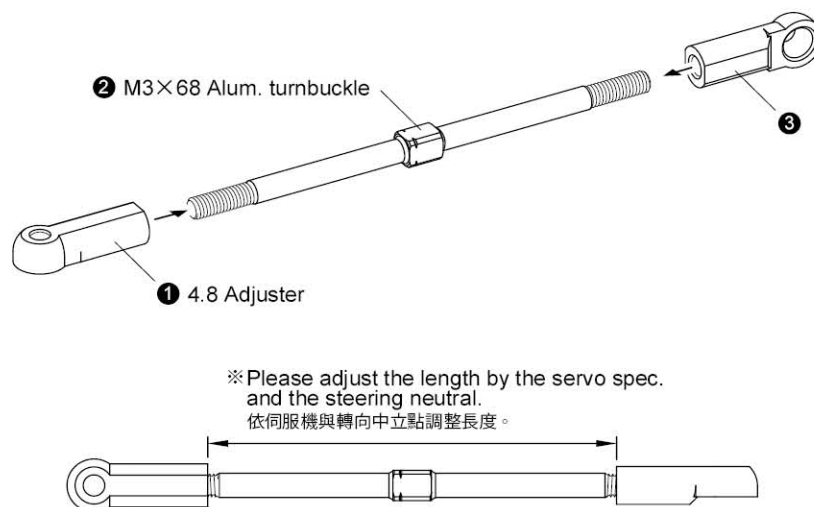


STEP 3 Steering adjuster assembly 轉向拉桿組裝

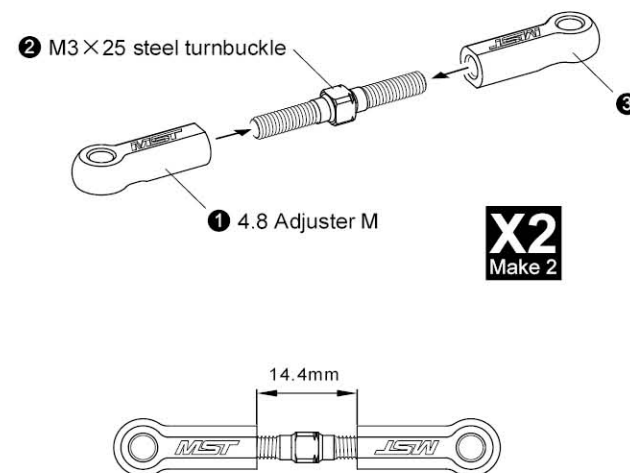

STEP 1

Attaching front steering-suspension

安裝前擔組

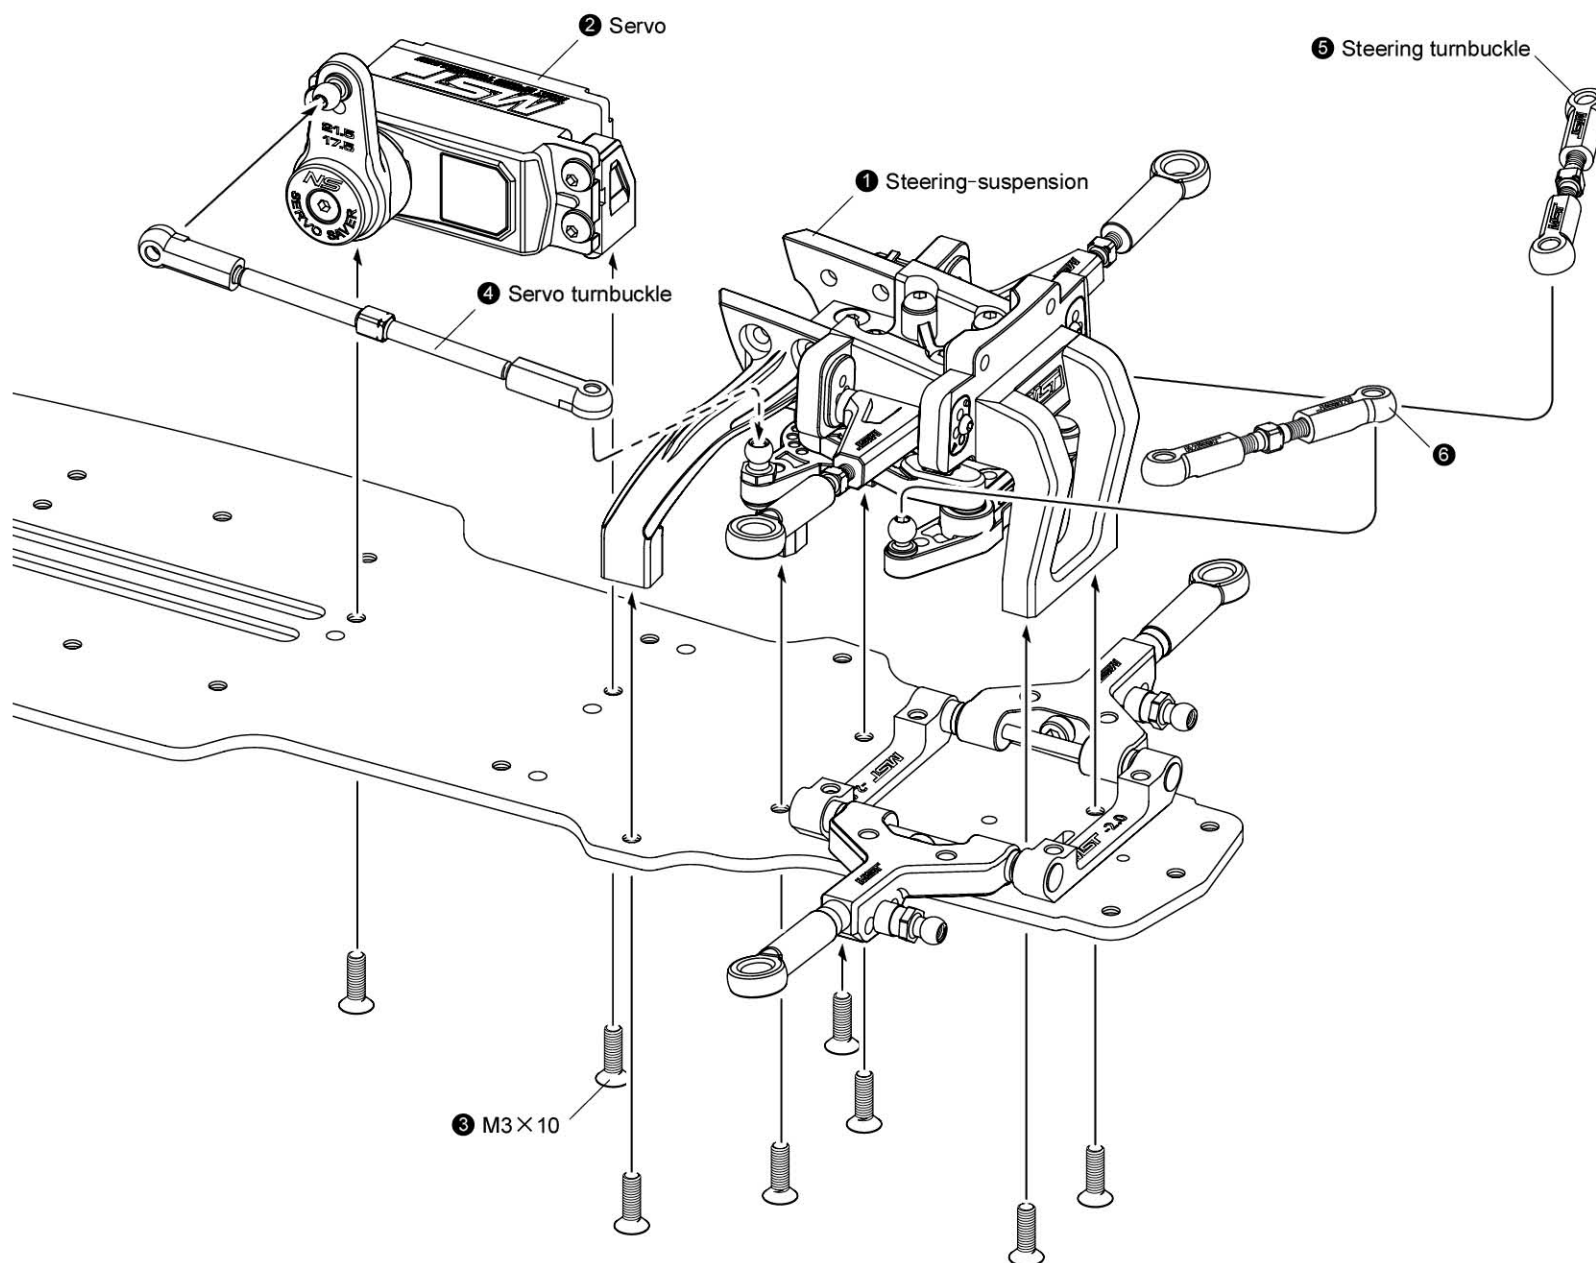


OPTIONAL PARTS




STEP 1 Attaching upper deck
安裝二樓板



OPTIONAL PARTS

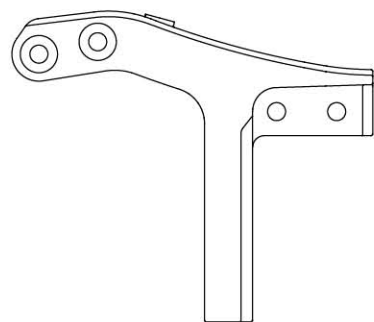


Gear box connector A ×1
連結架 A

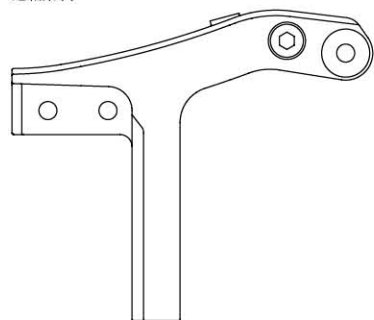


Gear box connector B ×1
連結架 B




Strengthen post ×1
補強柱




Gyro mount ×1
陀螺儀座




M3×8 screw ×10
圓頭螺絲



3×6×0.5 Spacer ×6
墊片






Upper deck A ×1
二樓板 A




Upper deck B ×1
二樓板 B

※ LSD X Gyro
LSD X 陀螺儀
841013 (Not included)

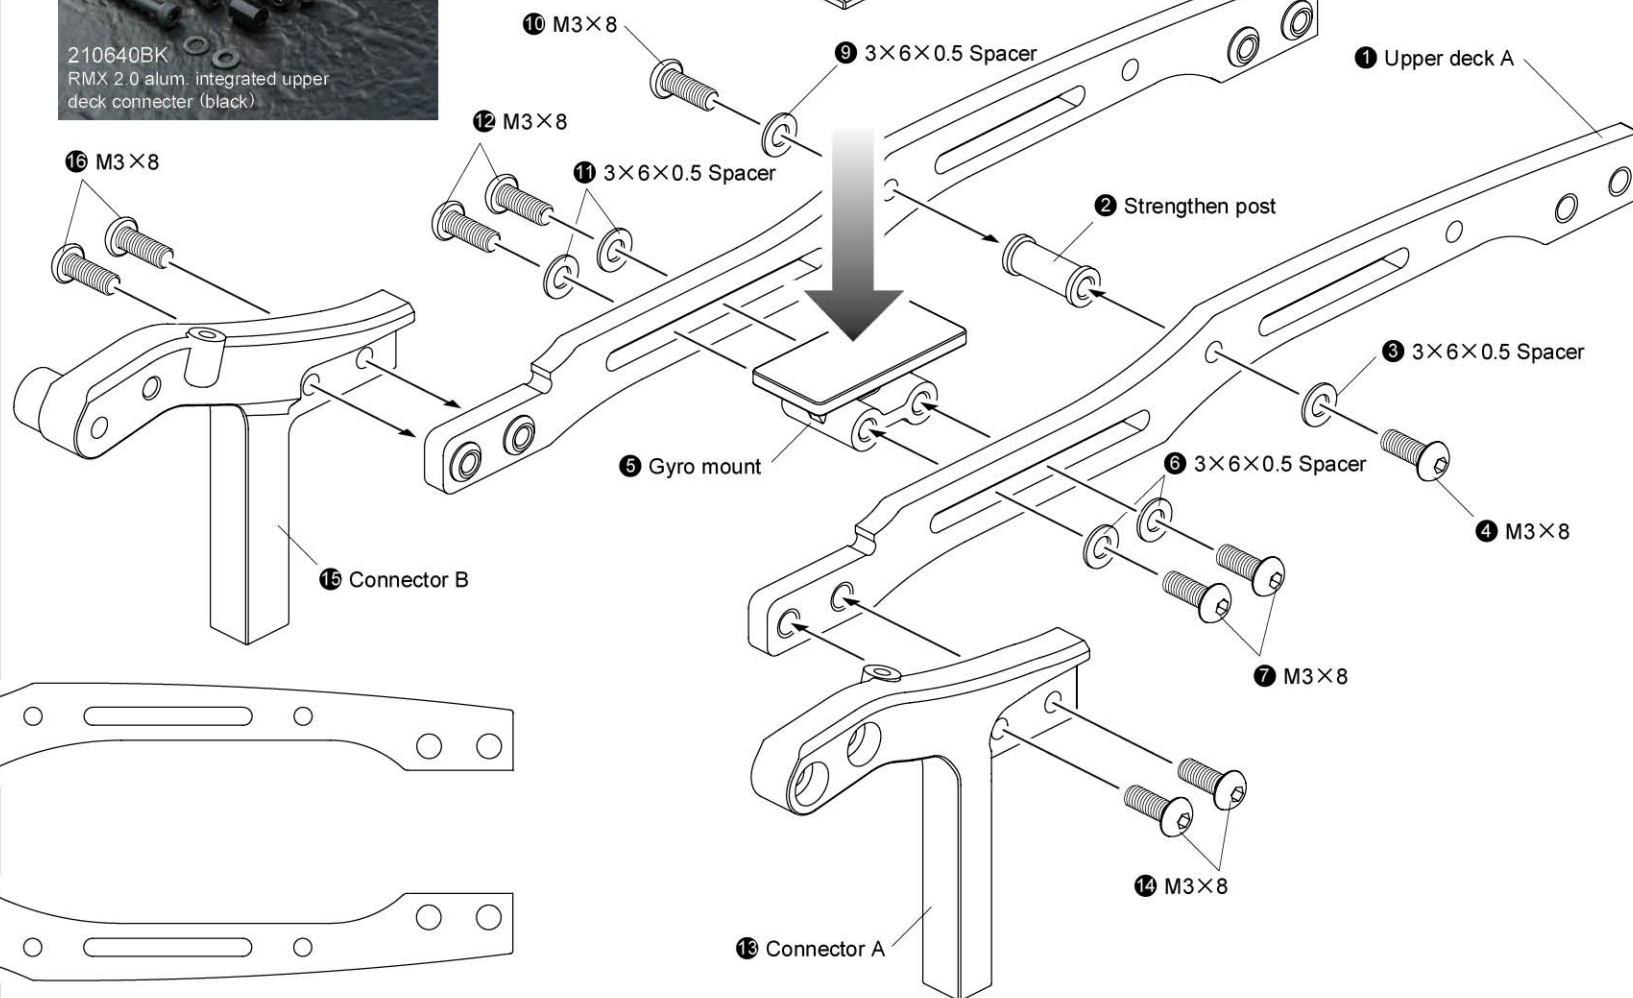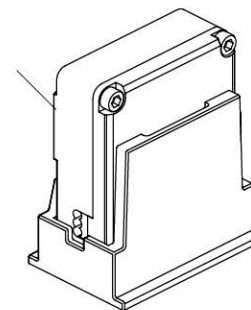


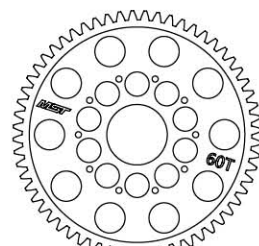


Differential gear 60T ×1
差速齒 60T

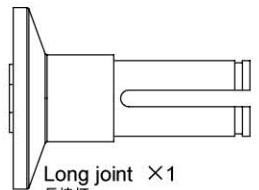

Long joint ×1
長接杯

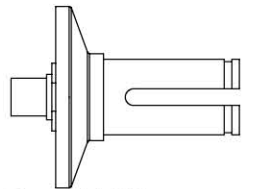

Short joint ×1
短接杯




M2.5×30 screw ×1
有頭螺絲(半牙)



Diff. nut ×1
滾差螺帽座



Diff. plate ×2
滾差壓板



10×15 Ball bearing ×2
培林



Joint ring ×2
接杯環



5×8 Ball bearing ×2
軸承



2.5×6 Spacer ×2
銅板




3×6×0.5 Spacer ×1
墊片



Diff. Spring ×1
滾差彈簧





Steel ball 3.0 ×10
鋼珠 3.0






Steel ball 1.5 ×8
鋼珠 1.5

STEP 1 Rear diff. set assembly
後滾差組裝

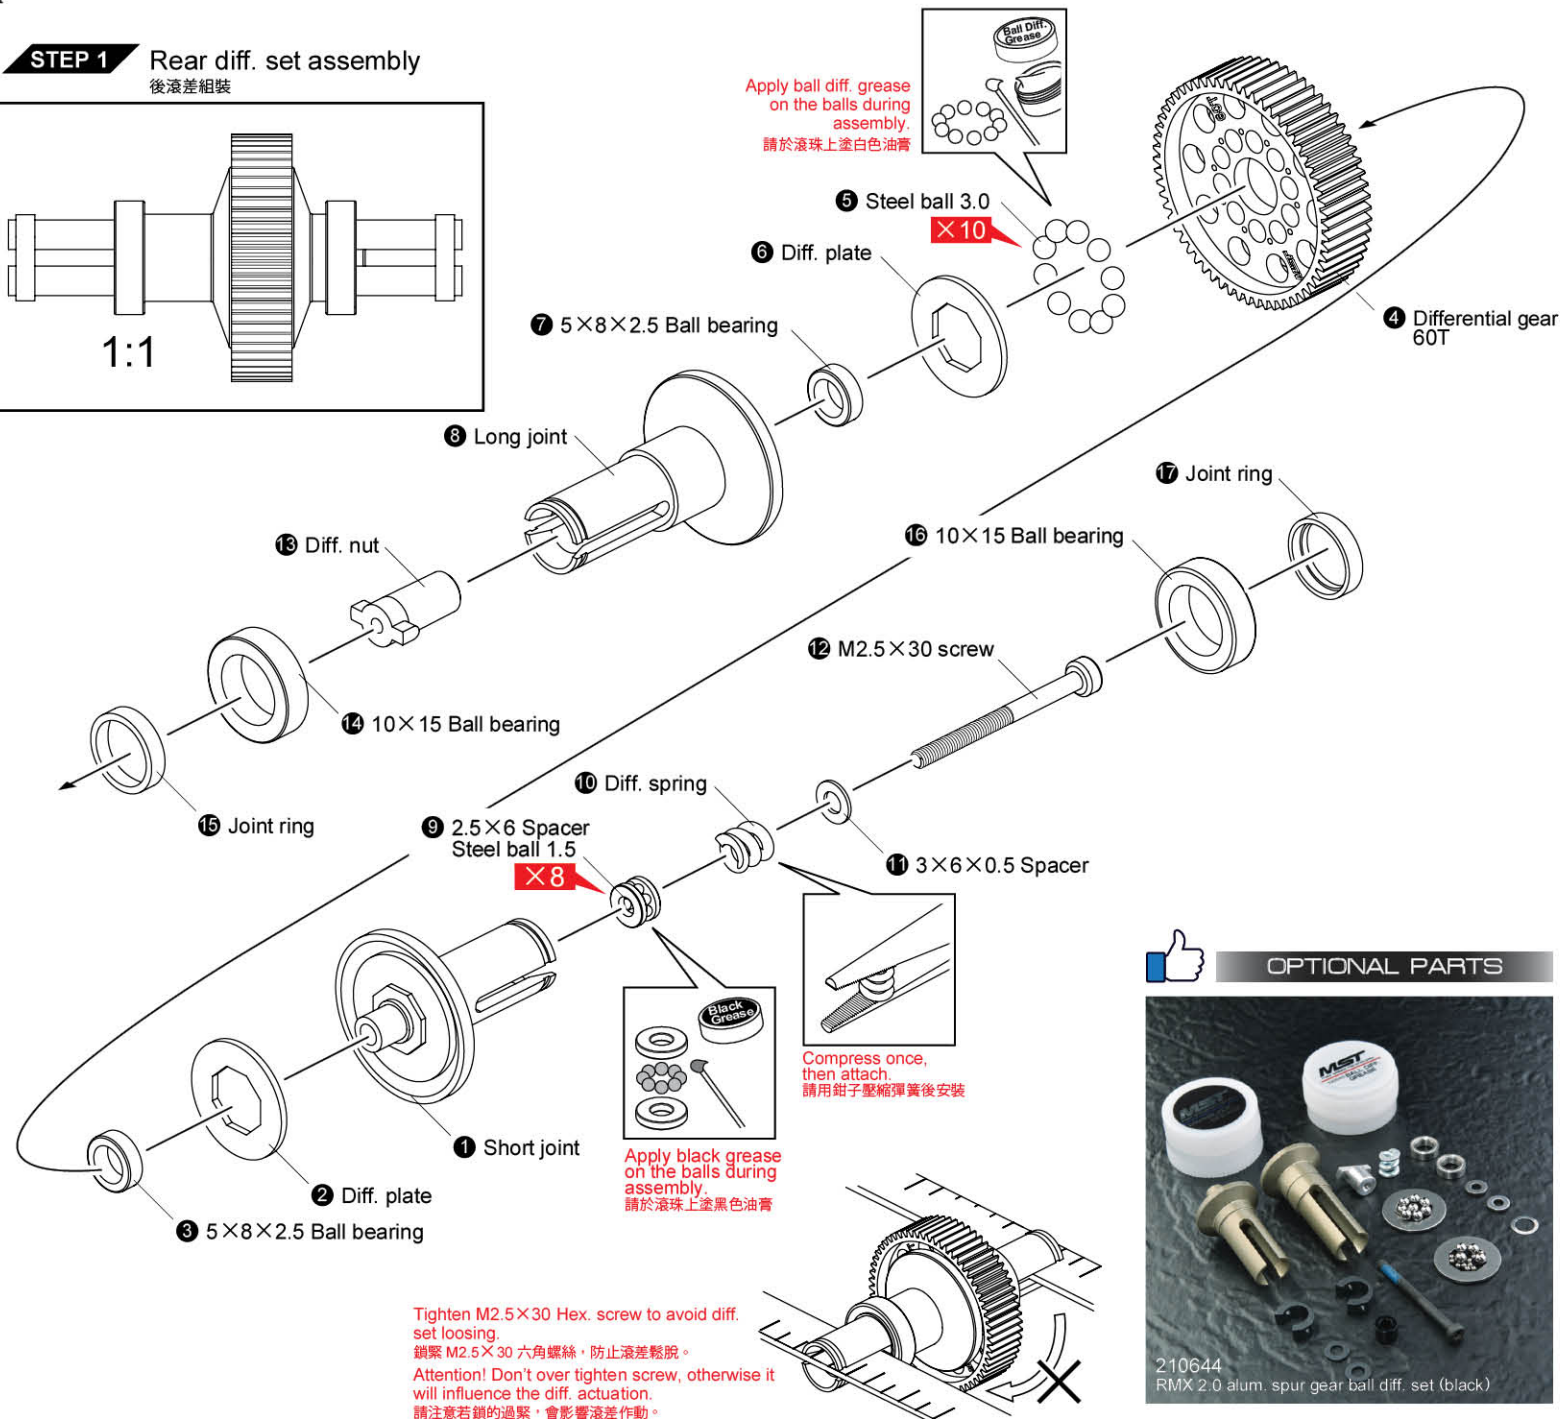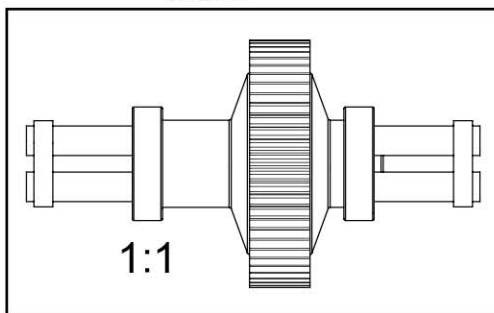


OPTIONAL PARTS




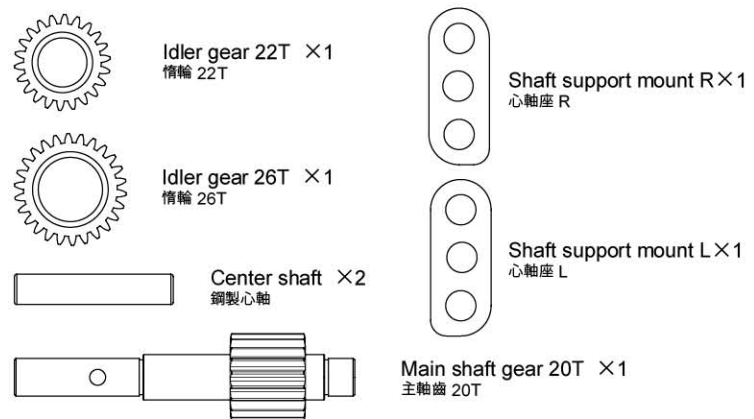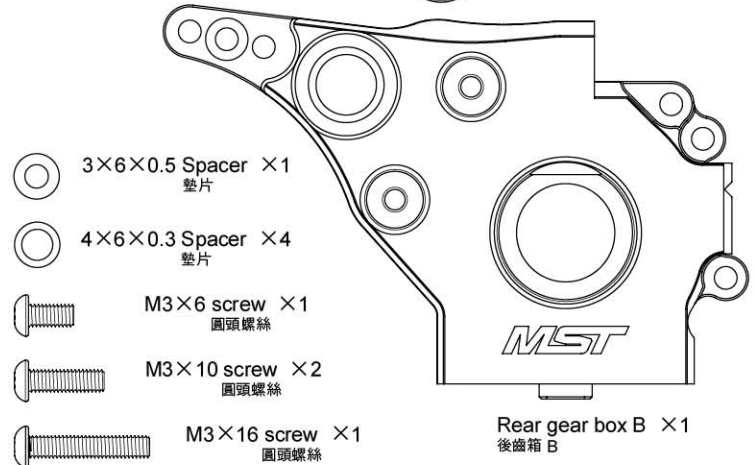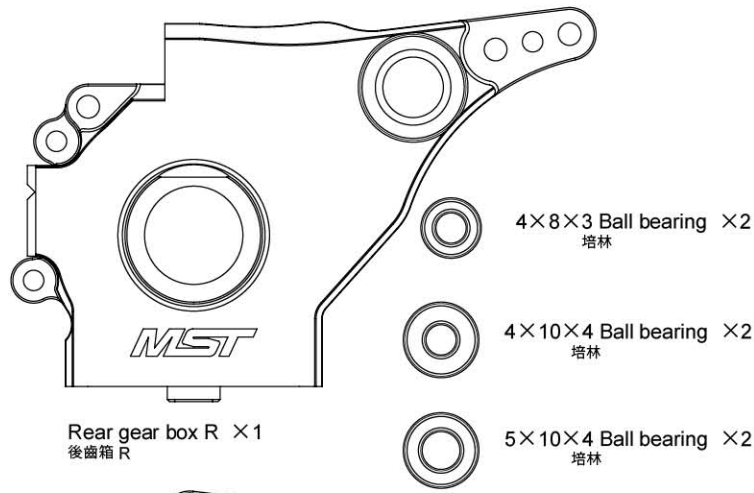


STEP 1 Shaft support mount assembly
心軸座組裝

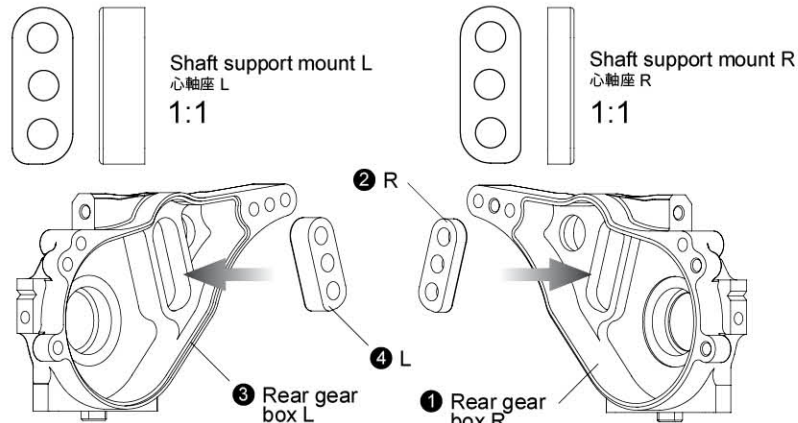

STEP 2 Idler gear assembly
惰輪組裝


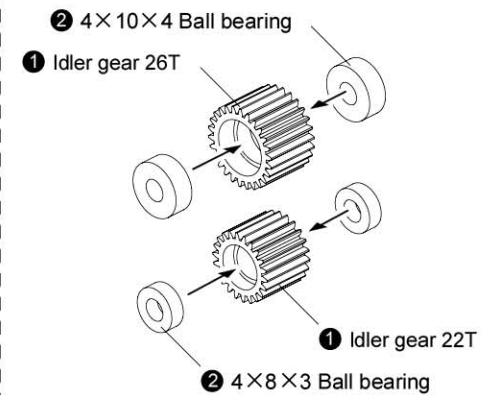


STEP 3 Rear gear box assembly
後齒箱組裝

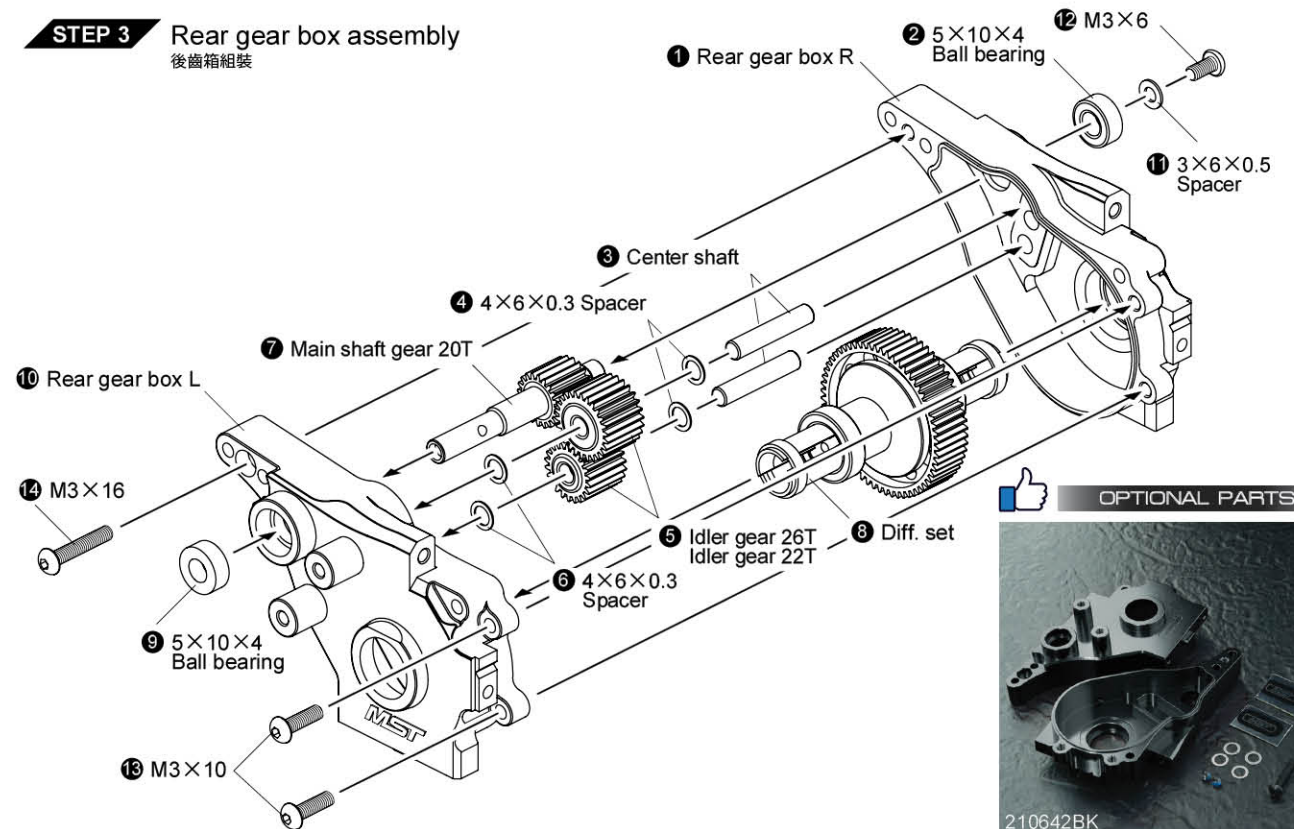


OPTIONAL PARTS



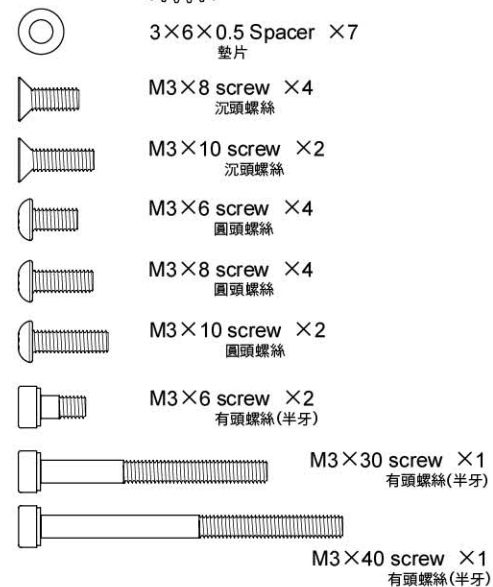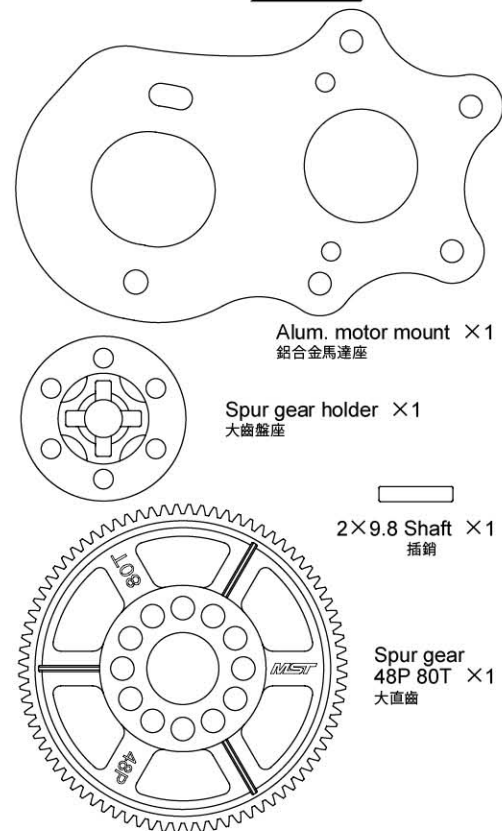


STEP 1 Attaching spur gear
安裝大齒盤

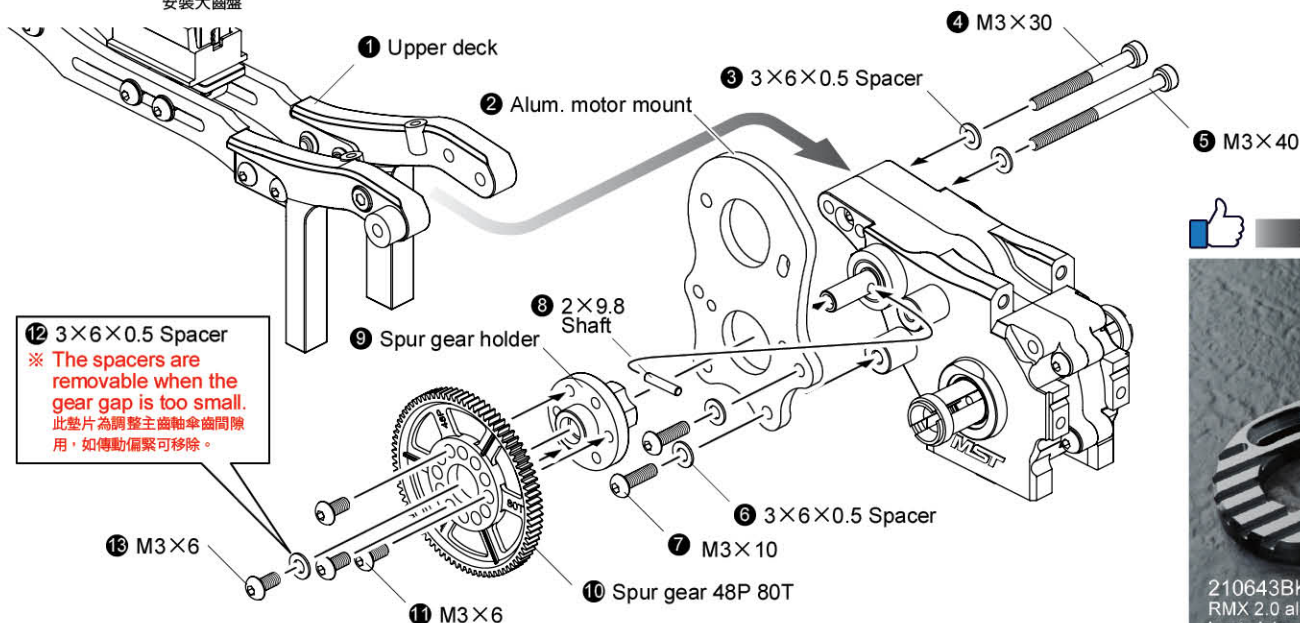

OPTIONAL PARTS



STEP 2 Attaching motor
安裝馬達

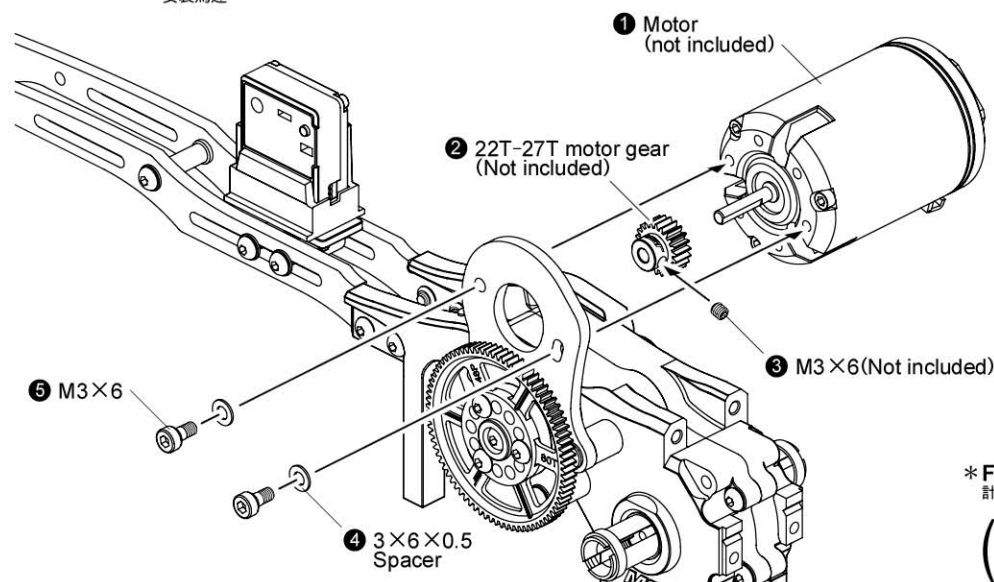

GEAR RATIO
(For 80T Spur Gear)

Pinion gear teeth	60T/20T <3.00>	
	Pinion gear teeth	Ratio
22T	22T	10.91
23T	23T	10.43
24T	24T	10
25T	25T	9.6
26T	26T	9.23
27T	27T	8.89


※ Adjust for proper space.
請調整適當齒隙。

* FORMULA
計算公式






$$\left(\frac{\text{Spur gear teeth 80T}}{\text{Pinion gear teeth}} \times \frac{\text{Differential gear 60T}}{\text{Main shaft gear 20T}} \right) = \text{Gear ratio}$$

大直齒 馬達齒 差速齒 主軸齒 終傳比


STEP 3 Attaching rear gear box
安裝後齒箱

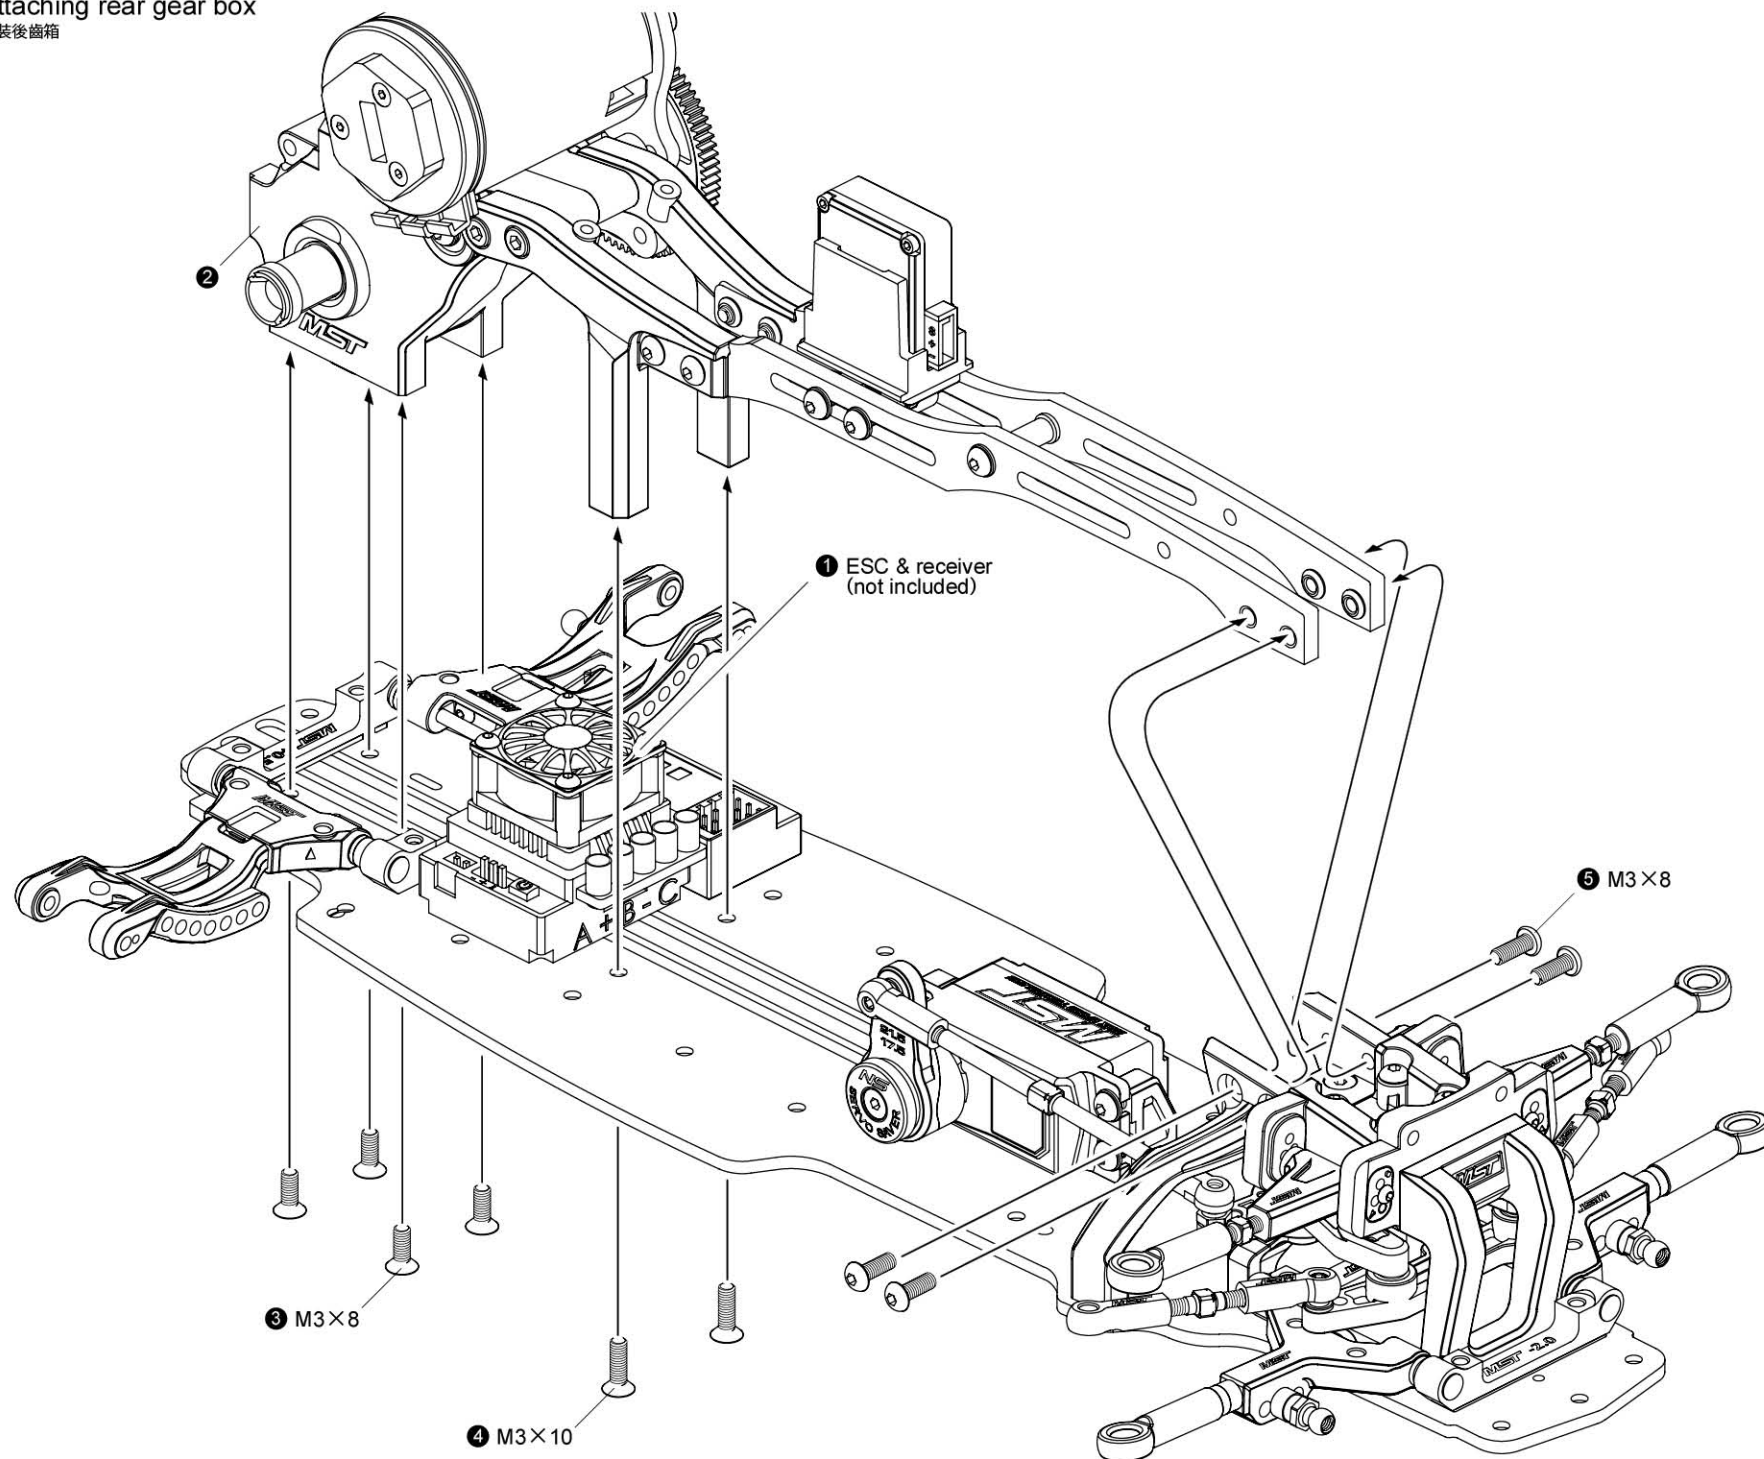


STEP 1 Attaching front damper stay
安裝前避震架

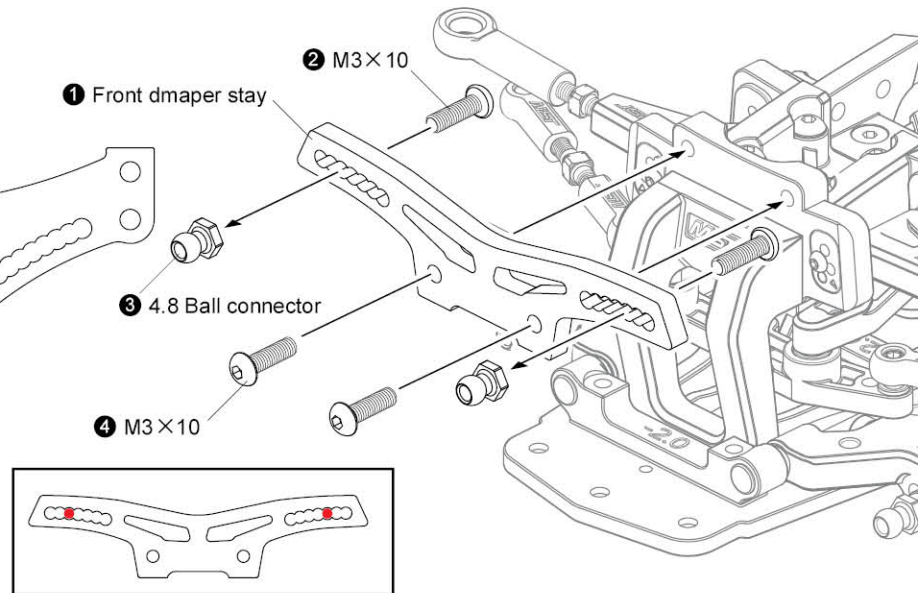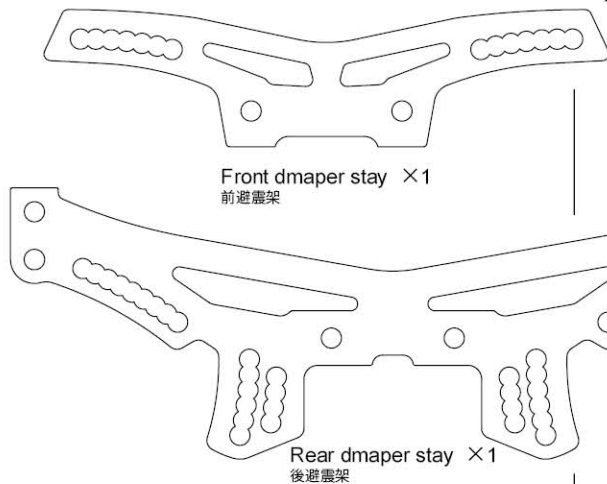


STEP 2 Attaching rear damper stay
安裝後避震架




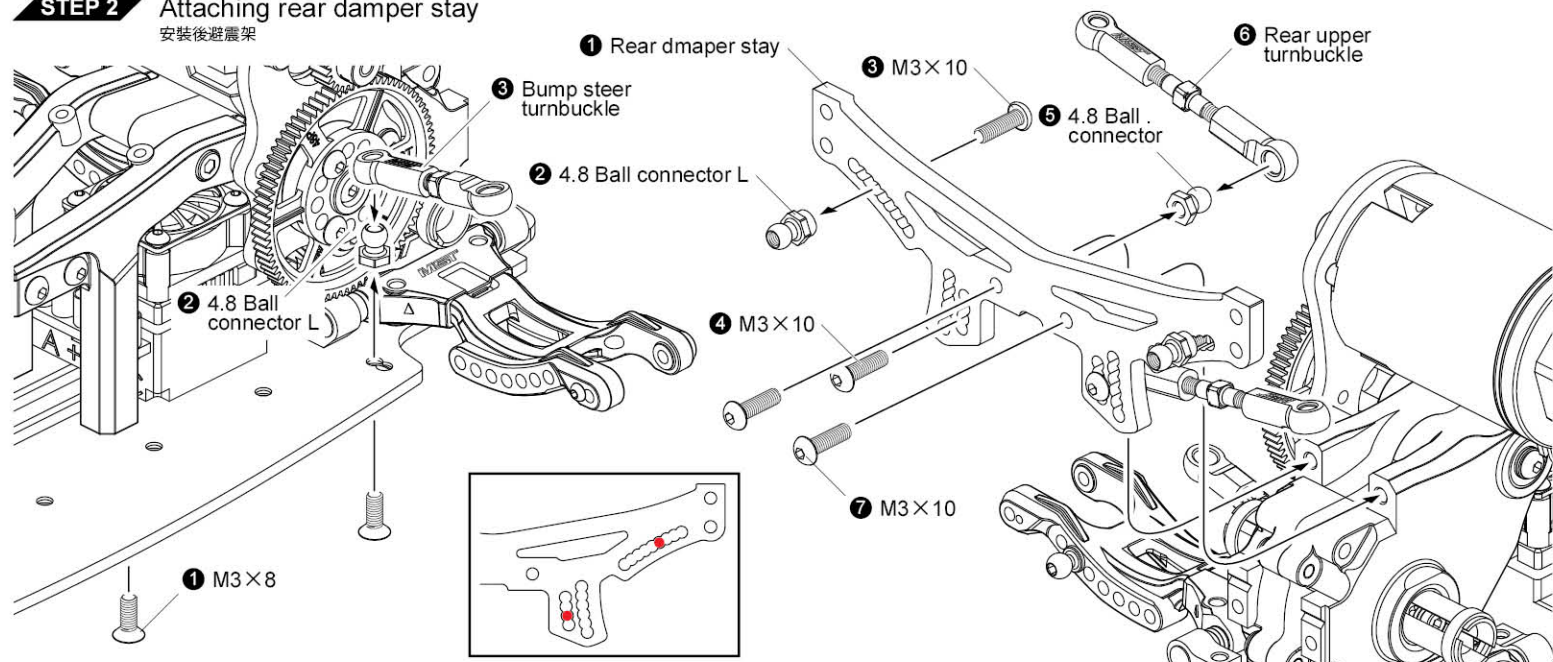



Rear upper turnbuckle assembly
後上拉桿組裝

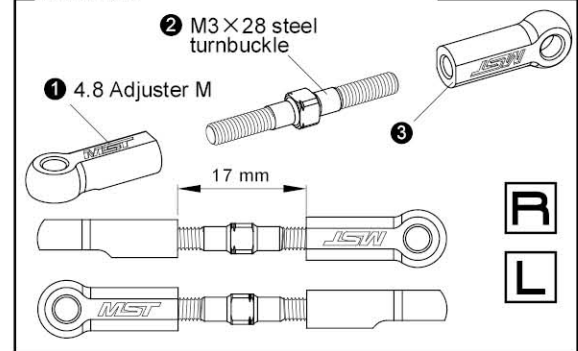


Bump steer turnbuckle assembly
轉向變化拉桿組裝

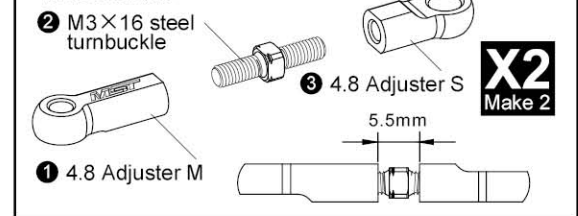

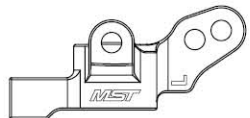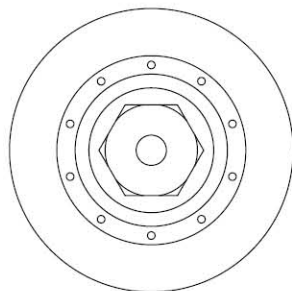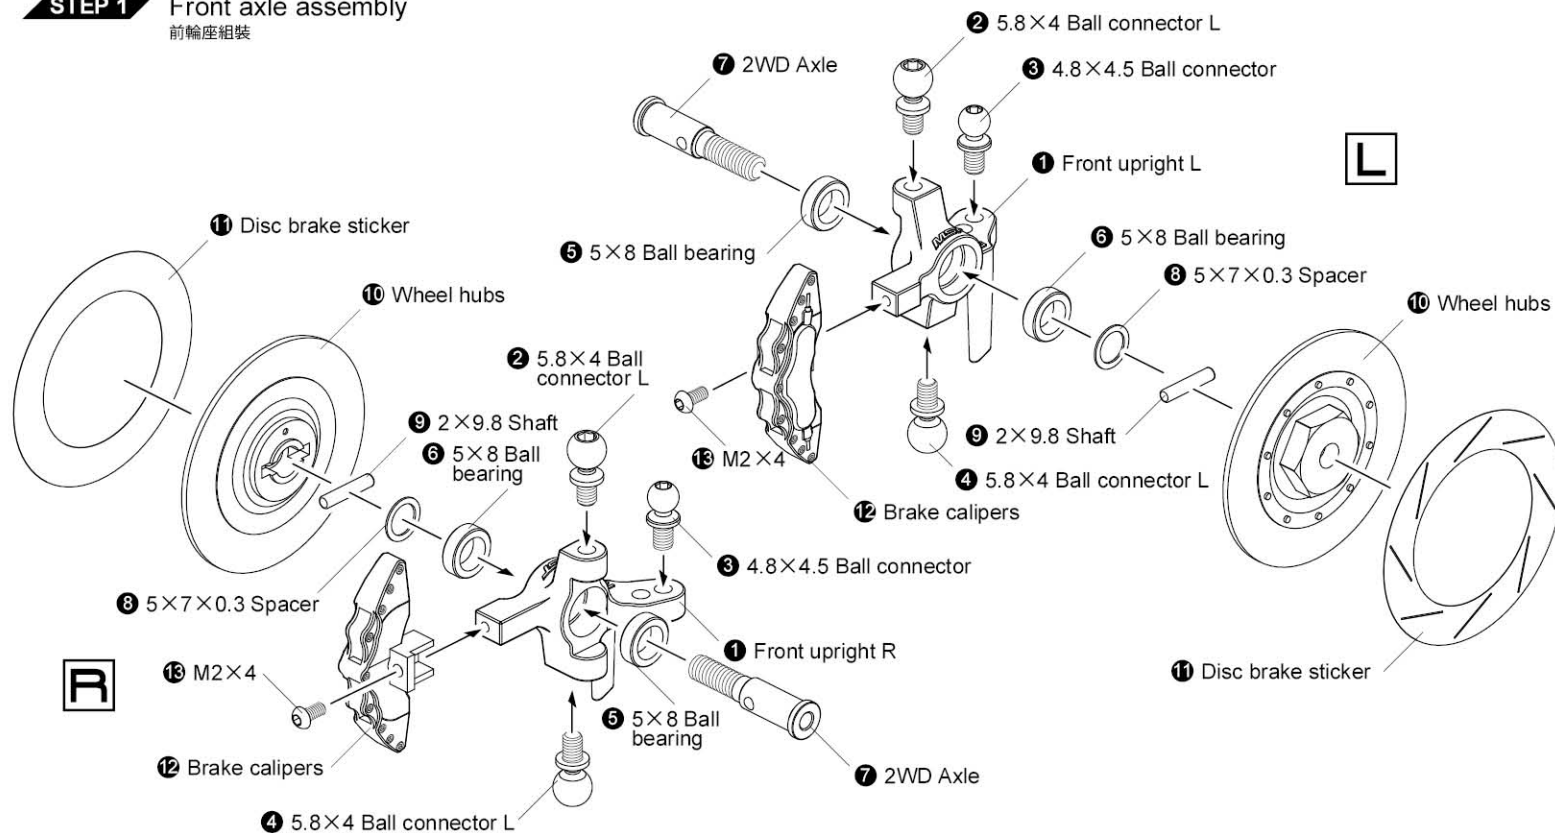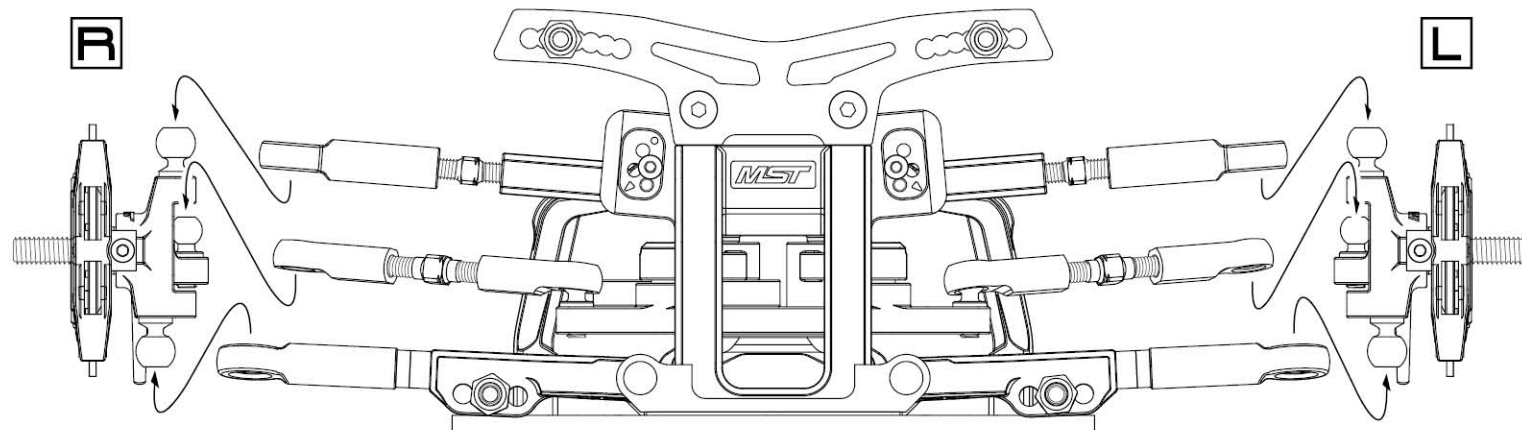Front upright R ×1
前輪座 RFront upright L ×1
前輪座 LBrake calipers ×2
制車卡鉗Wheel hubs (large)
(brake disc shaped) ×2
六角輪座(大)(制車碟型)2WD Axle ×2
二驅輪軸5.8×4 Ball connector L ×4
球頭螺絲(長)4.8×4.5 Ball connector ×2
球頭螺絲M2×4 screw ×2
圓頭螺絲2×9.8 Shaft ×2
插銷5×8 Ball bearing ×4
培林5×7×0.3 Spacer ×2
墊片**STEP 1** Front axle assembly
前輪座組裝**STEP 2** Attaching front axle
安裝前輪座

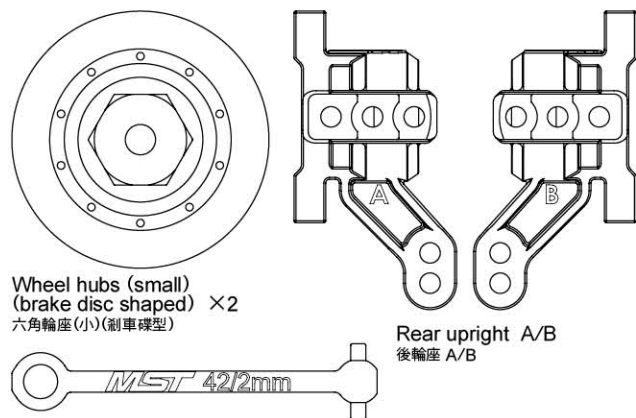

Steel CVD universal shaft 42 x2
鋼製CVD傳動軸 42

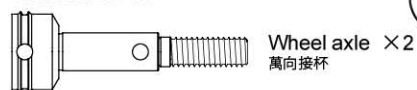

Brake calipers x2
剎車卡鉗



Rear upright mount x2
輪座固定座




2x9.8 Shaft x2
插銷



5x10 Ball bearing x4
培林



4.8 Ball connector L x2
外六角球頭(長)



M3x3 screw x2
止付螺絲





M2.5x12 screw x2
沉頭螺絲


STEP 1 Rear axle assembly

後輪座組裝

X2
Make 2

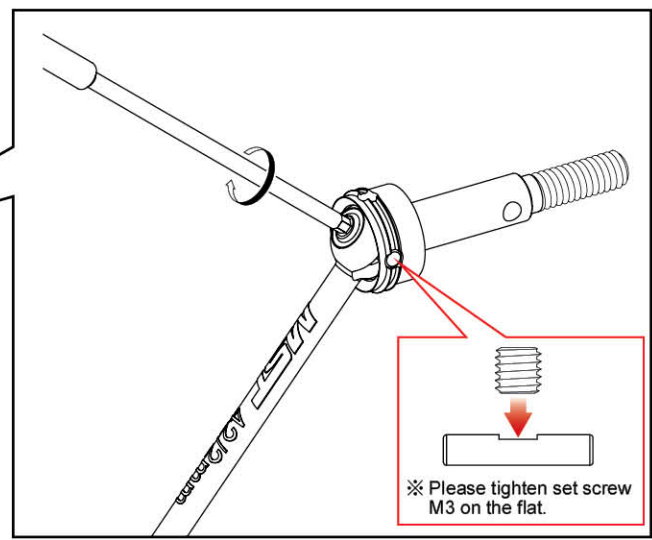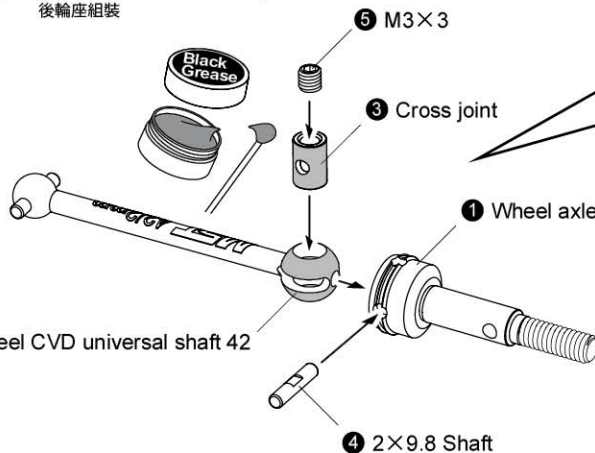


STEP 2

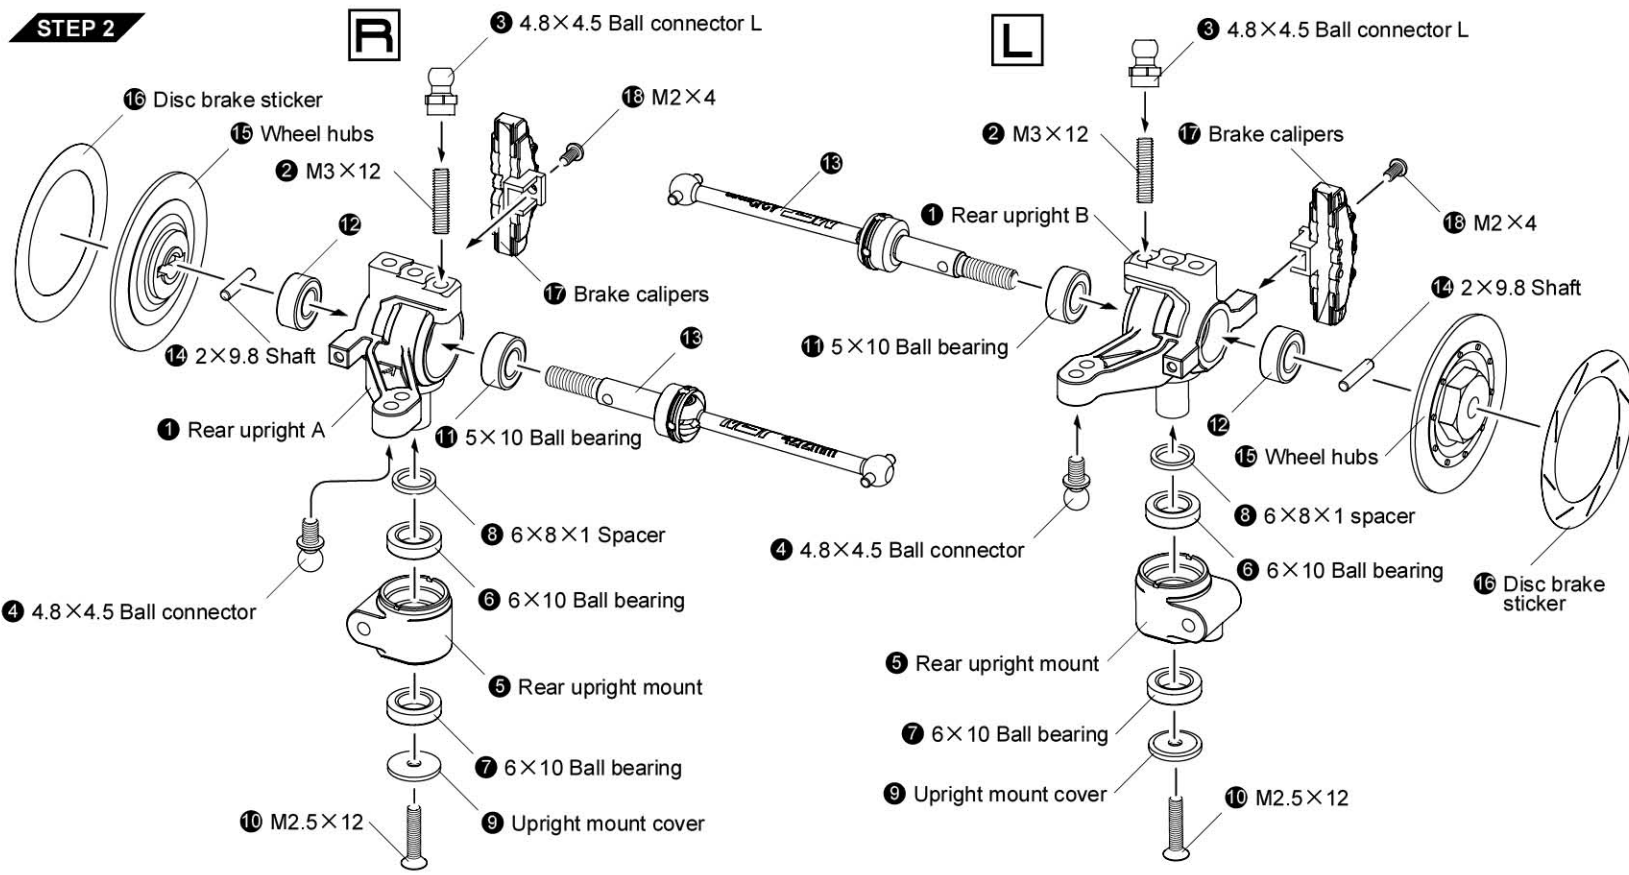


STEP 3 Attaching rear axle
安裝後輪座

R


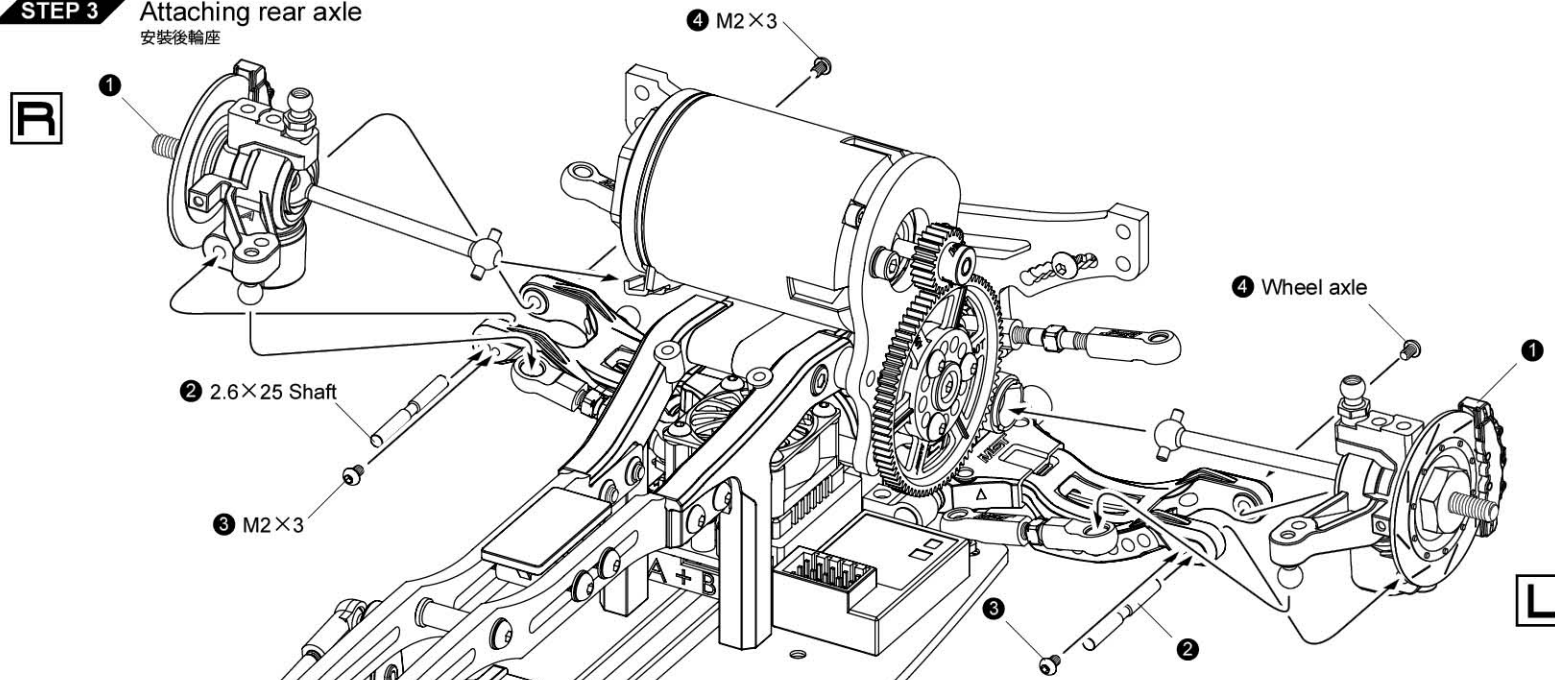


ADJUST THE BUMP STEER VARIATION


後輪轉向變化量調整

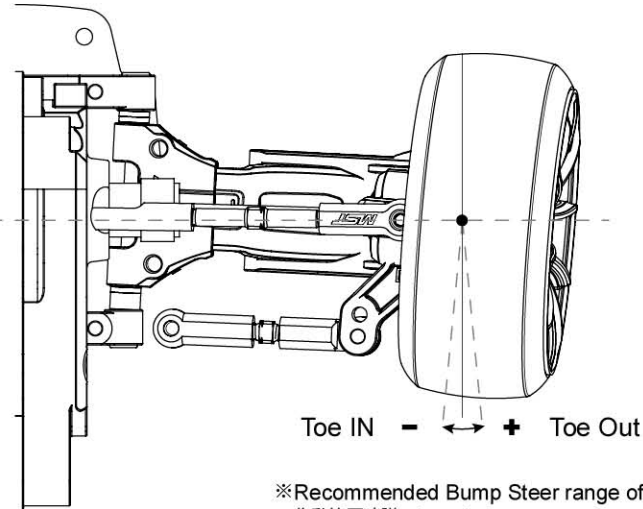


The variation is larger for the bigger gap between connector A and B
A 點球頭與 B 點球頭位置高低落差越大，後輪轉向變化量越大

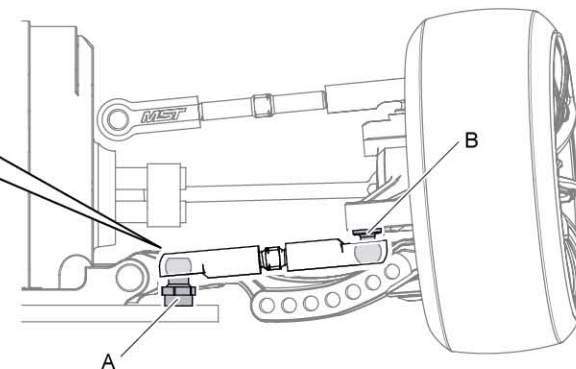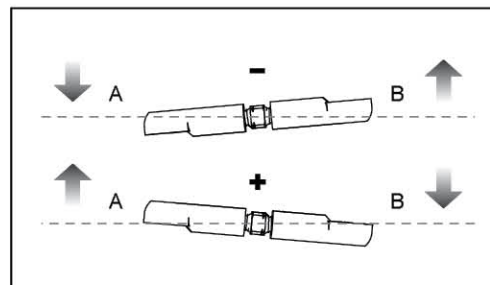


※Recommended Bump Steer range of action -3~+1.
作動範圍建議 -3 ~ +1

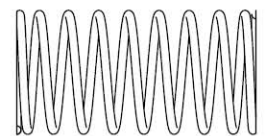


Soft coil spring 31mm x 2
(purple-green)
軟避震彈簧 31mm (紫綠)

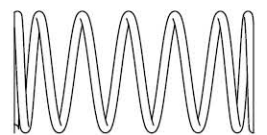


Hard coil spring 31mm x 2
(red)
硬避震彈簧 31mm (紅)

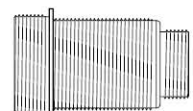

Damper cylinder x 4
避震筒身

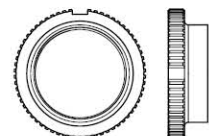


Spring retainer x 4
避震調整環

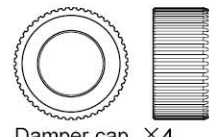

Damper cap x 4
避震器上蓋




Rod guide cap x 4
避震器下蓋




Piston rod x 4
避震軸心



E-clip x 8
E扣



12x1 O-ring x 4
O環




Low pressure damper seal x 4
避震器氣室(低內壓)



Rod guide x 4
避震器下蓋墊片



Damper O-ring P3 x 4
避震器O環



6.5x2 Sponge x 4
泡棉




Piston x 4
避震活塞



4.5x1 O-ring x 4
O環




Adjustable shock end x 4
可調上球頭座



Adjustable damper cap x 4
可調下座





Damper retainer x 4
避震器彈簧座




Damper adjuster x 4
避震器拉桿

STEP 1 Damper assembly 避震器組裝

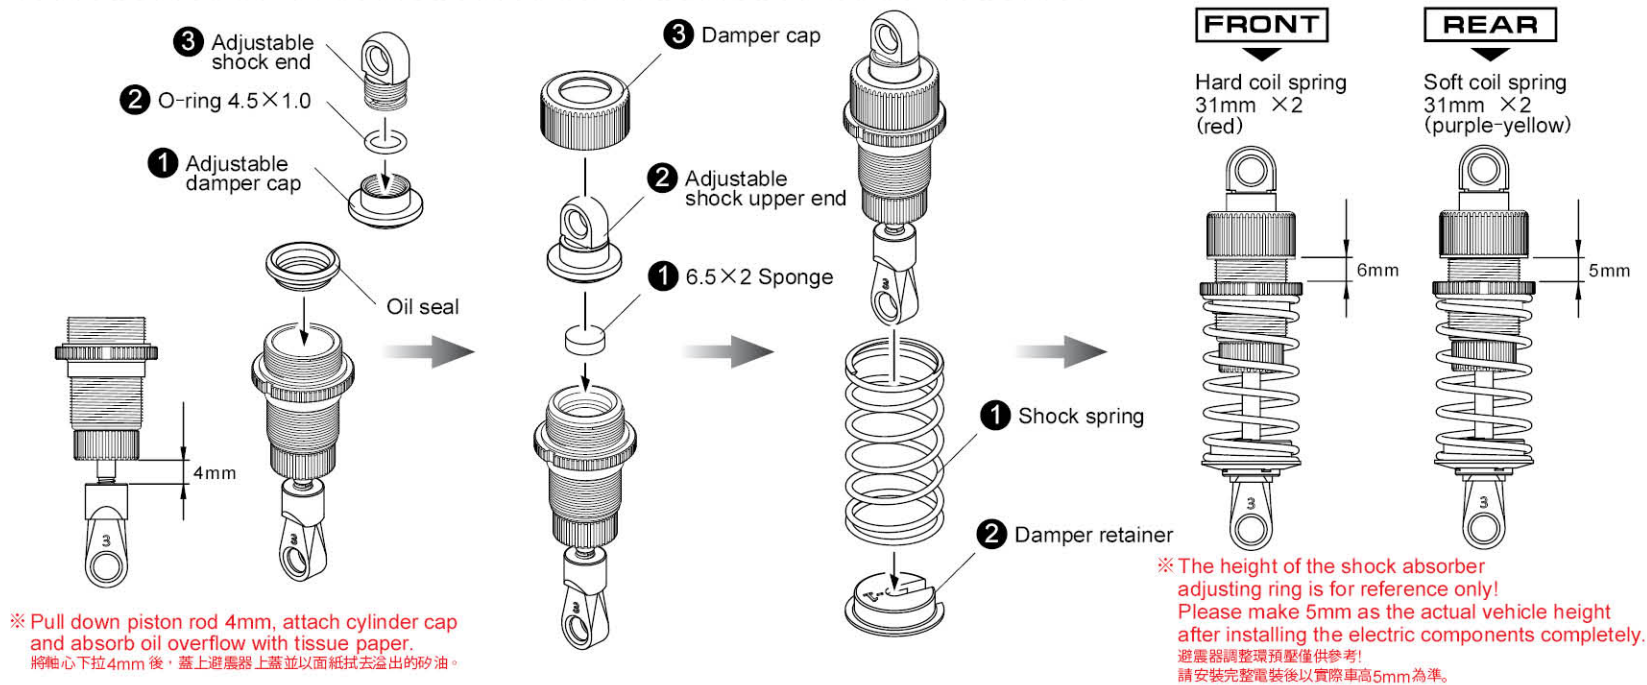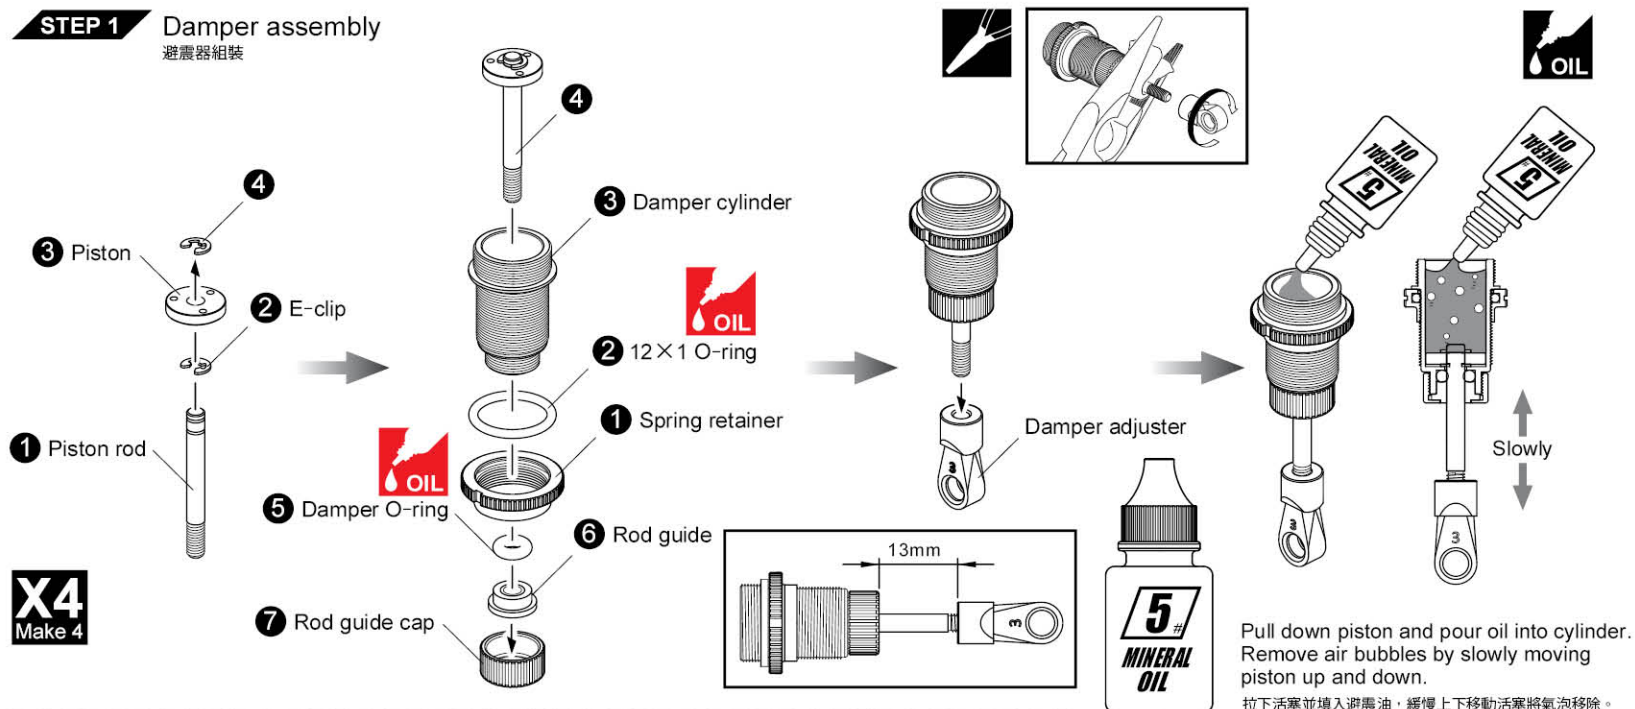


STEP 2 Attaching damper
安裝避震器


FRONT





FRONT

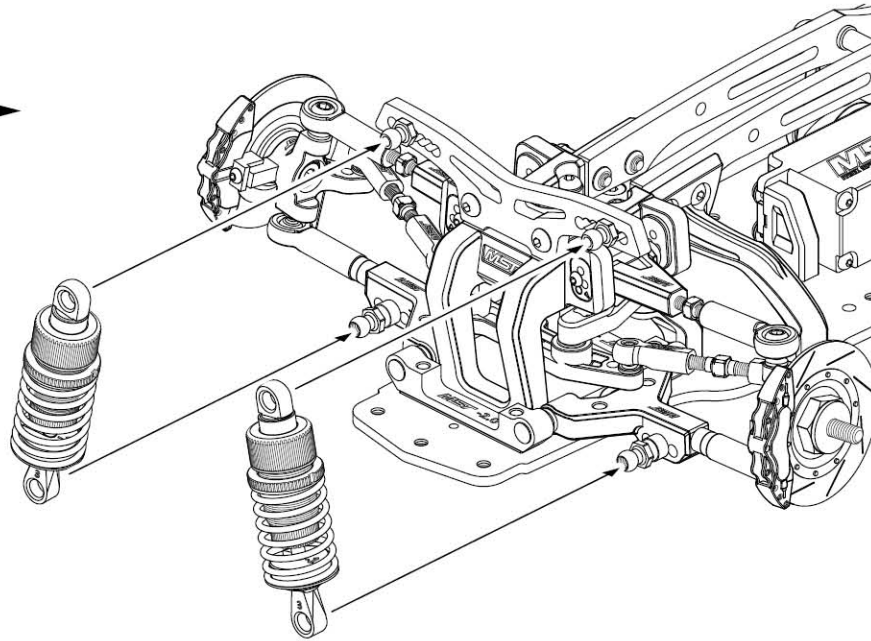


REAR




REAR

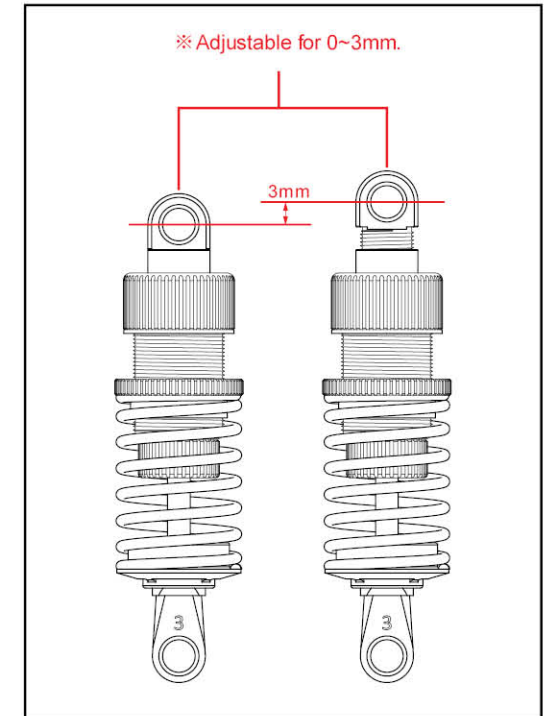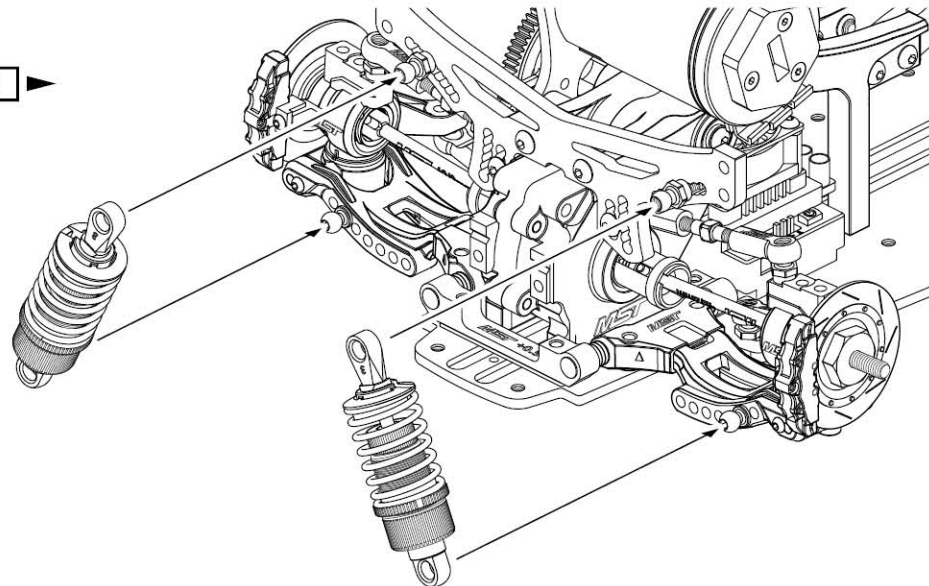


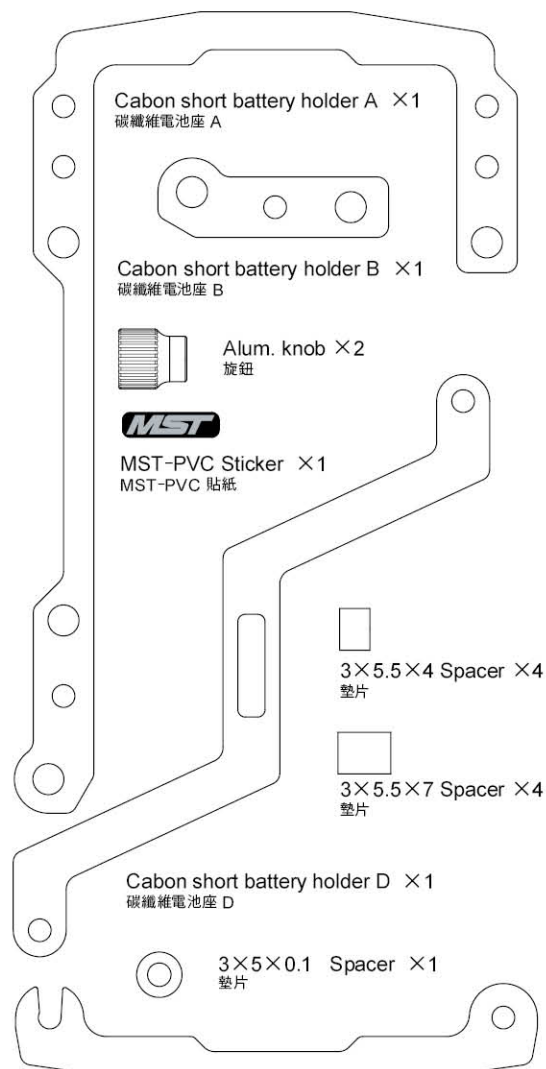


Cabon short battery holder D ×1
碳纖維電池座 D

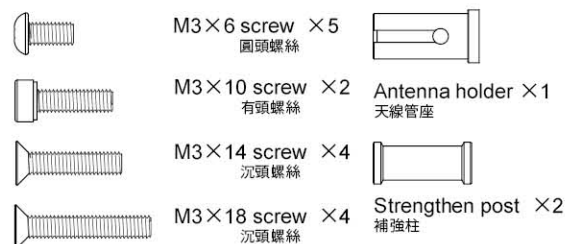


STEP 1 Attaching battery mounts 安裝電池固定座

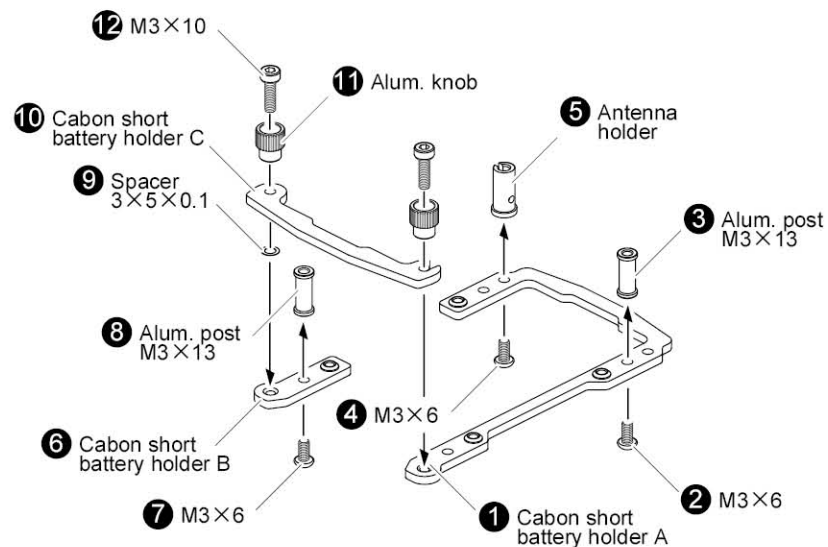


STEP 3 Attaching battery mounts 安裝電池固定座

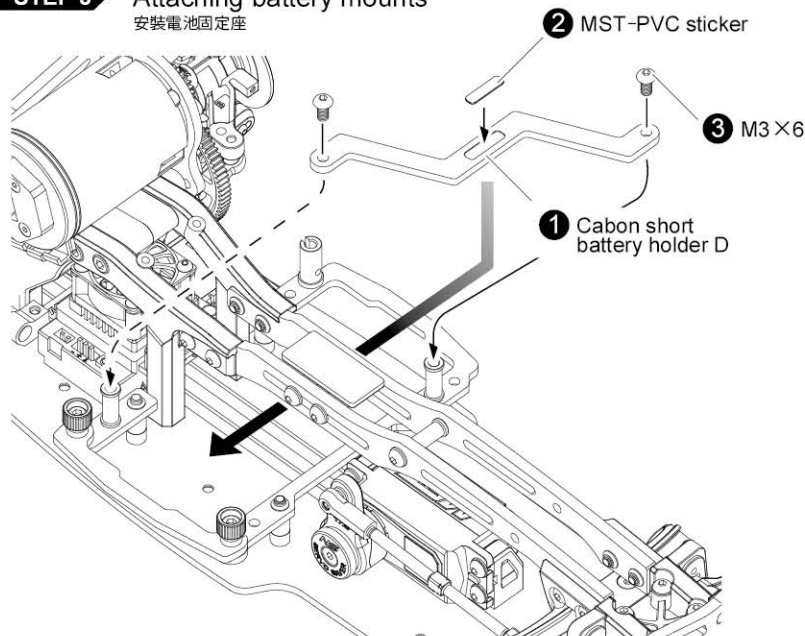


STEP 2 Attaching battery mounts 安裝電池固定座

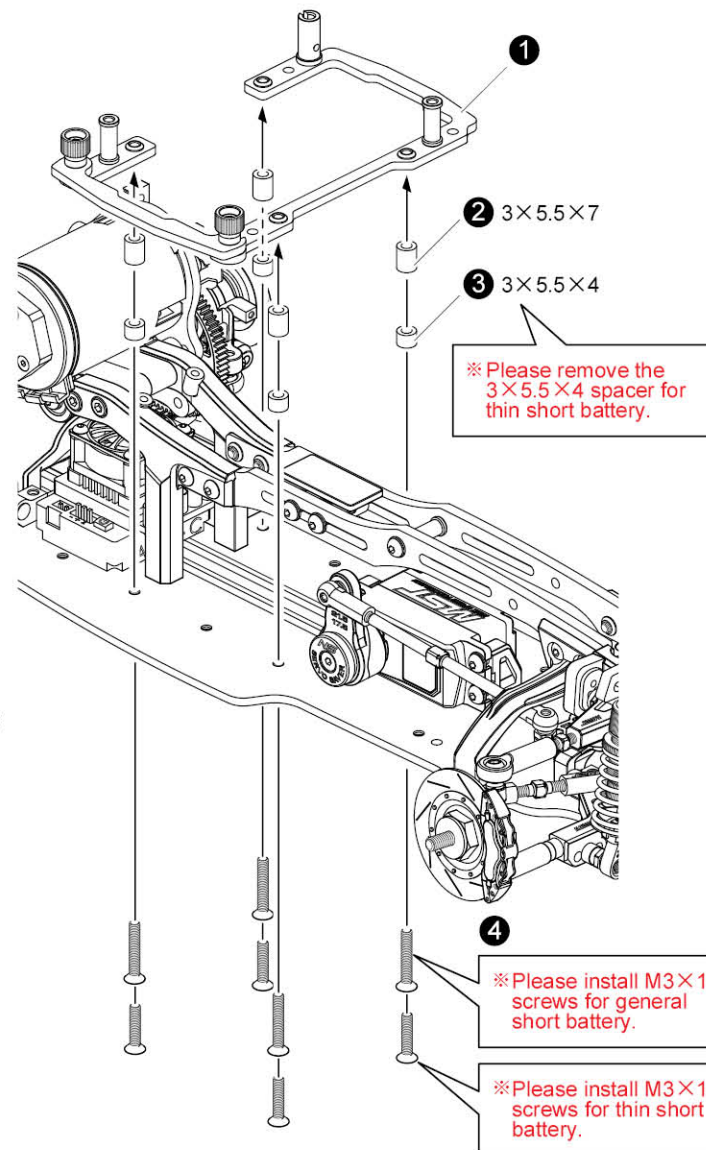

STEP 1 Attaching Battery
安裝電池

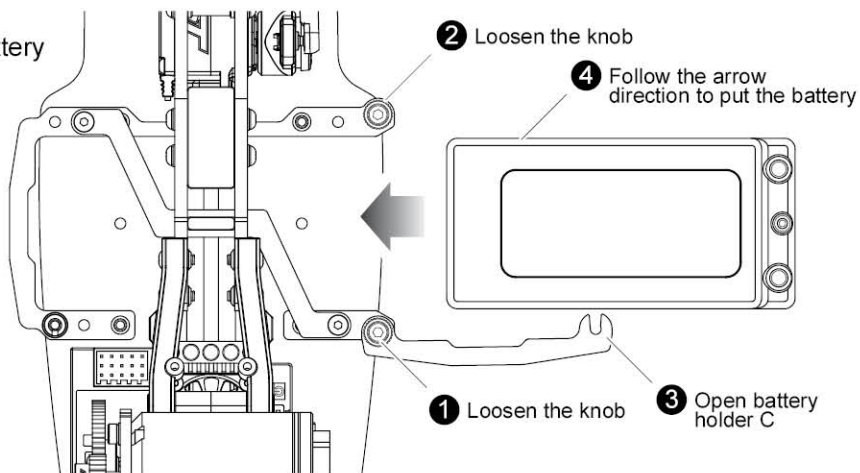

BATTERY HOLDER HEIGHT ADJUSTMENT INSTRUCTIONS

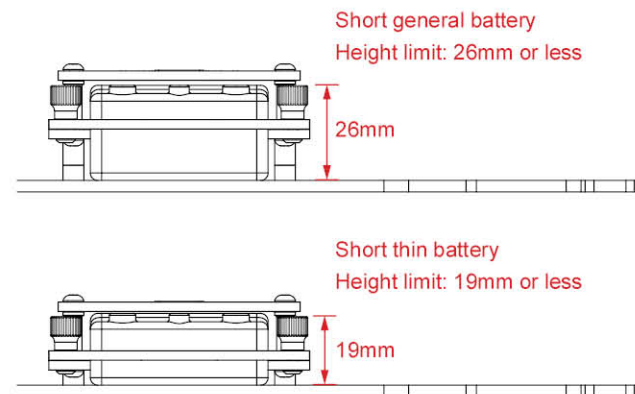

PARTS WHEELS
輪胎



Flange nut M4 ×4
凸緣螺帽M4

Bag 7




Wheel hub spacer 1.0 ×2
輪座墊片 1.0









Bag 7



※ NOT including.
Please refer to MST website for the
wheel & tire types.
胎框組須另購，詳情請見官網。
[www.rc-mst.com]



STEP 1 Attaching wheels
安裝輪胎

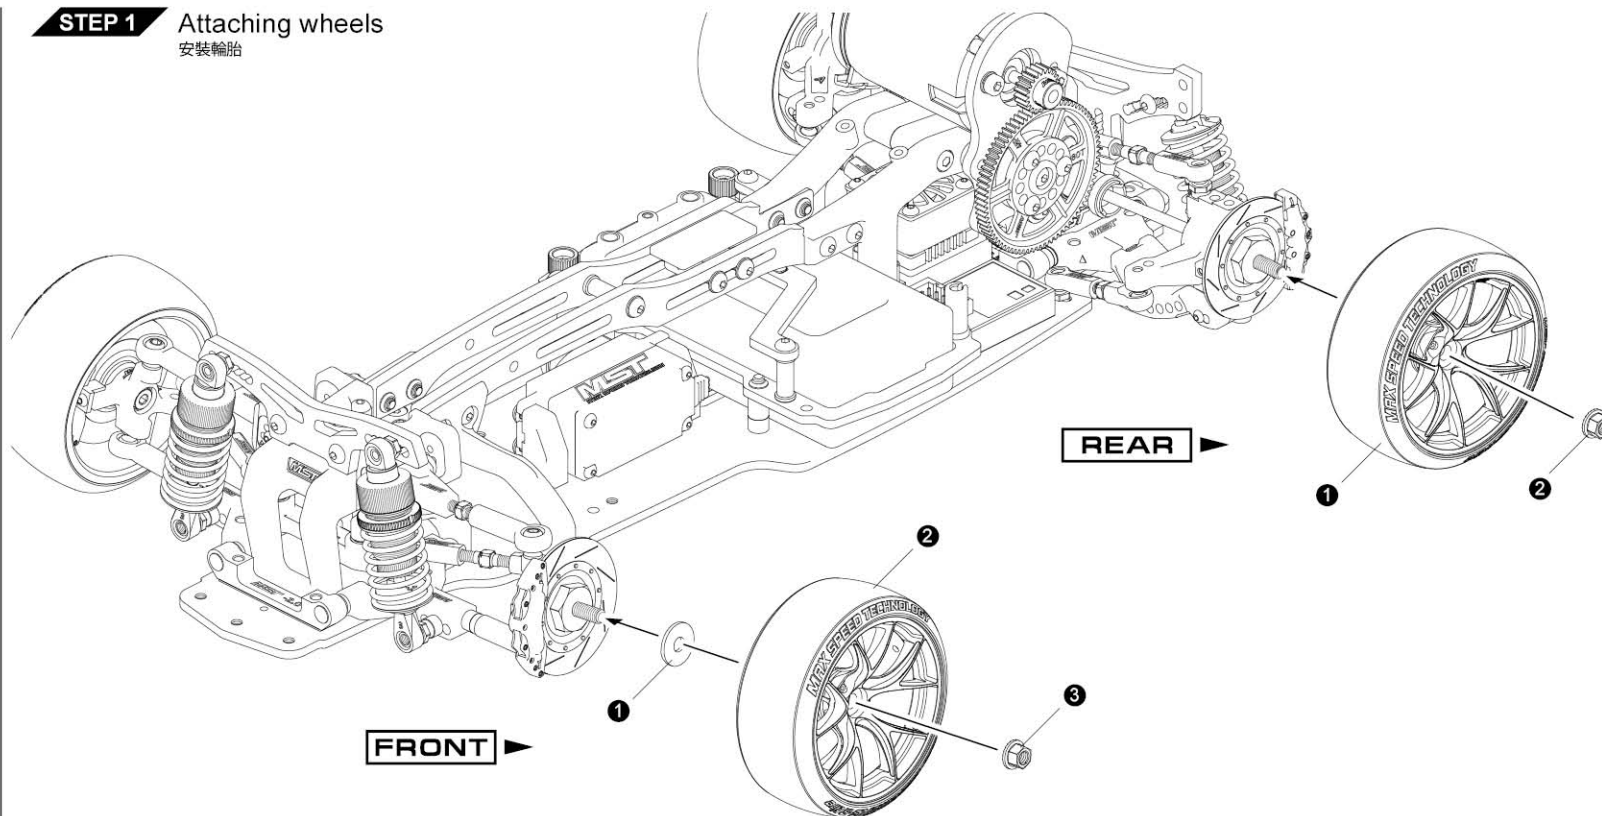

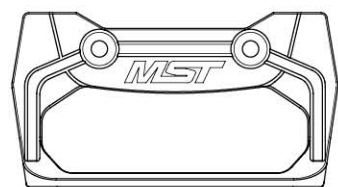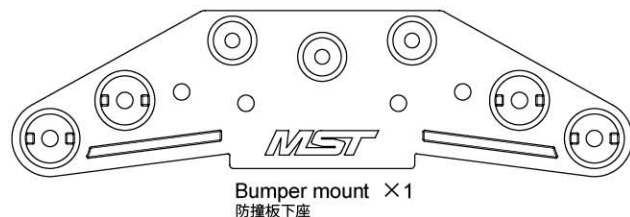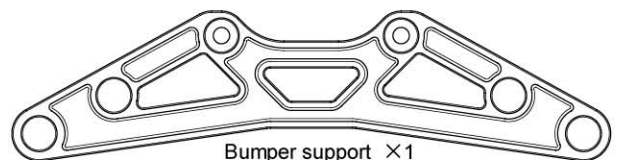

STEP 1 Attaching body mounts

安裝車殼固定座

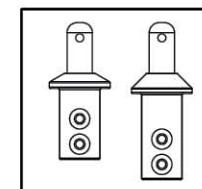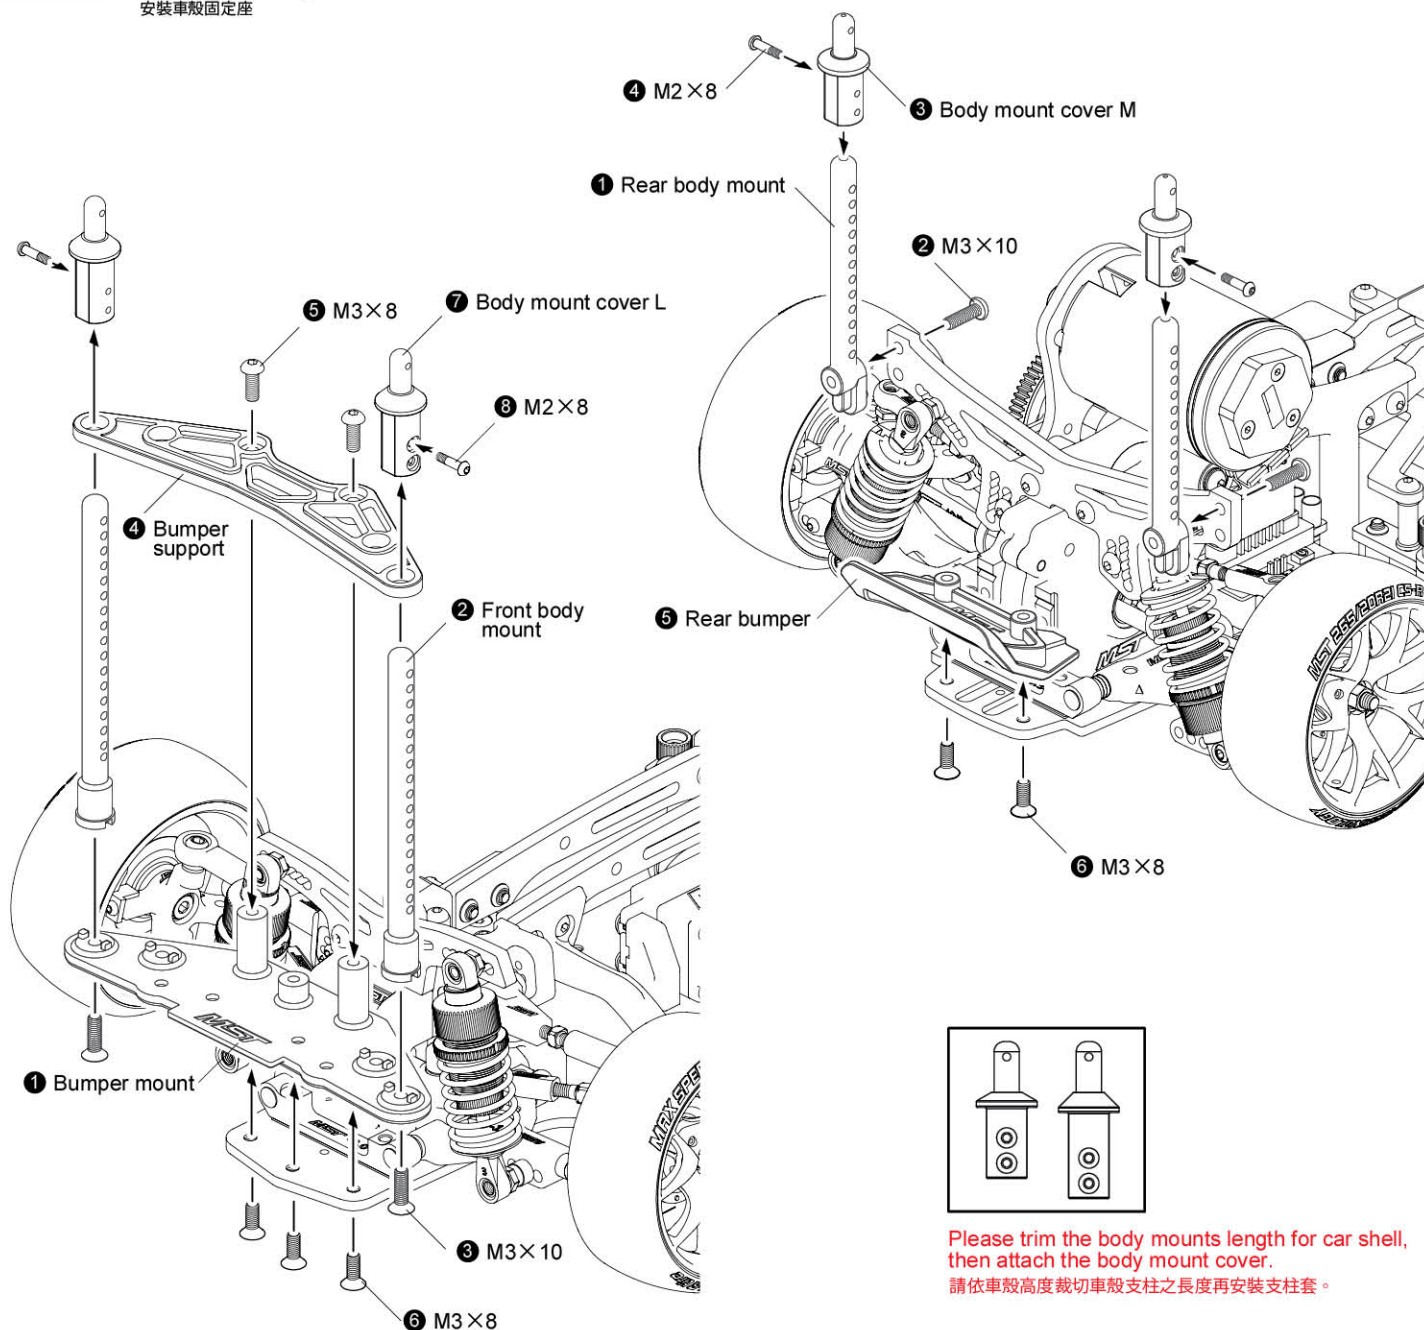


Please trim the body mounts length for car shell, then attach the body mount cover.
請依車殼高度裁切車殼支柱之長度再安裝支柱套。

※ Please purchase
請另購


210640BK RMX 2.0 alum. integrated upper deck connector (black)
鋁合金一體式二樓板連結架

210639BK RMX 2.0 Alum.ESC rear moun set (black)
鋁合金ESC後置架組


STEP 1 Attaching battery mounts
安裝電池固定座

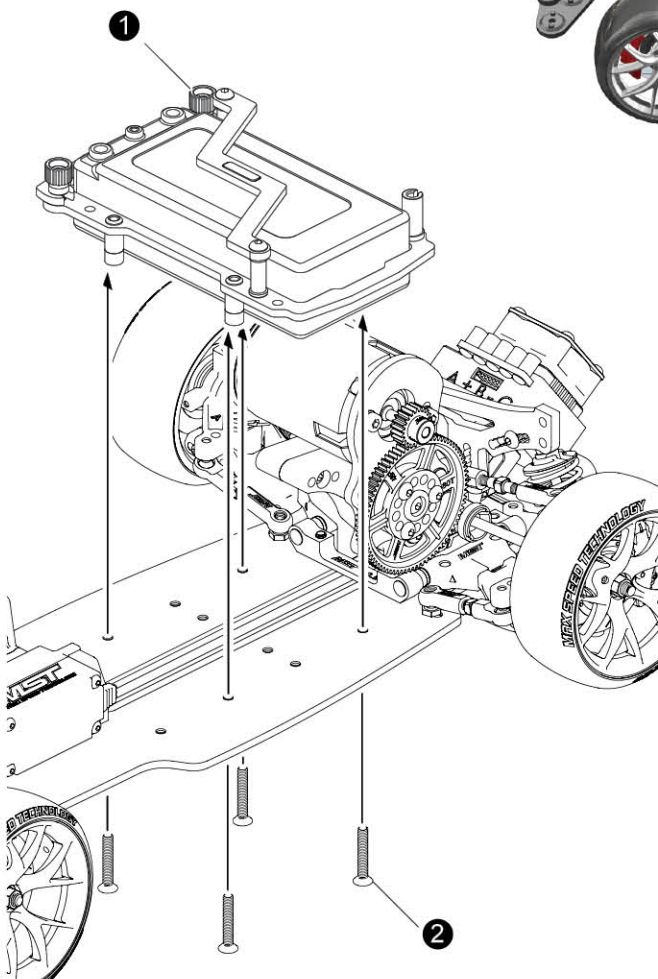

**RMX Motor HCG
Mode 2**
High Center of Gravity

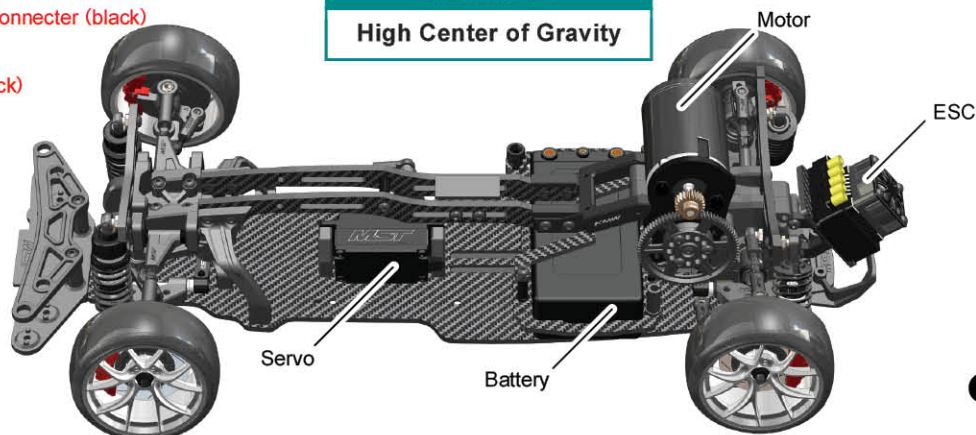


STEP 2 Attaching upper deck
安裝二樓板

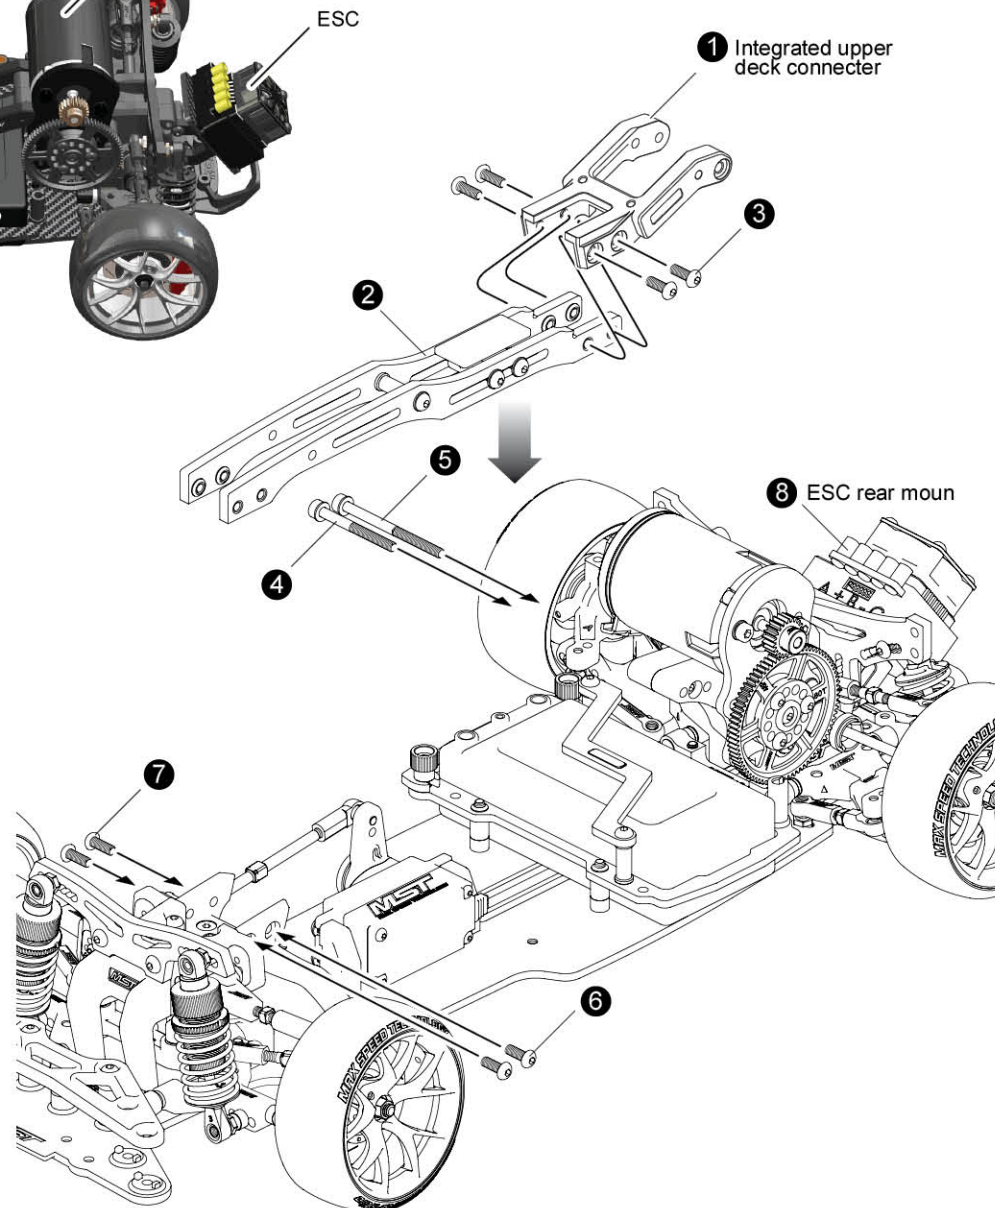

STEP 1 Steering arm assembly

轉向搖臂組裝

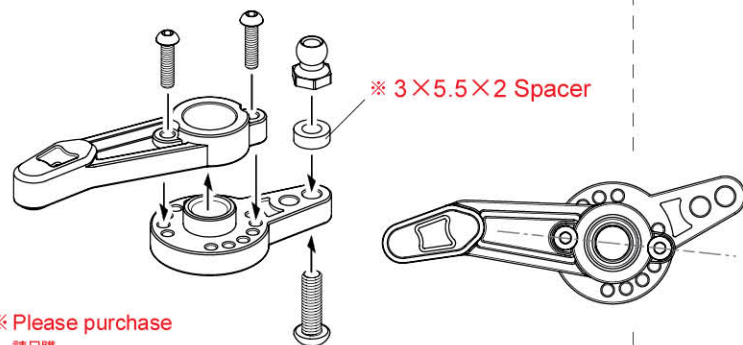

230067 4.8 Rod ends set (M/S)


拉桿組

810006BK Alum. reinforced turnbuckle 3x16 (2) (black) (2)


M3x12 鋁合金可調拉桿

STEP 2 Attaching motor low center of gravity

安裝馬達低重心

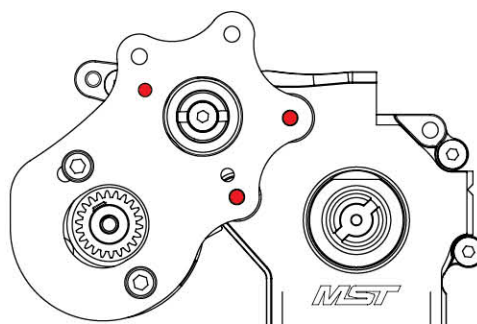


Screw locking position
螺絲鎖點

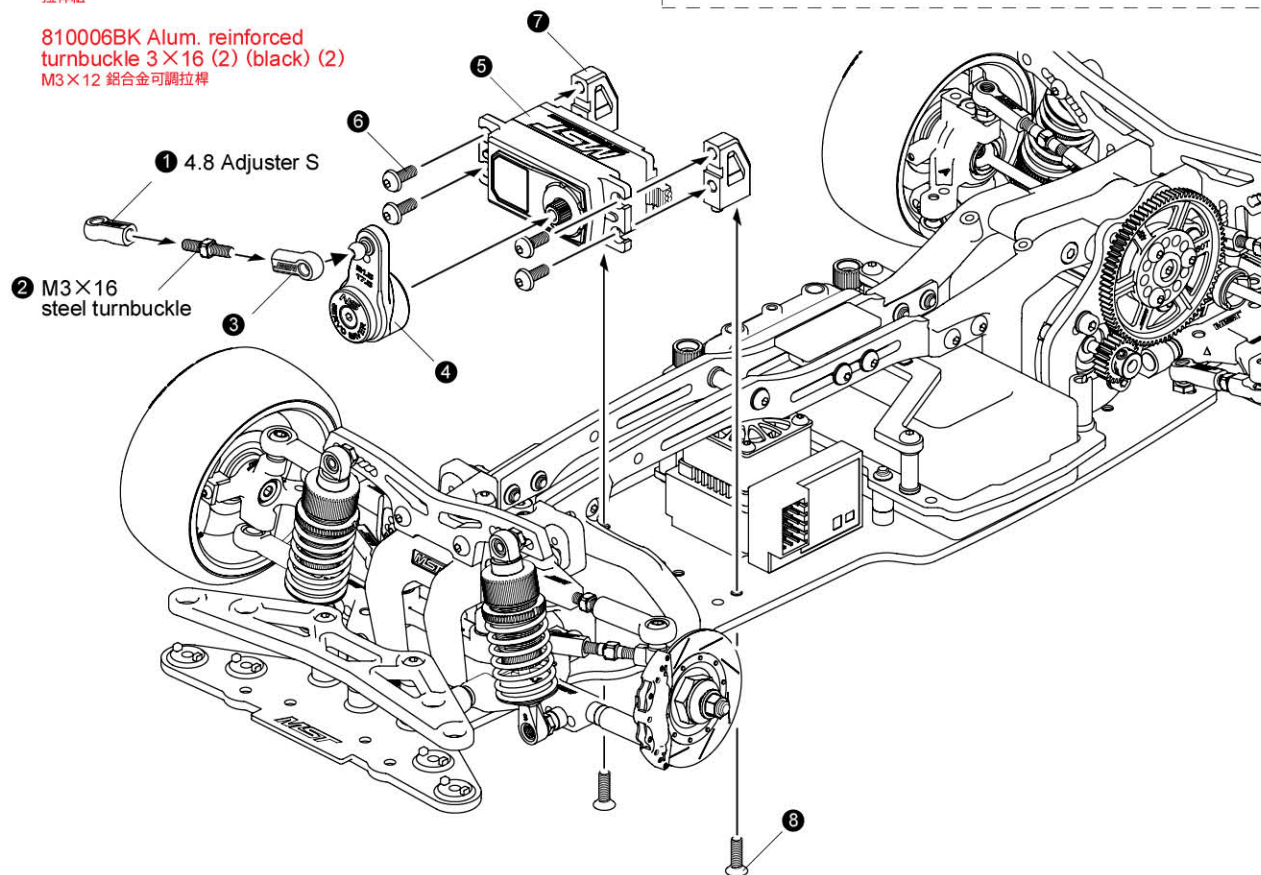


RMX Motor LCG Mode 1

Low Center of Gravity

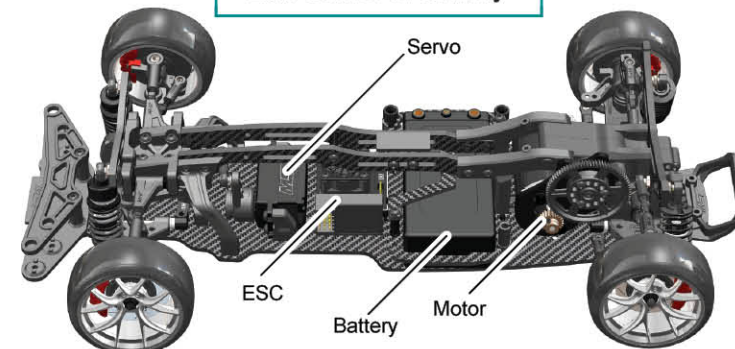



RMX Motor LCG Mode 2

Low Center of Gravity

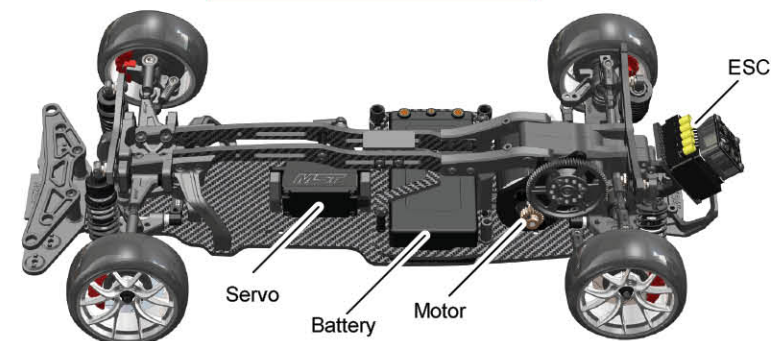

Please purchase
請另購

210639BK
RMX 2.0 Alum. ESC rear mount set (black)
鋁合金ESC後置架組

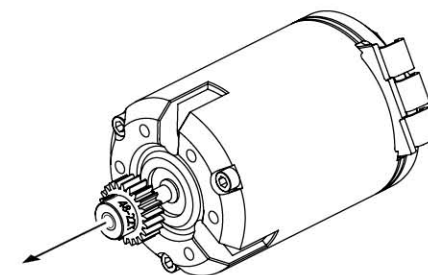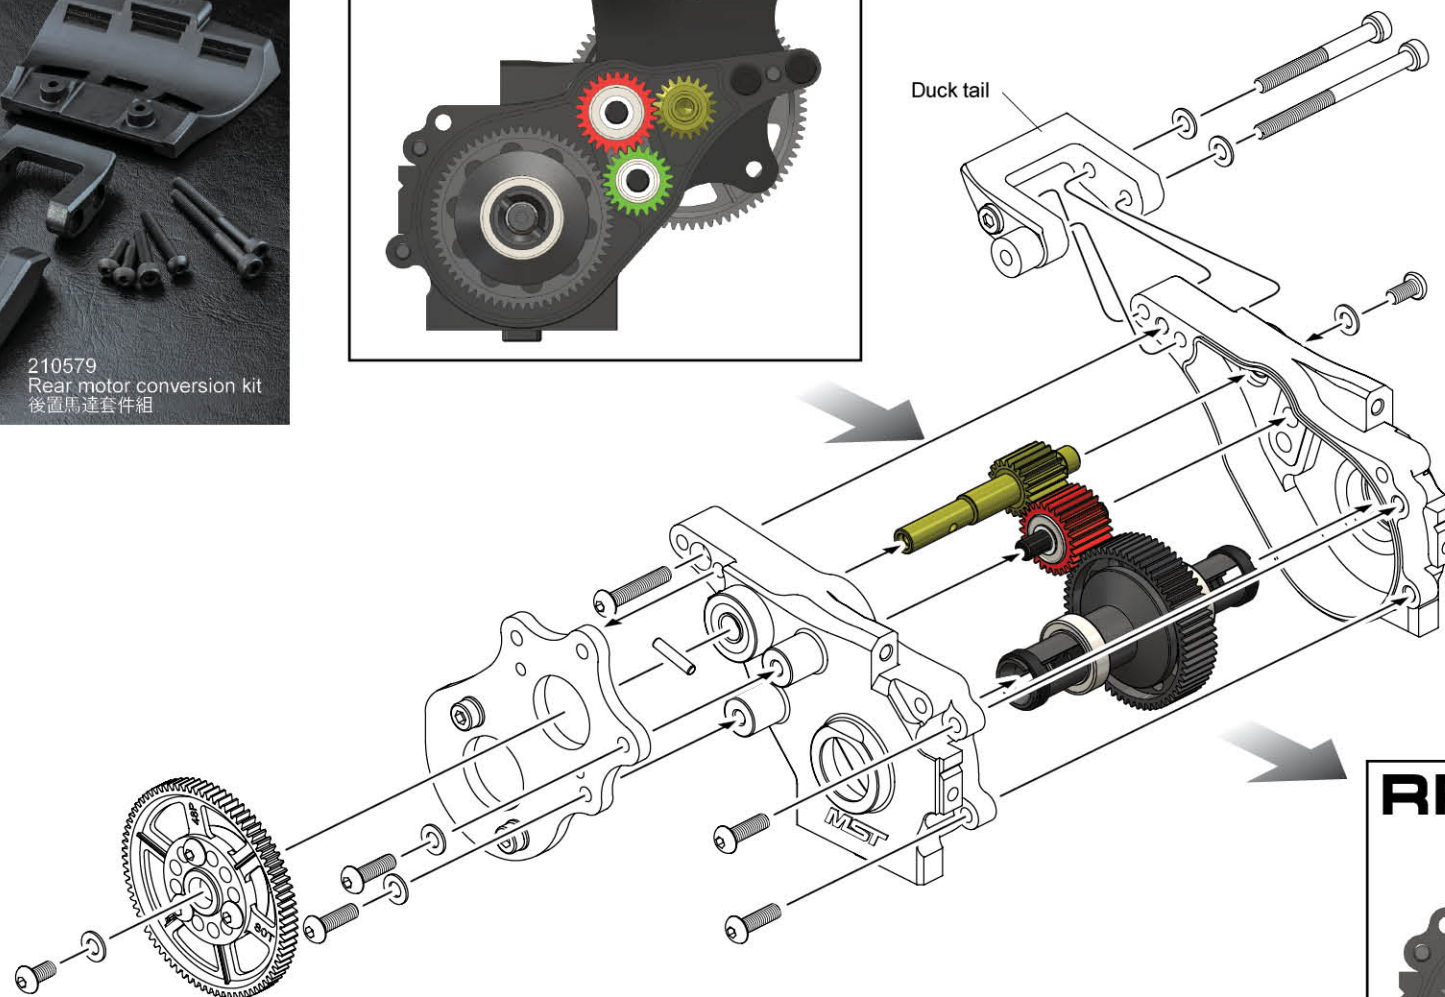STEP 1 Attaching RRX drive system
安裝 RRX 驅動系統※ Please purchase
請另購RMX Motor LCG
Mode 2

Low Center of Gravity

RMX Motor LCG
Mode 1

Low Center of Gravity




STEP 1 Attaching damper stay set
安裝後避震架

※ Please purchase
請另購



210593 Post 11.5
11.5支柱

110088 Round head screw M3×20
M3×20 螺絲


**RRX Motor
LCG Mode**
Low Center of Gravity

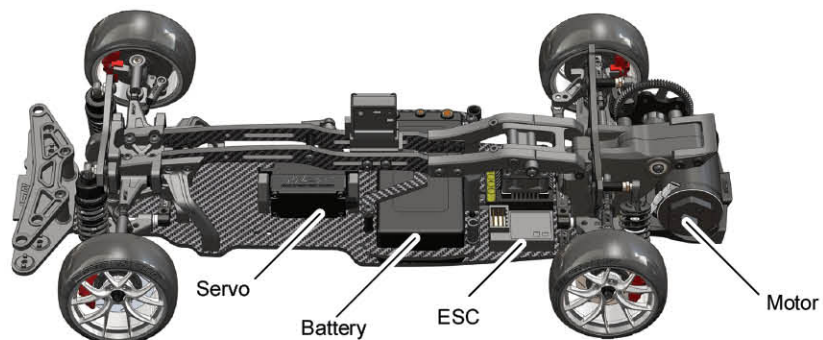

**RRX Motor
HCG Mode**
High Center of Gravity

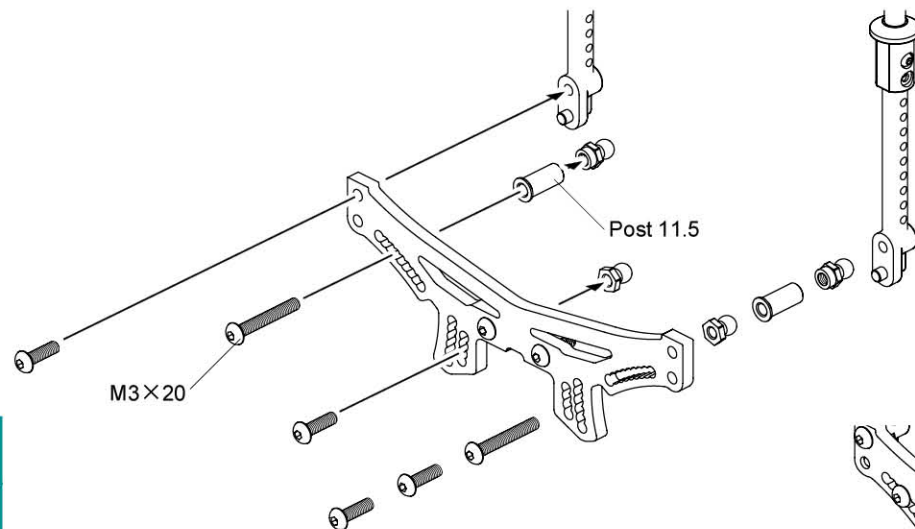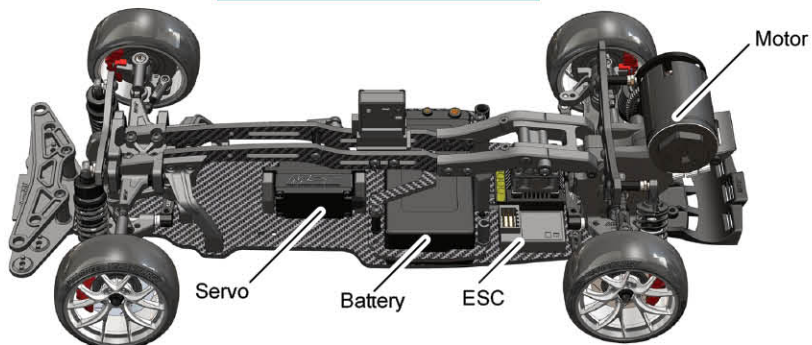


STEP 2 Attaching drive system
安裝驅動系統

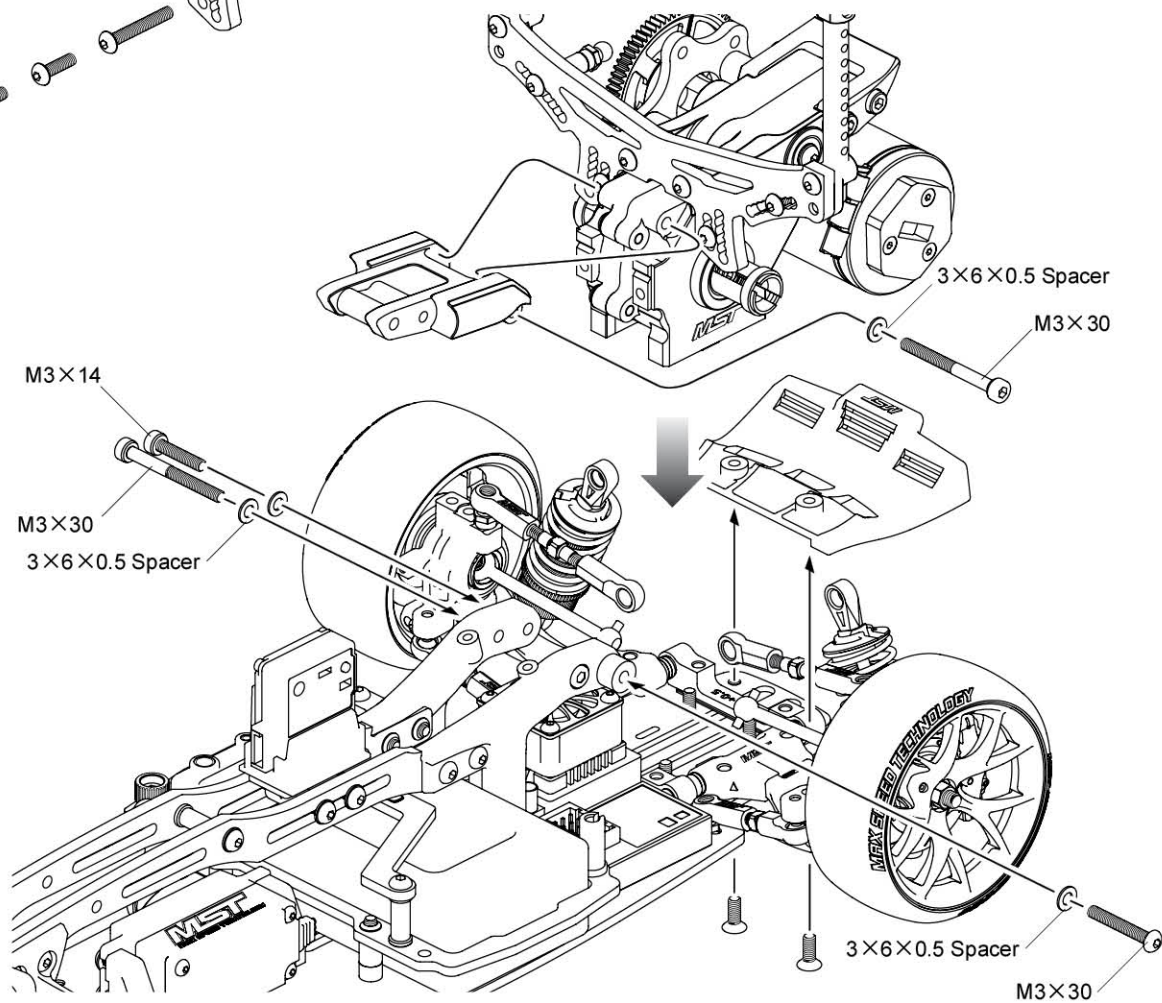

STEP 1 Front upper arm setting


前上擺臂設定

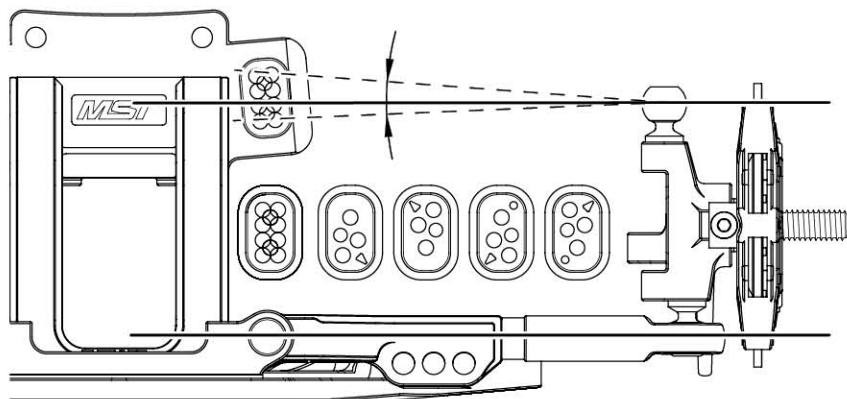


STEP 2 Steering setting

轉向設定


NORMAL
正裝

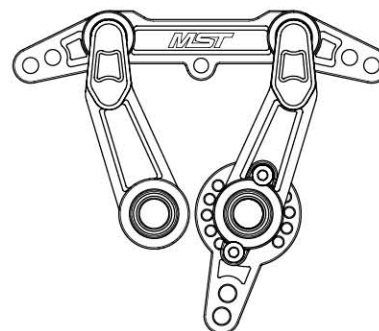


REVERSE
反裝

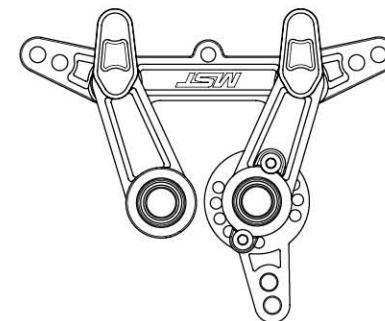

Shorten the steering arm stroke
縮短轉向搖臂行程



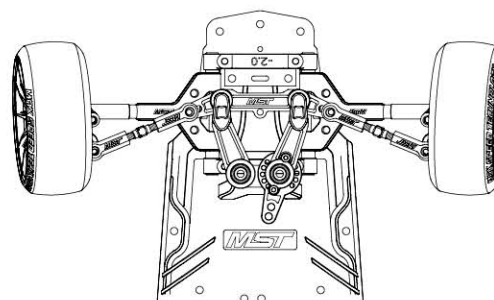


Extend the steering arm stroke
延長轉向搖臂行程

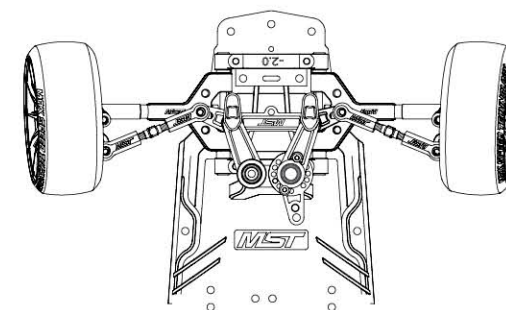

STEP 3 Rear caster angle setting

後傾角設定

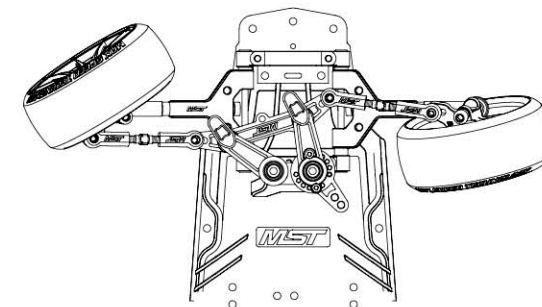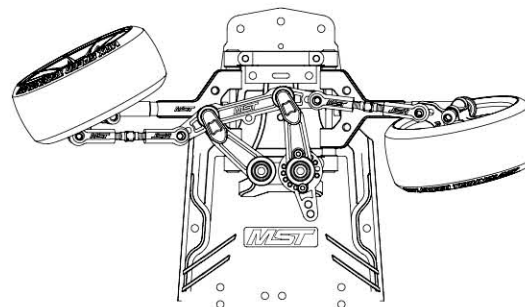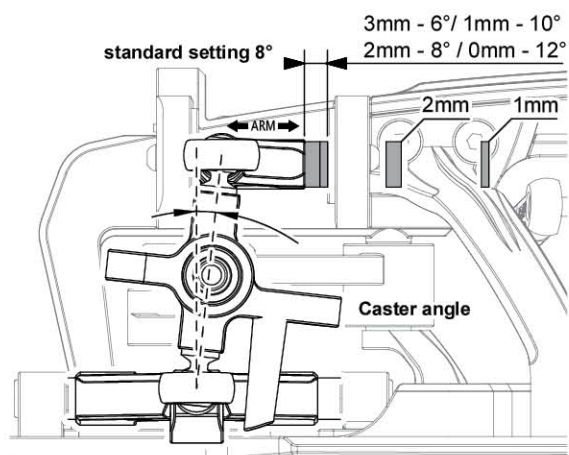


DATE : _____ SURFACE : _____ NOTE : _____

TRACK : _____ GRIP : _____

Caster

- ☐ 6°
☒ 8°
☐ 10°
☐ 12°

Steering

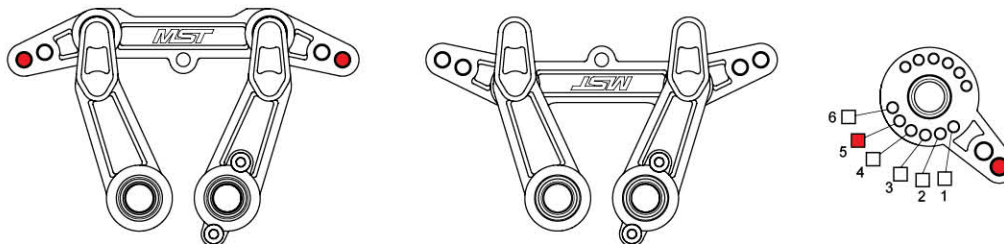


FRONT

Tire: _____

Wheel: _____

Offset: +5

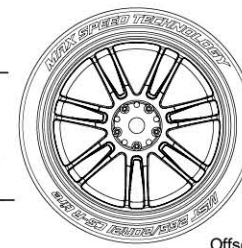


REAR

Tire: _____

Wheel: _____


Offset: +5

Front upright

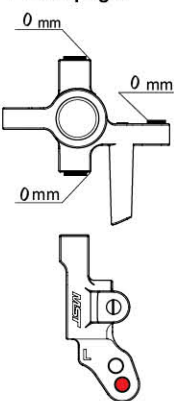


Front suspension

Camber: 6°
 Toe-out: 3.5°

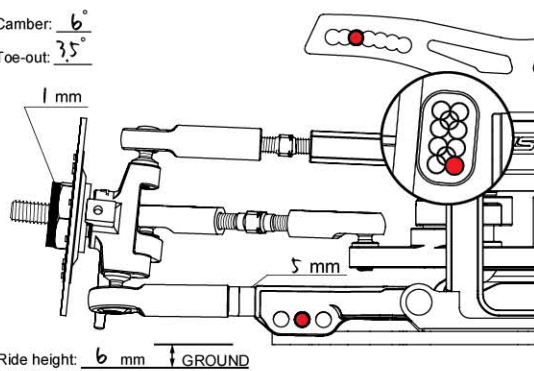


Ride height: 6 mm ↑ GROUND


Front Suspension mount Rollcenter

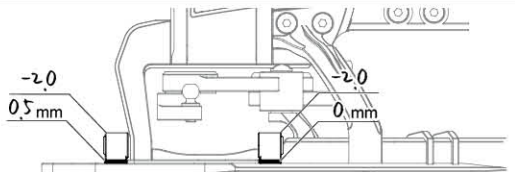

Front damper

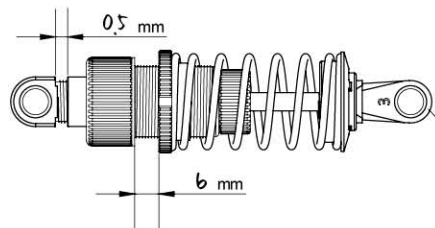

Shock oil: #5
 Spring: 31 mm Ø11
 Spring color: Red
 Piston: Ø12 mm
 Piston hole: 3




Mode

RMX HCG

Mode 1


Mode 2

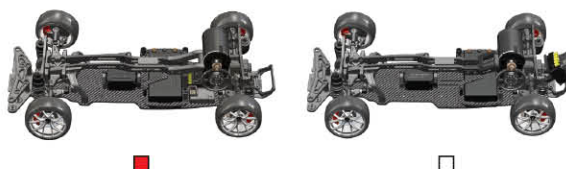

RMX LCG

Mode 1

Mode 2

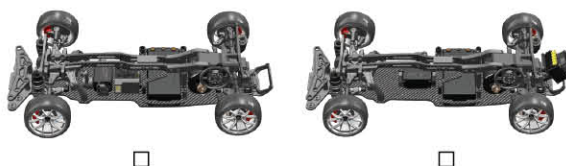

RRX

RRX LCG

RRX HCG



Spur Gear ÷ Pinion Gear × Reduction Gear = Gear ratio


80 T ÷ _____ T × _____ = _____

Motor & ESC: _____ Battery: _____


Transceiver: _____ Gyro: _____

Rear suspension


Camber: 2°
 Toe-in: 1.5°

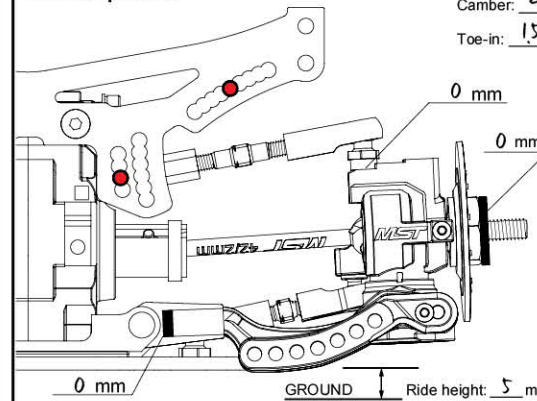


Rear Suspension mount Rollcenter

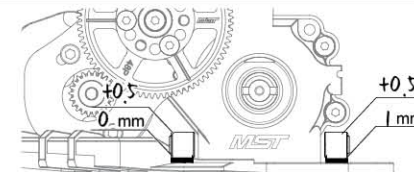

Rear damper

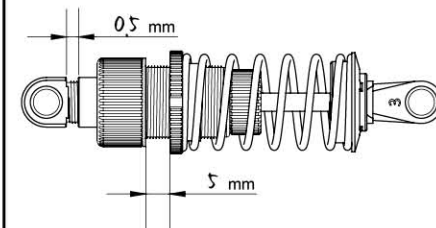

Shock oil: #5
 Spring: 31 mm Ø11
 Spring color: Purple-yellow
 Piston: Ø12 mm
 Piston hole: 3












※ Please download the blank setup sheet at [www.rc-mst.com].


PARTS

Please add color remark for () part number. e.g. 210123R for Red (210123)
請增加顏色標示在 () 編號 例: 210123R for 紅色 (210123)



Color 顏色	Remark 標示
Red 紅 / BACK 黑	R / BK

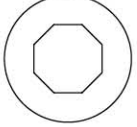	M2×4 screw ×12 圓頭螺絲 110004		M3×3 (NL) screw ×2 止付螺絲 110035NL		2×9.8 Shaft ×5 插銷 110017		Steel ball 3.0 ×8 鋼珠 3.0 110020		3×5.5×4 Spacer ×4 鋁墊片 820011BK
	M2×8 Screw ×2 圓頭螺絲 110063		M3×12 screw ×2 止付螺絲 110056		2×9.8 Shaft ×2 插銷 110046		2.5×5 Suspension balls ×8 插銷球頭 210321		3×5.5×7 Spacer ×4 墊片 820077BK
	M2×8 screw ×4 圓頭螺絲(半牙) 110045		M2.5×12 Screw ×2 沉頭螺絲 110109		2.6×25 Shaft ×2 插銷 310035		Cross joint ×2 連接軸 820030		3×5×0.1 Spacer ×1 墊片 820012
	M2.5×12 Screw ×4 圓頭螺絲 110065		M3×8 screw ×21 沉頭螺絲 110005		2×28 Shaft ×2 插銷 310103		Post 11.5 ×2 支柱 11.5 210593		3×6×0.5 Spacer ×20 墊片 110047
	M3×6 screw ×10 圓頭螺絲 110001		M3×10 Screw ×12 沉頭螺絲 110052		2.5×46 Arm shaft ×4 擺臂插銷 310048		Diff. spring ×1 滾差彈簧 310032		4×6×0.3 Spacer ×4 墊片 820017
	M3×8 screw ×20 圓頭螺絲 110002		M3×18 Screw ×4 沉頭螺絲 110078		4×21 Steel center shaft ×2 鋼製心軸 310119		Steel CVD great angle universal shaft 42 ×2 鋼製大角度CVD傳動軸 42 820004		2.5×6 Thrust bearing ×1 止推培林 120008
	M3×10 screw ×17 圓頭螺絲 110026		M3×20 Screw ×2 沉頭螺絲 110101		M3×16 Steer turnbuckle ×2 鋼製可調拉桿 810027		Suspension mount spacer 0.5mm ×3 擺臂座墊片 0.5mm 820063BK		3×6 Ball bearing ×4 培林 120005
	M3×12 screw ×2 圓頭螺絲 110029		M2.5×30 screw ×1 有頭螺絲(半牙) 110053		M3×20 Steel turnbuckle ×2 鋼製可調拉桿 810028		Wheel hub spacer 1.0 ×2 輪座墊片 1.0 820049BK		4×8×3 Ball bearing ×2 培林 120013
	M3×14 screw ×4 圓頭螺絲 110061		M3×30 Screw ×1 有頭螺絲(半牙) 110100		M3×25 Steel turnbuckle ×2 鋼製可調拉桿 810029		R-clip 5.0 ×6 R-銷 5.0 820075		4×10 Ball bearing ×2 培林 120018
	M3×16 screw ×3 圓頭螺絲 110086		M3×40 Screw ×3 有頭螺絲(半牙) 110091		M3×28 Steer turnbuckle ×2 鋼製可調拉桿 810030		Flange nut M4 ×4 凸緣螺帽 110015		5×8 Ball bearing ×10 培林 120003
	4.8 Ball connector ×7 外六角球頭 210161		Wheel axle ×2 萬向接杯 310065		M3×68 Alum. turnbuckle (black) ×1 鋁製可調拉桿(黑) 210218BK		Diff. plate ×2 滾差整板 310033		5×10 Ball bearing ×6 培林 120002
	4.8 Ball connector L ×6 外六角球頭(長) 210344		4.8×4.5 Ball connector ×9 球頭螺絲 310001		Alum. Main shaft 20T ×1 鋁合金主齒軸 20T 310118				6×10×2.5 Ball bearing ×4 培林 120025
	5.8×4 Ball connector ×4 球頭螺絲 210159		2WD Axle ×2 二驅輪軸 820095						10×15 Ball bearing ×2 培林 120001


PARTS

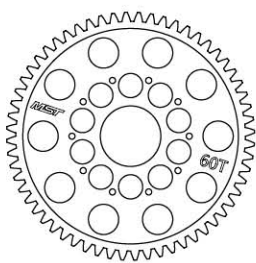


Idler gear set & ball diff. gear
惰輪組及滾珠差速齒
230135

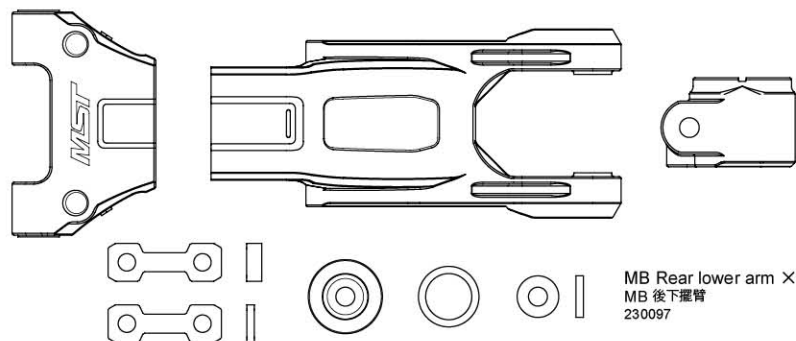


MB Rear lower arm ×2
MB 後下擺臂
230097

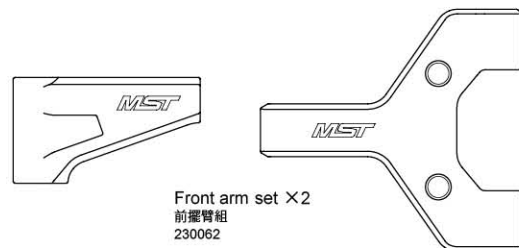


Front arm set ×2
前擺臂組
230062

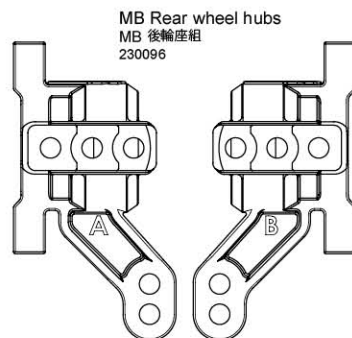


MB Rear wheel hubs
MB 後輪座組
230096

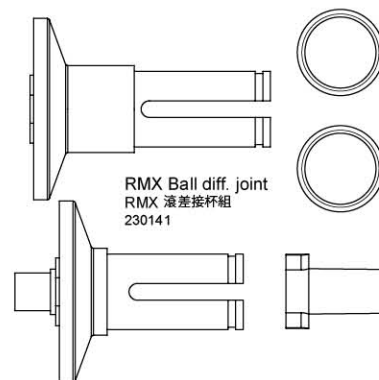


RMX Ball diff. joint
RMX 滾差接杆組
230141

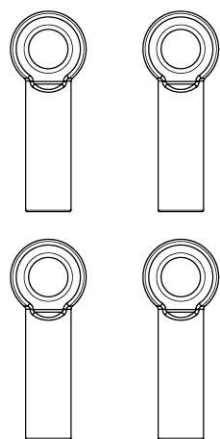


5.8×26 Reinforced adjuster set
強化拉桿頭組
210031

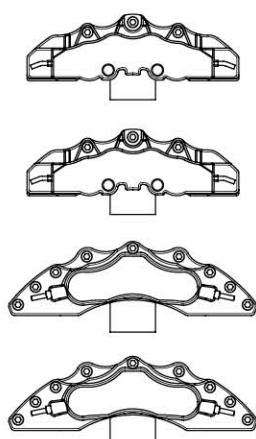

Enlarged brake calipers (red)
加大剎車卡鉗 (紅)
210510CR

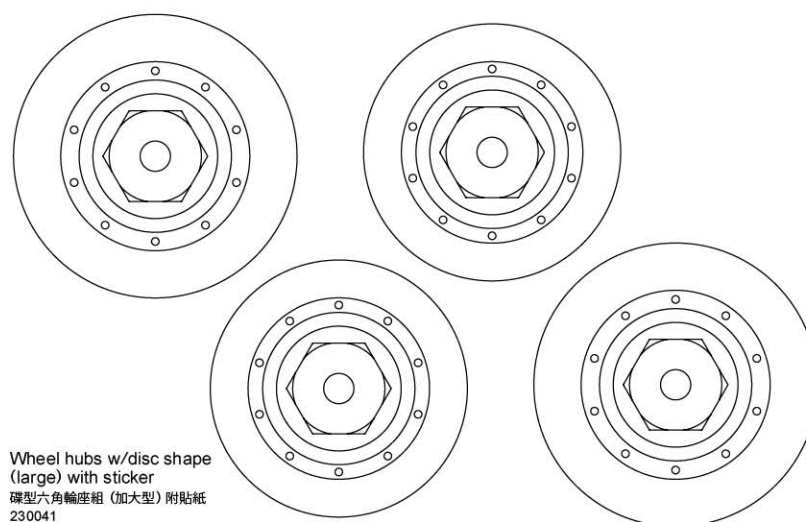


Wheel hubs w/disc shape
(large) with sticker
碟型六角輪座組 (加大型) 附貼紙
230041

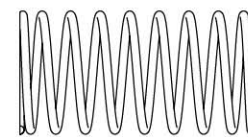


Soft coil spring 31mm ×2
(purple-yellow)
軟避震彈簧 31mm (紫黃)
820104-4




Damper retainer ×4
(lower type)
避震器彈簧座降低型
230140

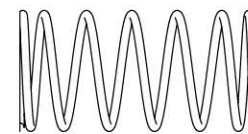

Hard coil spring 31mm (red) ×2
硬避震彈簧 (紅)
820103-4

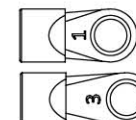

Damper adjuster ×4
避震器拉桿
230140



Damper cylinder ×4
避震筒身
210151



Adjustable shock end ×4
可調上球頭座
230140



4.5×1 O-ring ×4
O環
820147



Spring retainer ×4
避震調整環
310106BK



Adjustable damper cap ×4
可調下座
820147



12×1 O-ring ×4
O環
130049



Damper cap ×4
避震器上蓋
310003BK



Low pressure damper seal ×4
低內壓避震氣室
130038



E-clip 2.0 ×8
E扣 2.0
110013



Rod guide cap ×4
避震器下蓋
310005BK




Damper O-ring P3 ×4
避震器O環
130028



6.5×2 sponge ×4
泡棉
130021



Piston ×4
避震活塞
210235




Piston rod ×4
避震軸心
310008





Rod guide ×4
避震器下蓋墊片
210235

PARTS

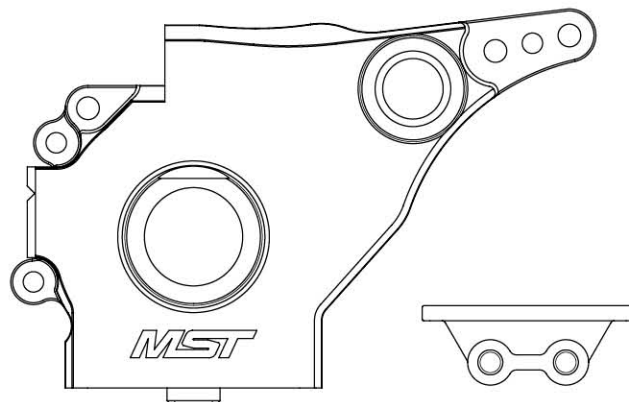


RMX Rear spur gearbox set
RMX 直齒後齒箱組
230139

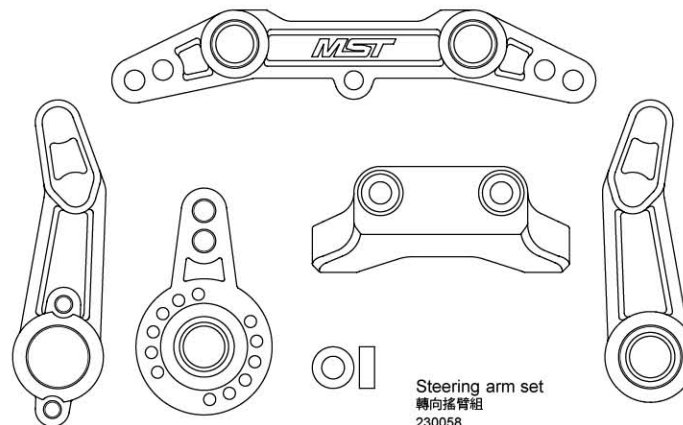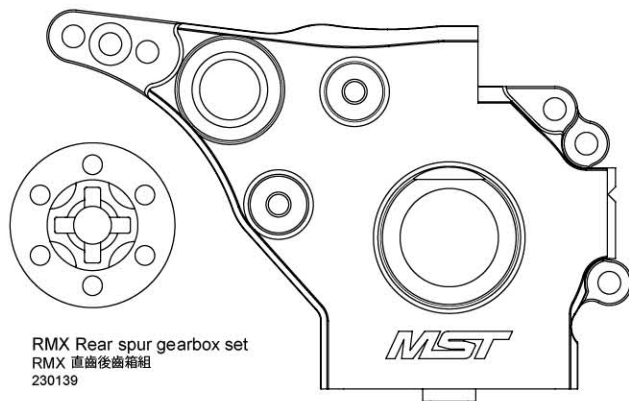




Steering arm set
轉向搖臂組
230058




Shaft bush & spacer set
機套墊片組
230070

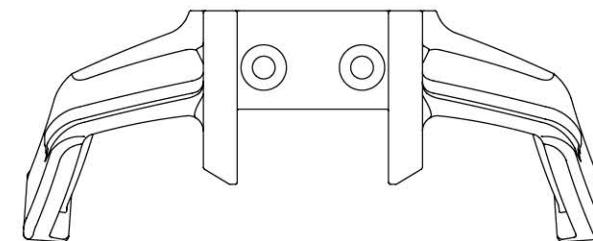

Front head set
前搖支架組
230065

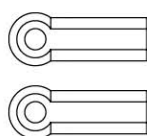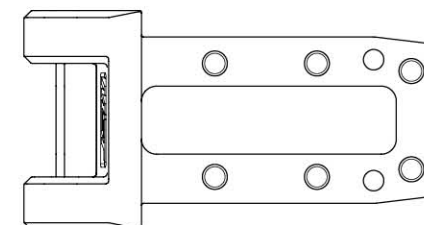
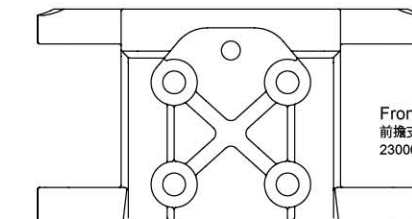


Reinforced adjuster set 4.8 × 18
強化拉桿頭組
210047




Alum. post M3 × 13 × 3
鋁合金支柱 M3 × 13
210561BK

Front wheel hubs
前輪座組
230066

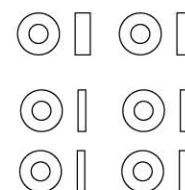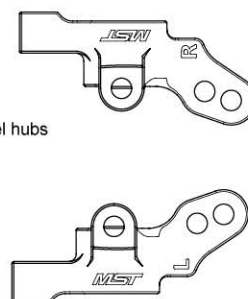

5.8 Ball end bush
球頭機套
820054WV


Spur gear 48P 80T
大直齒
230068

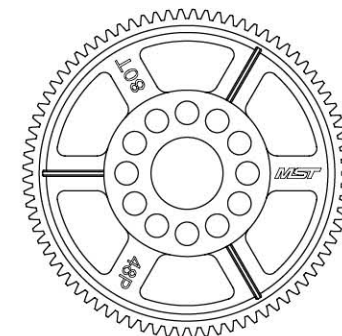

Alum. suspension mount (-2.0) (black)
鋁合金擺臂座 (-2.0) (黑)
(820129BK)











Alum. suspension mount (+0.5) × 2
鋁合金擺臂座 (+0.5)
(820037BK)

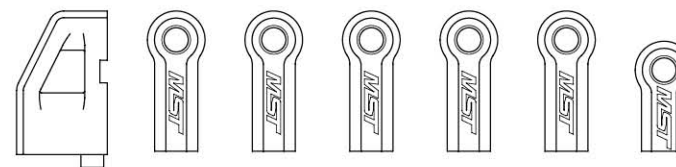

4.8 Rod ends set (M/S) × 2
4.8 拉桿頭組 (M/S)
230067




PARTS




Car body post set
車殼支柱組
210381






NS High-torque
servo saver
NS 高扭力伺服緩衝器
820126

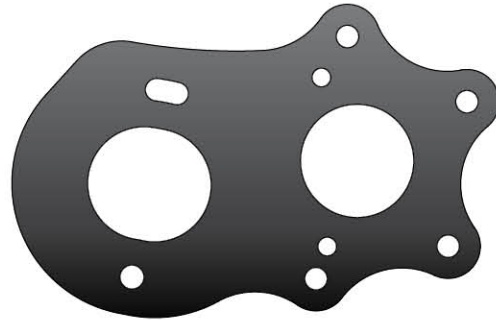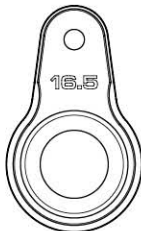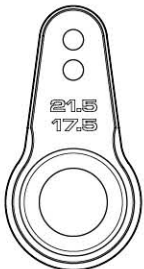

Spur gearbox motor mount (black)
RMX 直齒箱馬達座 (黑)
310122BK

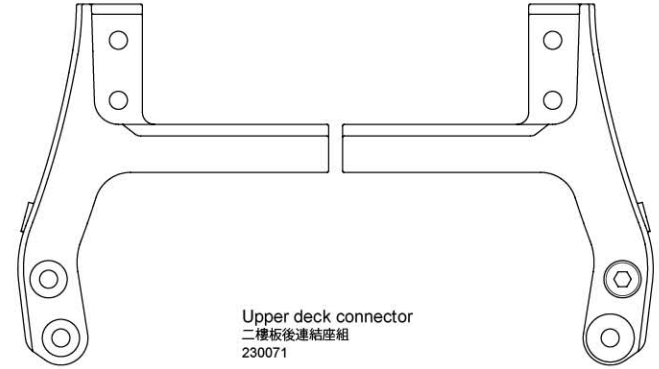


Upper deck connector
二樓板後連結座組
230071

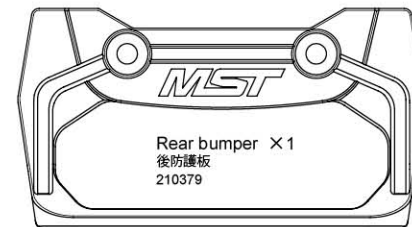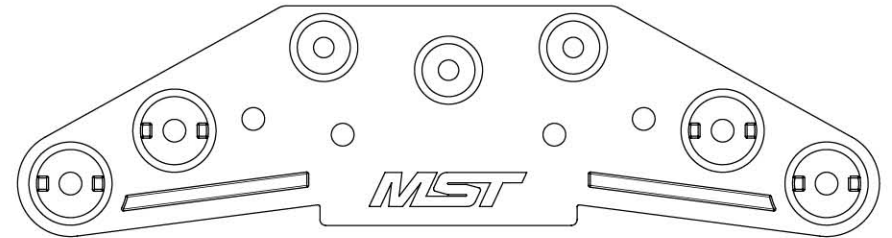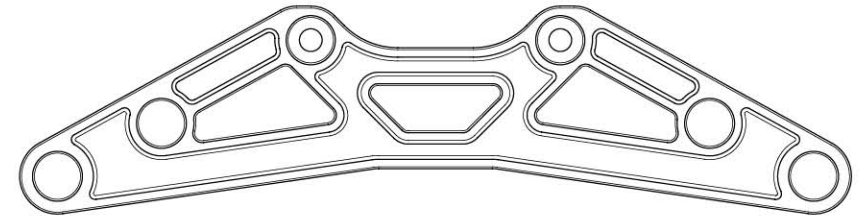


Rear bumper × 1
後防護板
210379


F & R Bumper set
前後防護板組
230121

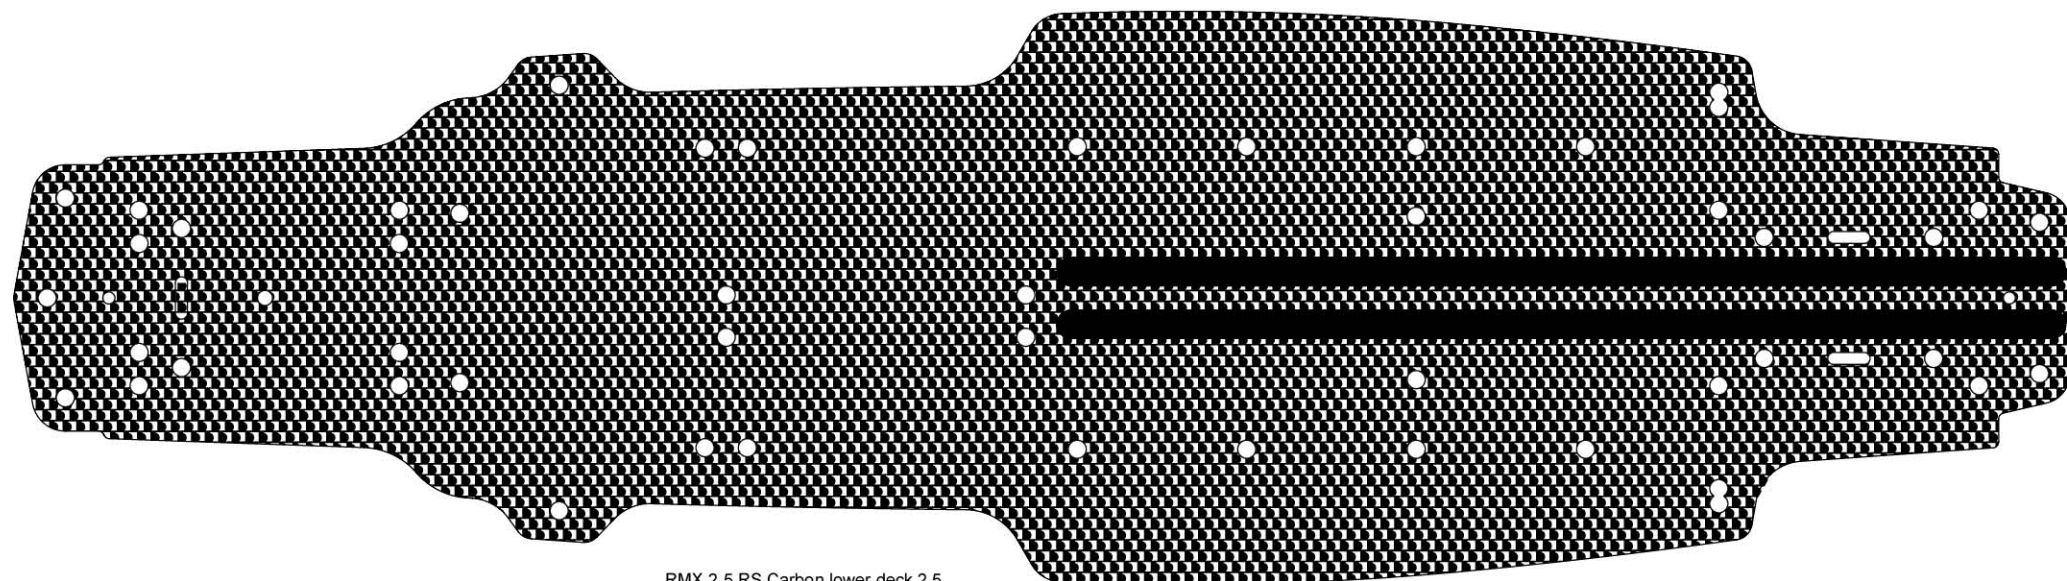

RMX 2.5 RS Carbon lower deck 2.5
RMX 2.5 RS 碳纖維底盤 2.5
210649

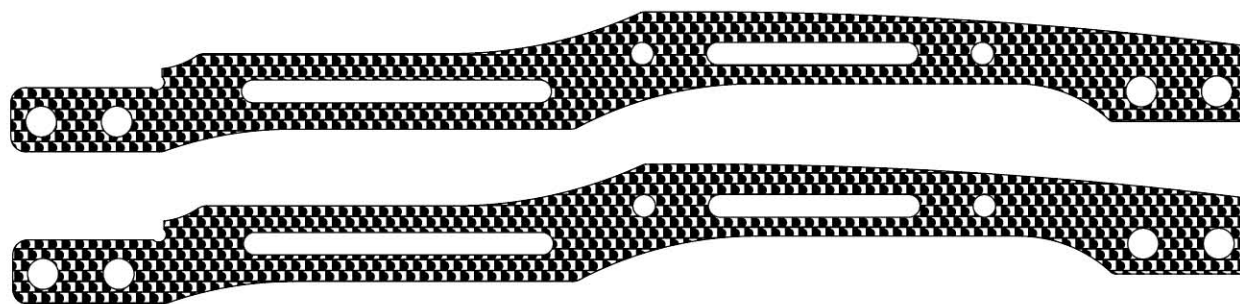

RMX 2.0 Carbon upper deck 3.5
RMX 2.0 碳纖維二樓板 3.5
210580-1

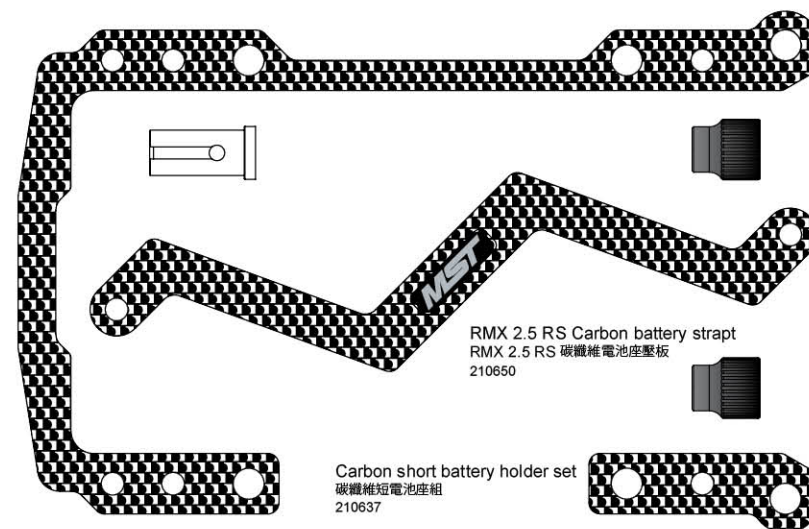

RMX 2.5 RS Carbon battery strap
RMX 2.5 RS 碳纖維電池座壓板
210650

Carbon short battery holder set
碳纖維短電池座組
210637

PARTS CODE

110001	Round head screw M3×6 (10)	120003	Ball bearing 5×8 (4)	230041	Wheel hubs w/disc shape (large)	310106BK	Spring retainer (black) (2)
110002	Round head screw M3×8 (10)	120005	Ball bearing 3×6 (4)	230058	Steering arm set	310118	Alum. main shaft 48P 20T
110004	Round head screw M2×4 (6)	120008	Thrust bearing 2.5×6	230062	Front arm set	310119	4×21 Steel center shaft (2)
110005	Countersunk screw M3×8 (10)	120013	Ball bearing 4×8×3 (2)	230065	Front head set	310122BK	Spur gearbox motor mount (black)
110013	E-clip 2.0 (10)	120018	Ball bearing 4×10×4 (2)	230066	ATK Front wheel hubs	810027	Steel reinforced turnbuckle 3×16 (2)
110015	Flange nut M4 (4)	120025	Ball bearing 6×10×2.5 (2)	230067	4.8 Rod ends set (M/S)	810028	Steel reinforced turnbuckle 3×20 (2)
110017	Shaft 2×9.8 (10)	130021	Sponge 6.5×2 (10)	230068	Spur gear 48P-80T	810029	Steel reinforced turnbuckle 3×25 (2)
110020	Steel ball 3.0 (13)	130028	Damper O-ring P3 (blue) (10)	230070	Shaft bush & spacer set	810030	Steel reinforced turnbuckle 3×28 (2)
110026	Round head screw M3×10 (10)	130049	O-ring 12×1 (4)	230071	Upper deck connector	820004	Steel CVD great angle universal shaft 42 (2)
110029	Round head screw M3×12 (6)	130098	Low pressure damper seal	230096	MB Rear wheel hubs	820011BK	Alum. spacer 3×5.5×4.0 (5) (black)
110035NL	Set screw M3×3 (NL) (7)	210031	Reinforced adjuster set 5.8×26	230097	MB Rear lower arm	820012	Spacer 3×5×0.1 (8)
110045	Round head screw M2×8 (partial thread) (6)	210047	Reinforced adjuster set 4.8×18 (8)	230121	F & R Bumper set	820017	Spacer 4×6×0.3 (8)
110046	Shaft 2×9.8 (8)	210151	Alum. damper cylinder (4)	230135	Idler gear set & ball diff. gear	820020	Spacer 5×7×0.3 (8)
110047	Spacer 3×6×0.5 (8)	210159	Ball connector 5.8×4 (4)	230139	RMX Rear spur gearbox set	820030	Cross joint (2)
110052	Countersunk screw M3×10 (10)	210161	Ball connector nut 4.8 (4)	230140	Damper retainer (lower type)	820037BK	Alum. suspension mount (+0.5) (black)
110053	Cap screw M2.5×30 (2)	210218BK	Alum. turnbuckle 3×68 (black)	230140	Damper adjuster	820049BK	Wheel hub spacer 1.0 (black) (4)
110056	Set screw M3×12 (6)	210235	Piston spacer set	230140	Adjustable shock end	820054W	5.8 Ball end bush (white)
110061	Round head screw M3×14 (6)	210321	Suspension balls 2.5×5 (8)	230141	RMX ball diff. joint (spur)	820063BK	Suspension mount spacer 0.5mm (4) (black)
110063	Round head screw M2×8 (6)	210344	Ball connector nut L 4.8 (4)	310001	Ball connector 4.8×4.5 (5)	820075	R-clip 5.0 (10)
110065	Round head screw M2.5×12 (6)	210379	Rear bumper	310003BK	Cylinder cap (black) (2)	820077BK	Alum. spacer 3×5.5×7 (black) (2)
110078	Countersunk screw M3×18 (6)	210381	Car body post set	310005BK	Rod guide cap (black) (2)	820095	AKM 2WD axle (2)
110086	Round head screw M3×16 (6)	210510CR	Enlarged brake calipers (red) (4)	310008	Piston rod (4)	820103	31mm Hard coil spring set (8)
110091	Cap screw M3×40 (6)	210561BK	Alum. post M3×13 (black) (2)	310032	Diff. screw & spring set	820104	31mm Soft coil spring set (8)
110100	Cap screw M3×30 (6)	210580-1BK	RMX 2.0 Carbon lower deck 3.0	310033	Diff. plate (2)	820126	NS High-torque servo saver
110101	Countersunk screw M3×20 (6)	210593	Post 11.5 (2)	310035	Lower arm shaft 2.6×22&25 (each one pair)	820129	Alum. suspension mount (-2.0) (black)
110109	Countersunk screw M2.5×12 (6)	210637BK	Carbon short battery holder set (black)	310048	Arm shaft 2.5×46 (4)	820147	O-ring 4.5×1 (4)
120001	Ball bearing 10×15 (4)	210649	RMX 2.5 RS Carbon lower deck 2.5	310065	Wheel axle (2)	820147	Adjustable damper caps (4)
120002	Ball bearing 5×10 (4)	210650	RMX 2.5 RS Carbon battery strap	310103	Arm shaft 2×28 (2)		

部品編號

110001	六角半圓頭螺絲 M3×6 (10)	120003	培林 5×8 (4)	230041	碟型六角輪座組 (加大型)	310106BK	避震調整環 (黑) (2)
110002	六角半圓頭螺絲 M3×8 (10)	120005	培林 3×6 (4)	230058	轉向搖臂組	310118	鋁合金主齒軸 48P 20T
110004	六角半圓頭螺絲 M2×4 (6)	120008	止推培林 2.5×6	230062	前擺臂組	310119	4×21 鋼製心軸 (2)
110005	六角沉頭螺絲 M3×8 (10)	120013	培林 4×8×3 (2)	230065	前擋支架組	310122BK	RMX 鋁合金直齒箱馬達座 (黑)
110013	E扣 2.0 (10)	120018	培林 4×10×4 (2)	230066	ATK前輪座組	810027	鋼製強化可調拉桿 3×16 (2)
110015	凸緣螺帽 M4 (4)	120025	培林 6×10×2.5 (2)	230067	4.8 拉桿頭組 (M/S)	810028	鋼製強化可調拉桿 3×20 (2)
110017	插銷 2×9.8 (10)	130021	泡棉 6.5×2 (10)	230068	大齒盤 48P-80T	810029	鋼製強化可調拉桿 3×25 (2)
110020	差速鋼珠 3.0 (13)	130028	阻尼器O環 P3 (藍) (10)	230070	襯套墊片組	810030	鋼製強化可調拉桿 3×28 (2)
110026	六角半圓頭螺絲 M3×10 (10)	130049	O環 12×1 (4)	230071	二樓板後連結座組	820004	鋼製大角度CVD傳動軸 42 (2)
110029	六角半圓頭螺絲 M3×12 (6)	130098	低內壓避震氣室	230096	MB 後輪座組	820011BK	鋁墊片 3×5.5×4.0 (5) (黑)
110035NL	六角止付螺絲 M3×3 (耐落) (6)	210031	強化拉桿頭組 5.8×26	230097	MB 後下擺臂	820012	墊片 3×5×0.1 (8)
110045	六角半圓頭螺絲 M2×8 (半牙) (6)	210047	強化拉桿頭組 4.8×18 (8)	230121	前後防撞板組	820017	墊片 4×6×0.3 (8)
110046	插銷 2×9.8 (剖溝) (8)	210151	鋁合金避震筒身 (4)	230135	惰輪組&滾珠差速齒	820020	墊片 5×7×0.3 (8)
110047	墊片 3×6×0.5 (8)	210159	球頭螺絲 5.8×4 (4)	230139	RMX 直齒後齒箱組	820030	連接軸 (2)
110052	六角沉頭螺絲 M3×10 (10)	210161	球頭螺帽 4.8 (4)	230140	避震器彈簧座降低型	820037BK	鋁合金擺臂座 (+0.5) (黑)
110053	六角有頭螺絲 M2.5×30 (半牙) (2)	210218BK	鋁製可調拉桿 3×68 (黑)	230140	避震器拉桿	820049BK	輪座墊片 1.0 (黑) (4)
110056	六角止付螺絲 M3×12 (6)	210235	避震器活塞墊片組	230140	可調上球頭座	820054W	5.8 球頭襯套 (白)
110061	六角半圓頭螺絲 M3×14 (6)	210321	插銷球頭 2.5×5 (8)	230141	RMX 滾差接杯組 (直齒用)	820063BK	擺臂座墊片 0.5mm (4) (黑)
110063	六角半圓頭螺絲 M2×8 (6)	210344	球頭螺帽 L 4.8 (4)	310001	內六角公球頭 4.8×4.5 (5)	820075	R銷 5.0 (10)
110065	六角圓頭螺絲 M2.5×12 (6)	210379	後防撞板	310003BK	避震器上蓋 (黑) (2)	820077BK	鋁墊片 3×5.5×7 (黑) (2)
110078	六角沉頭螺絲 M3×18 (6)	210381	車殼支柱組	310005BK	避震器下蓋 (黑) (2)	820095	AKM 二驅輪軸 (2)
110086	六角半圓頭螺絲 M3×16 (6)	210510CR	加大煎車卡鉗 (紅) (4)	310008	避震軸心 (4)	820103	31mm 硬避震彈簧組 (8)
110091	六角有頭螺絲 M3×40 (半牙) (6)	210561BK	鋁合金支柱 M3×13 (黑) (2)	310032	滾差彈簧螺絲組	820104	31mm 軟避震彈簧組 (8)
110100	六角有頭螺絲 M3×30 (半牙) (6)	210580-1BK	碳纖維二樓板 3.5 (黑)	310033	滾差壓板 (2)	820126	NS 高扭力伺服緩衝器
110101	六角沉頭螺絲 M3×20 (6)	210593	支柱 11.5 (2)	310035	下擺臂插銷 2.6×22&25 (各一對)	820129	鋁合金擺臂座 (-2.0) (黑)
110109	六角沉頭螺絲 M2.5×12 (6)	210637BK	碳纖維短電池座組 (黑)	310048	擺臂插銷 2.5×46 (4)	820147	O環 4.5×1 (4)
120001	培林 10×15 (4)	210649	RMX 2.5 RS 碳纖維底盤 2.5	310065	萬向接杯 (2)	820147	避震器可調長度上座組 (4)
120002	培林 5×10 (4)	210650	RMX 2.5 RS 碳纖維短電池座壓板	310103	擺臂插銷 2×28 (2)		

026237