


Servo Adjuster A ×1
伺服機可調拉桿頭 A

Bag 2



Servo Adjuster B ×1
伺服機可調拉桿頭 B

Bag 2



M3×8 screw ×12
圓頭螺絲




3×6×0.5 Spacer ×4
墊片



M3×4 screw ×1
圓頭螺絲


STEP 1 Servo saver turnbuckle assembly
伺服拉桿組裝

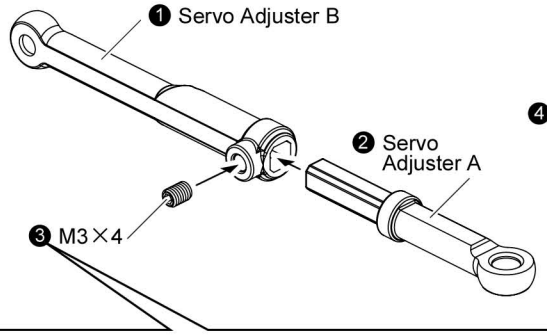


※Do not tighten the M3×4 set screw during initial assembly. After completing full vehicle assembly, follow these steps:
1. Power on the system and ensure the servo is at its neutral position.
2. Keep the front wheels in the straight position.
3. Adjust the turnbuckle to the correct length while everything is centered.
4. Once confirmed, tighten the M3×4 set screw. (Refer to P26)


先不鎖緊M3×4止付螺絲，待全車組裝完成後再完成以下步驟:
1. 通電後伺服機保持中立點
2. 前輪轉向保持中立點
3. 此時可調拉桿為正確長度
4. 鎖緊M3×4止付螺絲 (請參閱P26)

STEP 2 Attaching steering servo
安裝轉向伺服機

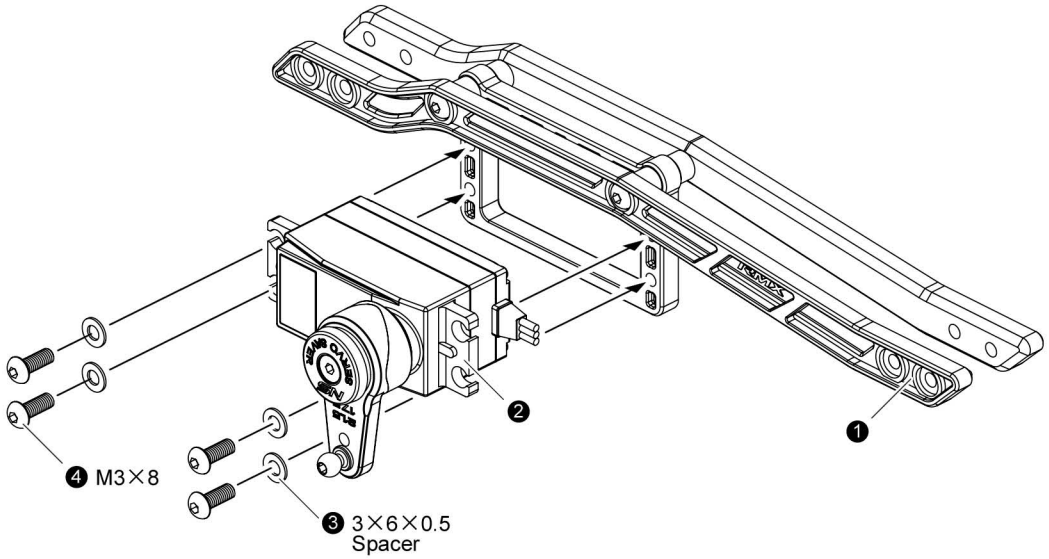


STEP 3 Attaching upper deck
安裝二樓板

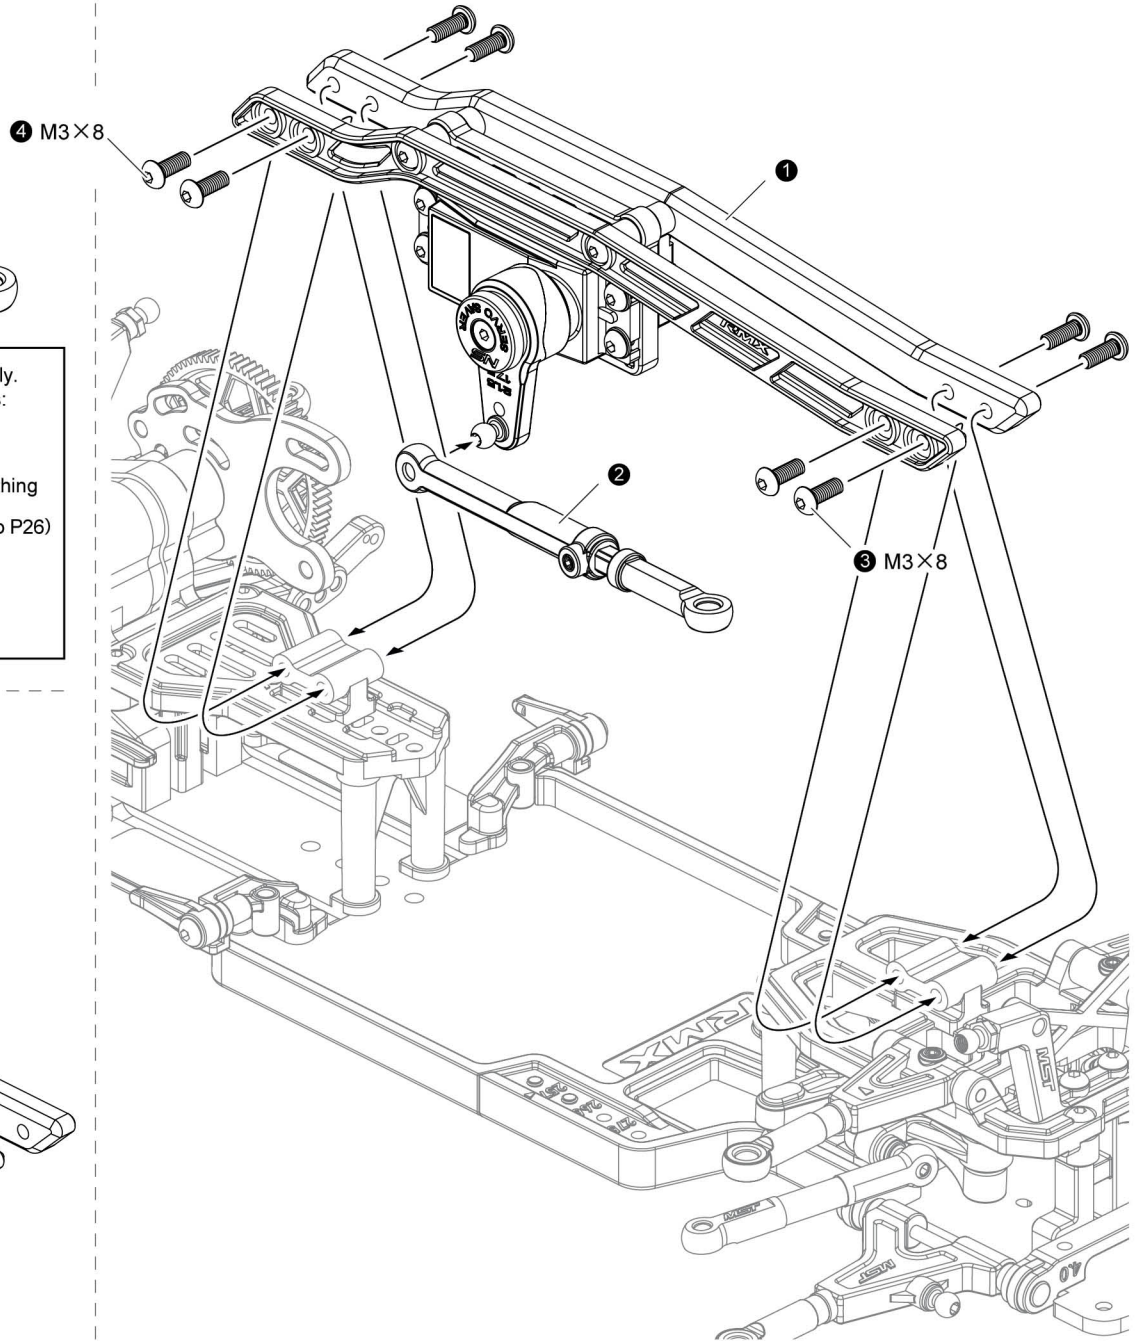

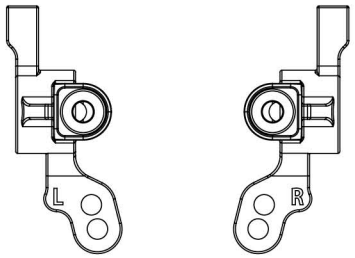

Front upright L ×1
前輪座 L

Front upright R ×1
前輪座 R



2WD Axle ×2
二驅輪軸



4.8×4.5 Ball connector ×4
球頭螺絲



4.8×6L Ball connector ×2
外六角球頭

2×9.8 Shaft ×2
插銷


M2×4 screw ×2
圓頭螺絲




5×7×0.3 Spacer ×2
墊片



5×8 Ball bearing ×4
培林





Brake calipers ×2
剎車卡鉗

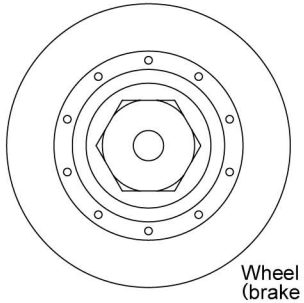


Wheel hubs (large)
(brake disc shaped) ×2
六角輪座(大)(剎車碟型)


STEP 1 Front axle assembly
前輪座組裝

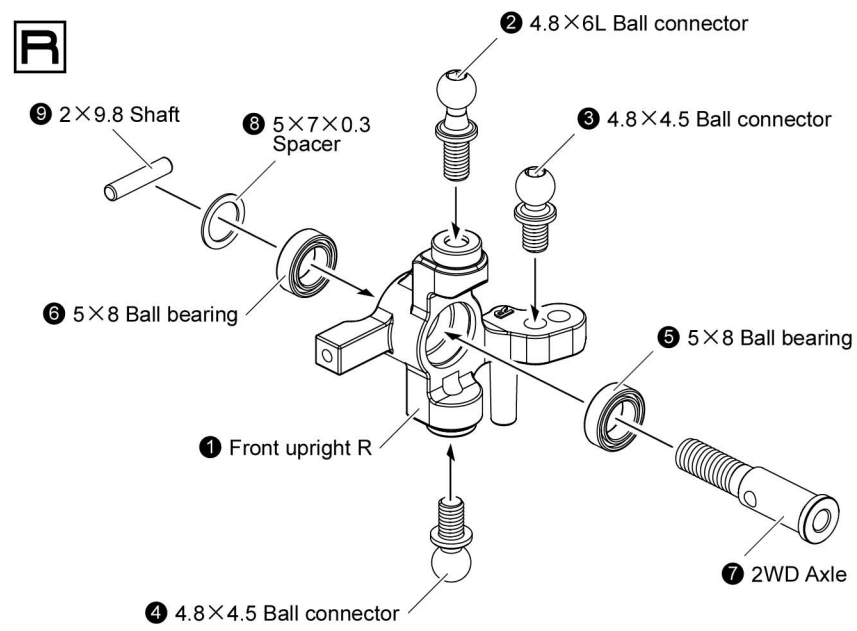

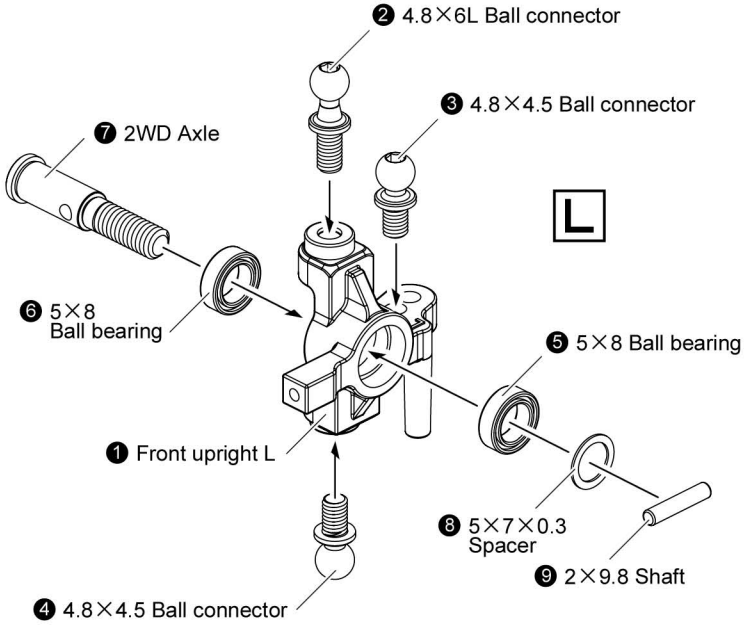


STEP 2 Wheel hubs assembly (Brake disc shaped)
煞車碟盤型輪座組裝

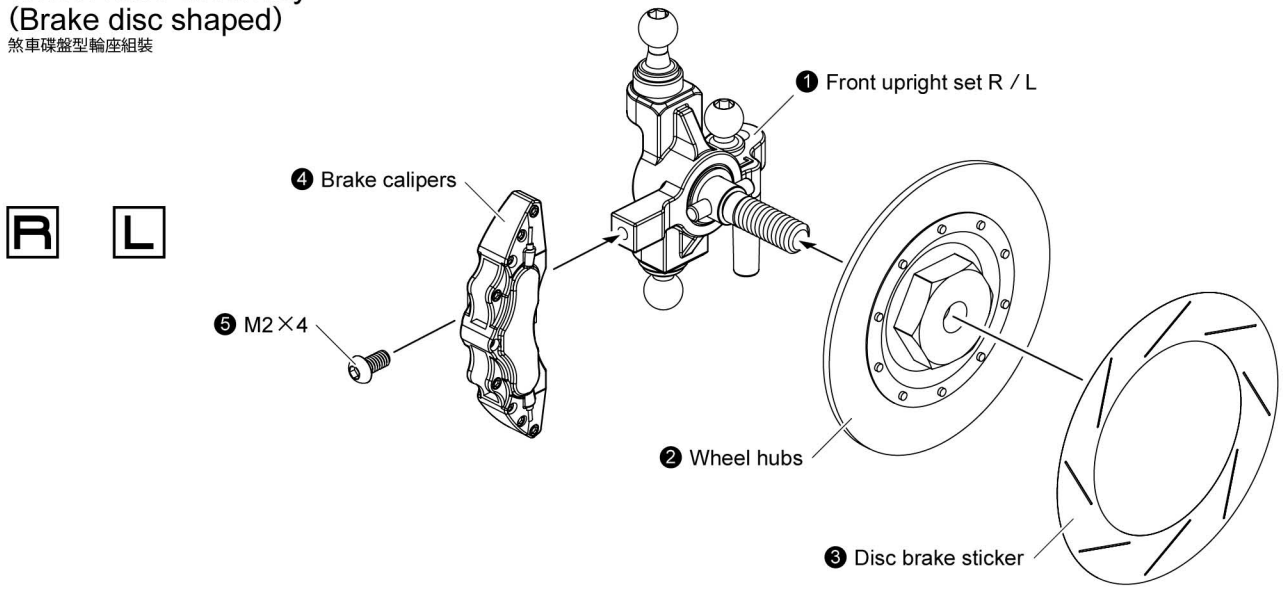

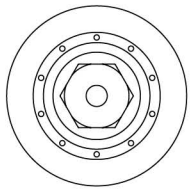


Wheel hubs (small)
(brake disc shaped) ×2
六角輪座(小)(剎車碟型)

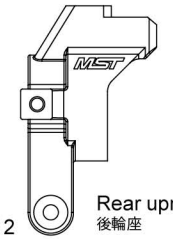

Rear upright X2
後輪座



Steel CVD universal shaft 42 ×2
鋼製CVD傳動軸 42



Wheel axle ×2
萬向接杯




Cross joint ×2
連接軸



2×22 Shaft ×2
插銷



4.8×4.5 Ball connector ×2
球頭螺絲



Brake calipers ×2
剎車卡鉗



M2×3 screw ×4
圓頭螺絲



M2×4 screw ×2
圓頭螺絲



M3×2.6 screw ×2
止付螺絲



2×9.8 Shaft ×2
插銷



2×9.8 Shaft ×2
插銷



5×7×0.1 Spacer ×2
墊片




5×10 Ball bearing ×4
培林




Swing shaft protector ×2
傳動軸軸套

STEP 1 Rear axle assembly
後輪座組裝


X2
Make 2

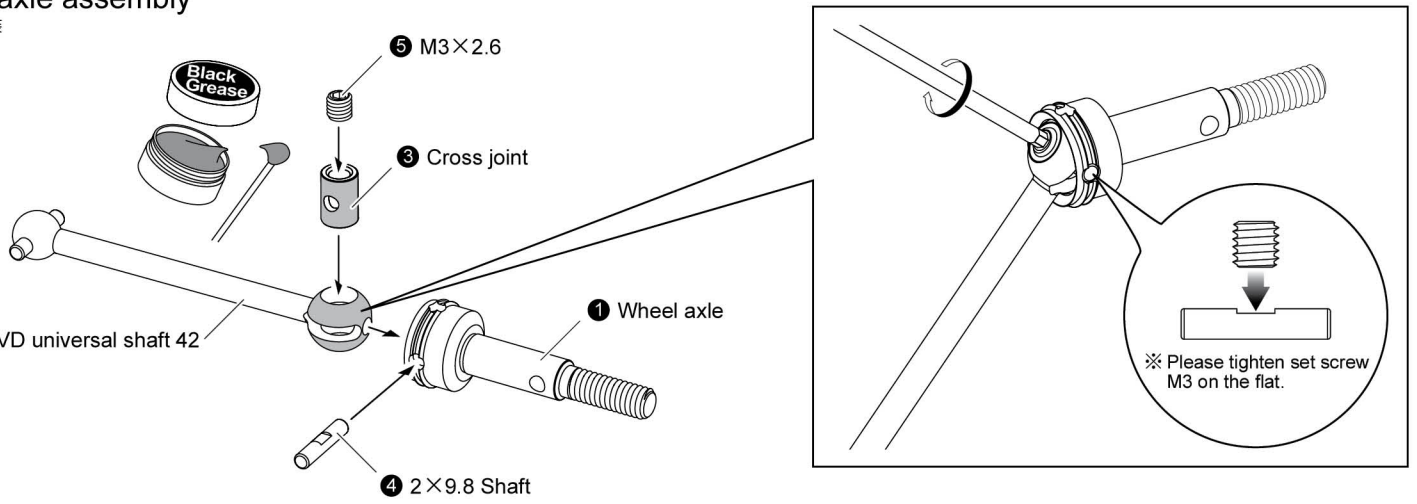


STEP 2

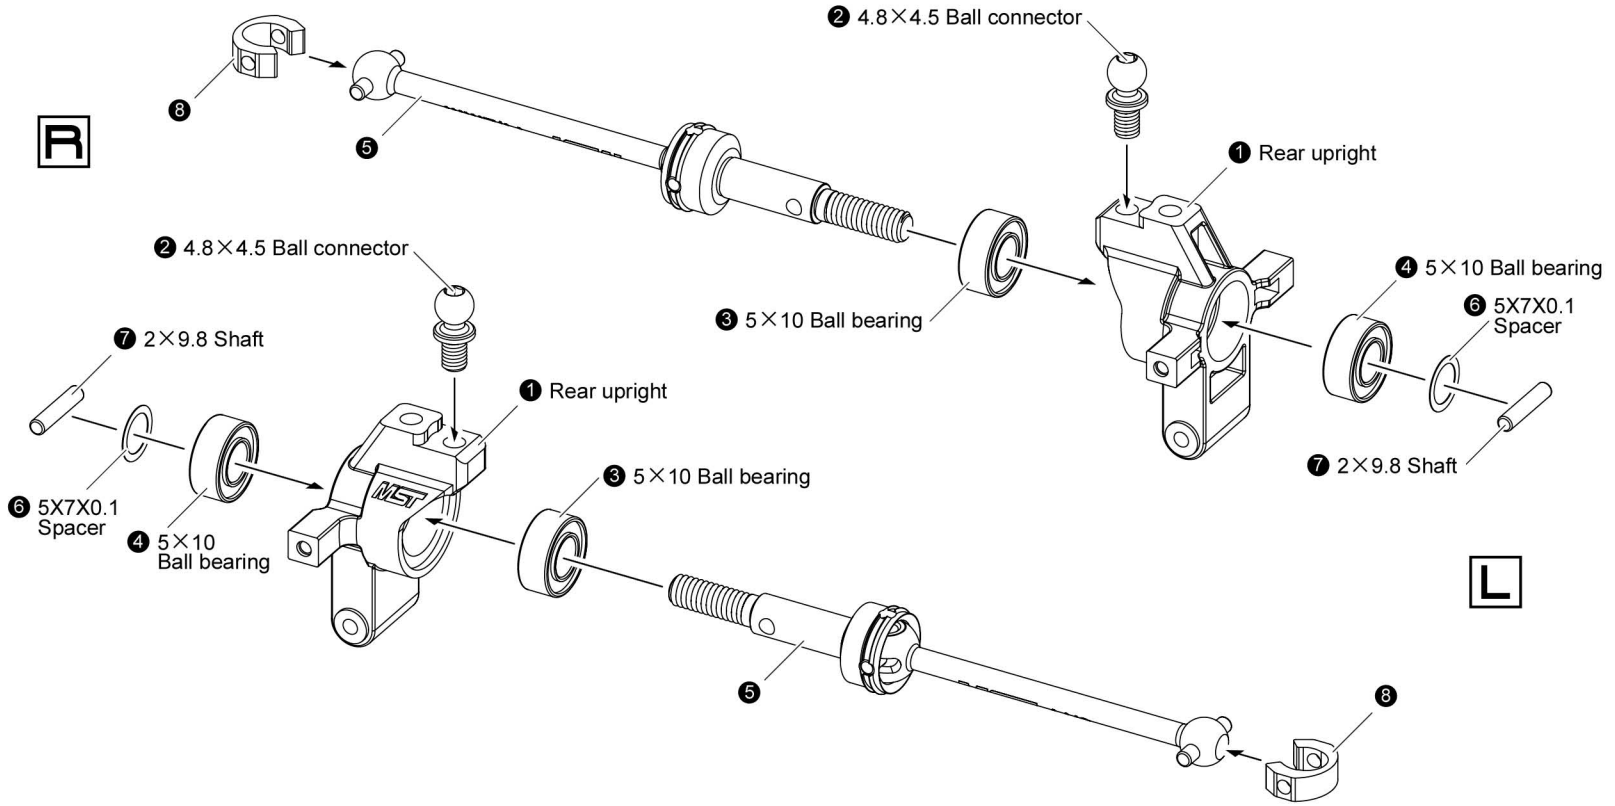


STEP 1 Wheel hubs assembly (Brake disc shaped)
煞車碟盤型輪座組裝

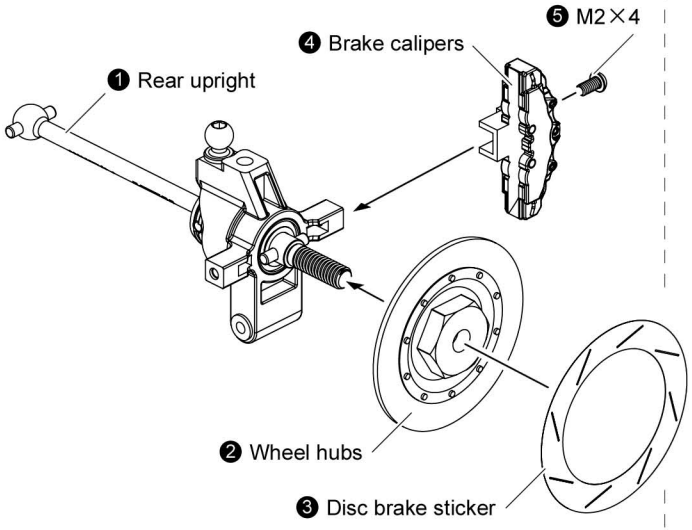


STEP 2 Attaching front axle
安裝前輪座

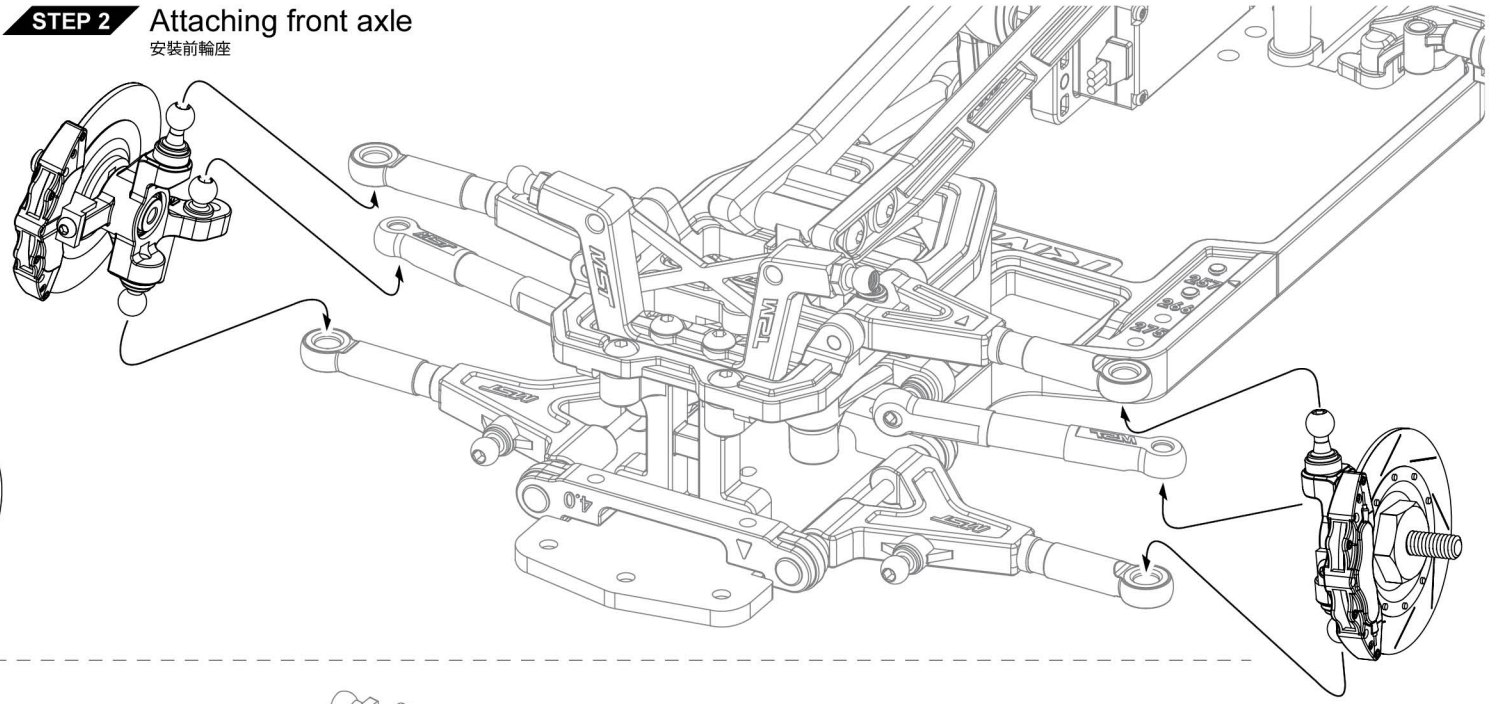


STEP 3 Attaching rear axle
安裝後輪座

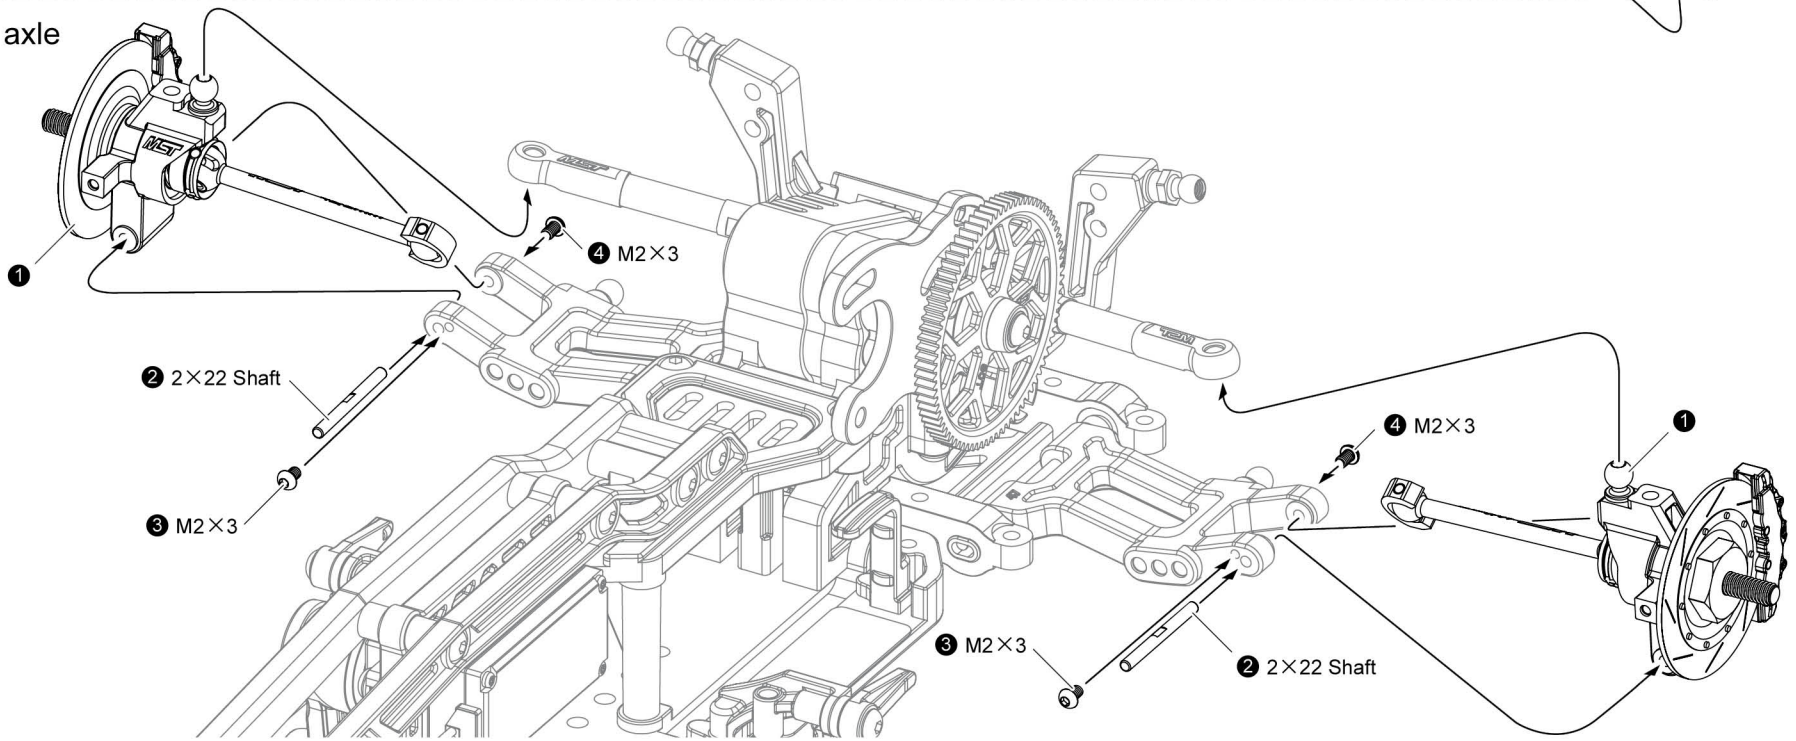


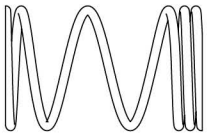


DK-RWD Competition Drift Spring (24mm) ×2 (yellow)
DK-RWD競賽飄移車避震彈簧(24mm)(黃)

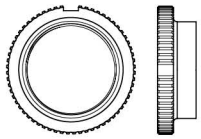


Spring retainer ×4
避震調整環

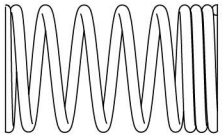

DK-RWD Competition Drift Spring (26mm) ×2 (silver-yellow)
DK-RWD競賽飄移車避震彈簧(26mm)(銀黃)

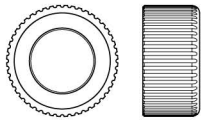


Damper cap ×4
避震器上蓋



Damper cylinder ×4
避震筒身



Rod guide ×4
避震器下蓋墊片




Rod guide cap ×4
避震器下蓋



Damper O-ring P3 ×4
避震器O環




6.5×2.1 Sponge ×4
泡棉



12×1 O-ring ×4
O環




3×1.2 Piston ×4
避震活塞




Damper seal ×4
避震器氣室



Damper retainer ×4
避震器彈簧座



Piston rod ×4
避震軸心



Damper adjuster ×4
避震器拉桿



E-clip ×8
E扣




Damper shock end ×4
避震上球頭座

STEP 1 Damper assembly
避震器組裝


※Please assemble the part by number in the circle.
請按照球號順序組裝

1


X4 Make 4

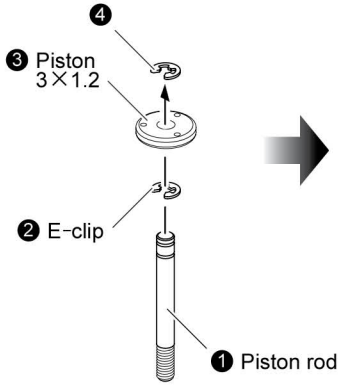


2

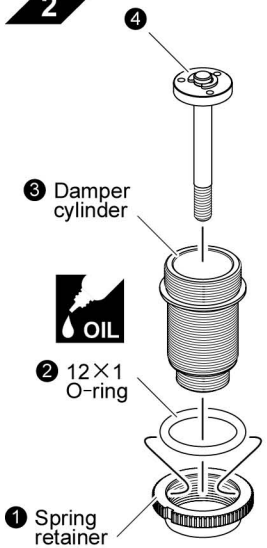


3

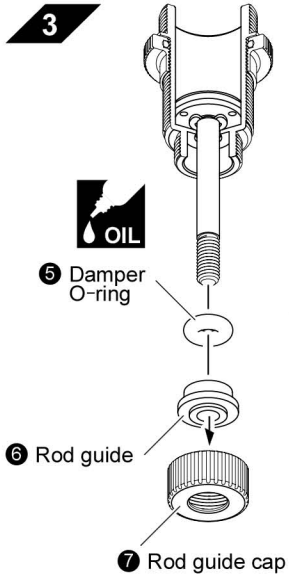

4

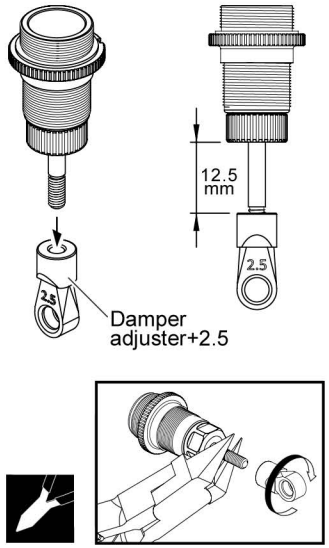


5

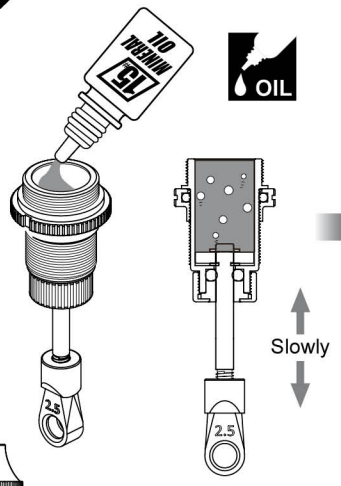




Pull down piston and pour oil into cylinder. Remove air bubbles by slowly moving piston up and down.
拉下活塞並填入避震油，緩慢上下移動活塞將氣泡移除。

6

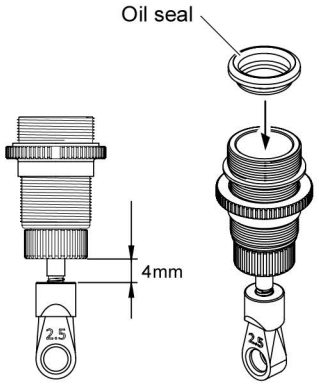


※Pull down piston rod 4mm, attach cylinder cap and absorb oil overflow with tissue paper.
將軸心下拉4mm後，蓋上避震器上蓋並以面紙拭去溢出的矽油。

7




8

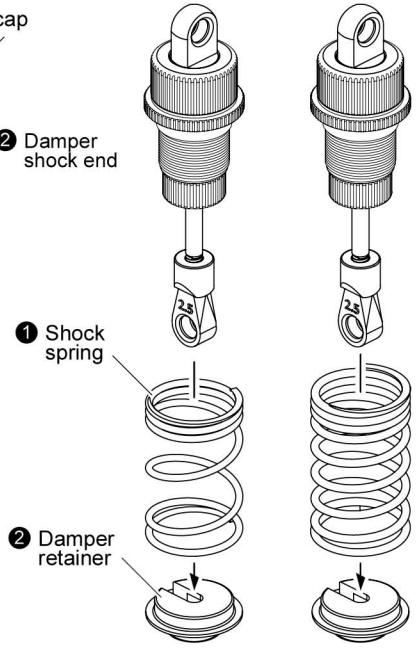


FRONT
DK-RWD Competition Drift spring (24mm) ×2 (yellow)


REAR
DK-RWD Competition Drift spring (26mm) ×2 (silver-yellow)

STEP 2 Attaching damper
安裝避震器

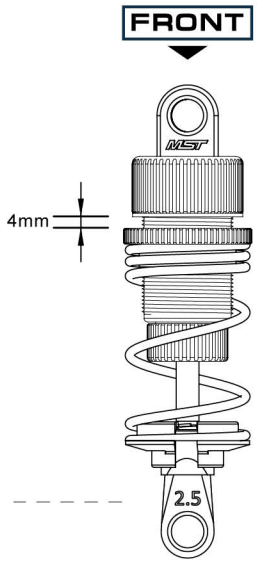



Final ride height after installing electronics and bodyshell:
Front 9 mm / Rear 5 mm.

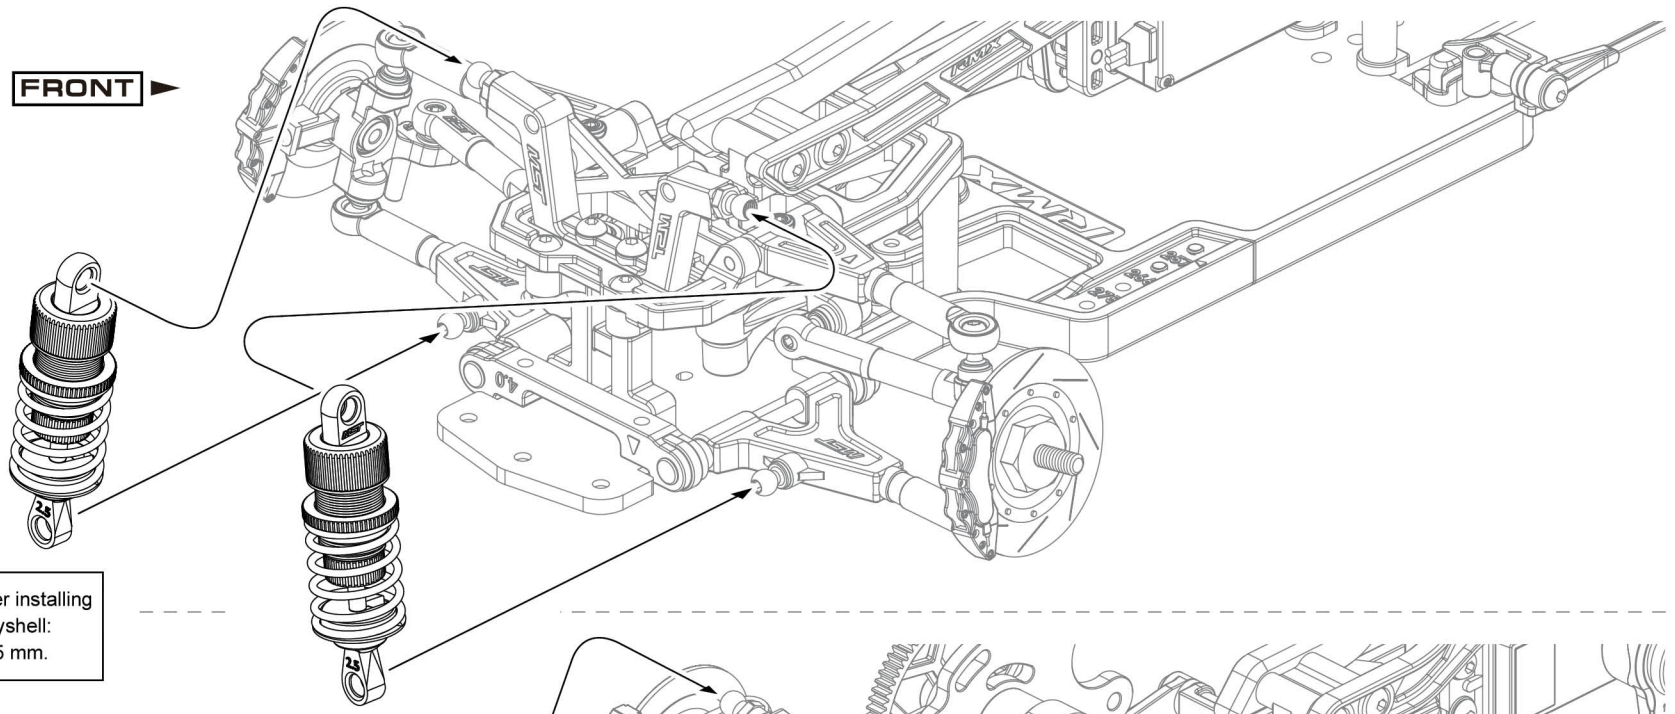

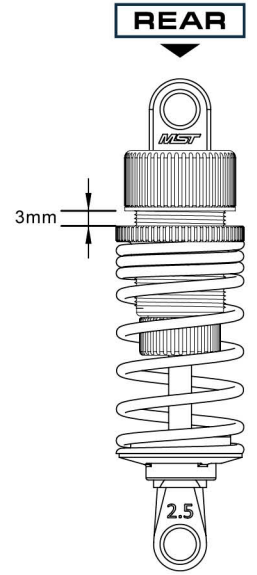


Final ride height after installing electronics and bodyshell:
Front 9 mm / Rear 5 mm.

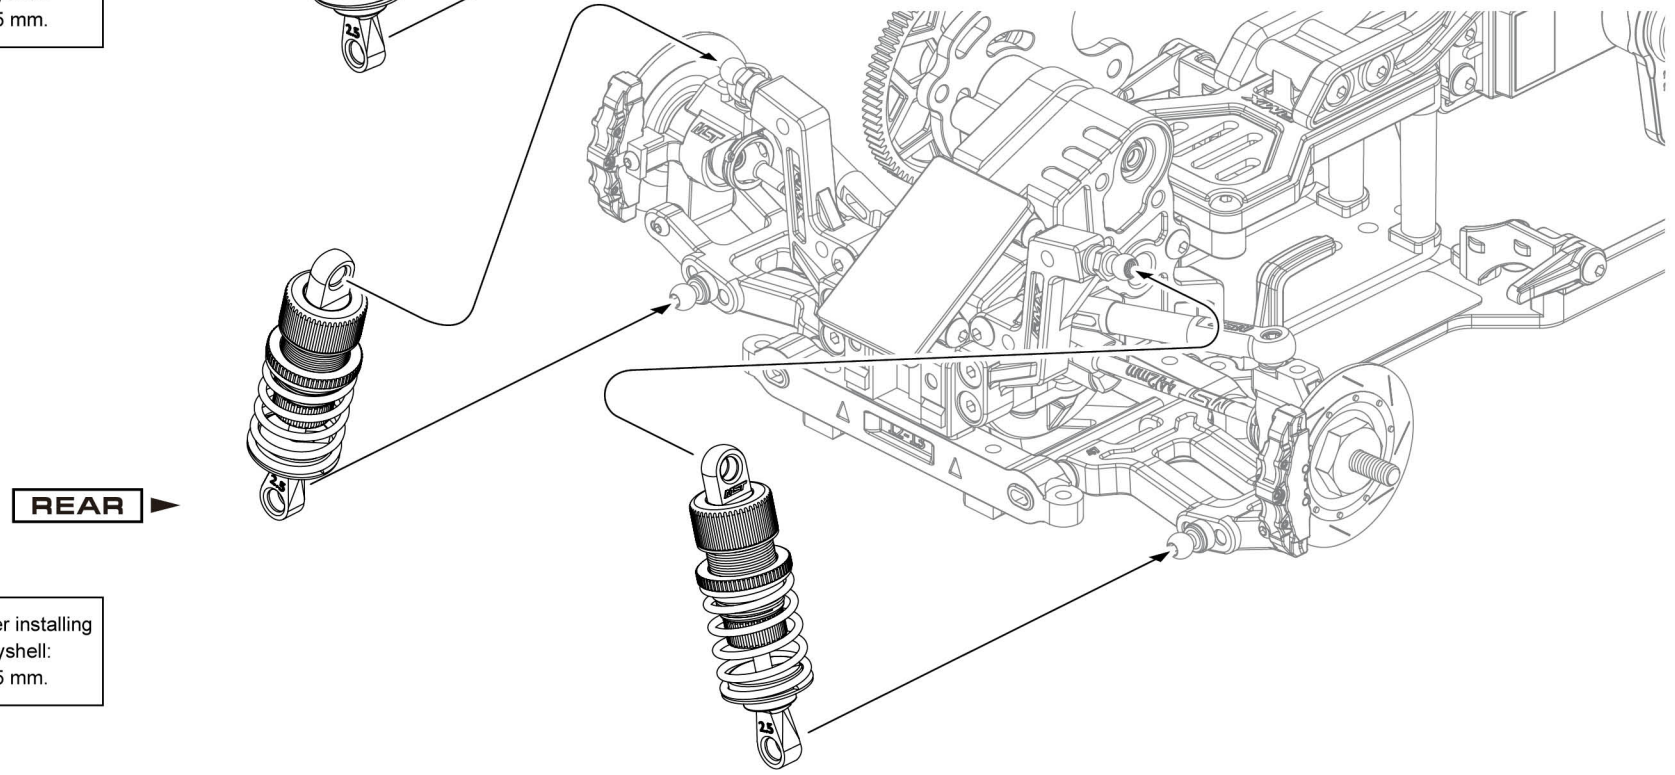


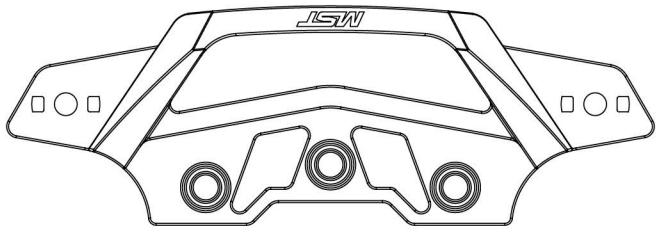


Bumper support ×1
防撞板上蓋




Rear body mount ×2
後車殼支柱




Front body mount ×2
前車殼支柱



Body mount cover M ×2
支柱套 M



Body mount cover L ×2
支柱套 L



M3×14 screw ×2
圓頭螺絲



M3×8 screw ×3
沉頭螺絲




M3×10 screw ×2
沉頭螺絲



M2×8 screw ×4
圓頭螺絲

STEP 1 Attaching body mounts
安裝車殼固定座

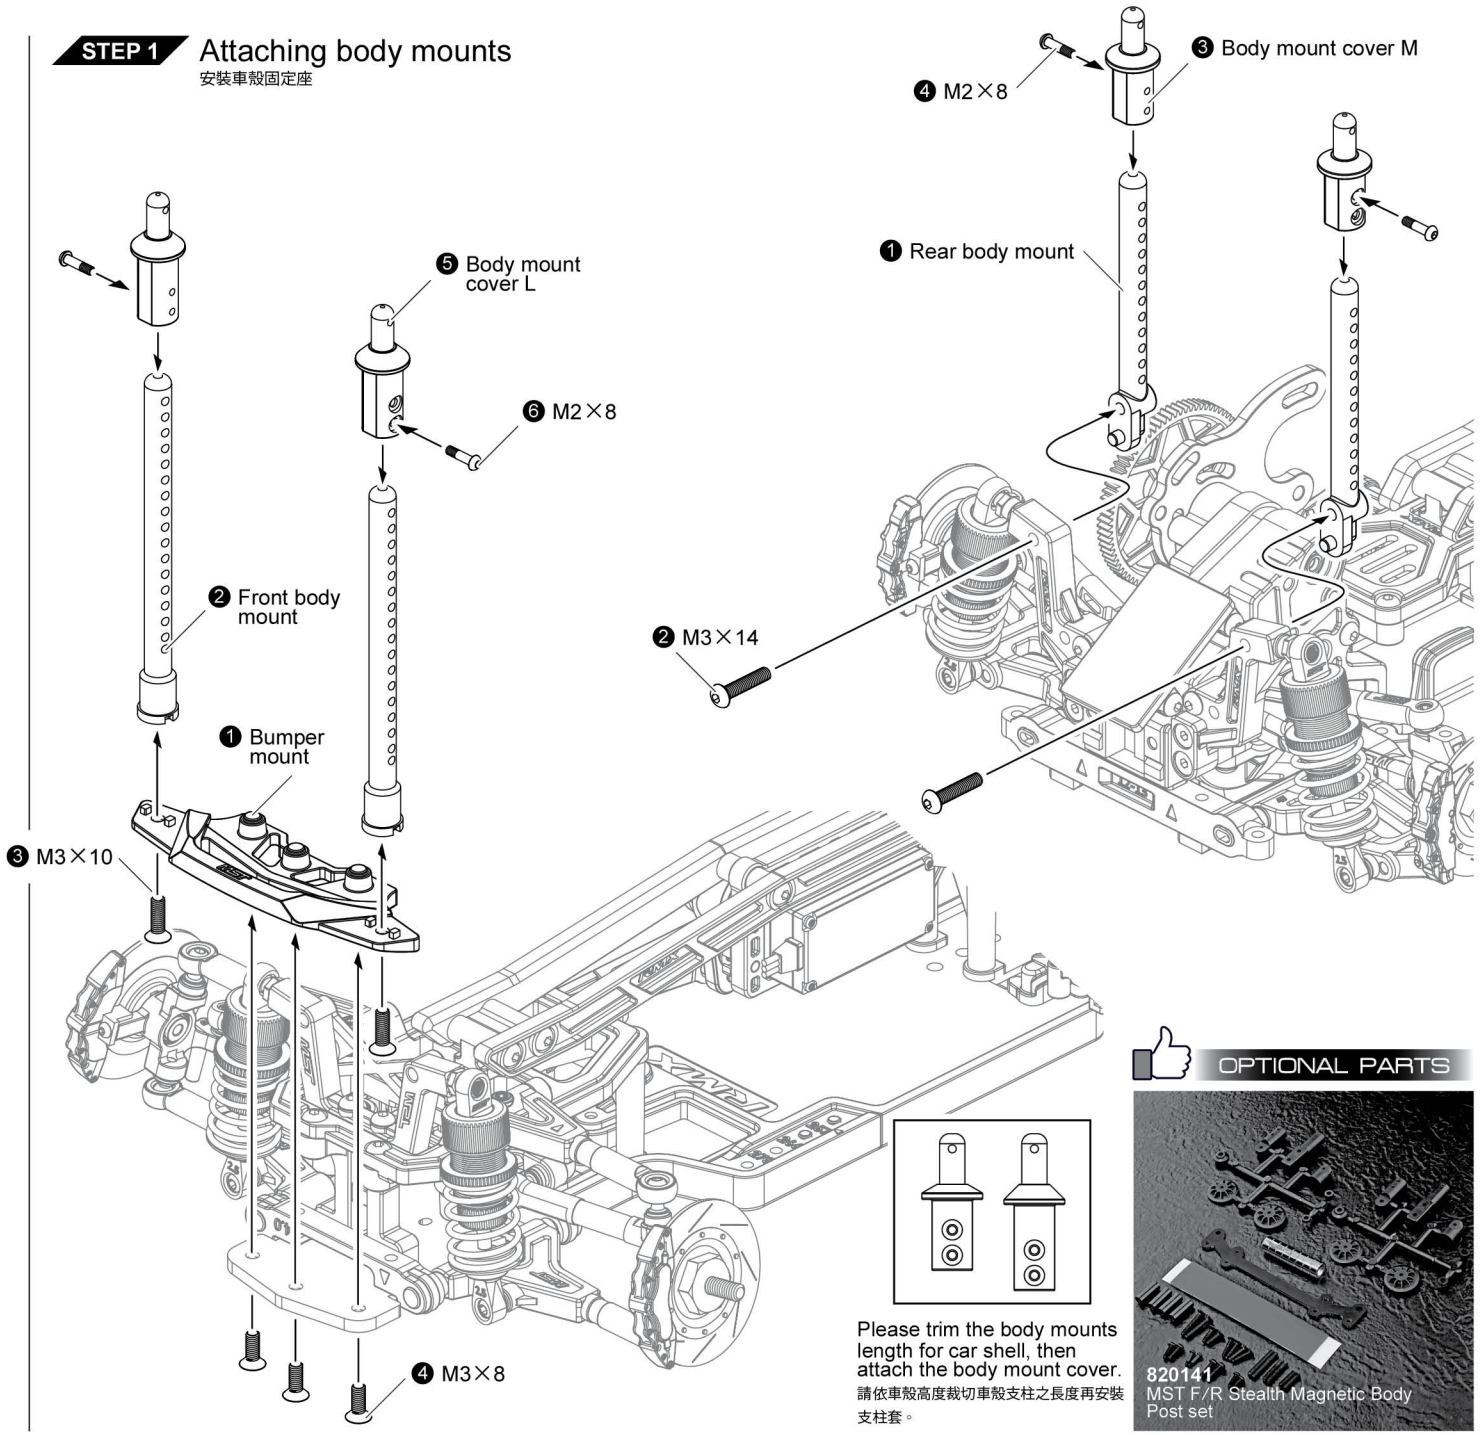

Please trim the body mounts length for car shell, then attach the body mount cover.
請依車殼高度裁切車殼支柱之長度再安裝支柱套。

OPTIONAL PARTS

820141
MST F/R Stealth Magnetic Body Post set


22T motor gear ×1
馬達齒


3×6×0.5 Spacer ×2
墊片

M3×6 screw ×2
圓頭螺絲

M3×3 screw ×1
止付螺絲


STEP 1 Attaching motor
安裝馬達

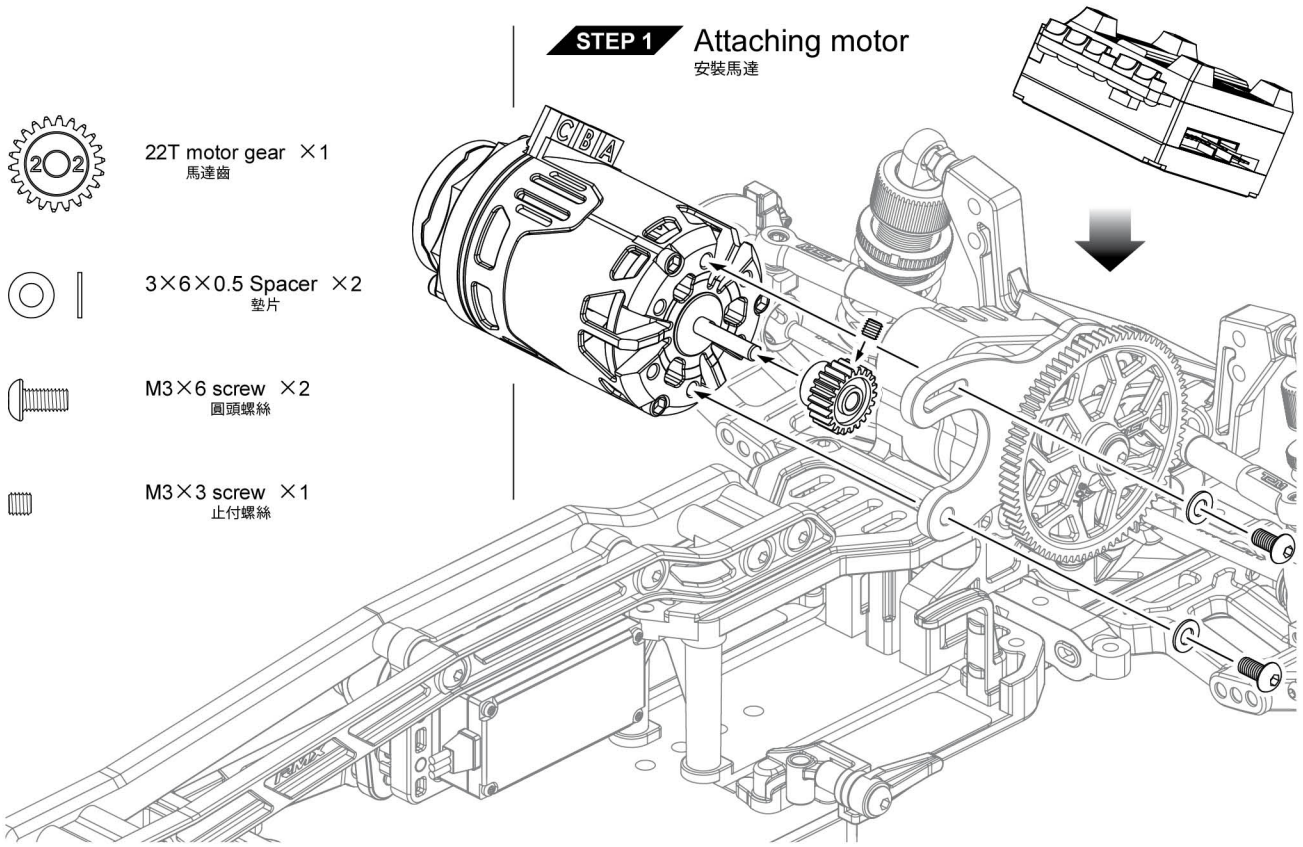

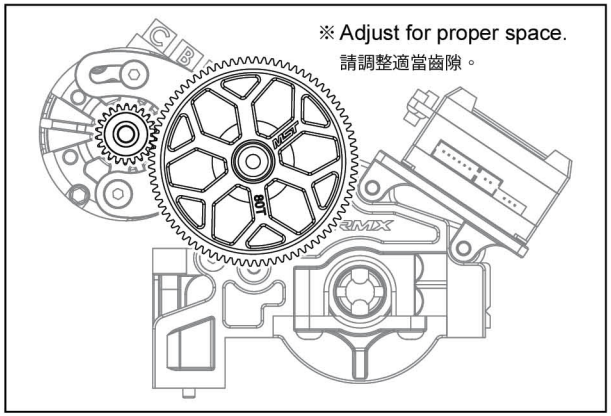


Mode 1


Standard

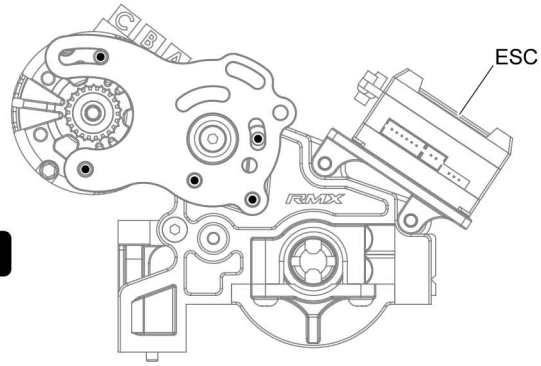


Mode 2

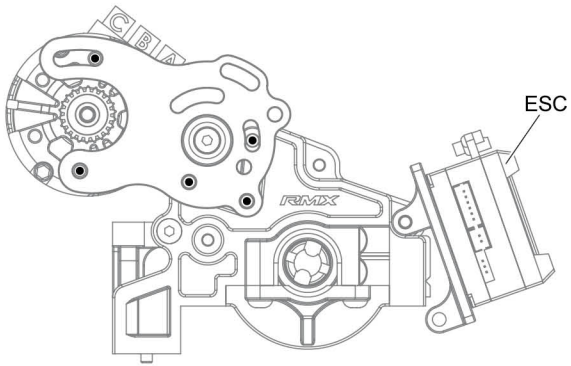


Mode 3

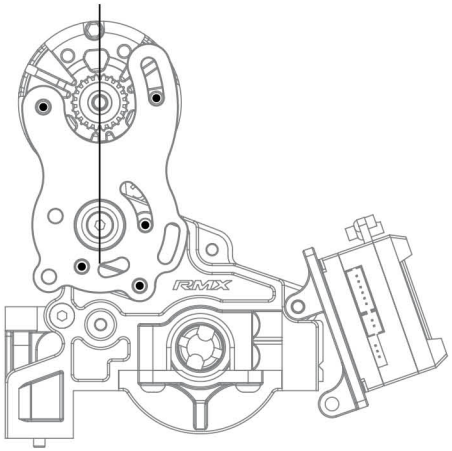

Mode 4

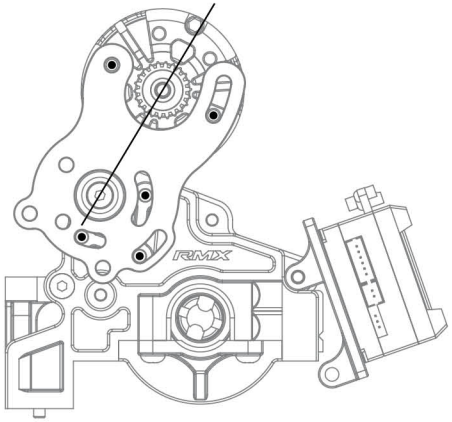


380 Mode

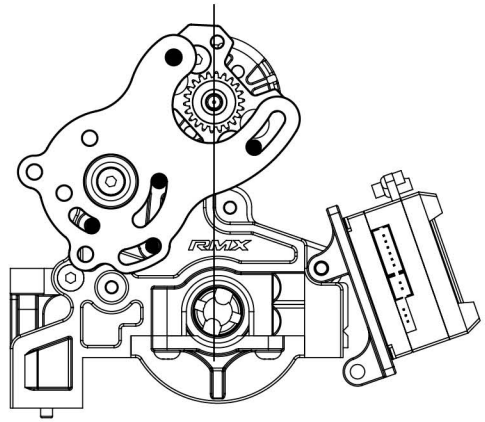


Flange nut M4 ×4
凸緣螺帽 M4
Bag 9


Wheel hub spacer 1.0 ×2
輪座墊片 1.0
Bag 9

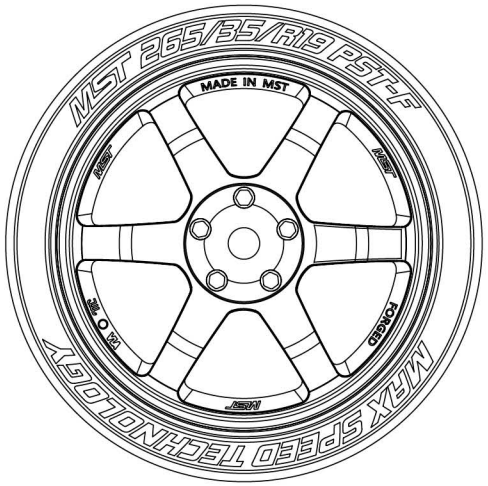

※ NOT including.
Please refer to MST website for the wheel & tire types.
胎框組須另購，詳情請見官網。
[www.rc-mst.com]

STEP 1 Attaching wheels / ESC / Gyro / Battery
安裝輪胎 / ESC / 陀螺儀 / 電池

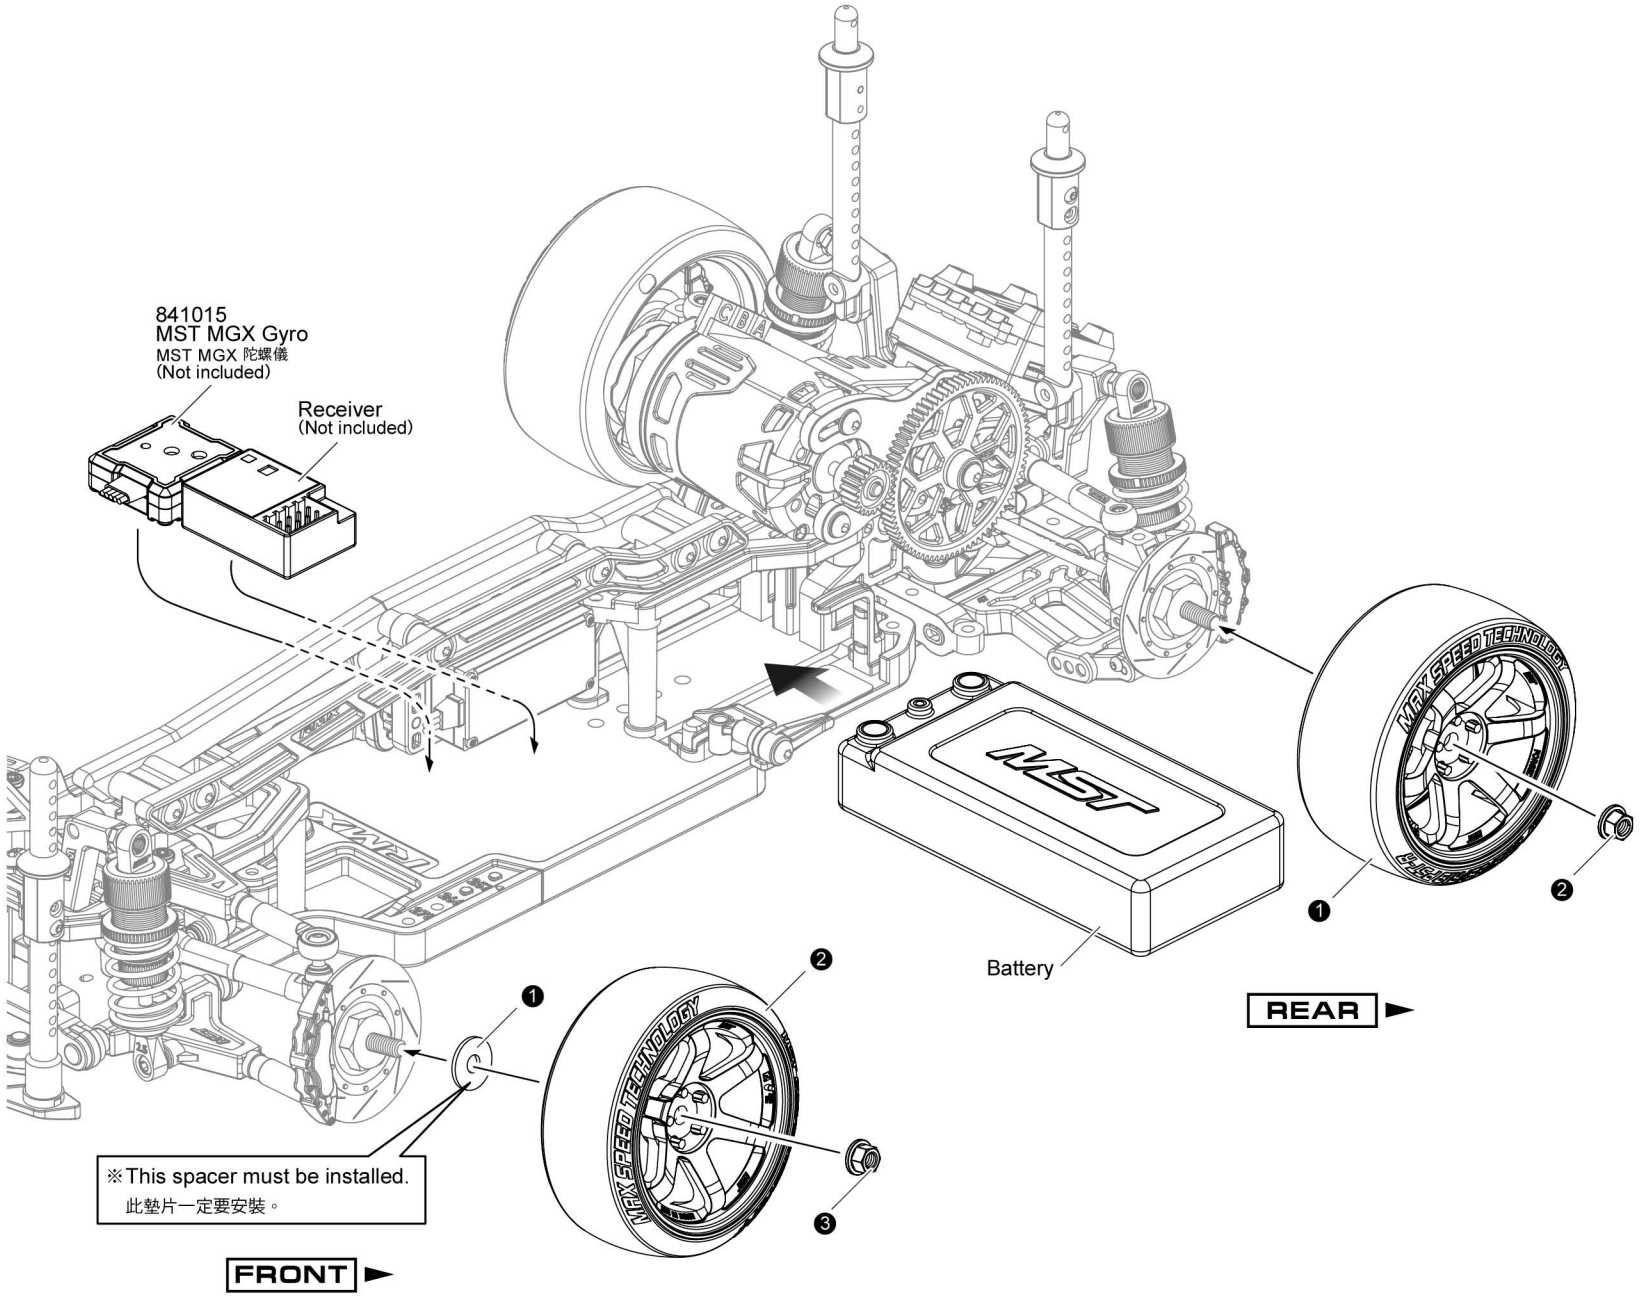

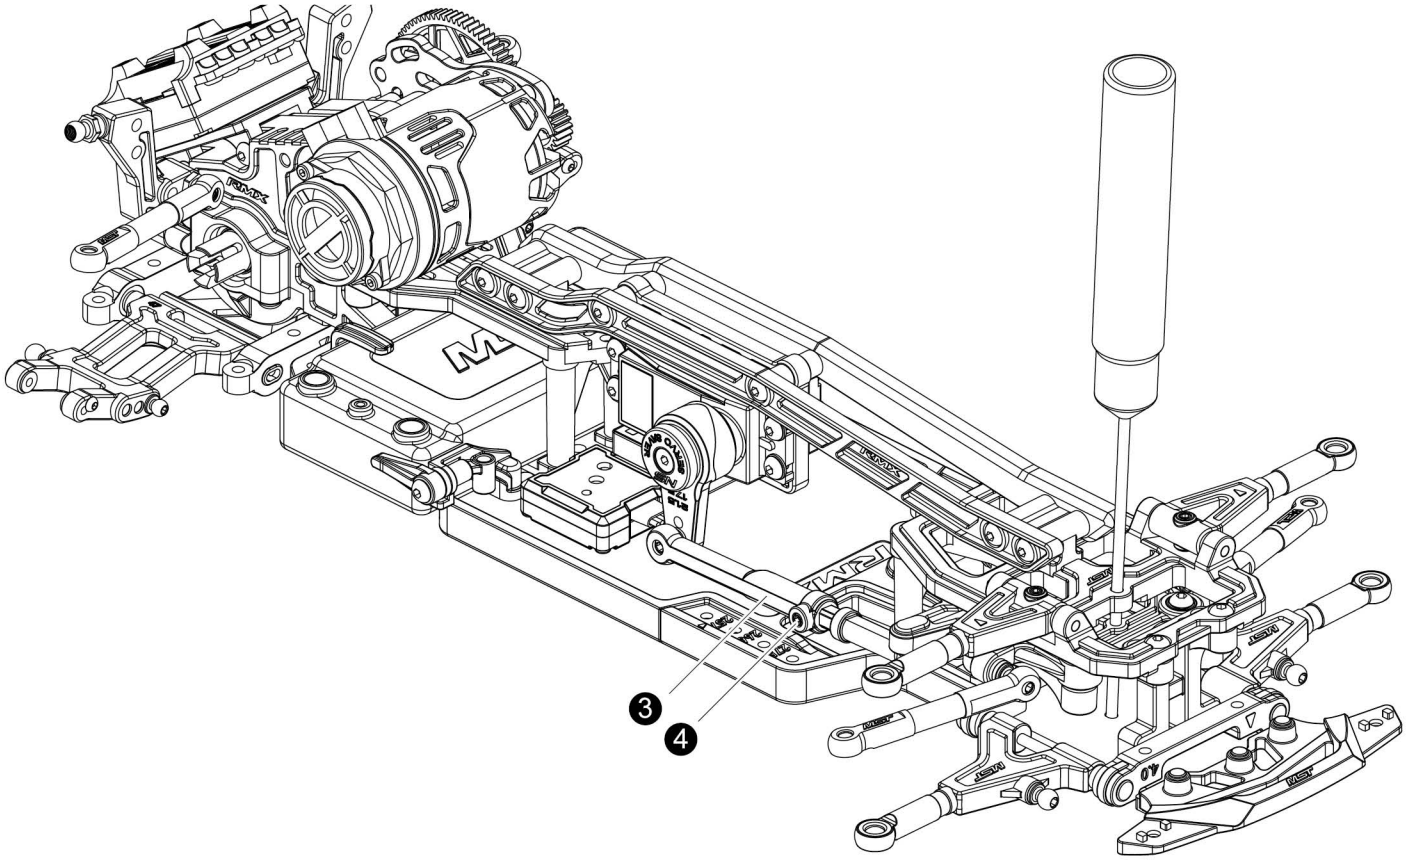


※ Do not tighten the M3×4 set screw during initial assembly. After completing full vehicle assembly, follow these steps:

❶ Power on the system and ensure the servo is at its neutral position.
❷ Keep the front wheels in the straight position.
❸ Adjust the turnbuckle to the correct length while everything is centered.
❹ Once confirmed, tighten the M3×4 set screw.


先不鎖緊M3×4止付螺絲，待全車組裝完成後再完成以下步驟:


❶ 通電後伺服機保持中立點
❷ 前輪轉向保持中立點
❸ 此時可調拉桿為正確長度
❹ 鎖緊M3×4止付螺絲

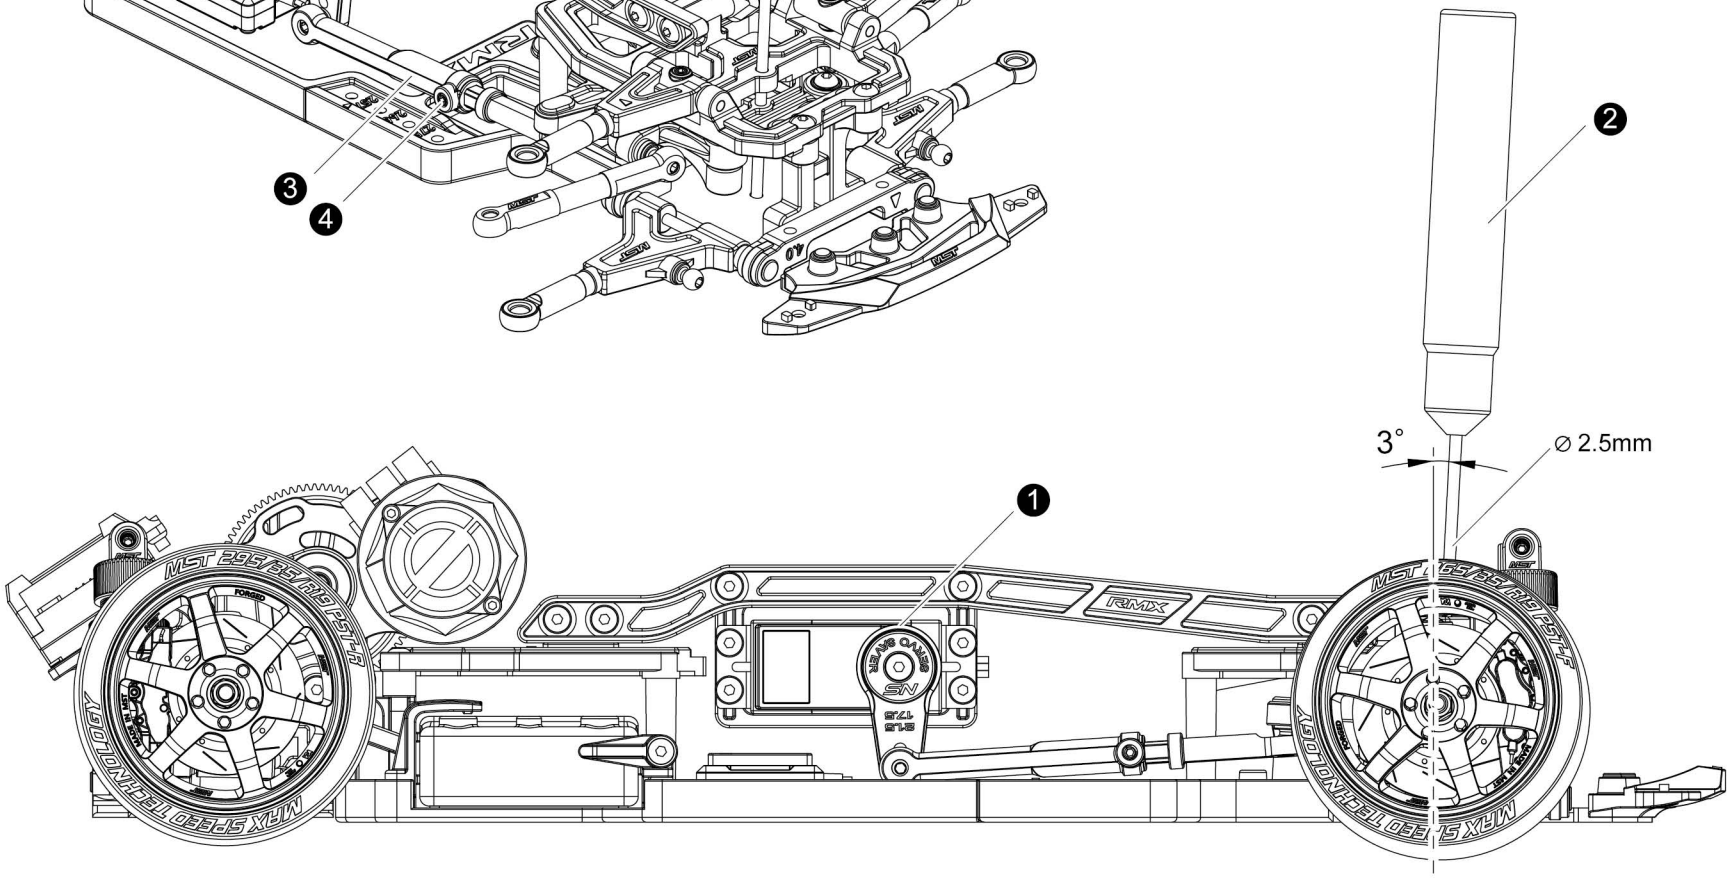



WHEELBASE CONFIGURATION
軸距設定

Standard

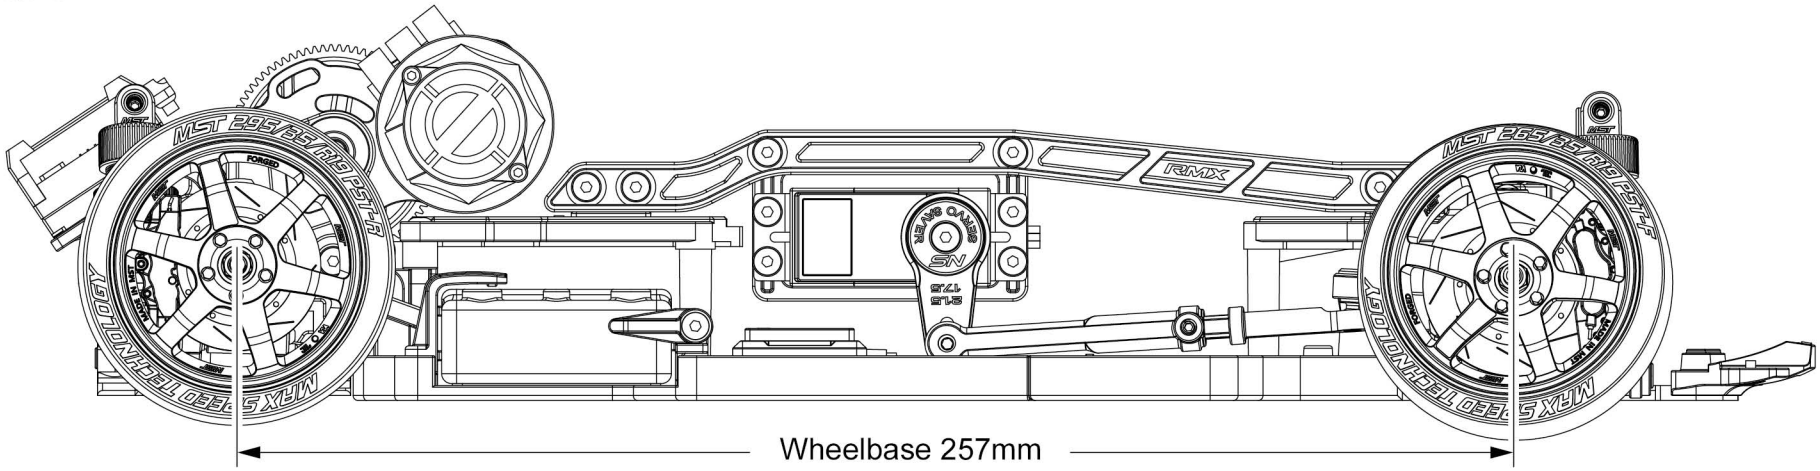

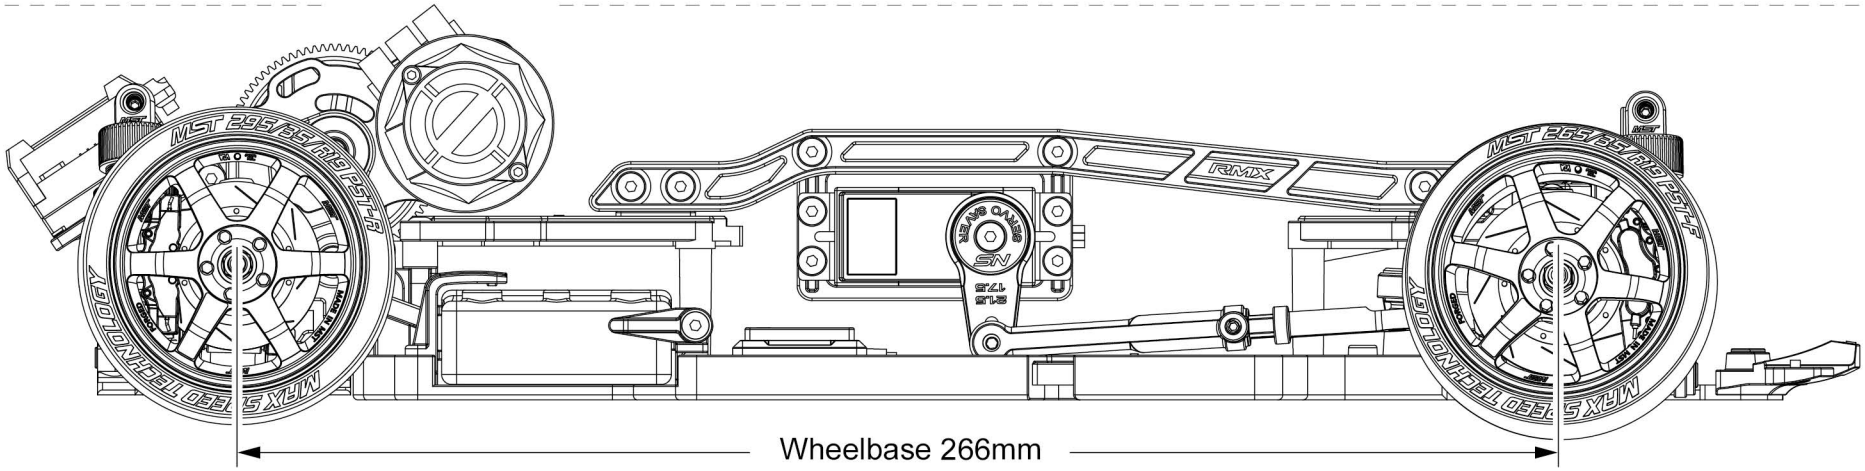

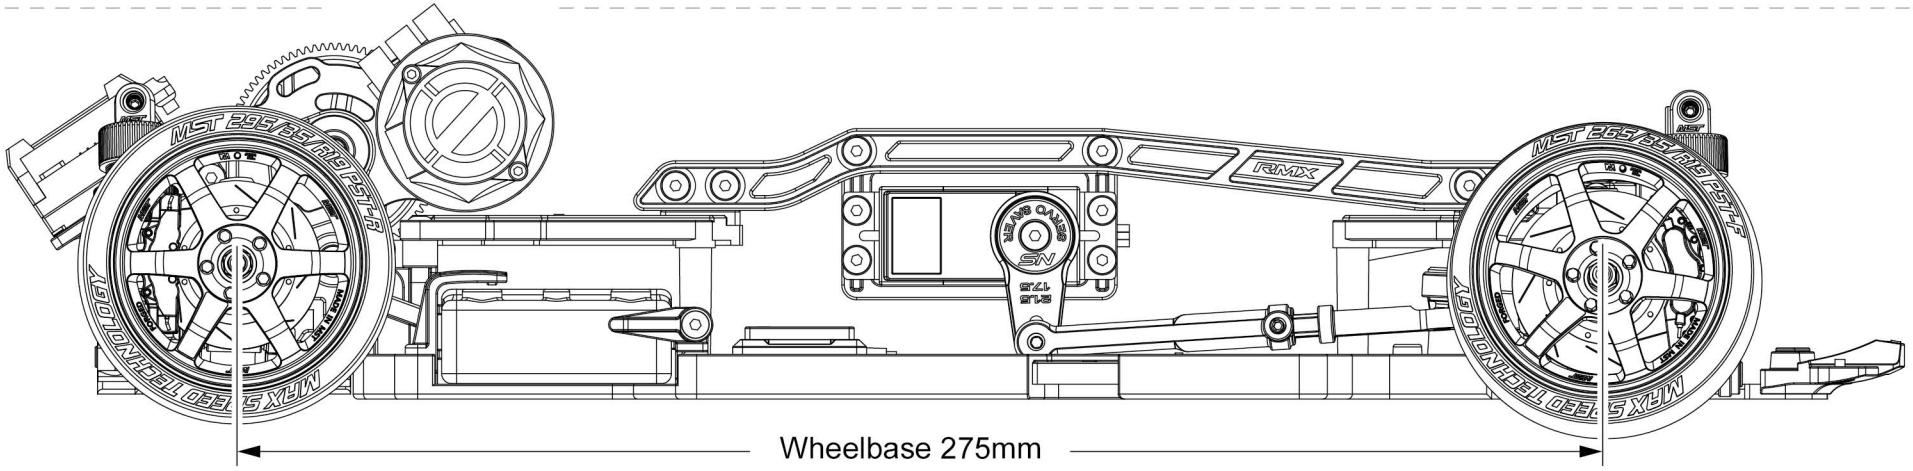

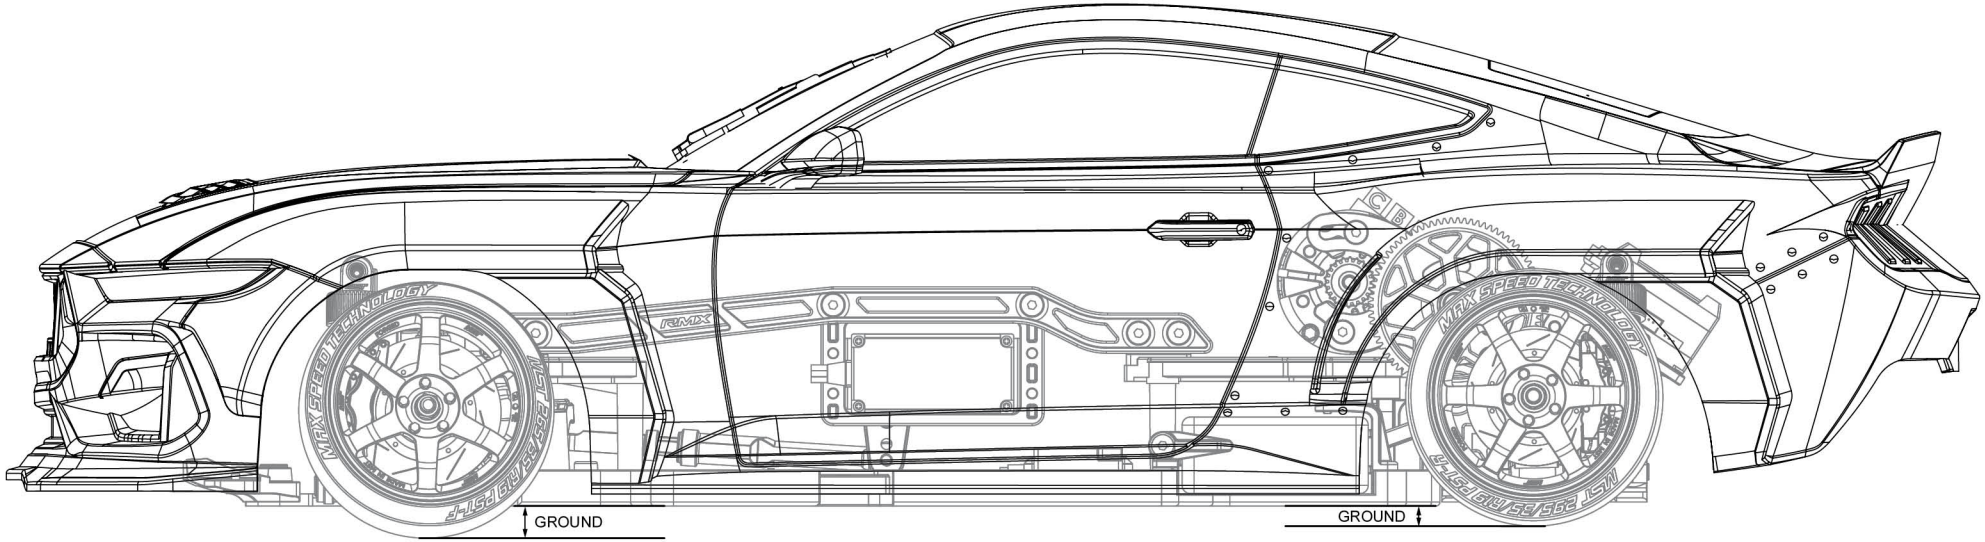

※ The original front ride height of 9mm is set for the factory Ackermann configuration.
Please double-check before heading to the track to ensure it matches the factory specification.
If it is too high or too low, adjust the height using the spring retainer.
前車高9mm為原廠設定阿克曼所需高度。
下場前請再次確認是否為原廠數值，如太高或太低，請在避震器調整環調整高低。

GEAR RATIO
(For **80T** Spur Gear)

Pinion gear teeth	22T	23T	24T	25T	26T	27T	28T	29T	30T	31T	32T	33T	34T	35T
60T/20T <3.00>	10.91	10.43	10.00	9.60	9.23	8.89	8.57	8.28	8.00	7.74	7.50	7.27	7.06	6.86

※Adjust for proper space.
請調整適當齒隙。

＊**FORMULA** 計算公式

$$\left(\frac{\text{Spur gear teeth 80T 大直齒}}{\text{Pinion gear teeth 馬達齒}} \times \frac{\text{Differential gear 60T 差速齒}}{\text{Main shaft gear 20T 主軸齒}}\right) = \text{Gear ratio 終傳比}$$

RMX 4 S PRO — SETUP SHEET


1/10 SCALE RC RWD HIGH PERFORMANCE DRIFT CAR

ORIGINAL SETTING

DATE : _____ SURFACE : Plastic tiles


TRACK : MST Station NOTE : _____

Steering

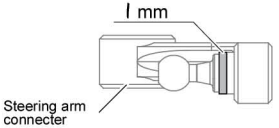


Caster

7°

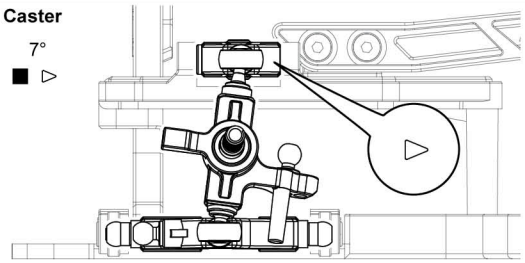

Caster

5.5°

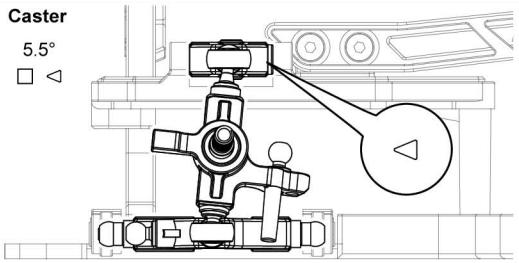


FRONT / REAR

FRONT

Tire: Silver PST-F

Wheel: TE37

Offset: +7

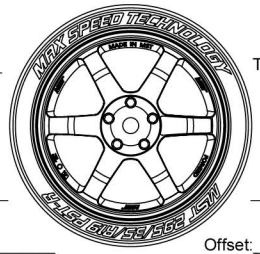


REAR

Tire: Silver PST-R


Wheel: TE37

Offset: +5

Front upright

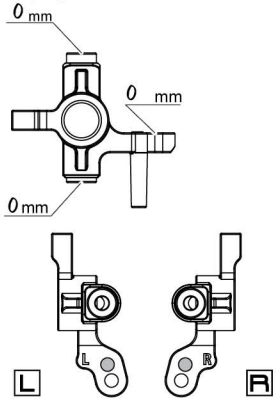


Front wheel hubs

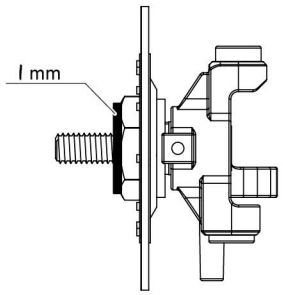

Front suspension

Camber: 9.1°

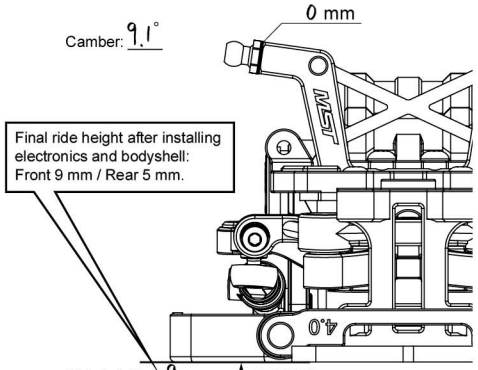


Ride height: 9 mm GROUND

Rear suspension


Camber: 2°

Toe-in: 1°

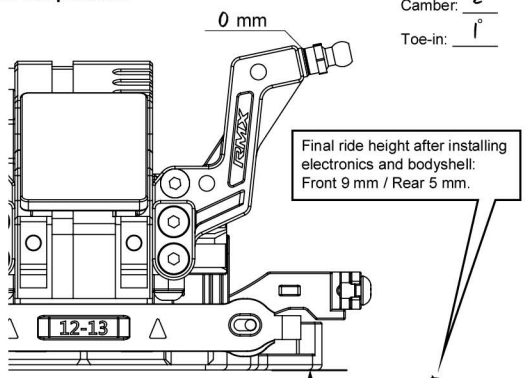


GROUND Ride height: 5 mm

Rear upright




Front

Suspension mount
Rollcenter

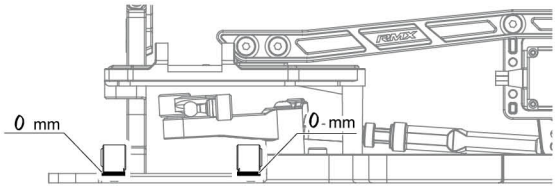

Rear diff

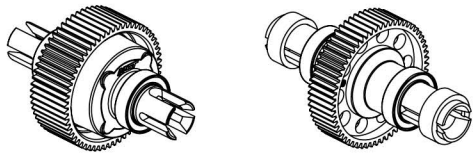

■ Gear diff.
Diff oil #3000

□ Ball diff.

Spur Gear ÷ Pinion Gear × Reduction Gear = Gear ratio


80 T ÷ 22 T × 3 = 10.9

Motor & ESC: _____ Battery: _____


Transceiver: _____ Gyro: _____ Sensitivity: _____

Rear

Suspension mount
Rollcenter

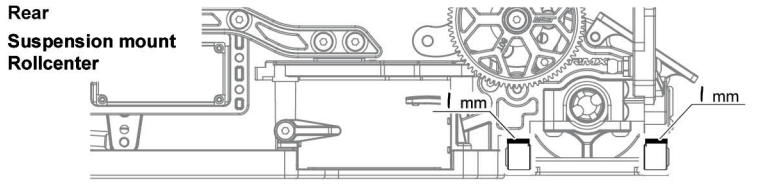

Front damper

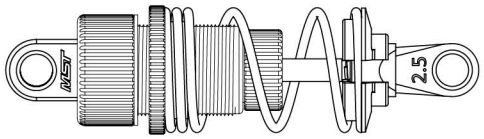

Shock oil: #15


Spring: 24 mm Ø1.5

Spring color: Yellow

Piston: Ø1.2 mm

Piston hole: 3

Rear damper

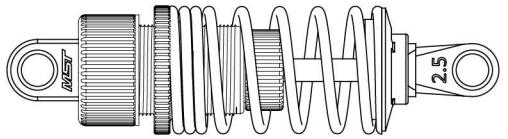

Shock oil: #15

Spring: 26 mm Ø1.5

Spring color: Silver-Yellow

Piston: Ø1.2 mm

Piston hole: 3

※ Please download the blank setup sheet at [www.rc-mst.com].

RMX 4 S PRO


1/10 SCALE RC RWD HIGH PERFORMANCE DRIFT CAR

SETUP SHEET
ORIGINAL SETTING

DATE : _____ SURFACE : _____


TRACK : _____ NOTE : _____

Steering

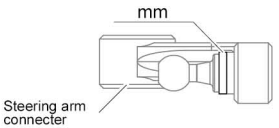


Caster

7°

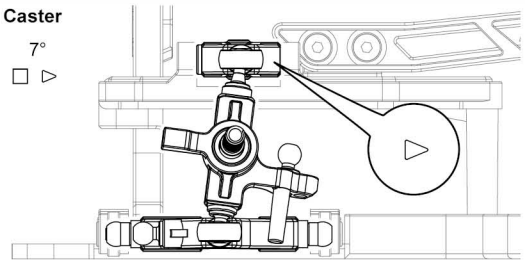

Caster

5.5°

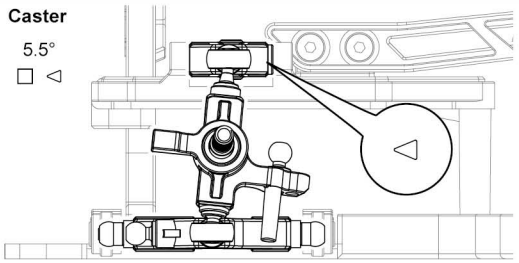


FRONT / REAR


Tire: _____ Tire: _____

Wheel: _____ Wheel: _____


Offset: _____ Offset: _____

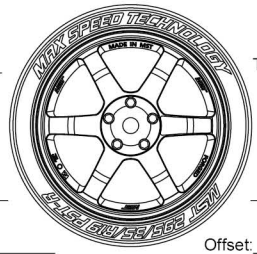

Front upright

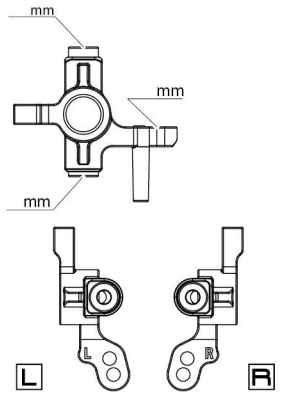


Front wheel hubs

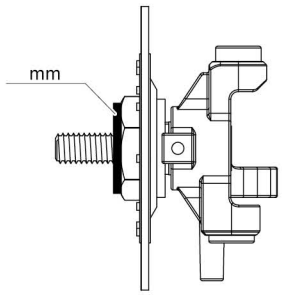

Front suspension

Camber: ____

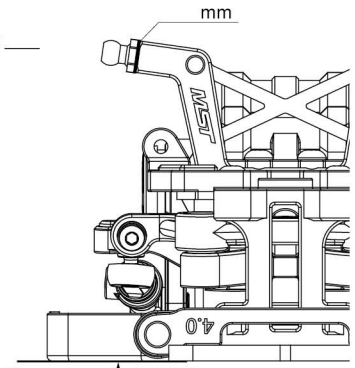


Ride height: mm GROUND

Rear suspension


Camber: ____

Toe-in: _____

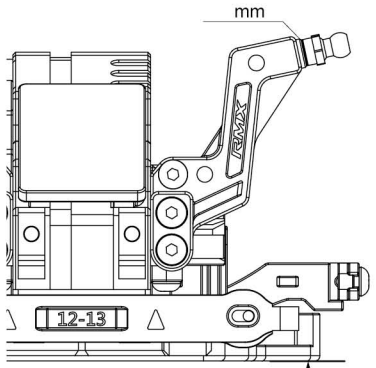


GROUND Ride height: ____ mm

Rear upright




Front

Suspension mount Rollcenter

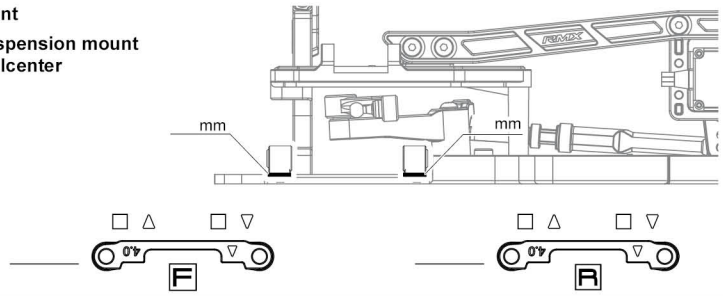

Rear diff

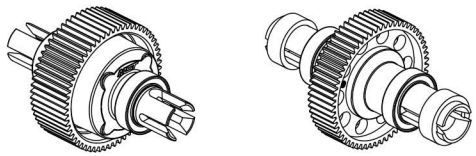

☐ Gear diff.
Diff oil_____

☐ Ball diff.

Spur Gear ÷ Pinion Gear × Reduction Gear = Gear ratio


_____ T ÷ _____ T × _____ = _____

Motor & ESC: _____ Battery: _____


Transceiver: _____ Gyro: _____ Sensitivity: _____

Rear

Suspension mount Rollcenter

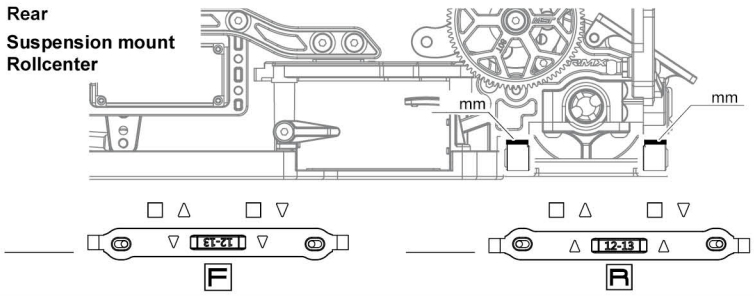

Front damper

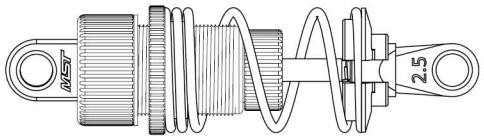

Shock oil: _____


Spring: _____ mm _____

Spring color: _____

Piston: _____ mm

Piston hole: _____

Rear damper

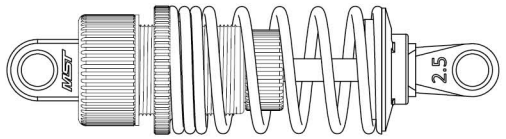

Shock oil: _____

Spring: _____ mm _____

Spring color: _____

Piston: _____ mm

Piston hole: _____

※ Please download the blank setup sheet at [www.rc-mst.com].

PARTS

Color 顏色	Remark 標示
Red 紅 / BACK 黑	R / BK



M2×3 screw ×4
圓頭螺絲
110082



M2×4 screw ×4
圓頭螺絲
110004



M2×8 screw ×4
圓頭螺絲
110063



M2×8 screw ×4
圓頭螺絲(半牙)
110045



M3×5 screw ×2
圓頭螺絲
110049



M3×6 screw ×3
圓頭螺絲
110001



M3×8 screw ×26
圓頭螺絲
110002



M3×10 screw ×4
圓頭螺絲
110026



M3×12 screw ×3
圓頭螺絲
110029



M3×14 screw ×4
圓頭螺絲
110061



M3×16 screw ×2
圓頭螺絲
110086



M3×18 screw ×3
圓頭螺絲
110087



4.8 Ball connector ×4
外六角球頭
210161



4.8 Ball connector L ×2
外六角球頭(長)
210344

M3×2.6 screw ×2
止付螺絲
110060



M3×3 screw ×3
止付螺絲
110035



M3×4 screw ×1
止付螺絲
110083



M3×10 screw ×2
止付螺絲
110032



M3×12 screw ×2
止付螺絲
110056



M3×25 screw ×4
止付螺絲
110008



M3×6 screw ×4
沉頭螺絲
110024



M3×8 screw ×37
沉頭螺絲
110005



M3×10 screw ×2
沉頭螺絲
110052



M3×12 Screw ×4
沉頭螺絲
110043



M3×16 Screw ×5
沉頭螺絲
110073




4.8×4.5 Ball connector s ×1
球頭螺絲
210433



4.8×4.5 Ball connector ×9
球頭螺絲
310001



4.8×6 Ball connector ×4
內六角公球頭
310050



4.8×6 Ball connector L ×4
球頭螺絲(長)
310129




1.5×7.8 Shaft ×2
插銷
110059



2×9.8 Shaft ×5
插銷
110017




2×9.8 Shaft ×2
插銷
110046




2×22 Shaft ×2
插銷
310047



4×21 Shaft ×2
插銷
310119



2.6×25 Shaft ×2
插銷
310035



2.5×46 Arm shaft ×4
擺臂插銷
310048




Steel CVD great angle universal shaft 42 (40°) ×2
鋼製CVD傳動軸 42 (40°)
820004



R-clip 5.0 ×6
R-銷 5.0
820075



Cross joint ×2
連接軸
820030



2WD Axle ×2
二驅輪軸
820095

Wheel axle ×2
萬向接杯
310065

2.5×9×0.1 Spacer ×4
墊片
310040

3×6×0.5 Spacer ×12
墊片
110047

4×6×0.3 Spacer ×4
墊片
820017

Wheel nut m4 ×4
輪框螺帽
820074

O-Ring P4 3.8x1.9 ×2
P4 3.8x1.9 O環
130025

Swing shaft protector ×2
傳動軸軸套
210121-1

MST 48P Pinion 22T ×1
馬達齒 48P-22T
148022P

Reinforced bevel diff. assembly ×1
強化傘齒總成組
210685

Alum. main shaft 48P 20T ×1
鋁合金主齒軸 48P 20T
310132

4×14×0.1 Spacer ×2
墊片
310039

5X7X0.1 Spacer ×2
墊片
820018

5×7×0.3 Spacer ×2
墊片
820020

3×7×3 Ball bearing ×4
培林
120006

4×8×3 Ball bearing ×2
培林
120013

5×8 Ball bearing ×8
培林
120003


4×10 Ball bearing ×2
培林
120018

5×10 Ball bearing ×6
培林
120002


10×15 Ball bearing ×2
培林
120001


PARTS

Color 顏色	Remark 標示
Red 紅 / BACK 黑	R / BK

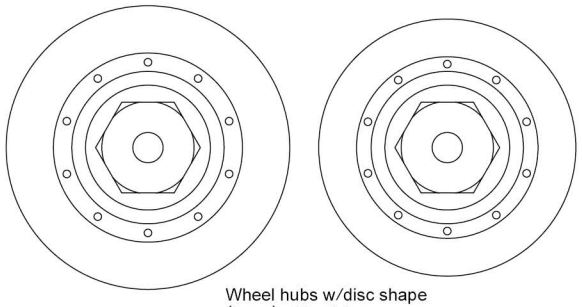


Wheel hubs w/disc shape (large) with sticker
碟型六角輪座組 (加大型) 附貼紙
230041

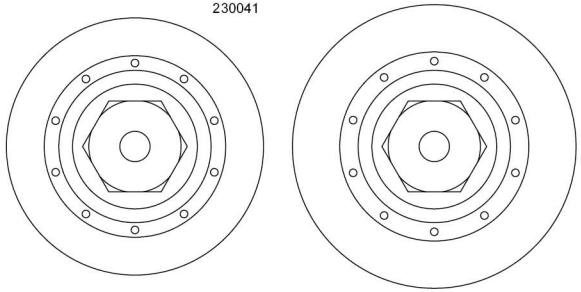


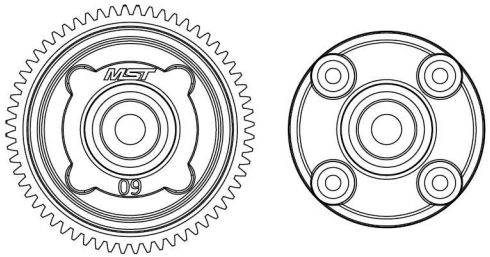

48P 60T Bevel gearbox set (wide) ×1
48P 60T 傘差齒箱組(加寬)
230176

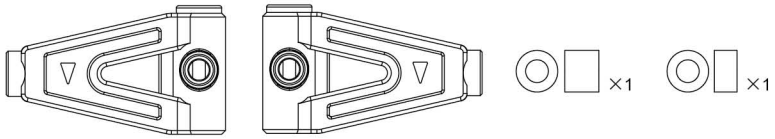


Arm set A ×2
擺臂組
230170

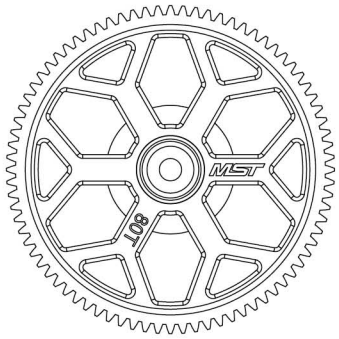


RMX 4 80T Spur gear set ×1
RMX 4 80T 大齒盤總成
230189




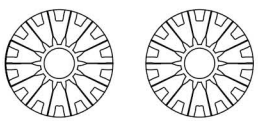


Diff. gear set ×2
傘差齒組
210053

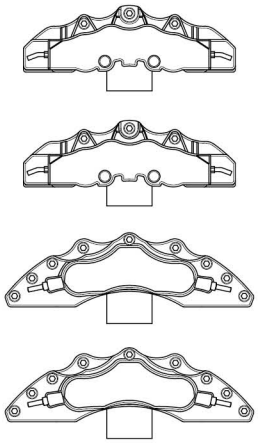


Enlarged brake calipers (red)
加大剎車卡鉗 (紅)
210510CR

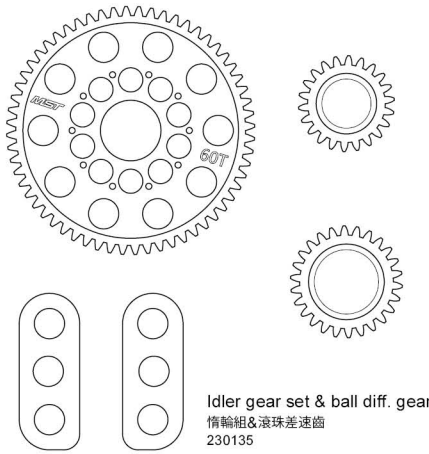


Idler gear set & ball diff. gear
惰輪組&滾珠差速齒
230135

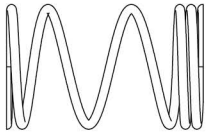


DK-RWD Competition Drift Spring (24mm) ×2 (yellow)
DK-RWD競賽飄移車避震彈簧(24mm)(黃)
820164

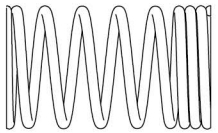


DK-RWD Competition Drift Spring (26mm) ×2 (silver-yellow)
DK-RWD競賽飄移車避震彈簧(26mm)(銀黃)
820164



Damper cylinder ×4
避震筒身
210151

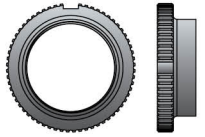

Spring retainer ×4
避震調整環
310106R

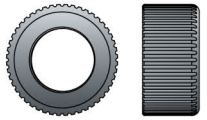

Damper cap ×4
避震器上蓋
310003R



Rod guide cap ×4
避震器下蓋
310005R



Piston rod ×4
避震軸心
310008



E-clip 2.0 ×10
E扣 2.0
110013



6.5×2 sponge ×4
泡棉
130021



High-smooth damper O-ring P3 (white) ×4
高順暢阻尼器O環 P3 (白)
130059



Rod guide ×4
避震器下蓋墊片
210235



Damper adjuster ×4
避震器拉桿
820055




Oil seal ×4
避震器氣室
130004




Cylinder cap ×4
避震器上蓋
820055



Machined piston 3×1.2 ×4
切削避震活塞 3×1.2
210235

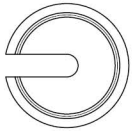


Damper retainer ×4
避震器彈簧座
820055




12×1 O-ring ×4
O環
130049

PARTS


Color 顏色	Remark 標示
Red 紅 / BACK 黑	R / BK

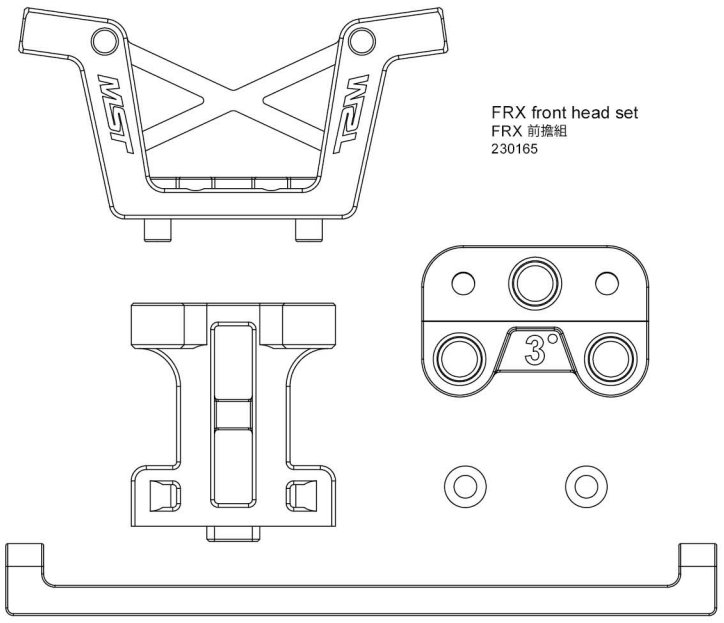


FRX front head set
FRX 前擋組
230165

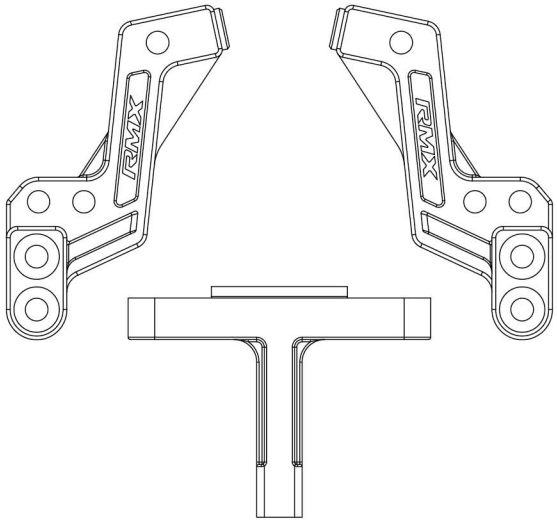


RMX 4 Rear damper set & gearbox connector ×1
RMX 4.0 後避震架組 & 齒箱連接架
230179

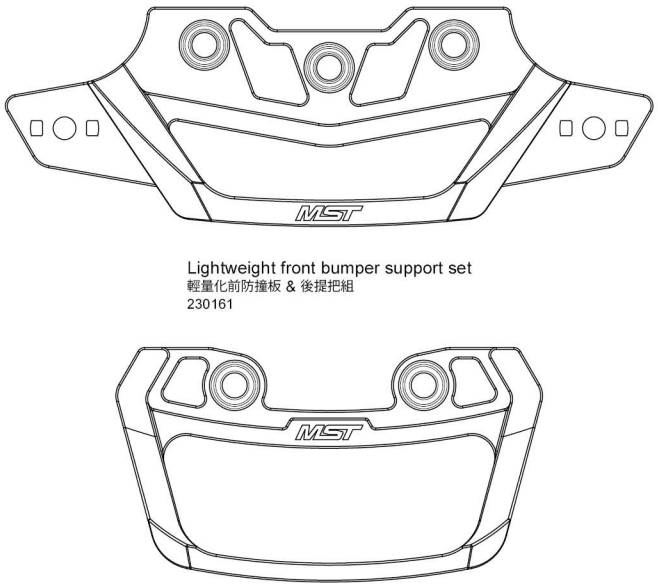


Lightweight front bumper support set
輕量化前防撞板 & 後提把組
230161

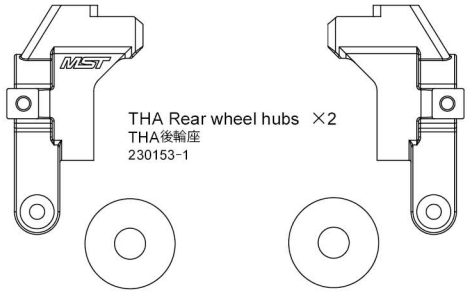


THA Rear wheel hubs ×2
THA後輪座
230153-1

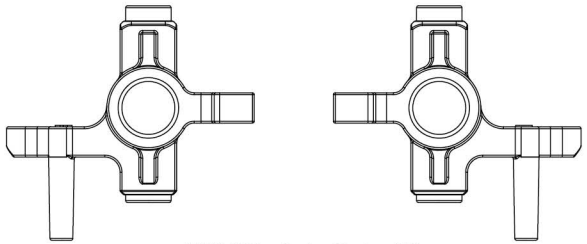

ATK V3 Front wheel hubs ×1
ATK V3 前輪座組
230181

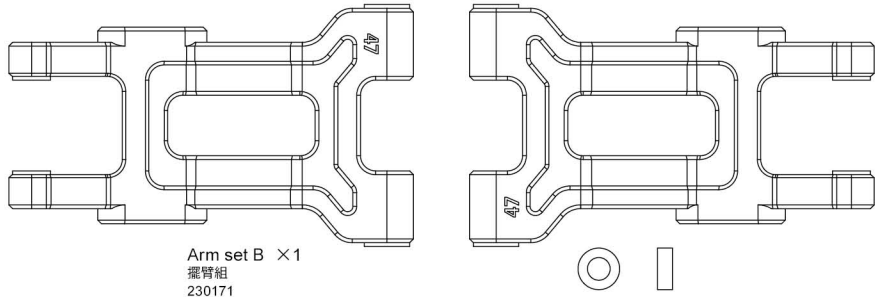


Arm set B ×1
擺臂組
230171

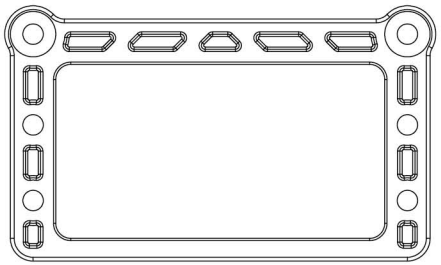

Servo mount ×1
伺服機座
230185




FXX Alum. steering post ×2
FXX 鋁合金轉向支柱
210345

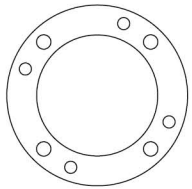

Gear diff. gasket ×1
止漏墊片
230160




RMX 4 Motor mount (Red) ×1
RMX 4.0 馬達座 (紅)
310131R

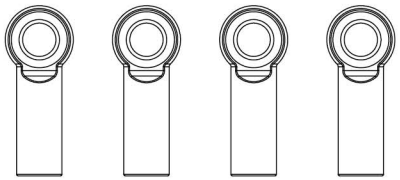


4.8x22 Rod ends set ×1
4.8x22 拉桿頭組
230188


Color 顏色	Remark 標示
Red 紅 / BACK 黑	R / BK

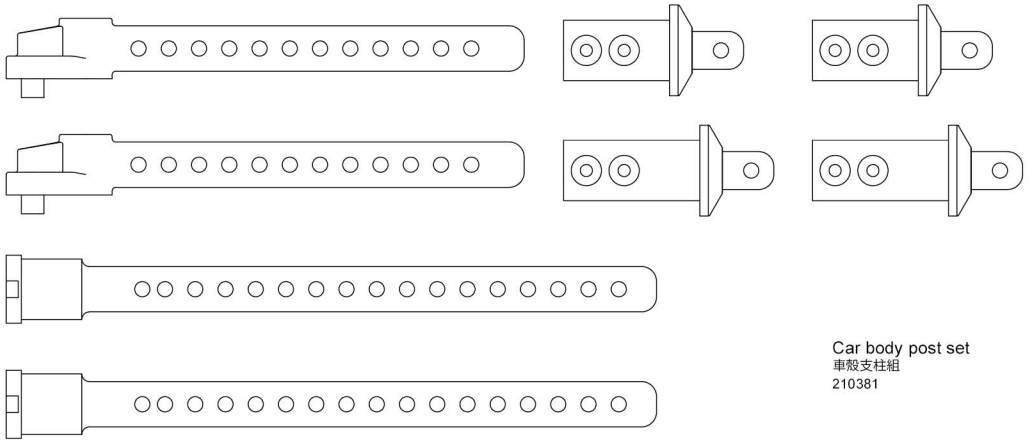


Car body post set
車殼支柱組
210381

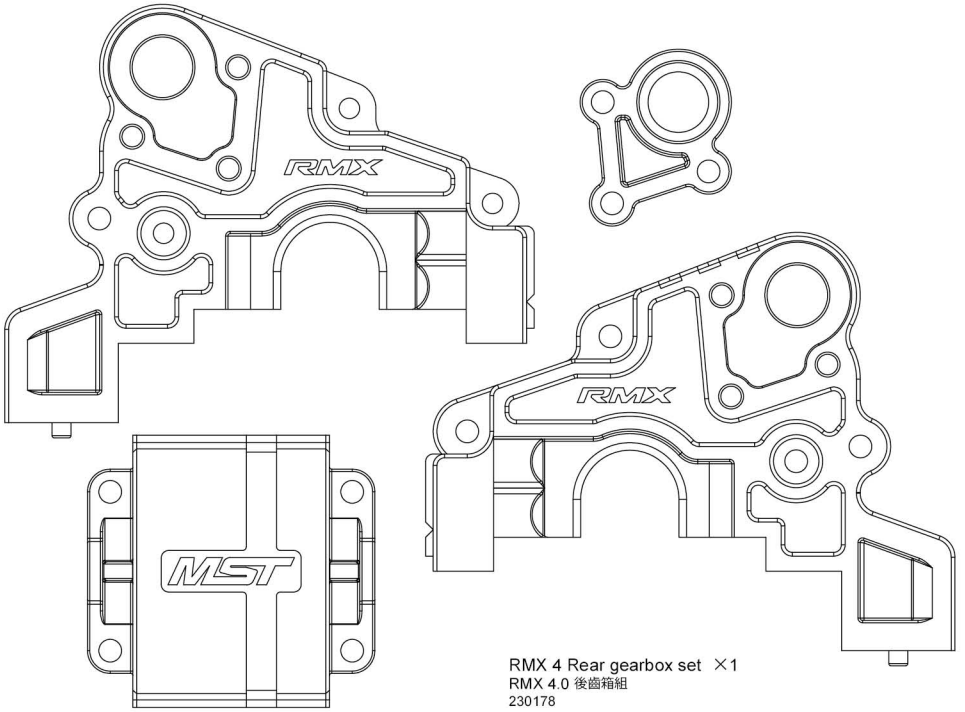

RMX 4 Rear gearbox set ×1
RMX 4.0 後齒箱組
230178

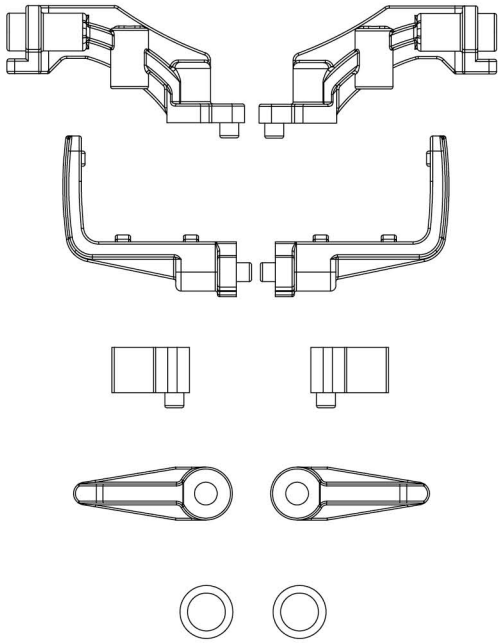


Quick-release battery mount
快拆式電池座組
230145

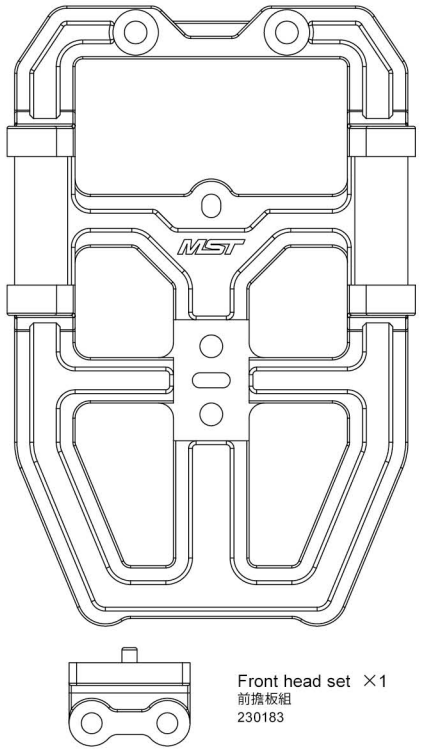


Front head set ×1
前擋板組
230183



PVC Deck protective film ×2
PVC 底盤防刮貼
820152

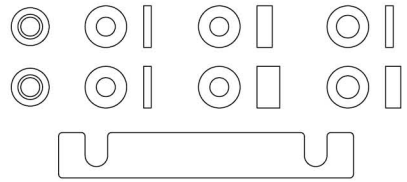


Suspension ball & spacer set ×4
插銷球頭 & 墊片組
230159

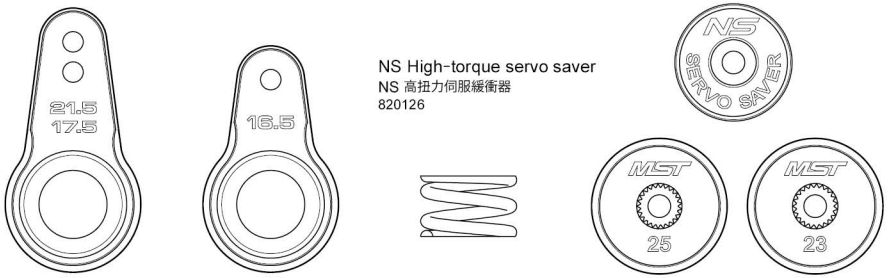


NS High-torque servo saver
NS 高扭力伺服緩衝器
820126


Color 顏色	Remark 標示
Red 紅 / BACK 黑	R / BK

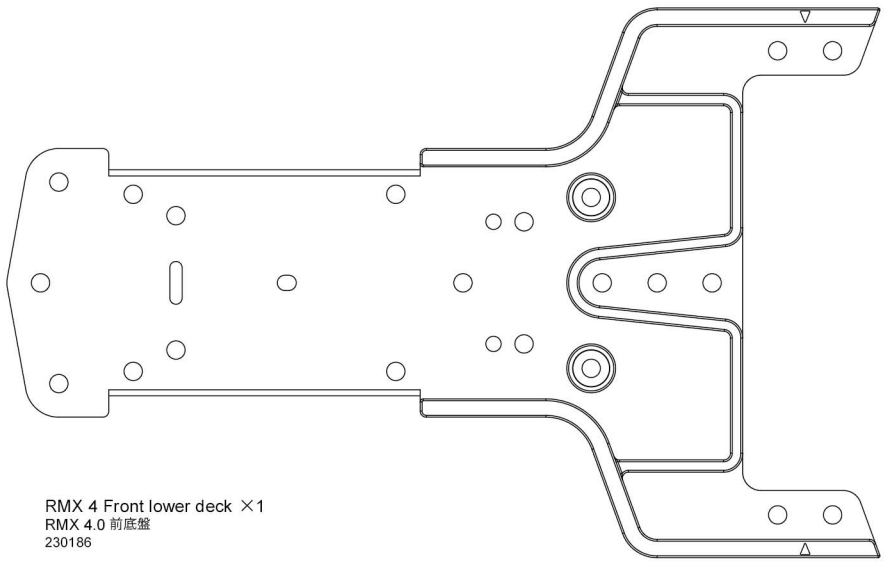


RMX 4 Front lower deck ×1
RMX 4.0 前底盤
230186

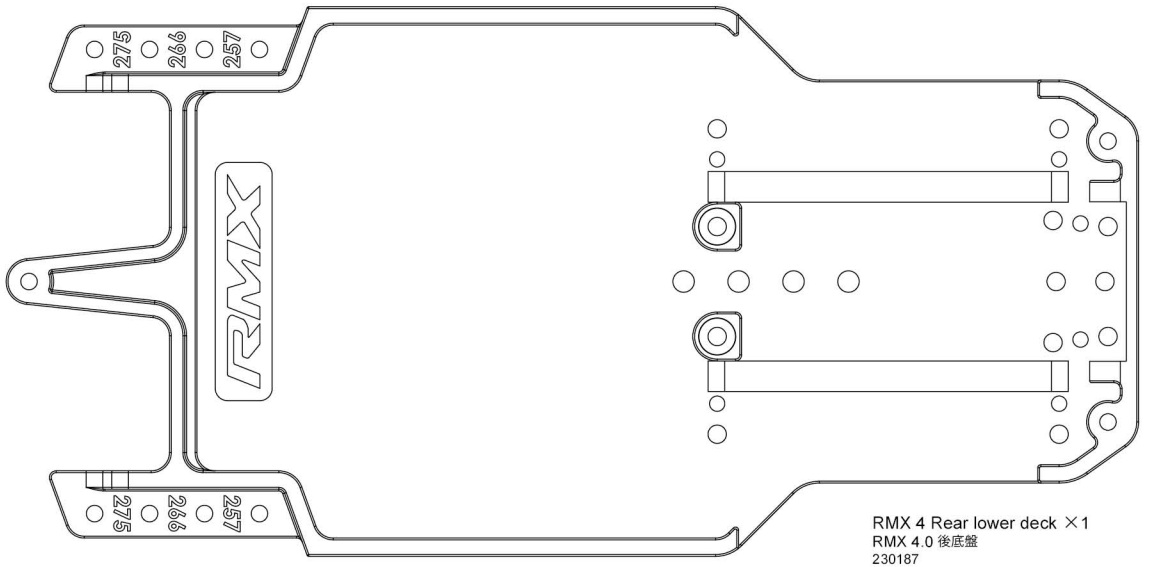


RMX 4 Rear lower deck ×1
RMX 4.0 後底盤
230187

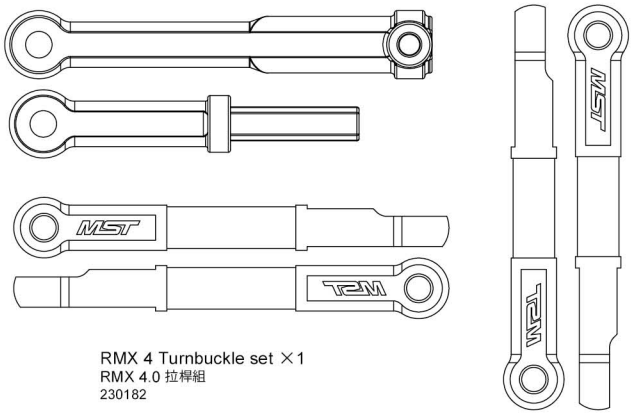


RMX 4 Turnbuckle set ×1
RMX 4.0 拉桿組
230182

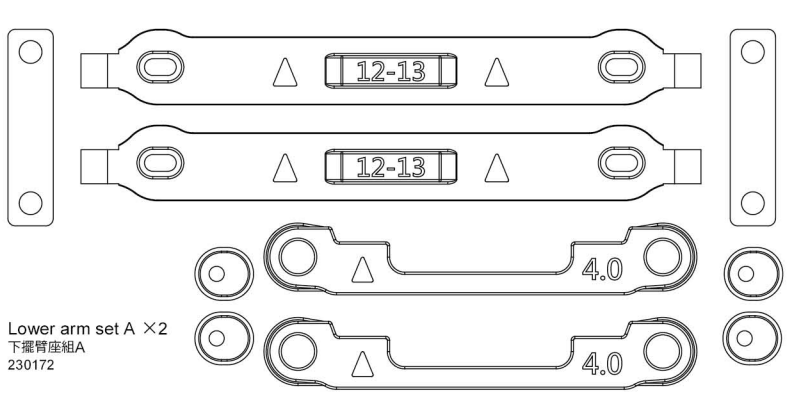


Lower arm set A ×2
下擺臂座組A
230172

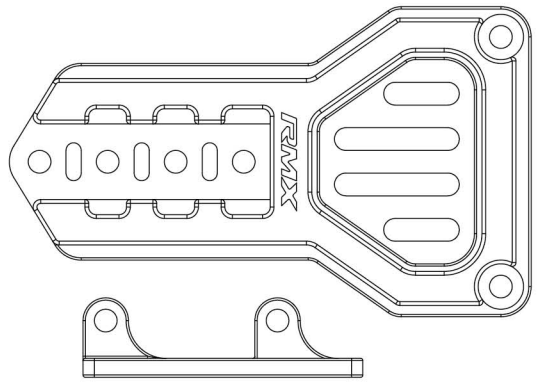

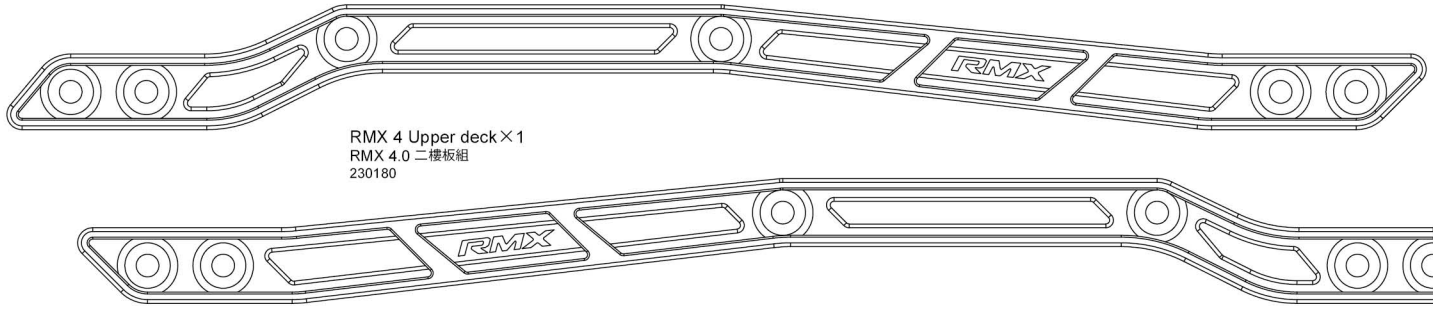

RMX 4 Upper deck×1
RMX 4.0 二樓板組
230180

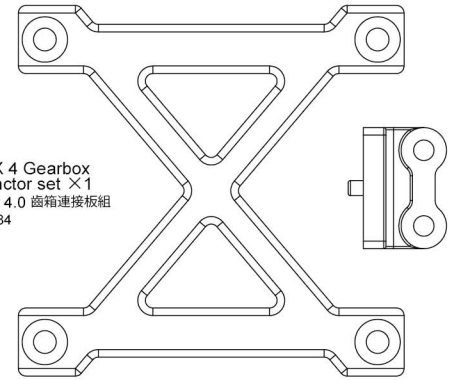

RMX 4 Gearbox
connctor set ×1
RMX 4.0 齒箱連接板組
230184

PARTS CODE

110001	Round head screw M3×6 (10)	110086	Round head screw M3×16 (6)	230041	Wheel hubs w/disc shape (large)	310005R	Rod guide cap (red) (2)
110002	Round head screw M3×8 (10)	110087	Round head screw M3×18 (6)	230135	Idler gear set & ball diff. gear	310008	Piston rod (4)
110004	Round head screw M2×4 (6)	120001	Ball bearing 10×15 (4)	230145	Quick-release battery mount	310035	Lower arm shaft 2.6×22&25 (each one pair)
110005	Countersunk screw M3×8 (10)	120002	Ball bearing 5×10 (4)	230153-1	THA Rear wheel hubs	310039	Spacer 4×14×0.1 (8)
110008	Set screw M3×25 (6)	120003	Ball bearing 5×8 (4)	230159	Suspension ball & spacer set	310040	Spacer 2.5×9×0.1 (8)
110013	E-clip 2.0 (10)	120006	Ball bearing 3×7 (2)	230160	Gear diff. gasket (4)	310047	Arm shaft 2.0×22 (2)
110017	Shaft 2×9.8 (10)	120013	Ball bearing 4×8×3 (2)	230161	Front bumper support	310048	Arm shaft 2.5×46 (4)
110024	Countersunk screw M3×6 (10)	120018	Ball bearing 4×10×4 (2)	230165	FRX front head set	310050	Ball connector 4.8×6 (5)
110026	Round head screw M3×10 (10)	130004	Oil seal (4)	230170	Arm set A	310065	Wheel axle (2)
110029	Round head screw M3×12 (6)	130006	Double sided tape(5)	230171	Arm set B	310106R	Spring retainer (red) (2)
110032	Set screw M3×10 (6)	130007	Antenna pipe(2)	230172	Lower arm set A	310119	4×21 Steel center shaft (2)
110035	Set screw M3×3 (6)	130021	Sponge 6.5×2 (10)	230174	Steering arm set	310129	Ball connector 4.8×6 L (4)
110043	Countersunk screw M3×12 (10)	130025	O-ring P4 (red) (8)	230176	48P 60T Bevel gearbox set (wide)	310131R	RMX 4 Motor mount (red)
110045	Round head screw M2×8 (partial thread) (6)	130049	O-ring 12×1 (4)	230178	RMX 4 Rear gearbox set	310132	RMX 4 Alum. main shaft 48P 20T
110046	Shaft 2×9.8 (8)	130059	Damper O-ring P3 (blue) (10)	230179	RMX 4 Rear damper set & gearbox connector	820004	Steel CVD great angle universal shaft 42 (2)
110047	Spacer 3×6×0.5 (8)	148022P	MST 48P Pinion 22T	230180	RMX 4 Upper deck	820017	Spacer 4×6×0.3 (8)
110049	Round head screw M3×5 (10)	210053-1	Diff. gear set	230181	ATK V3 Front wheel hubs	820018	Spacer 5×7×0.1 (8)
110052	Countersunk screw M3×10 (10)	210121-1	Swing shaft protector (4)	230182	RMX 4 Turnbuckle set	820020	Spacer 5×7×0.3 (8)
110056	Set screw M3×12 (6)	210151	Alum. damper cylinder (4)	230183	Front head set	820030	Cross joint (2)
110059	Shaft 1.5×7.8 (8)	210161	Ball connector nut 4.8 (4)	230184	RMX 4 Gearbox connctor set	820055	Reinforced damper plastic maintenance set (4)
110060	Set screw M3×2.6 (10)	210235	Piston spacer set	230185	Servo mount	820074	Wheel nut m4 (4)
110061	Round head screw M3×14 (6)	210344	Ball connector nut L 4.8 (4)	230186	RMX 4 Front lower deck	820075	R-clip 5.0 (10)
110063	Round head screw M2×8 (6)	210345	FXX Alum. steering post	230187	RMX 4 Rear lower deck	820095	AKM 2WD axle (2)
110073	Countersunk screw M3×16 (6)	210381	Car body post set	230188	4.8×22 Rod ends set	820126	NS High-torque servo saver
110081	Countersunk screw M3×14 (6)	210433	Ball connector 4.8×4.5 S (5)	230189	RM 4 80T Spur gear set	820152	PVC Deck protective film
110082	Round head screw M2×3 (6)	210510CR	Enlarged brake calipers (red) (4)	310001	Ball connector 4.8×4.5 (5)	820164	DK-RWD Competition drift spring set (F24/R26)(6&6)
110083	Set screw M3×4 (6)	210685	Bevel gear diff. joint set	310003R	Cylinder cap (red) (2)		

部品編號

110001	六角圓頭螺絲 M3×6	110086	六角圓頭螺絲 M3×16	230041	碟盤組	310005R	避震器下蓋(紅)
110002	六角圓頭螺絲 M3×8	110087	六角圓頭螺絲 M3×18	230135	惰輪組&滾珠差速齒(30%)	310008	避震軸心 3×28 (化學鎳)
110004	六角圓頭螺絲 M2×4	120001	培林 10×15×4	230145	快拆式電池座組	310035	插銷-2.6×25
110005	六角沉頭 M3×8	120002	培林 5×10×4	230153-1	THA後輪座	310039	4×14×0.1墊片
110008	六角止付螺絲 M3×25	120003	培林 5×8×2.5	230159	插銷球頭 & 墊片組	310040	2.5×9×0.1墊片
110013	E扣 2.0	120006	培林 3×7×3	230160	止漏墊片	310047	插銷 2×22
110017	插銷 2×9.8	120013	培林 4×8×3	230161	前防撞板	310048	插銷 2.5×46
110024	六角沉頭 M3×6	120018	培林 4×10×4	230165	FR 前擔組	310050	內六角公球頭 4.8×6
110026	六角圓頭螺絲 M3×10	130004	避震氣室	230170	擺臂組	310065	萬向接杯
110029	六角圓頭螺絲 M3×12	130006	EVA 雙面膠	230171	擺臂組	310106R	避震器調整環 (紅)
110032	六角止付螺絲 M3×10	130007	天線管	230172	下擺臂座組A	310119	4×21 鋼製心軸
110035	六角止付螺絲 M3×3	130021	6.5×2.1泡棉	230174	轉向搖臂組	310129	內六角公球頭 4.8×6 L
110043	六角沉頭 M3×12	130025	O-Ring P4 3.8×1.9 VMQ60 土硃色 60度	230176	48P 60T 傘差齒箱組(加寬)	310131R	RMX 4.0 馬達座 (紅)
110045	六角圓頭螺絲 M2×8 (半牙)	130049	O-Ring 12×1	230178	RMX 4.0 後齒箱組	310132	RMX 4.0 鋁合金主齒軸 48P 20T (硬陽)
110046	插銷 2×9.8(剖槽)	130059	O環 P3 2.8×1.9 30度(白色)	230179	RMX 4.0 後避震架組 & 齒箱連接架	820004	鋼製CVD傳動軸 42 (40°)(壓PIN)(鐳刻)
110047	3×6×0.5 墊片	148022P	馬達齒 48P-22T	230180	RMX 4.0 二樓板組	820017	4×6×0.3 調整墊片
110049	六角圓頭螺絲 M3×5	210053-1	傘差齒組(NL-30%)	230181	ATK V3 前輪座組	820018	5×7×0.1 調整墊片
110052	六角沉頭 M3×10	210121-1	傳動軸軸套 (4)	230182	RMX 4.0 拉桿組	820020	5×7×0.3 調整墊片
110056	六角止付螺絲 M3×12	210151	避震器筒身(硬膜)	230183	前擔板組	820030	CVD連接軸
110059	插銷 1.5×7.8	210161	4.8 外六角球頭	230184	RMX 4.0 齒箱連接板組	820055	避震膠件組
110060	六角止付螺絲 M3×2.6	210235	活賽墊片組	230185	伺服機座	820074	凸緣螺帽 M4×5.5
110061	六角圓頭螺絲 M3×14	210344	4.8 外六角球頭 L	230186	RMX 4.0 前底盤	820075	R扣 5.0(黑)
110063	六角圓頭螺絲 M2×8	210345	轉向柱 5×16 (黑)	230187	RMX 4.0 後底盤	820095	AKM 二驅輪軸
110073	六角沉頭 M3×16	210381	車殼支柱組	230188	4.8X22 拉桿頭組	820126	NS 伺服緩衝
110081	六角沉頭 M3×14	210433	內六角公球頭 4.8×4.5 S	230189	RMX 4.0 80T 大齒盤總成	820152	電池防刮貼紙
110082	六角圓頭螺絲 M2×3	210510CR	大卡鉗組	310001	內六角公球頭 4.8×4.5	820164	DK-RWD 競賽飄移車避震彈簧組 (F24/R26)(6&6)
110083	六角止付螺絲 M3×4	210685	傘差接杯	310003R	避震器上蓋(紅)		